


Cigarette Lighter and Power Outlet (12V)

*1 : w/o Rear Seat Entertainment System,
Rear Seat Audio System

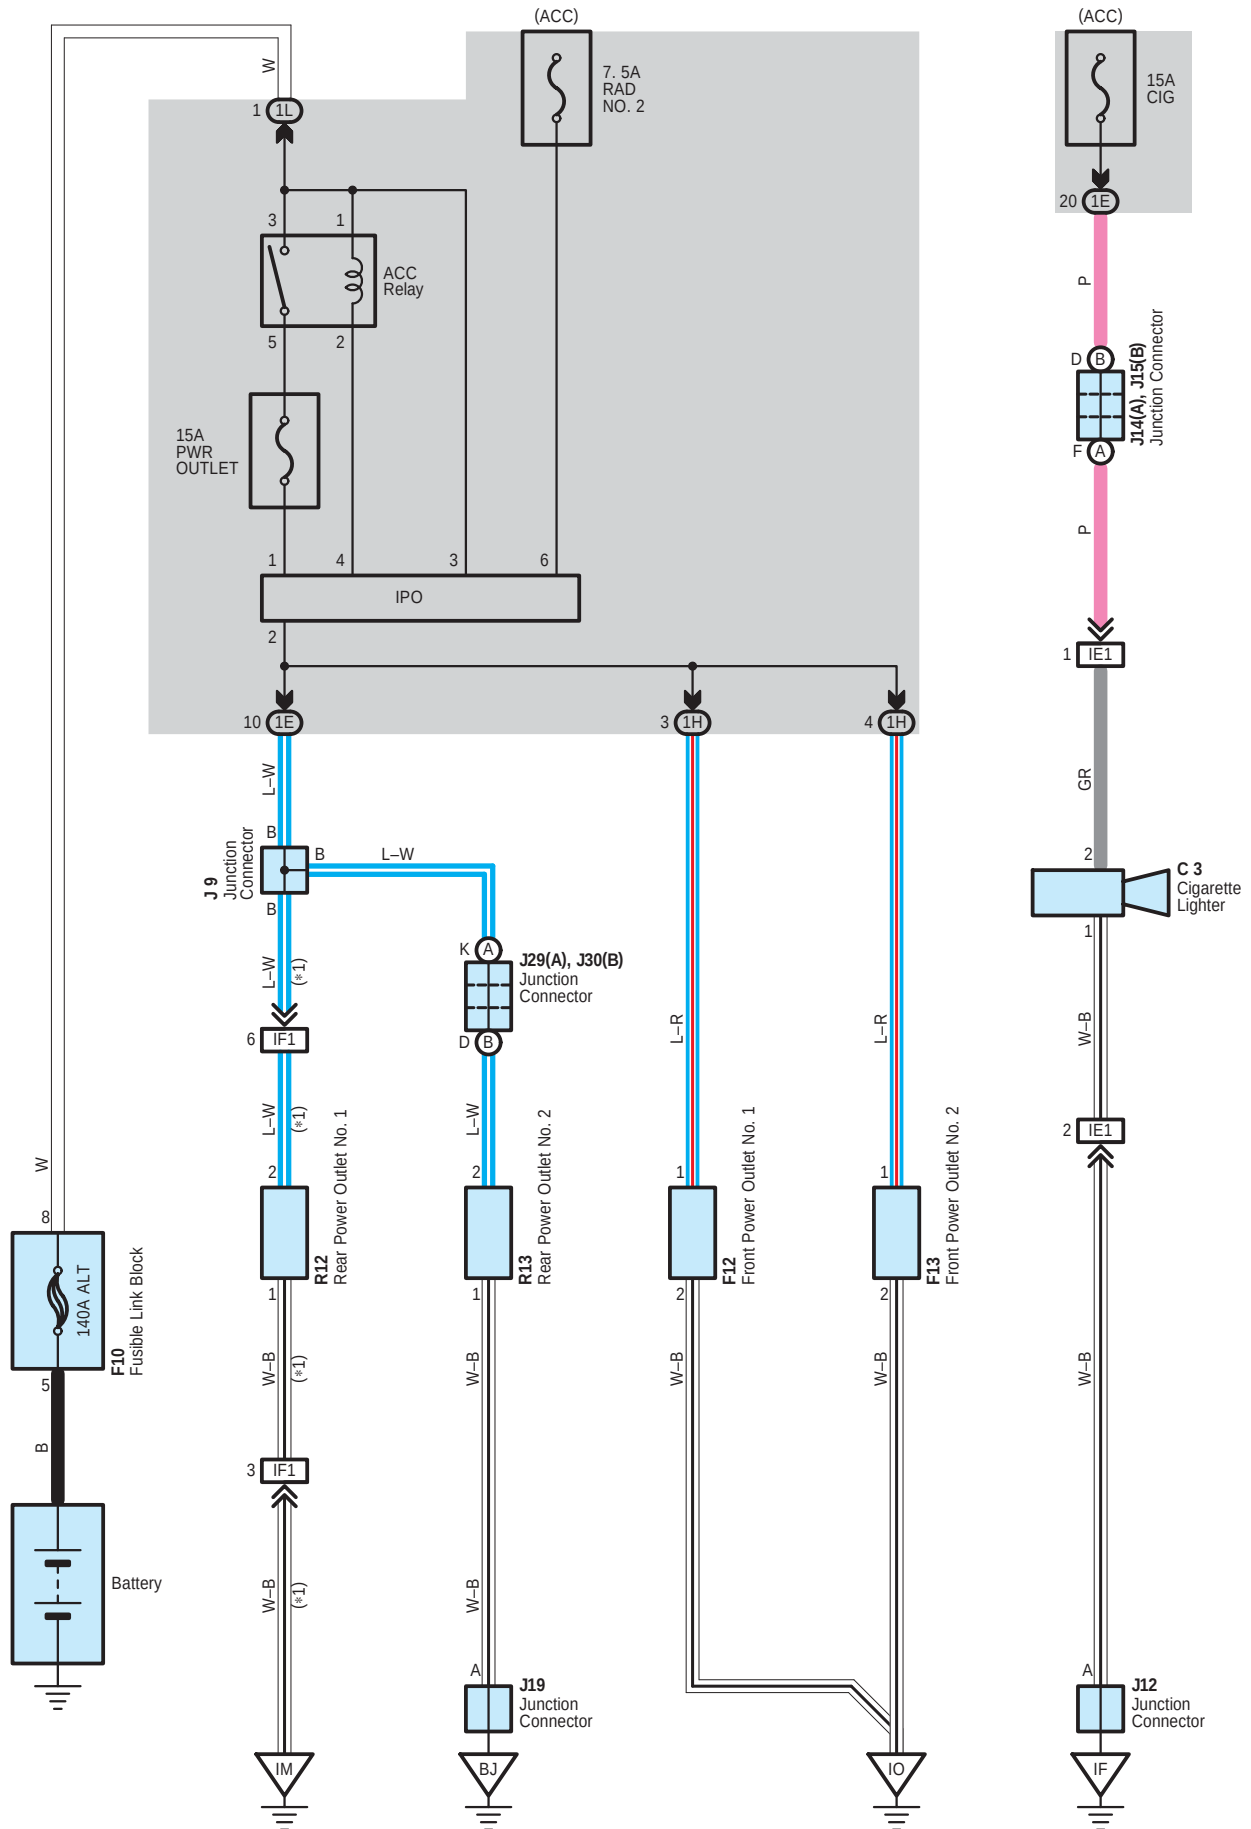

System Outline

Power is supplied to 12V socket (Power outlet) even when the ignition SW is at OFF position, by IPO control.

When one of the following conditions is satisfied, power supply to 12V socket (Power outlet) shall be cut off.

* Amount of the current in use is 6Ah or more.

* Operating time is 2 hours or more.

When the following condition is satisfied, power supply to 12V socket (Power outlet) shall be returned.

* Ignition SW is at ACC position.

To improve the engine starting performance, power supply to 12V socket (Power outlet) shall be cut off for 5 seconds when the ignition SW is at ST position.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C3	42	J12	44	J30 B	44
F10	22, 40	J14 A	44	R12	45
F12	43	J15 B	44	R13	47
F13	43	J19	46		
J9	44	J29 A	44		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1H		
1L	33	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	51	Cigarette Lighter Wire and Cowl Wire (Instrument Panel Brace LH)
IF1	51	Console Box Wire and Cowl Wire (Rear Console)

▽ : Ground Points

Code	See Page	Ground Points Location
IF	51	Instrument Panel Brace LH
IM	51	Rear Console
IO	51	Instrument Panel Brace RH
BJ	52	Quarter Panel LH