


Power Outlet (115V)

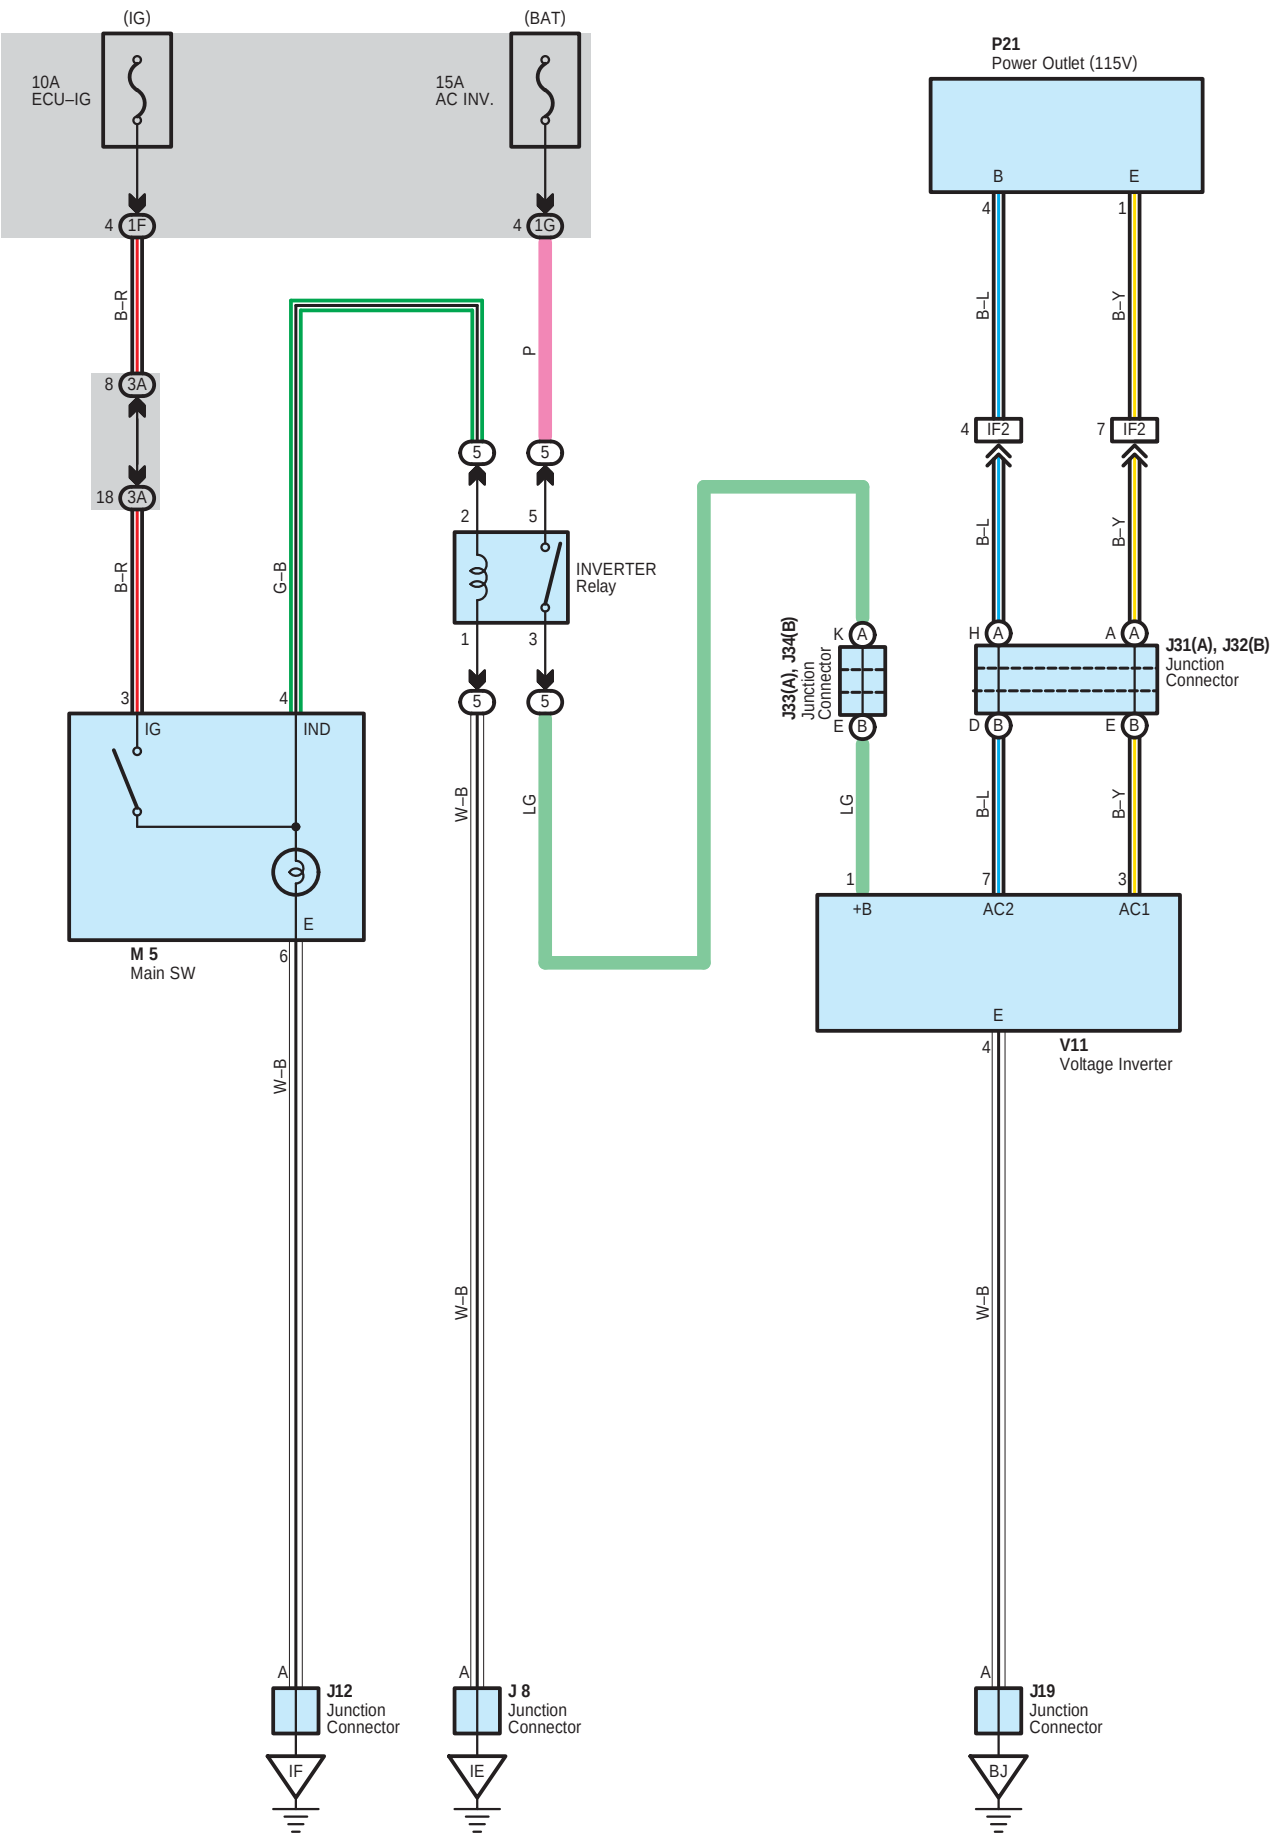

 : Parts Location

Code		See Page		Code		See Page		Code		See Page	
J8		44		J32	B	44		P21		45	
J12		44		J33	A	44		V11		47	
J19		46		J34	B	44					
J31	A	44		M5		45					

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
5	27	Driver Side R/B (Under the Instrument Panel J/B)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1G		
3A	36	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF2	51	Console Box Wire and Cowl Wire (Rear Console)

 : Ground Points

Code	See Page	Ground Points Location
IE	51	Cowl Side Panel LH
IF	51	Instrument Panel Brace LH
BJ	52	Quarter Panel LH