


Sliding Roof

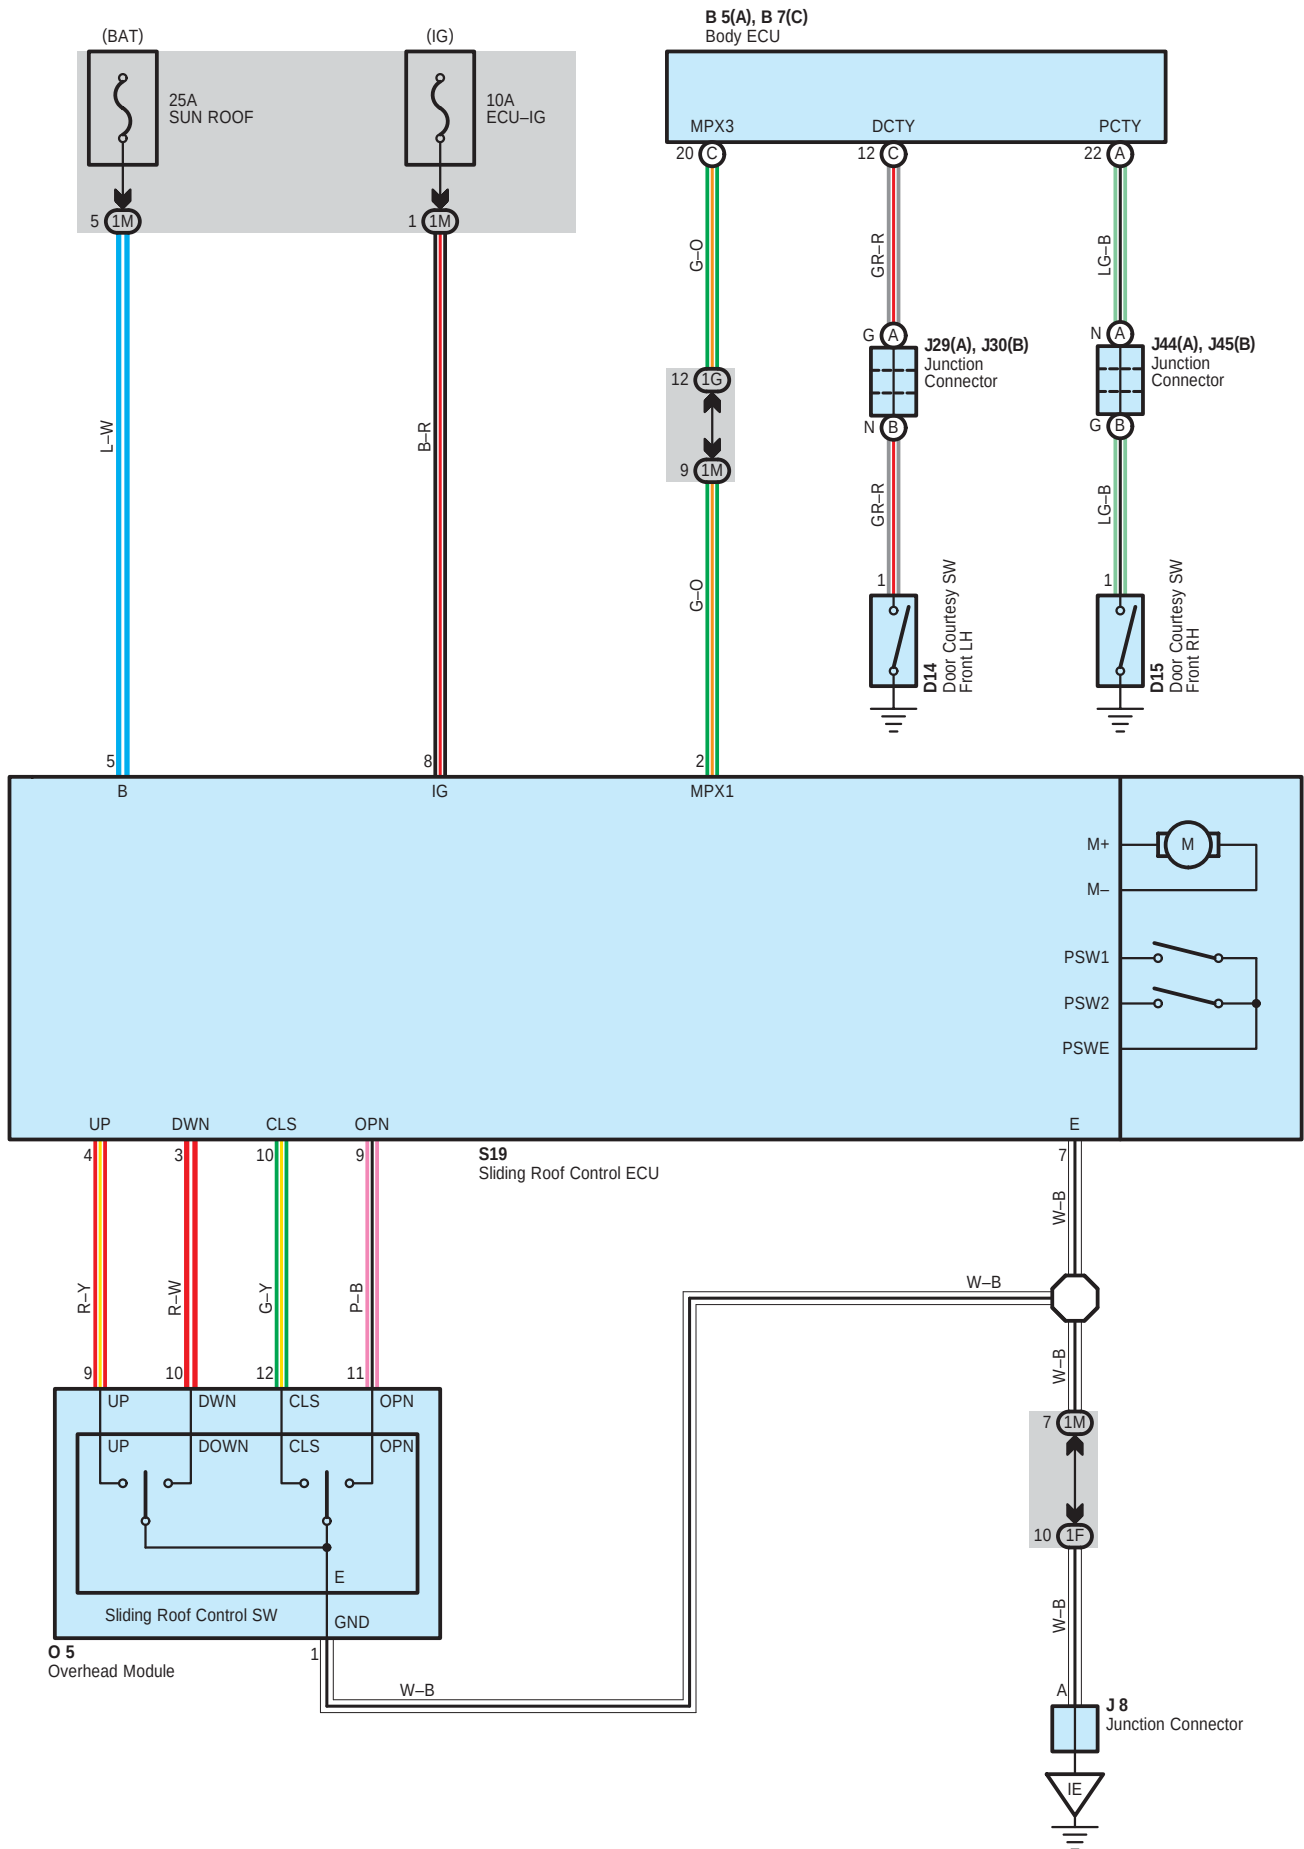

System Outline

The moon roof can be operated by the sliding roof control SW, when the ignition SW is at ON position or during the key-off operation.

Jam Protection Function

During close or tilt down operation, if the system detects a load, the motor rotates in the opposite direction.

Key-Off Operation

With all the doors closed, within 43 seconds after the ignition switch has been turned to OFF from ON, the sliding roof can be operated. However, if the front door is opened, the sliding roof cannot be operated.

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
B5	A	42	J8		44	J45	B	44
B7	C	42	J29	A	44	O5		47
D14		46	J30	B	44	S19		47
D15		46	J44	A	44			

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1G		
1M	33	Roof Wire and Instrument Panel J/B (Lower Finish Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
IE	51	Cowl Side Panel LH