




Remote Control Mirror with Driving Position Memory

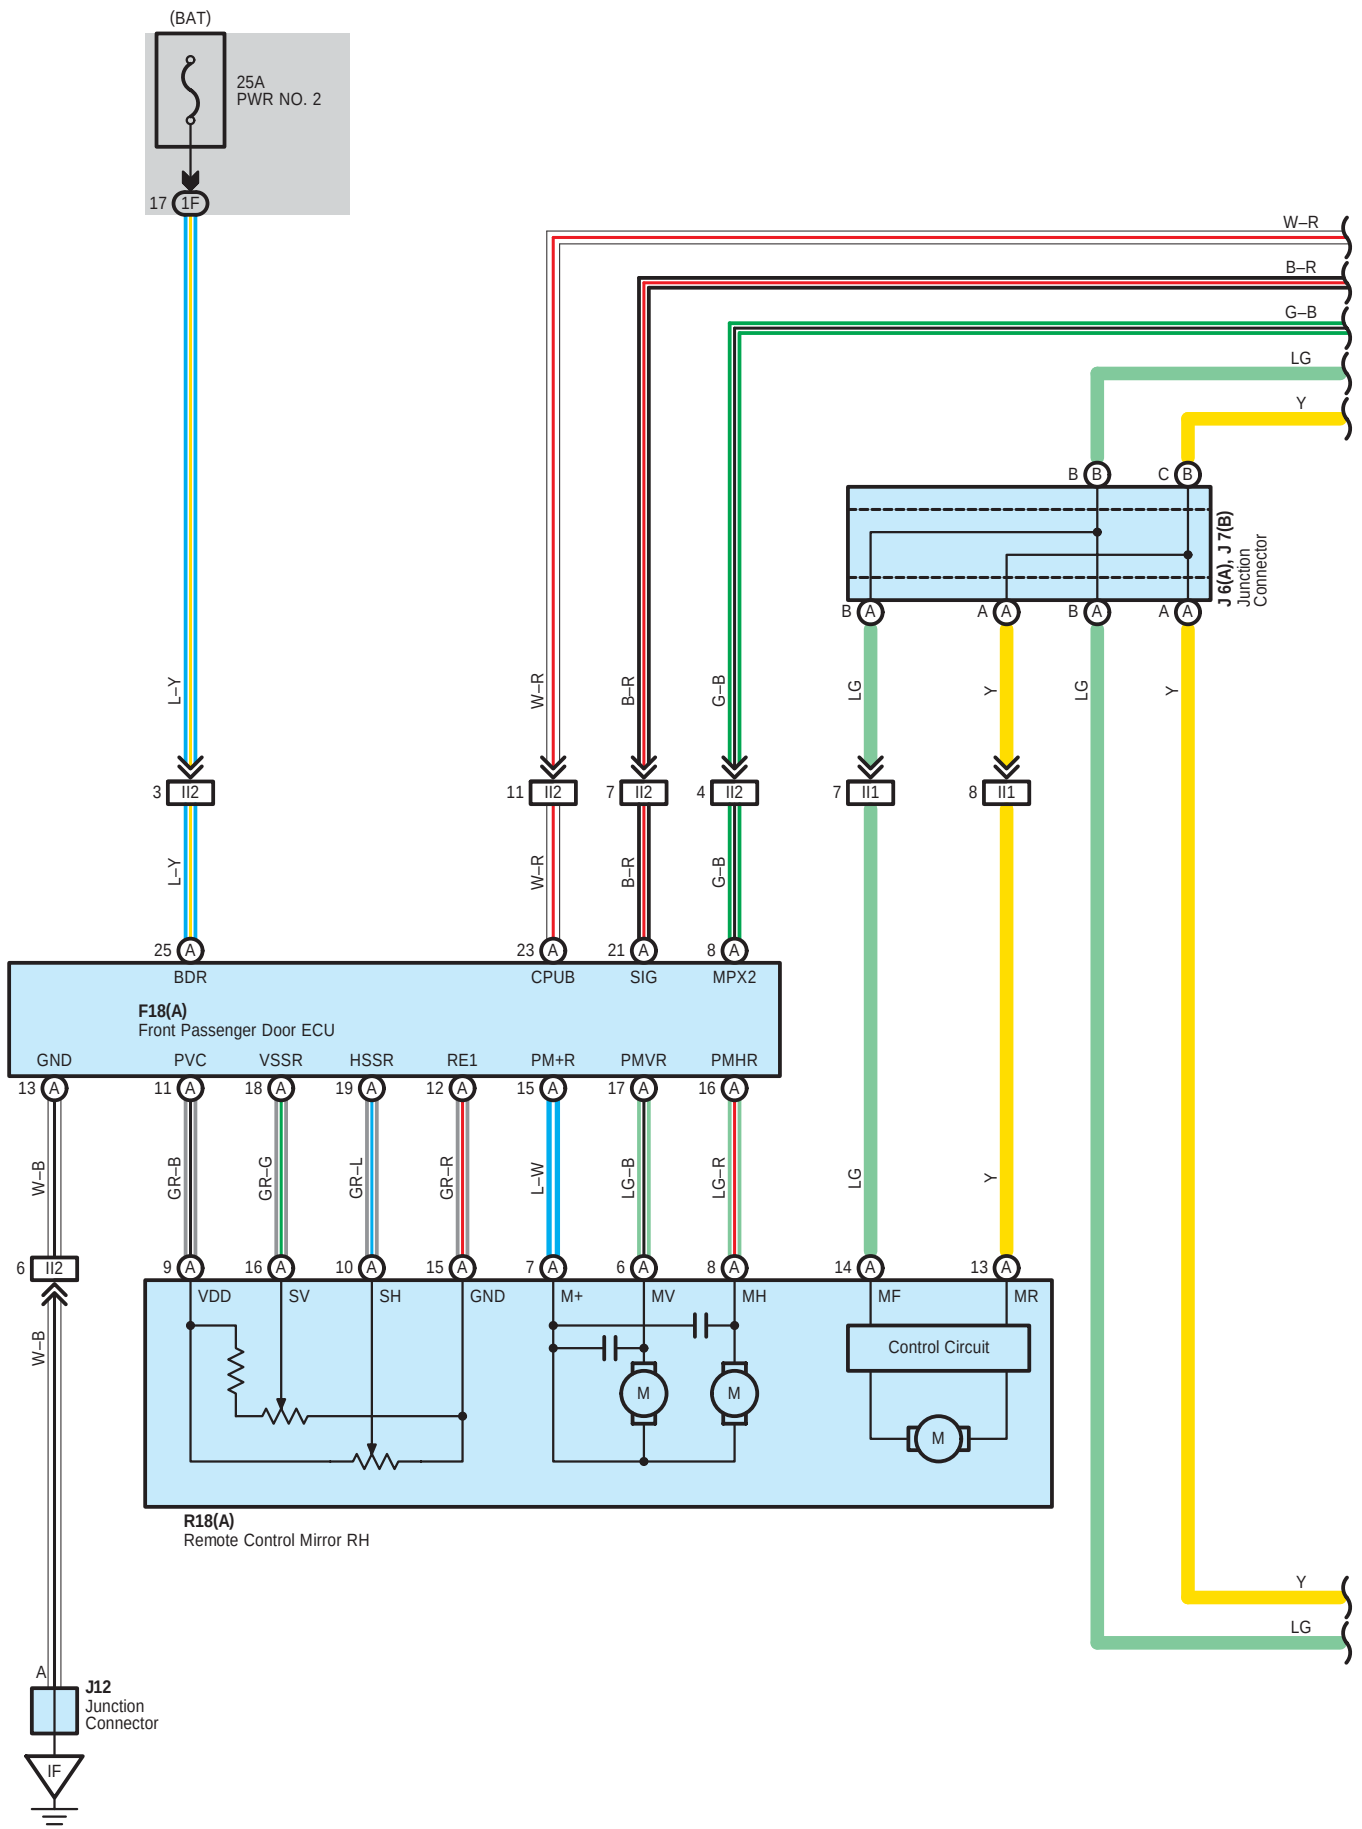


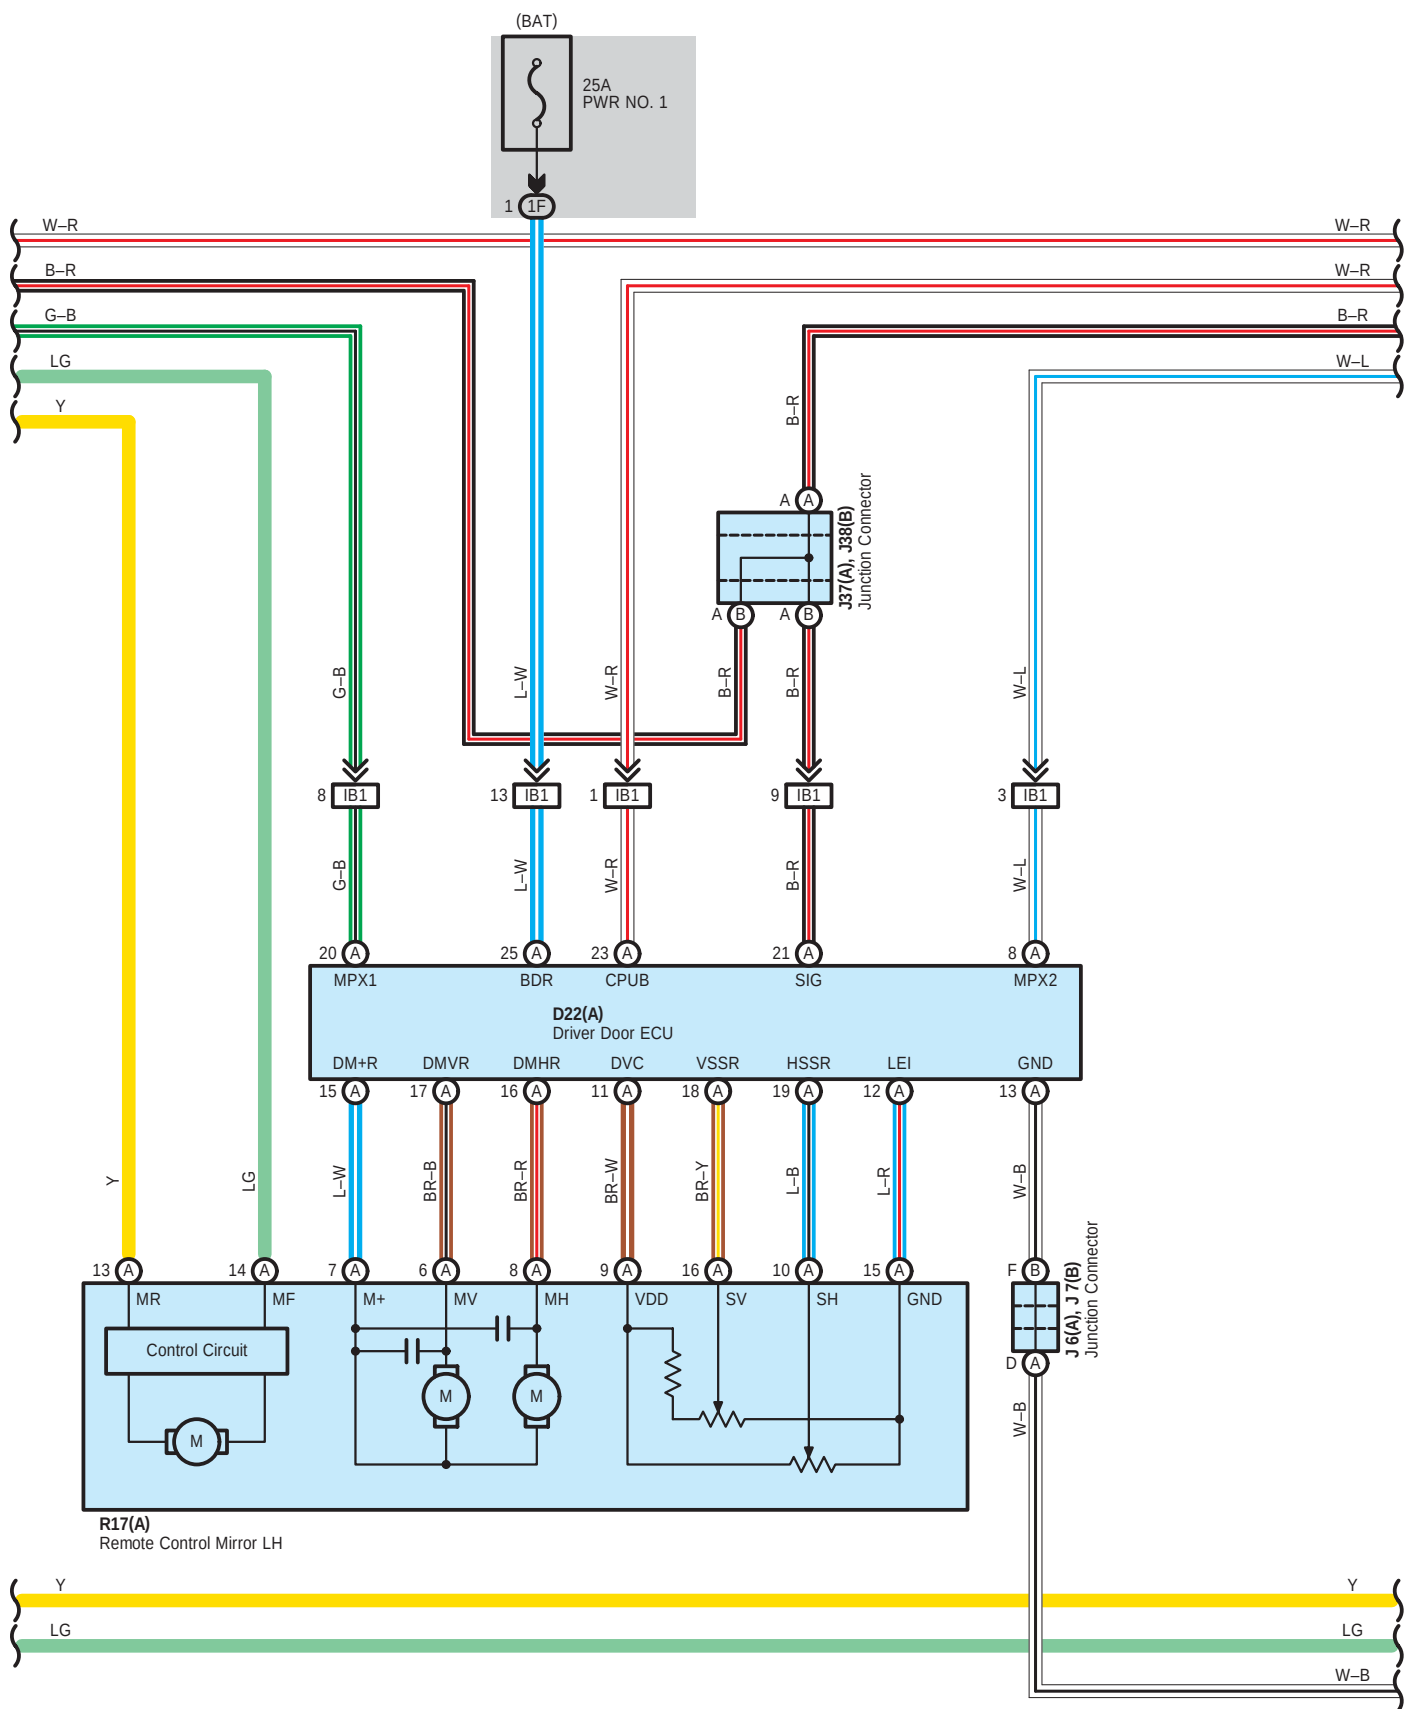

Remote Control Mirror with Driving Position Memory

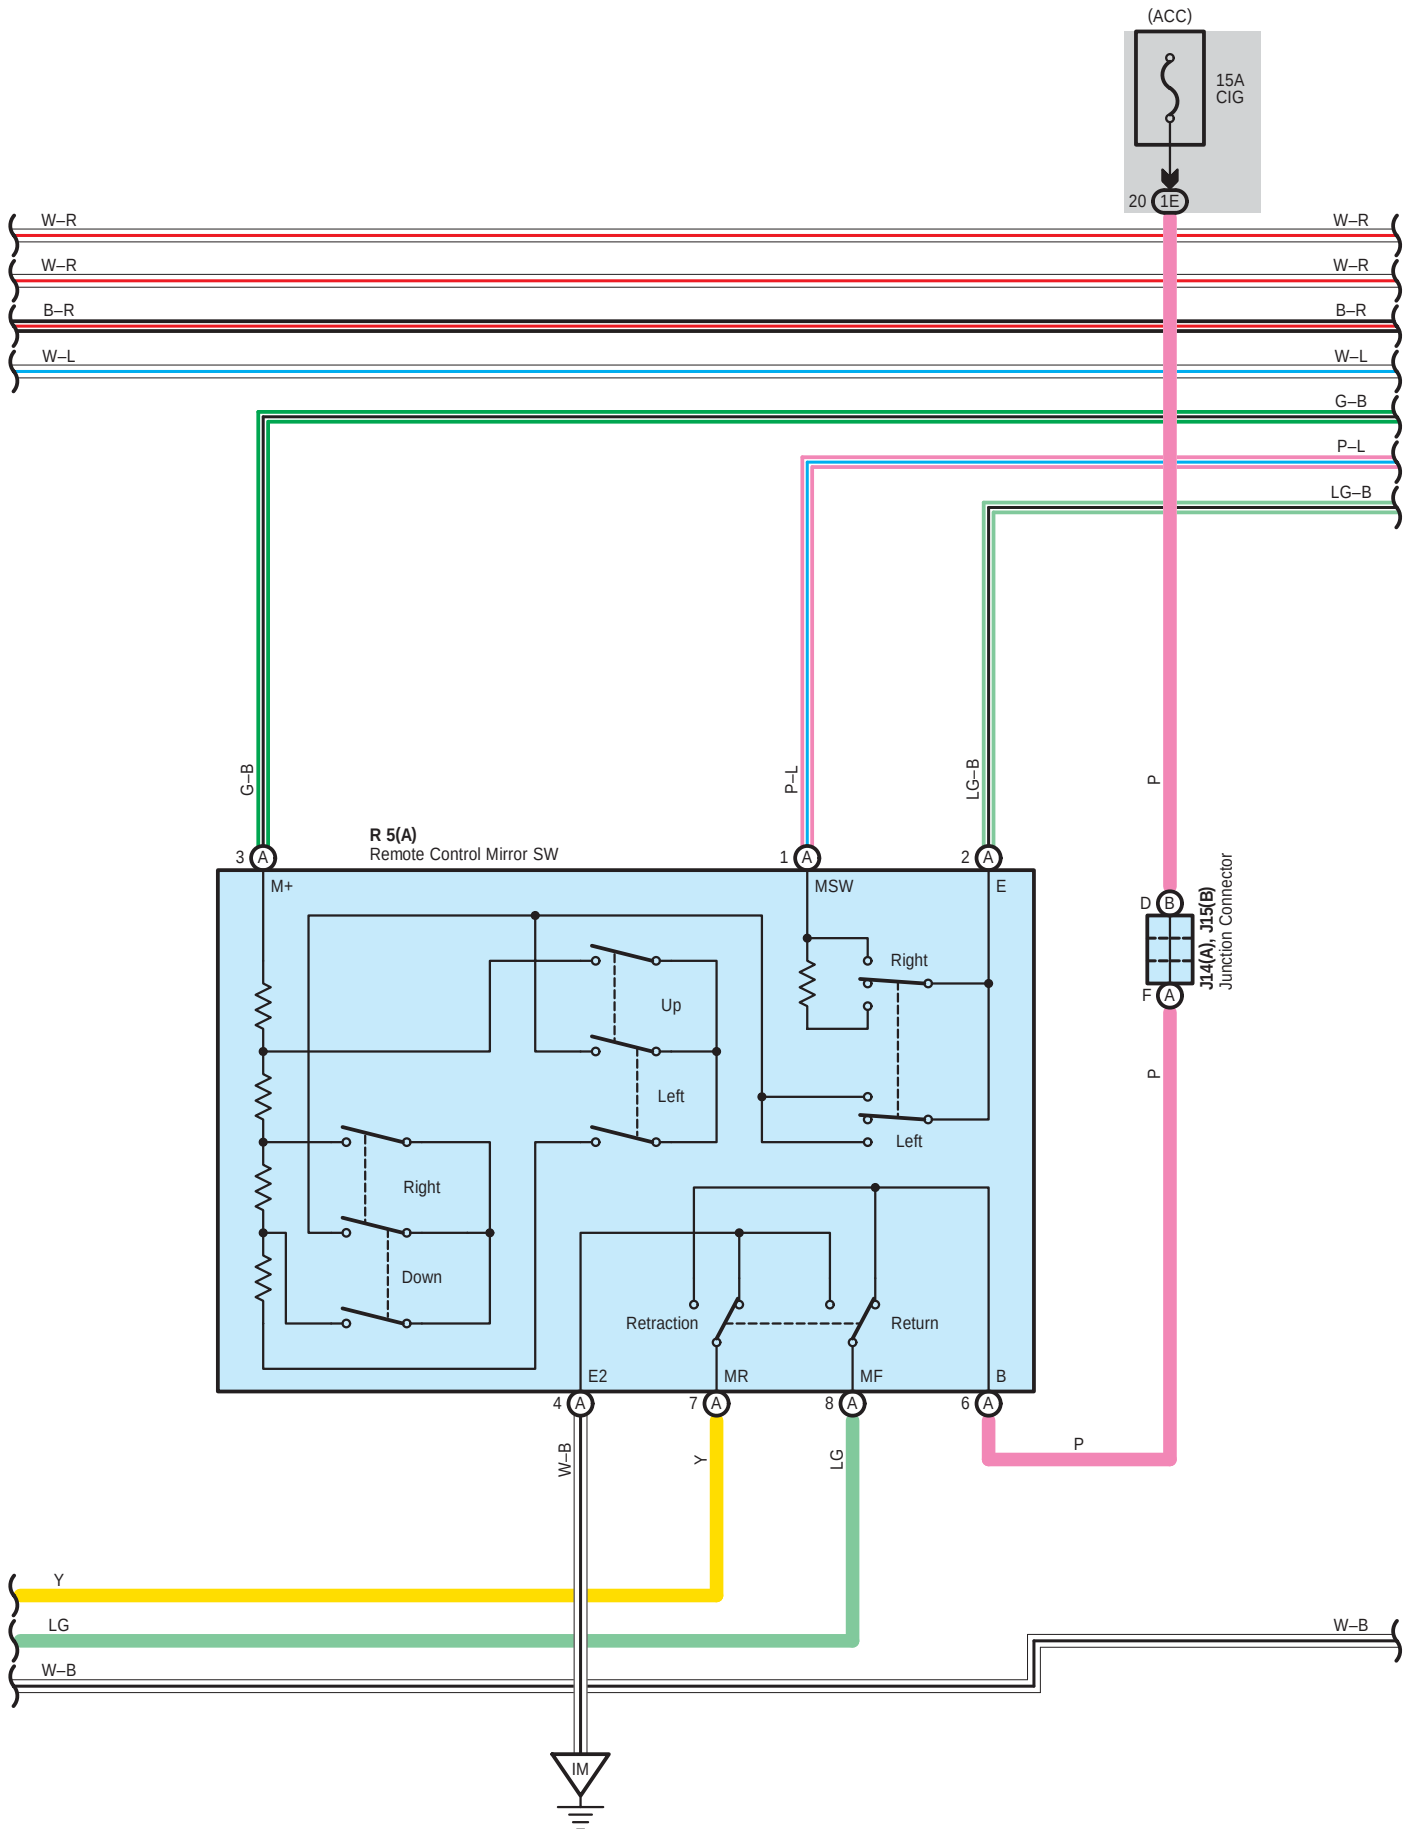

Remote Control Mirror with Driving Position Memory

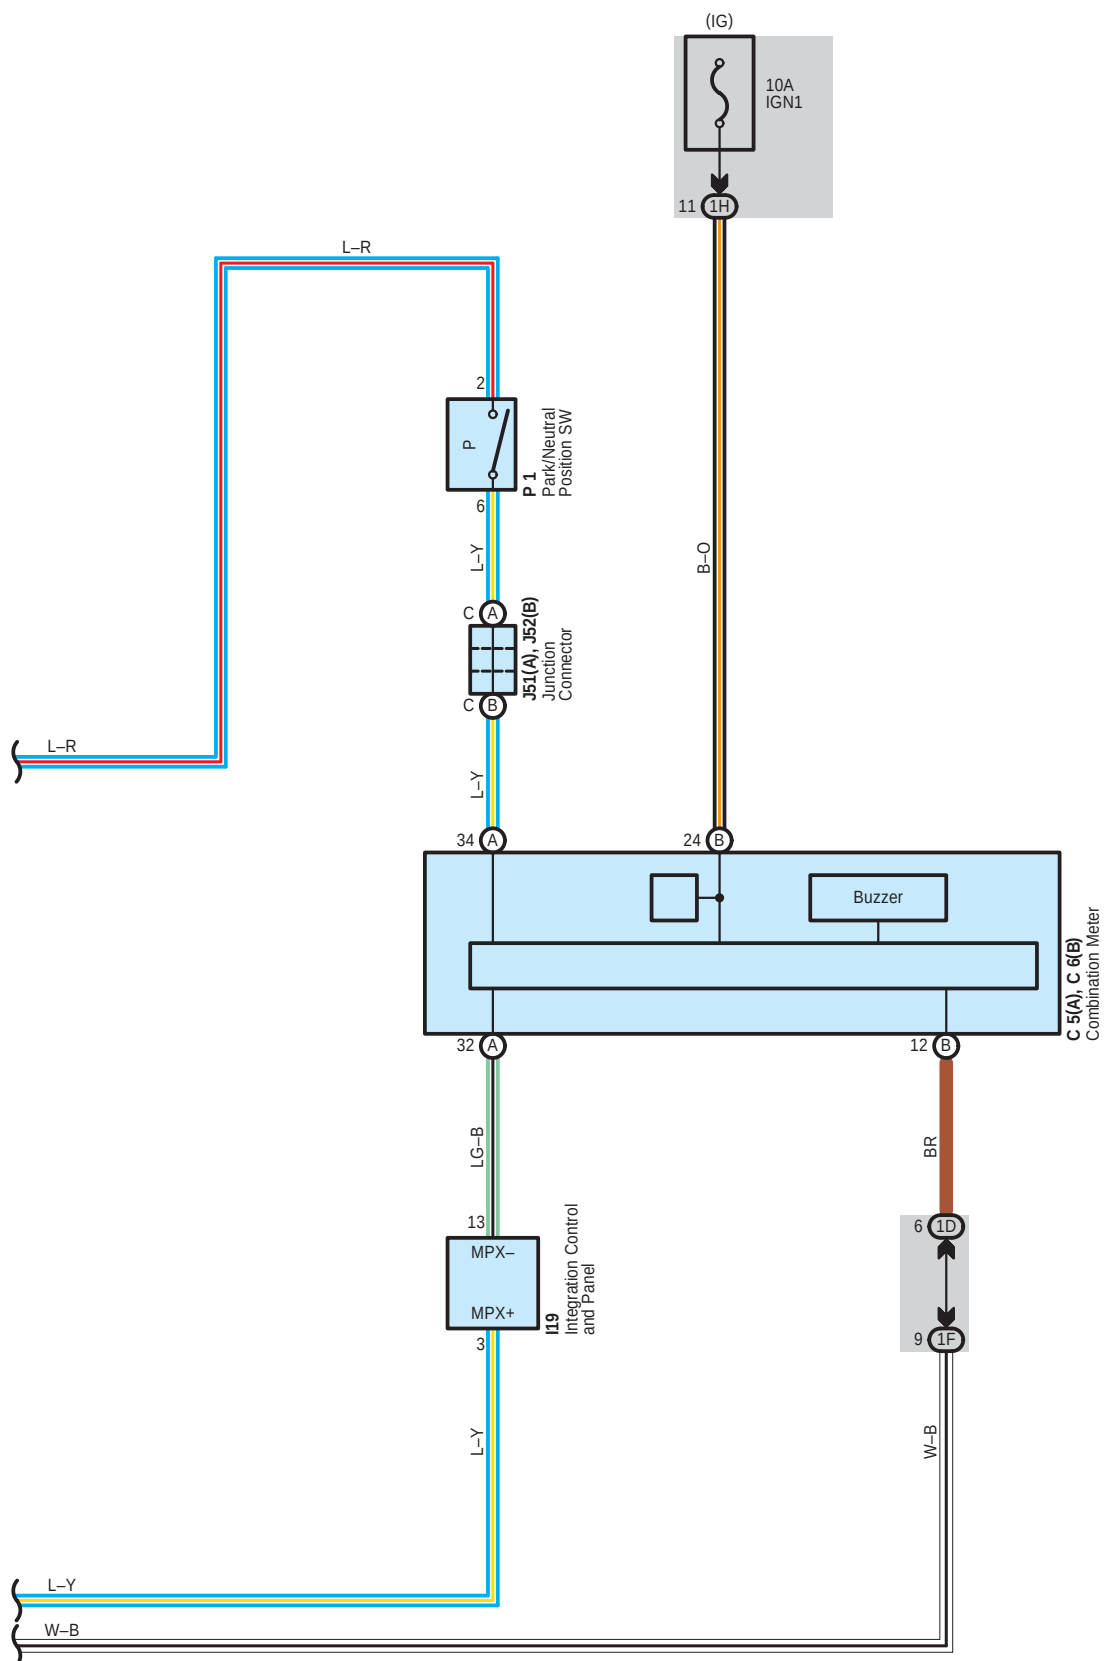

System Outline

When the ignition SW is turned on, the outer mirrors can be operated. When the remote control mirror SW is operated, a signal is input to the body ECU, and the outer mirror can be adjusted to the desired position.

In this system, the position sensor detects the number of rotations of each motor (Movement amount of each mirror) and inputs it to the driver door ECU and front passenger door ECU. This makes it possible to store and recall the outer mirror position using the driving position memory SW. The outer mirror position is stored and recalled through communication control of the body ECU.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B5	A	42	J6	A	44
B6	B	42	J7	B	44
B7	C	42	J8		44
C5	A	42	J12		44
C6	B	42	J14	A	44
D14		46	J15	B	44
D22	A	46	J29	A	44
D24		43	J30	B	44
F18	A	46	J37	A	44
I19		43	J38	B	44
				J43	44
				J51	A
				J52	B
				P1	41
				R5	A
				R17	A
				R18	A
				U1	45

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1F		
1G		
1H		
1J	33	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
2C	29	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3A	36	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)
3C		
3D		
3E		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	51	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IG4	51	Engine Wire and Cowl Wire (Right Side of Instrument Panel)
II1	51	Front Door RH Wire and Cowl Wire (Right Kick Panel)
II2		

▽ : Ground Points

Code	See Page	Ground Points Location
IE	51	Cowl Side Panel LH
IF	51	Instrument Panel Brace LH
IG	51	Cowl Side Panel RH
IM	51	Rear Console