


Remote Control Mirror without Driving Position Memory

* 1 : w/ Retractor
* 2 : w/o Retractor

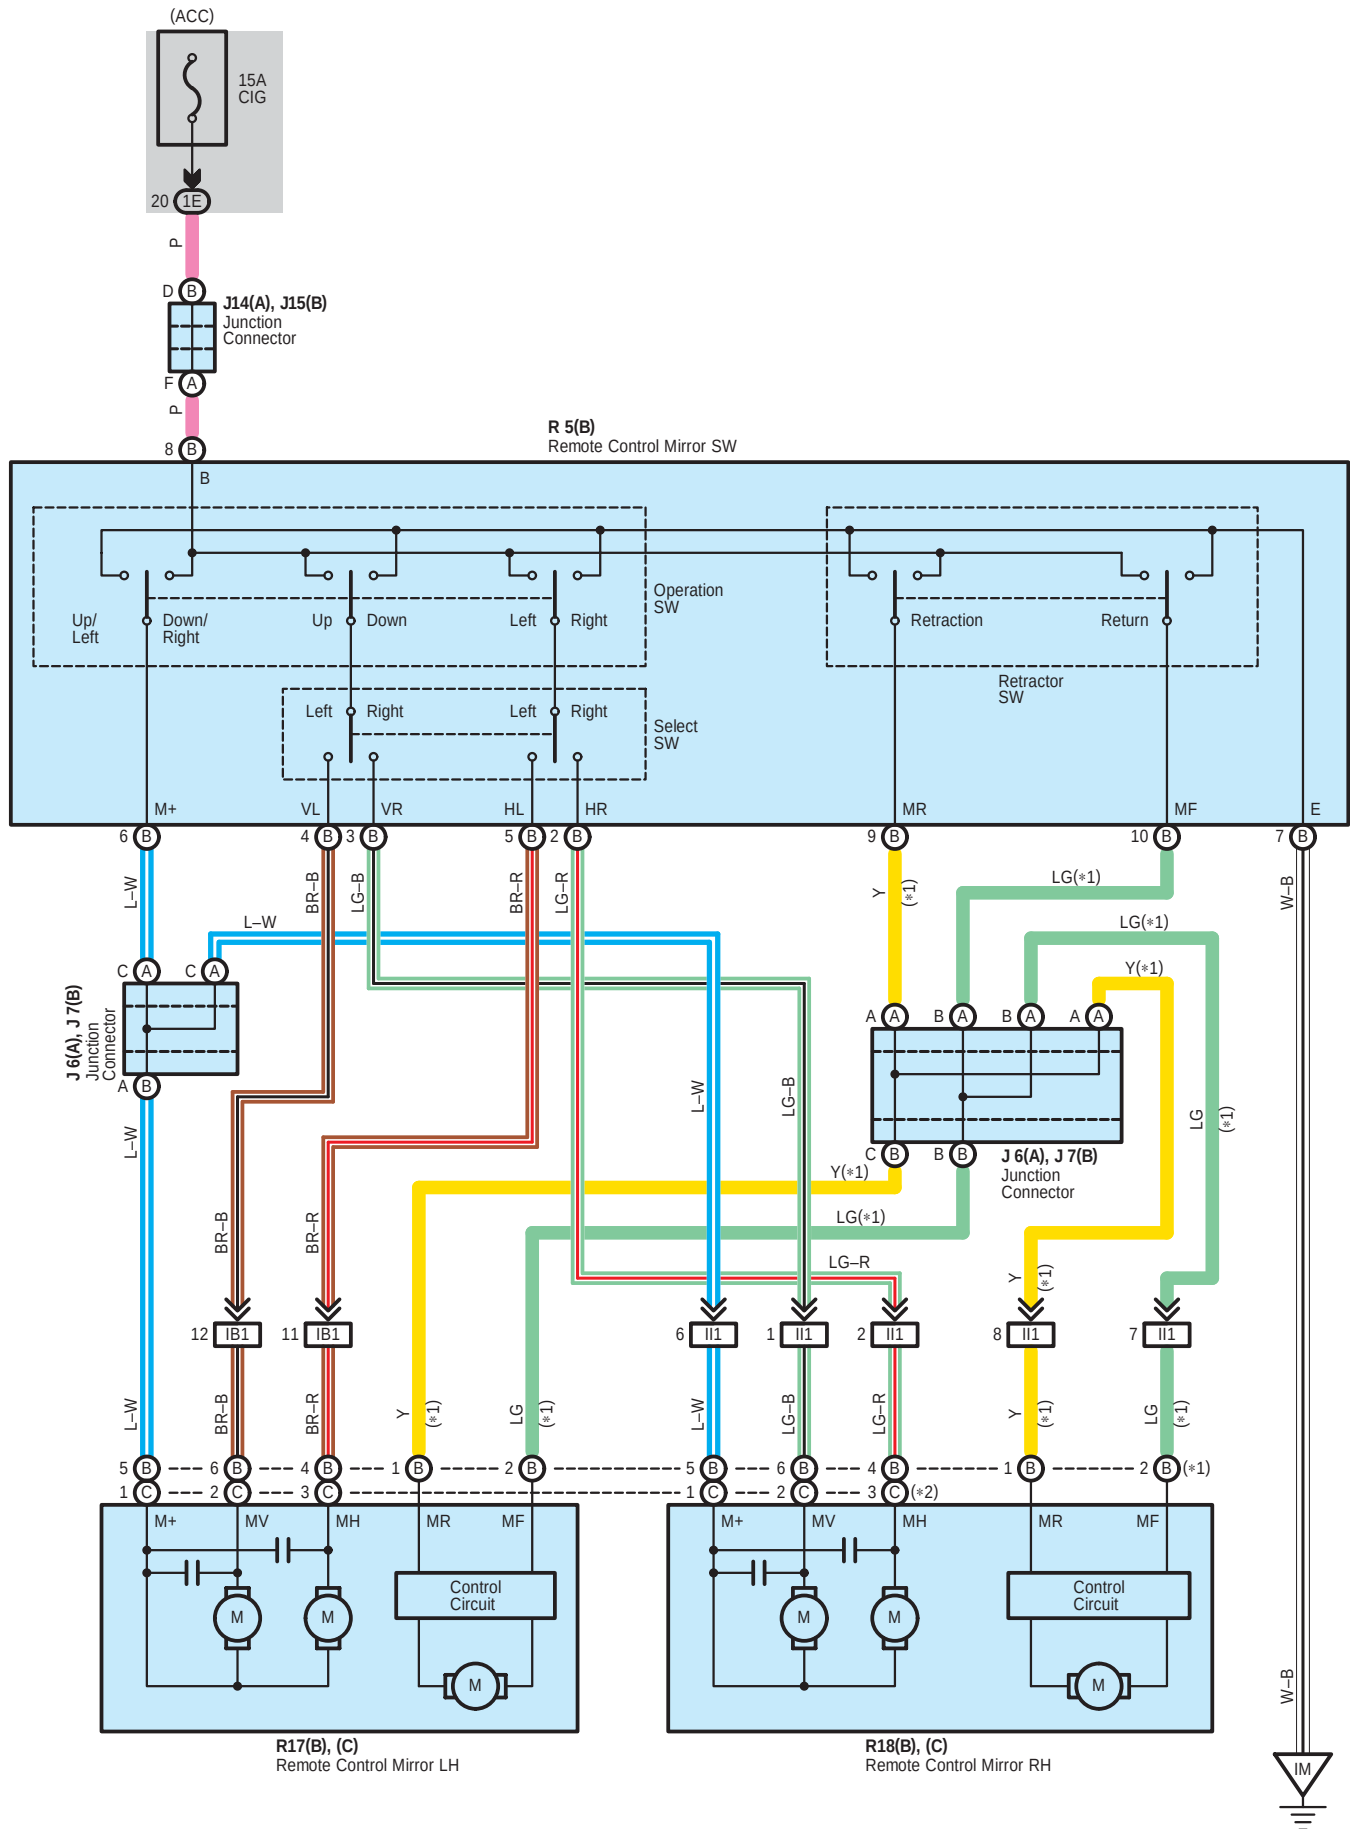

 : Parts Location

Code			See Page			Code			See Page			Code			See Page		
J6	A	44				J15	B	44				R17	C	47			
J7	B	44				R5	B	45				R18	B	47			
J14	A	44				R17	B	47					C	47			

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	51	Front Door LH Wire and Cowl Wire (Left Kick Panel)
II1	51	Front Door RH Wire and Cowl Wire (Right Kick Panel)

 : Ground Points

Code	See Page	Ground Points Location
IM	51	Rear Console