


Power Seat for Driver's Seat without Driving Position Memory

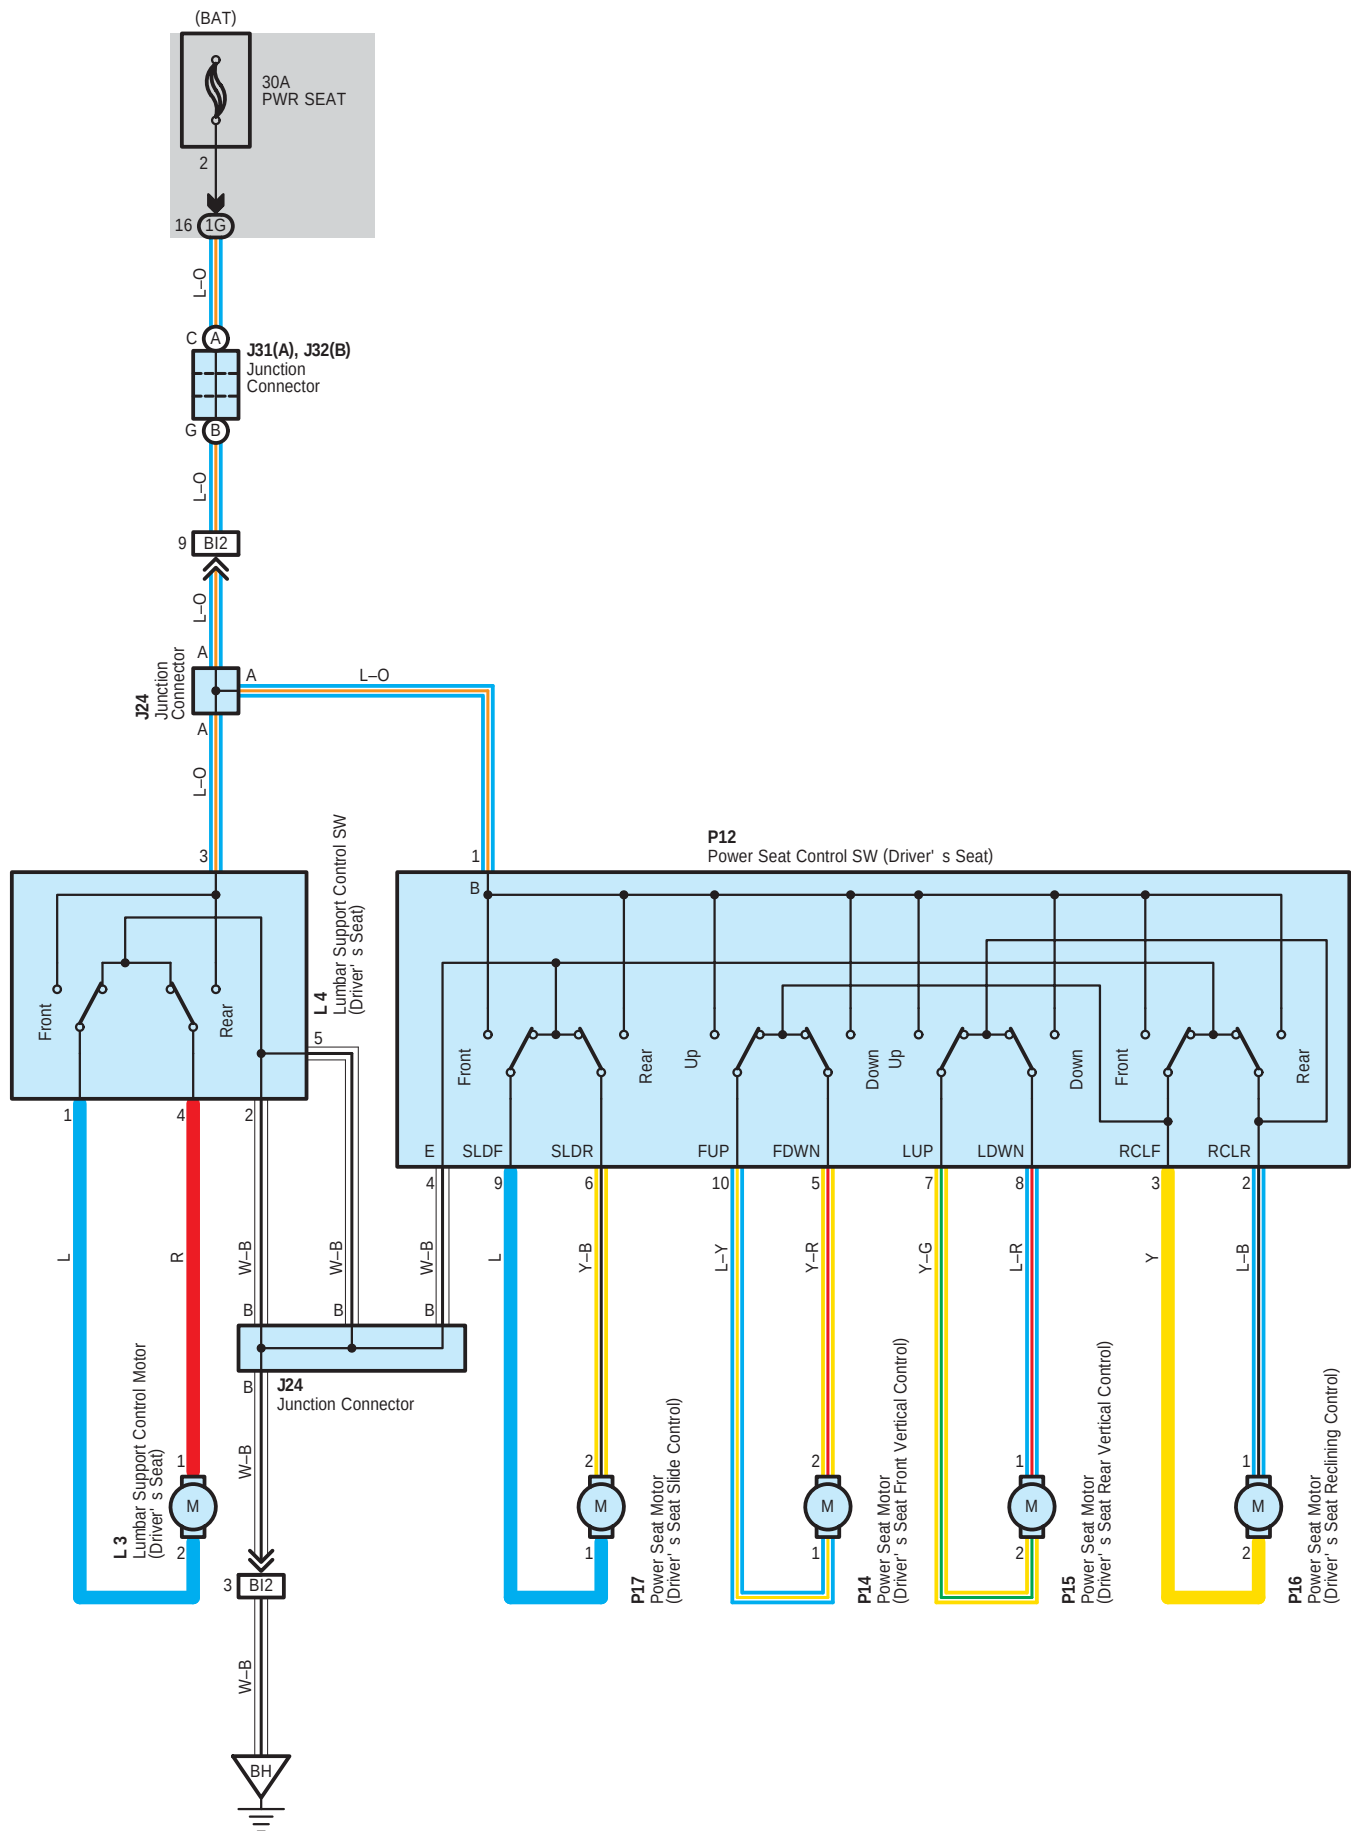

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
J24	48	L4	48	P16	48
J31	A 44	P12	48	P17	48
J32	B 44	P14	48		
L3	48	P15	48		

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BI2	54 (*1)	Floor No.2 Wire and Seat No.2 Wire (Under the Driver's Seat)

 : Ground Points

Code	See Page	Ground Points Location
BH	52	Center Pillar LH

* 1 : w/ Power Seat * 2 : w/o Power Seat