


Seat Heater

- * 1 : w/ Rear Seat Entertainment System or Rear Seat Audio System
- * 2 : w/o Rear Seat Entertainment System, Rear Seat Audio System

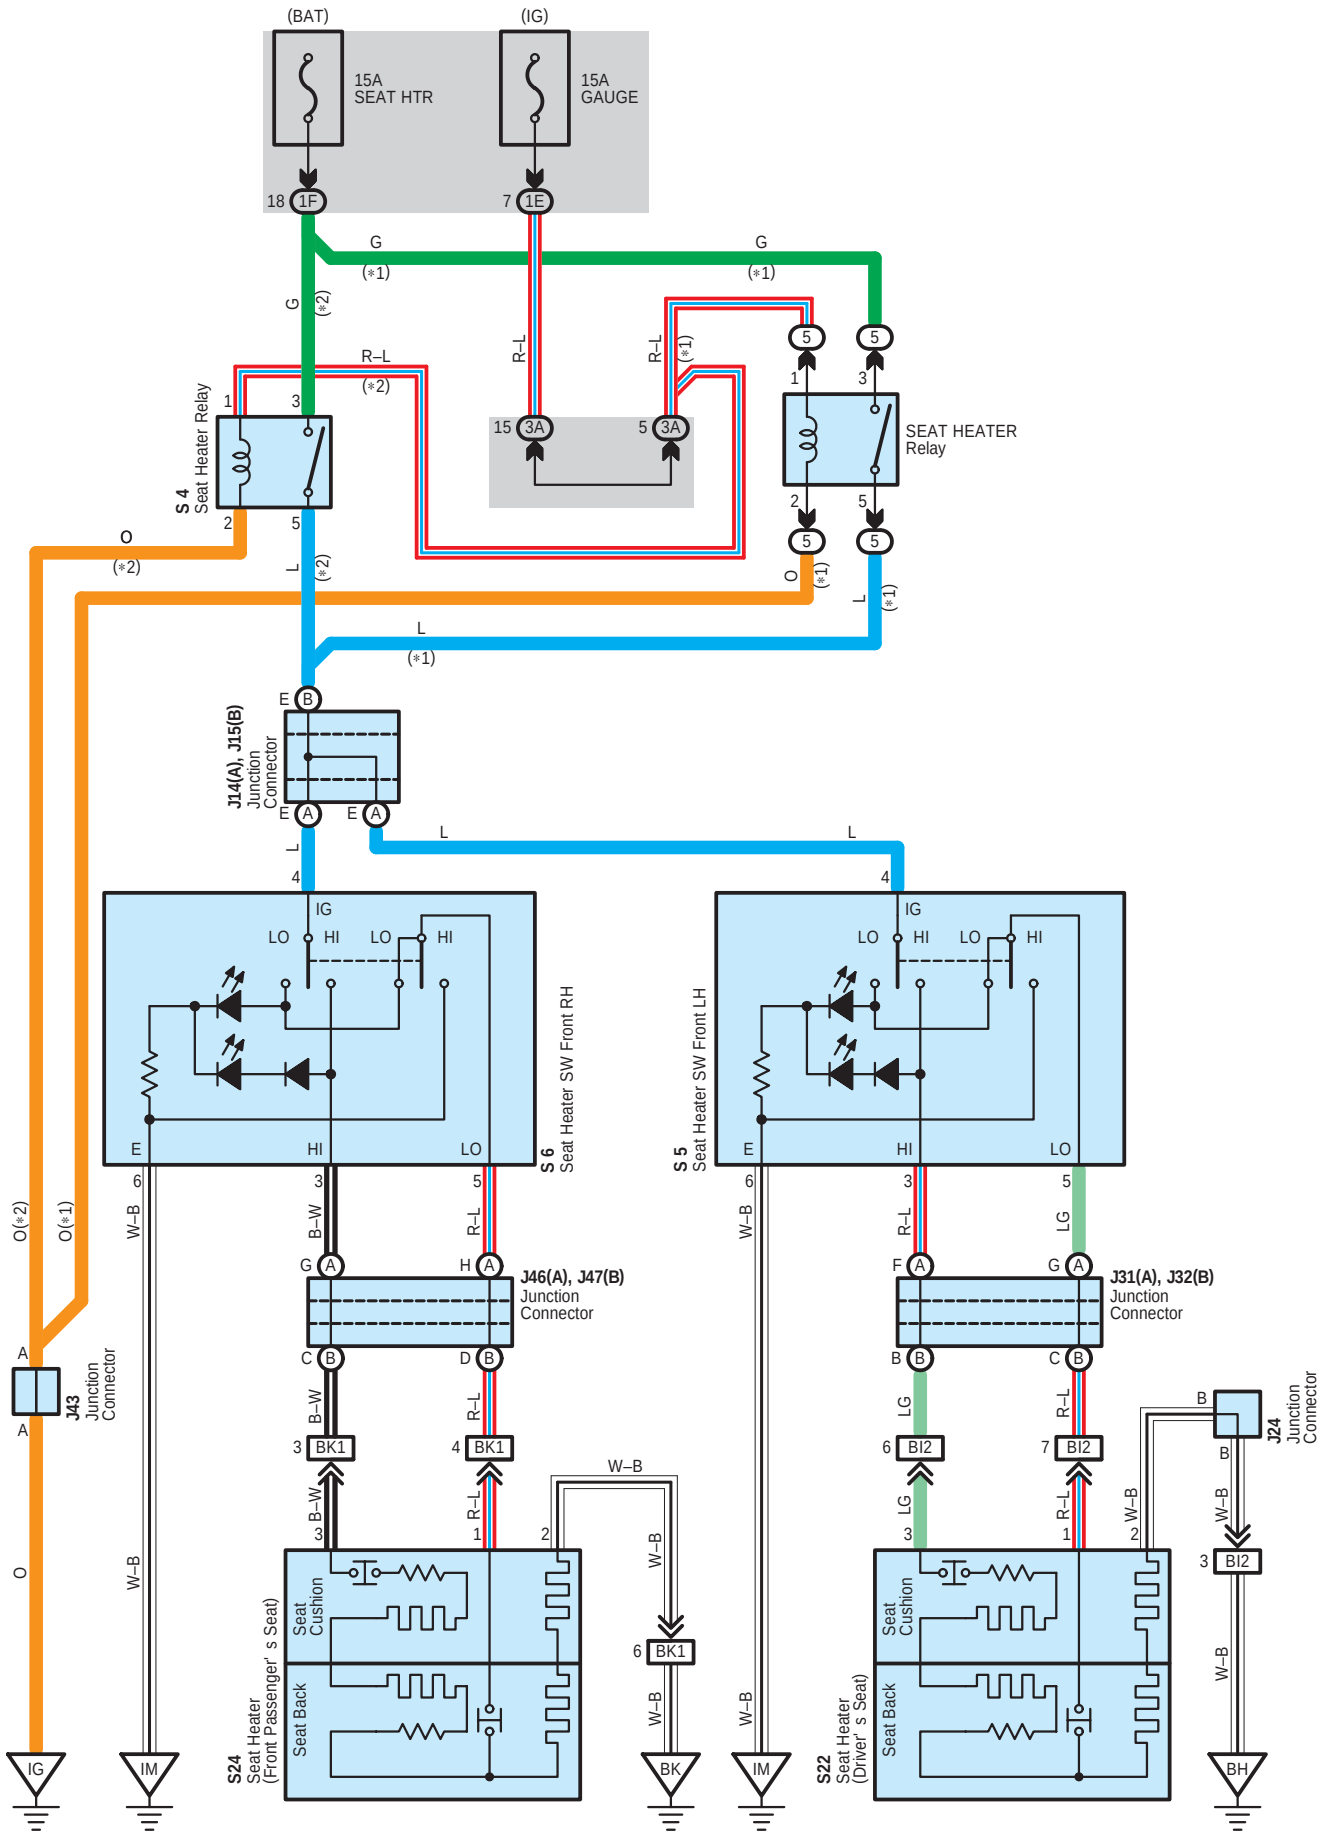

 : Parts Location

Code		See Page	Code		See Page	Code		See Page
J14	A	44	J43		44	S6		45
J15	B	44	J46	A	44	S22		48
J24		48	J47	B	44	S24		48
J31	A	44	S4		45			
J32	B	44	S5		45			

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
5	27	Driver Side R/B (Under the Instrument Panel J/B)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1F		
3A	36	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BI2	54 (*1)	Floor No.2 Wire and Seat No.2 Wire (Under the Driver's Seat)
BK1	54 (*1)	Floor No.1 Wire and Seat No.1 Wire (Under the Front Passenger's Seat)

 : Ground Points

Code	See Page	Ground Points Location
IG	51	Cowl Side Panel RH
IM	51	Rear Console
BH	52	Center Pillar LH
BK	52	Center Pillar RH

* 1 : w/ Power Seat * 2 : w/o Power Seat