





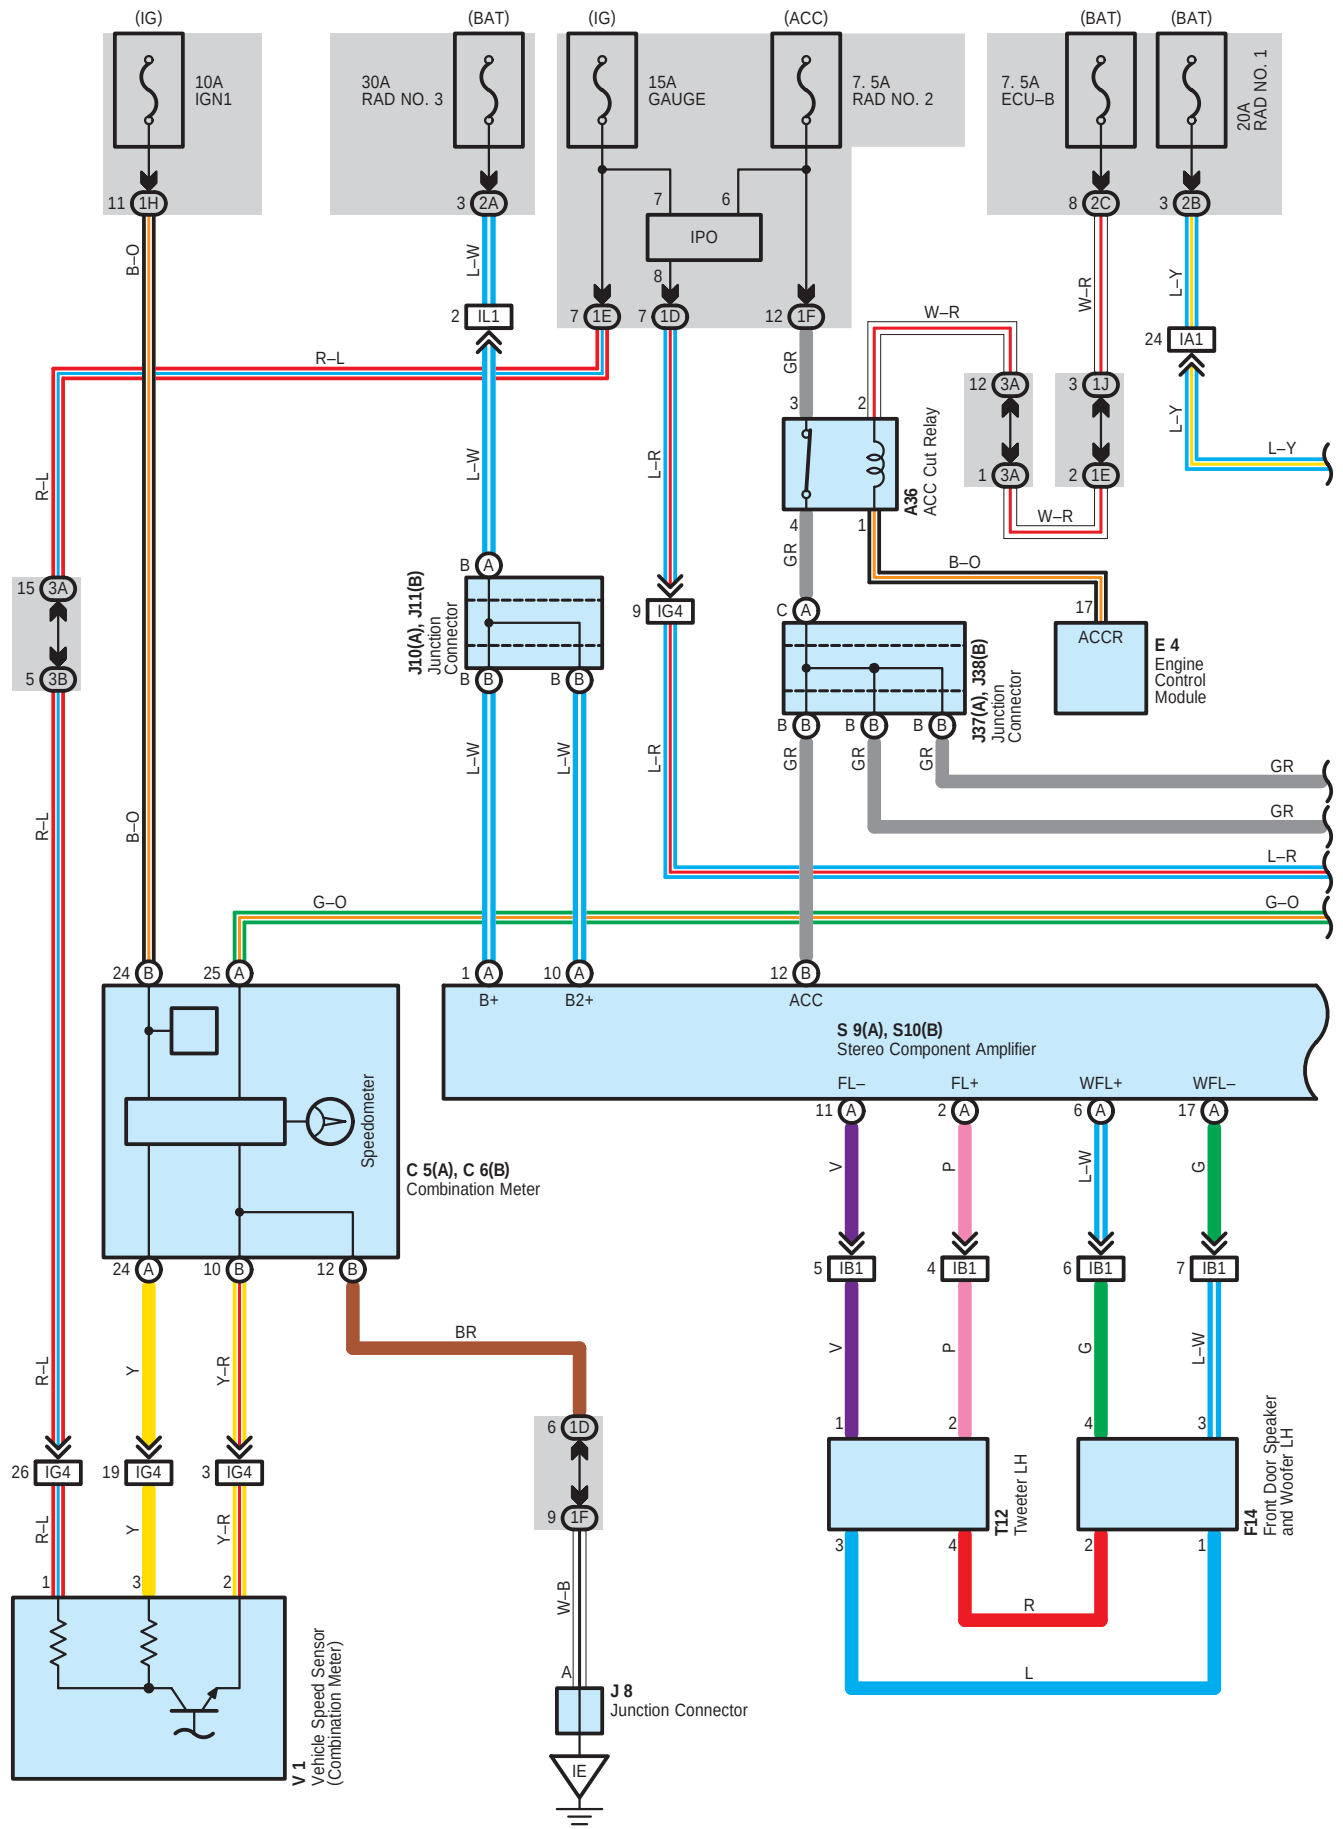


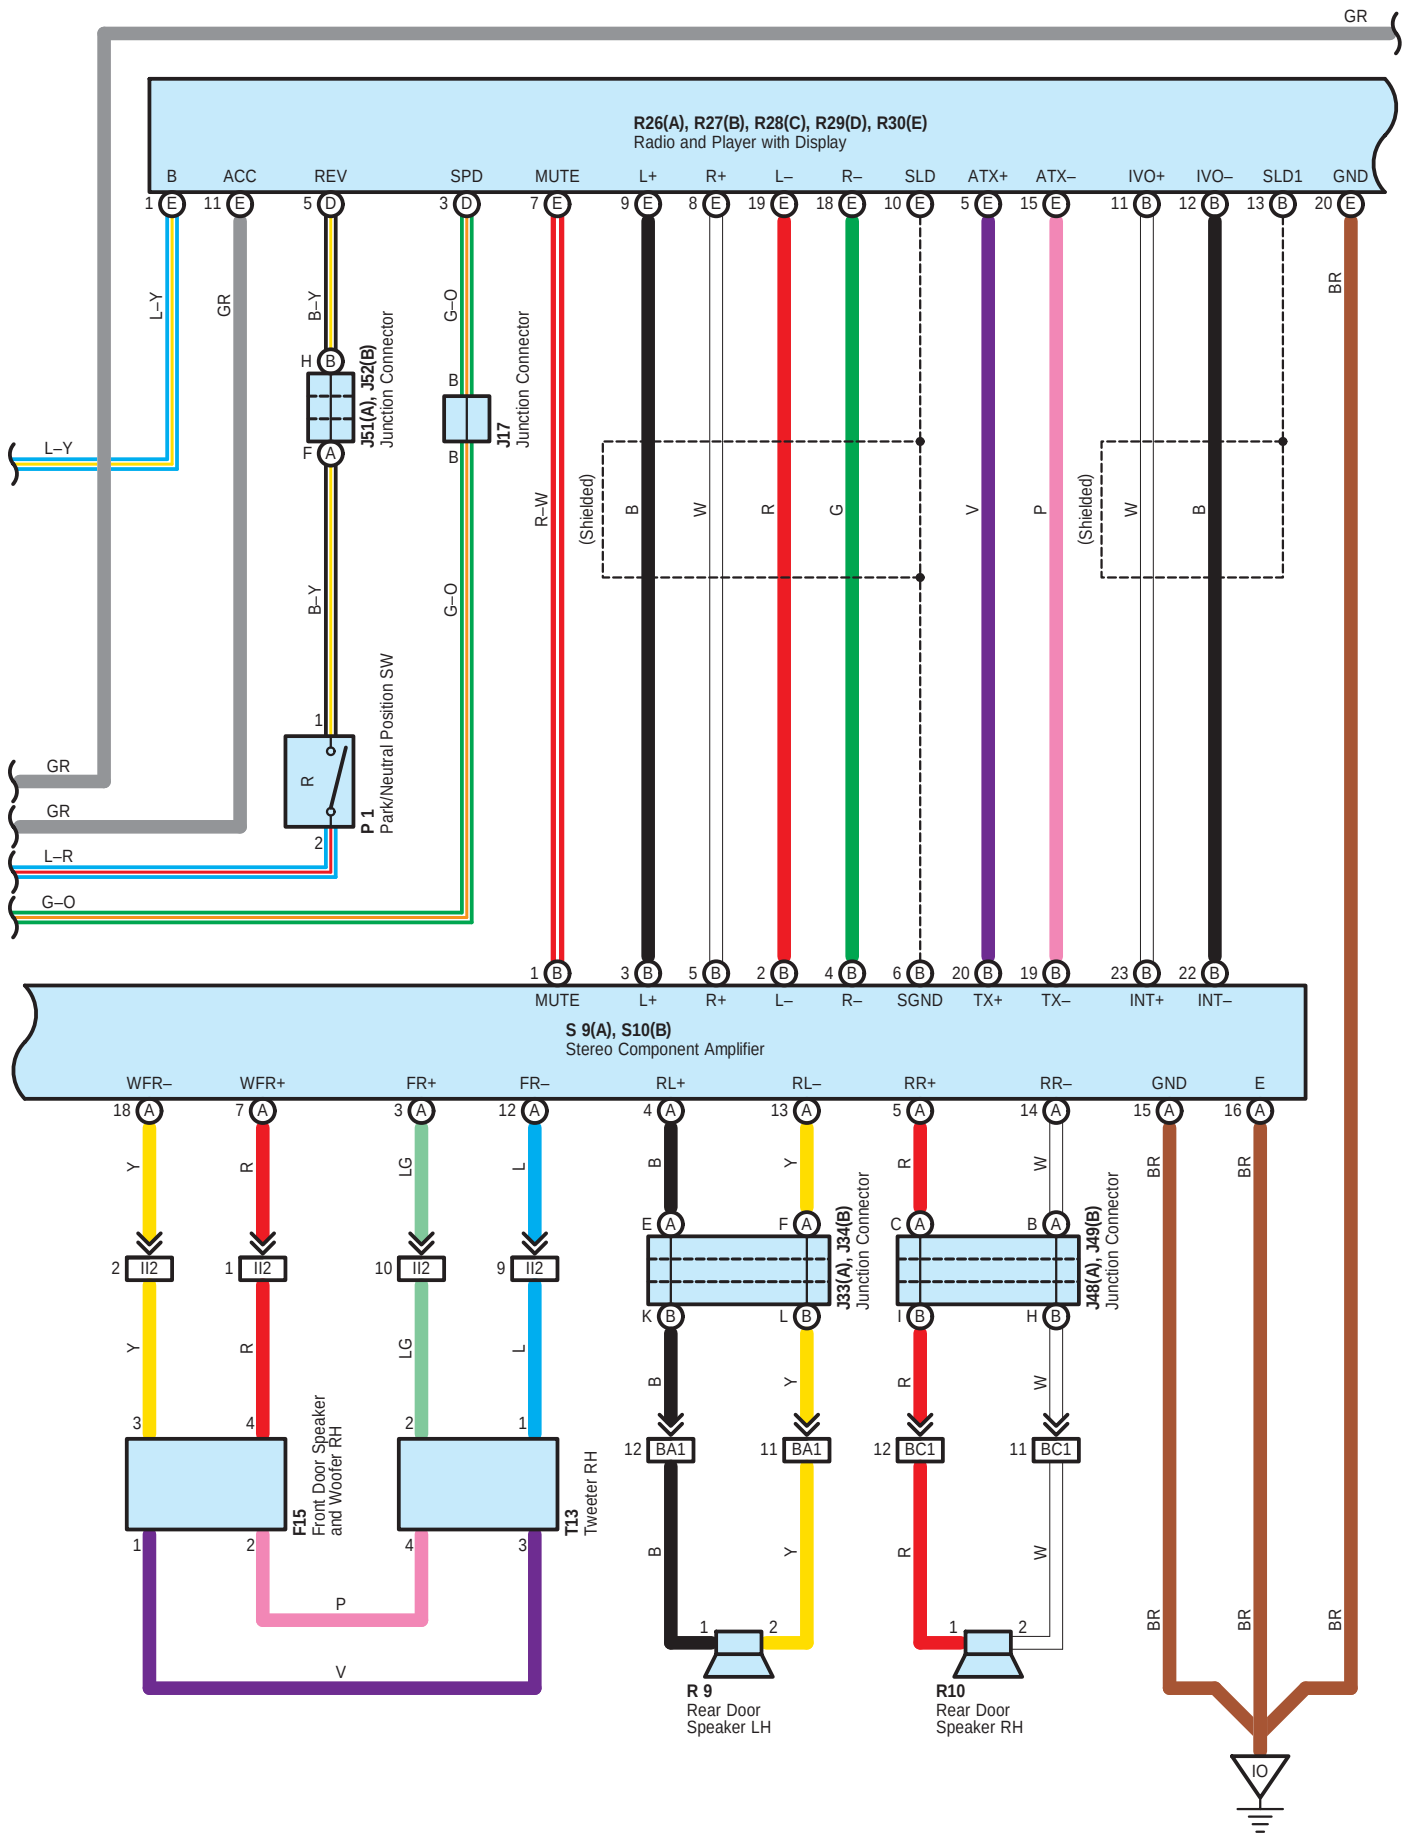


Navigation and Audio System with RSES

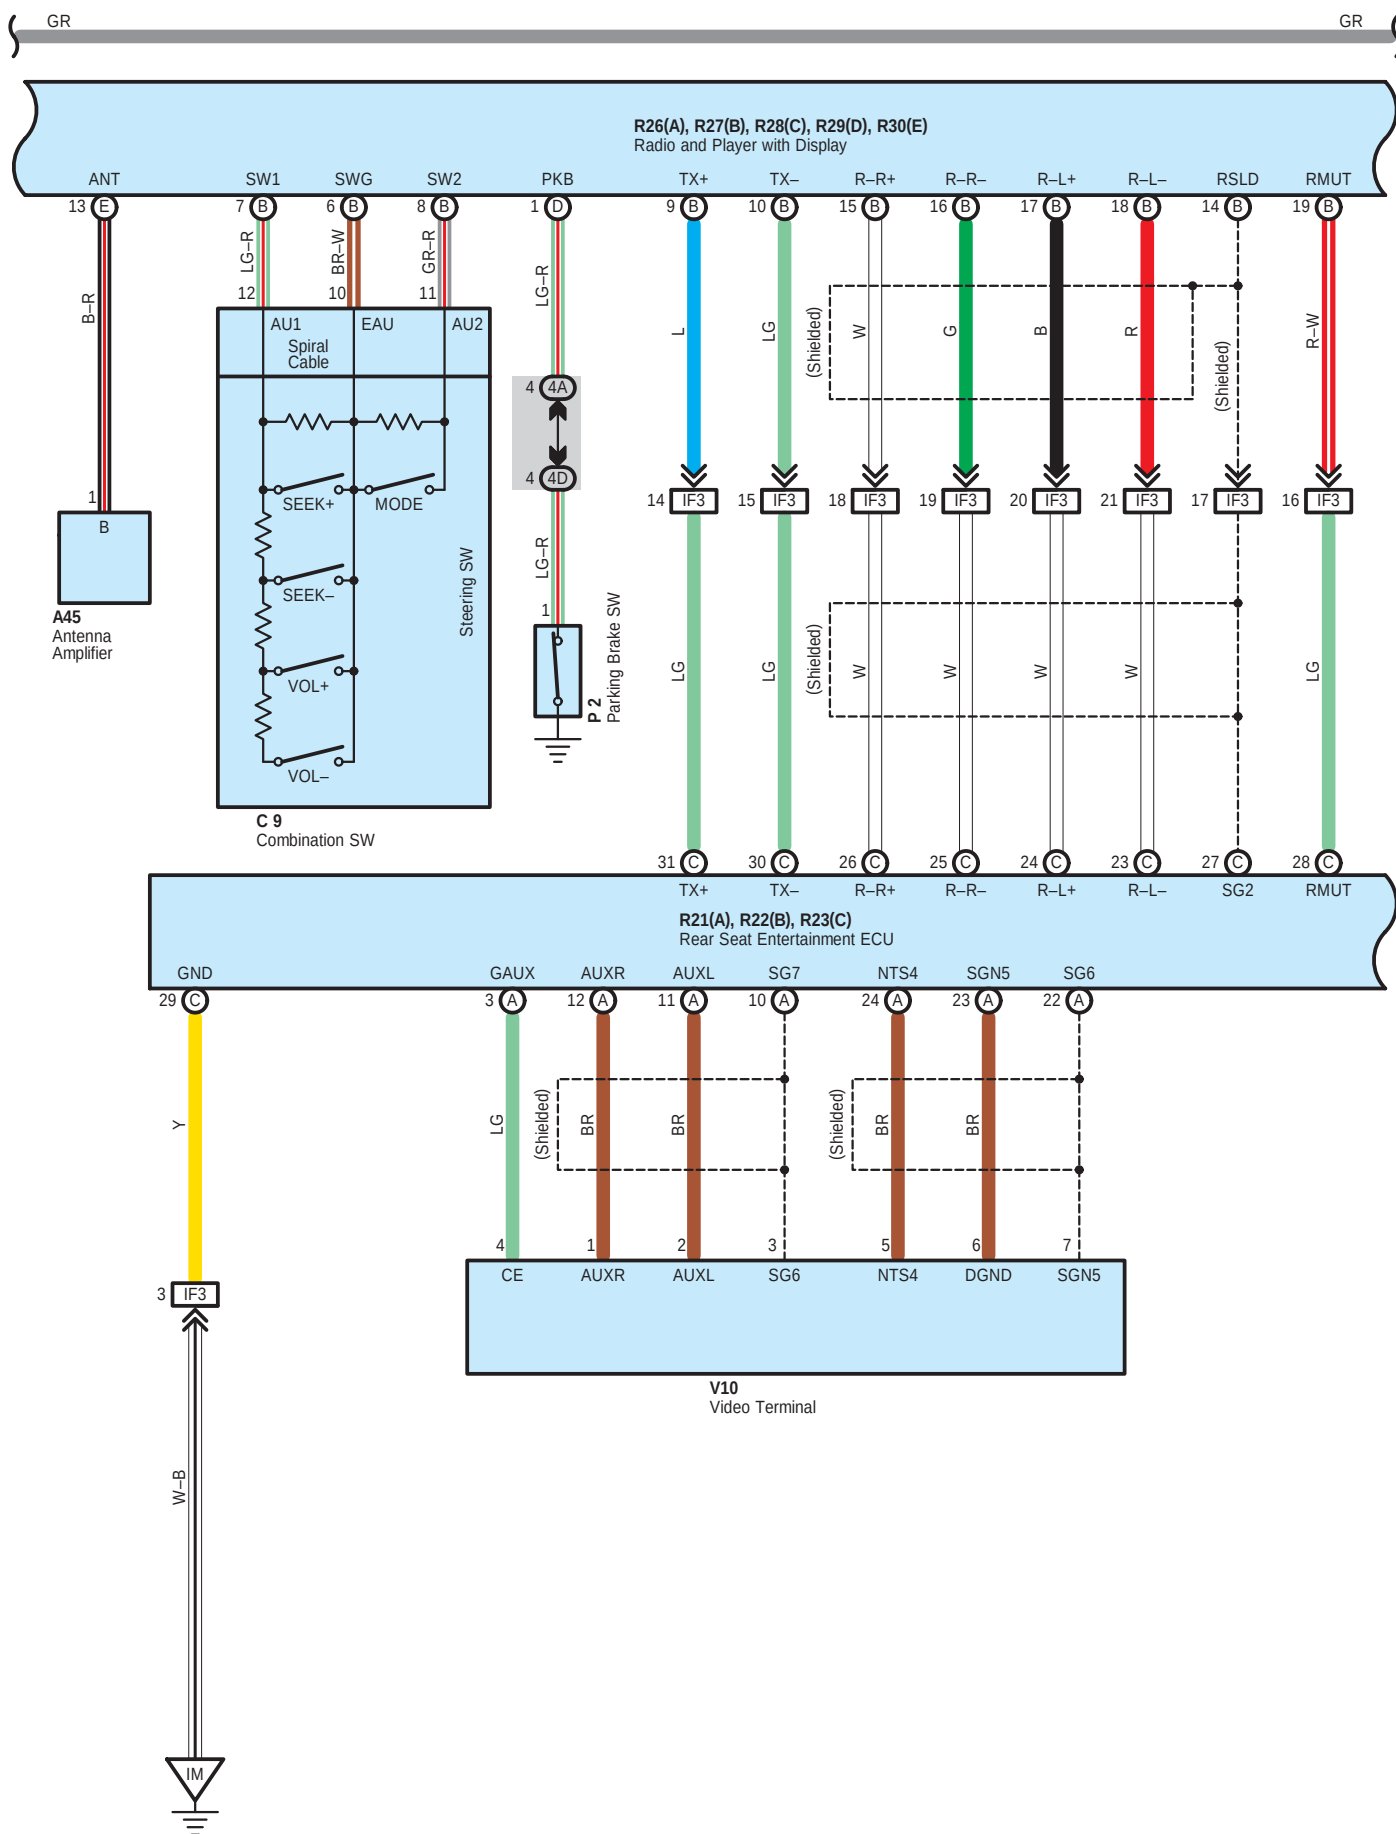

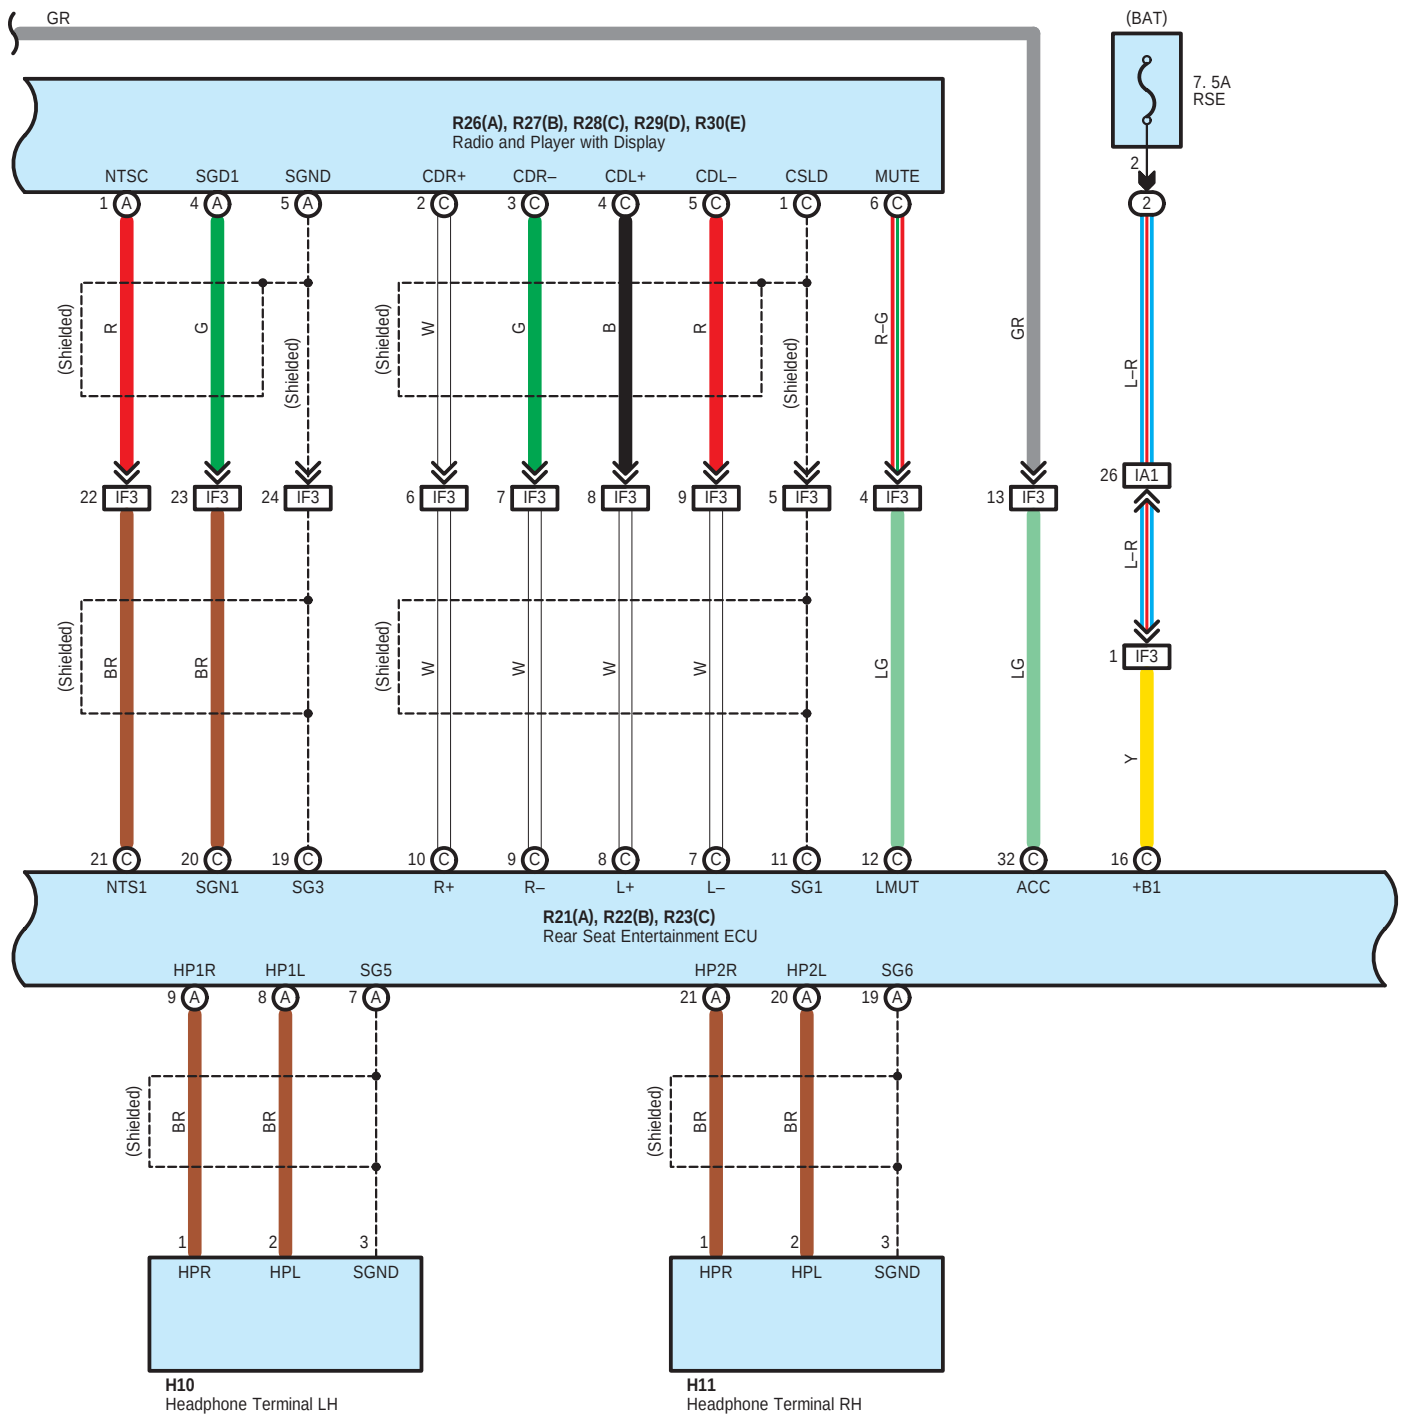

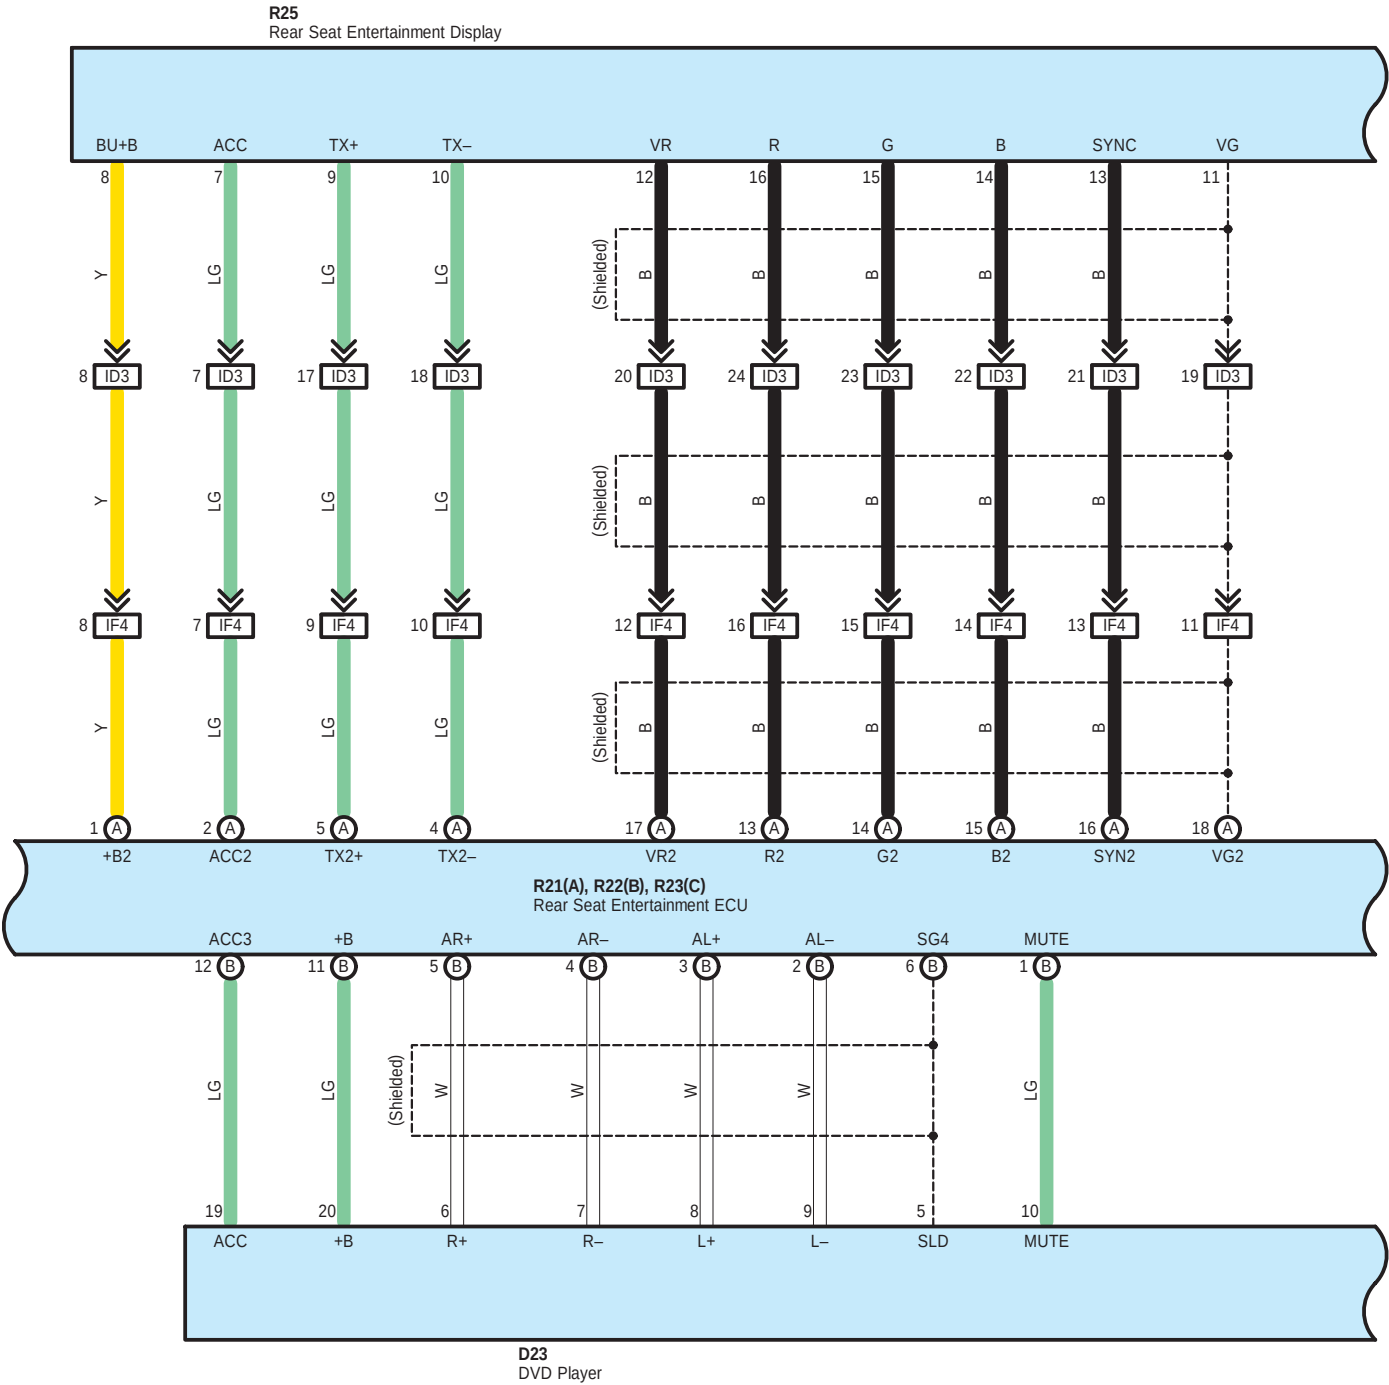

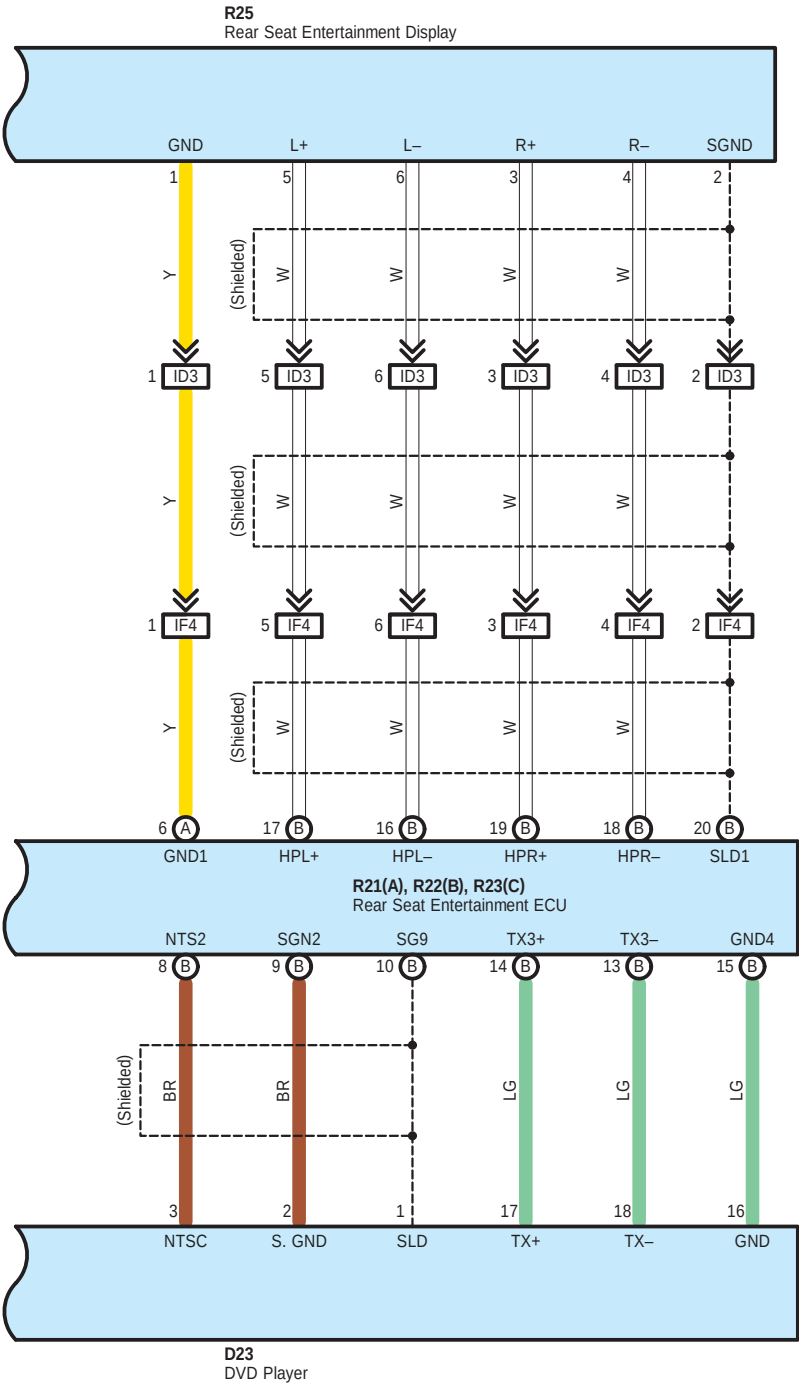

Navigation and Audio System with RSES

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A36	42	J17	44	R22	B 45
A45	42	J33	A 44	R23	C 45
C5	A 42	J34	B 44	R25	47
C6	B 42	J37	A 44	R26	A 45
C9	42	J38	B 44	R27	B 45
D23	43	J48	A 44	R28	C 45
E4	43	J49	B 44	R29	D 45
F14	46	J51	A 44	R30	E 45
F15	46	J52	B 44	S9	A 45
H10	43	P1	41	S10	B 45
H11	43	P2	45	T12	47
J8	44	R9	47	T13	47
J10	A 44	R10	47	V1	41
J11	B 44	R21	A 45	V10	45

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	26	Engine Room R/B No.2 (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1F		
1H		
1J	33	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
2A	29	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2B		
2C		
3A	36	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)
3B		
4A	38	Cowl Wire and Sub J/B No.4 (Upper the Accelerator Pedal)
4D		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	51	Engine Room Main Wire and Cowl Wire (Cowl Side Panel LH)
IB1	51	Front Door LH Wire and Cowl Wire (Left Kick Panel)
ID3	51	Cowl Wire and Roof Wire (Left Side of Instrument Panel)
IF3	51	Console Box Wire and Cowl Wire (Rear Console)
IF4		
IG4	51	Engine Wire and Cowl Wire (Right Side of Instrument Panel)
II2	51	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IL1	51	Engine Room Main Wire and Cowl Wire (Cowl Side Panel RH)
BA1	52	Rear Door No.2 Wire and Floor No.2 Wire (Center Pillar LH)
BC1	52	Rear Door No.1 Wire and Floor No.1 Wire (Center Pillar RH)

: Ground Points

Code	See Page	Ground Points Location
IE	51	Cowl Side Panel LH
IM	51	Rear Console
IO	51	Instrument Panel Brace RH

