




Audio System with 10 Speaker

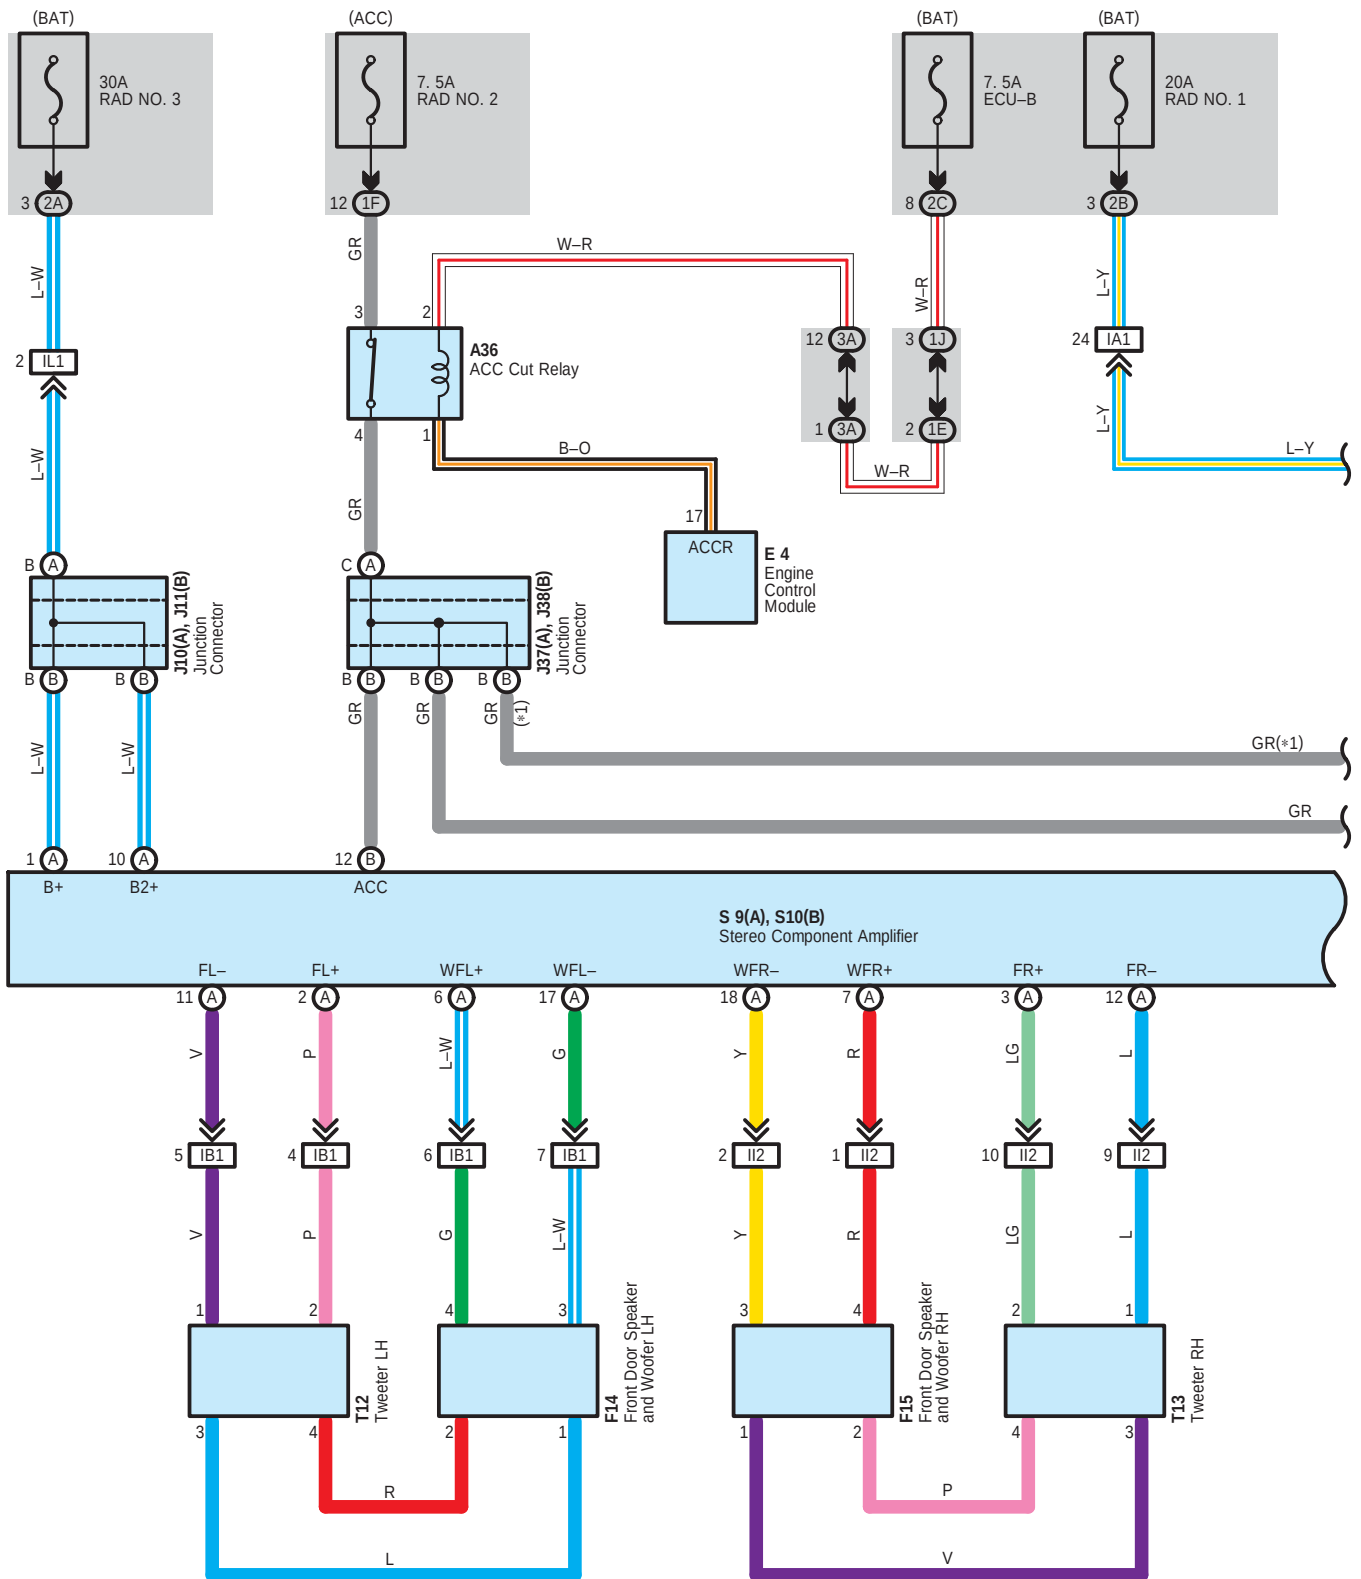

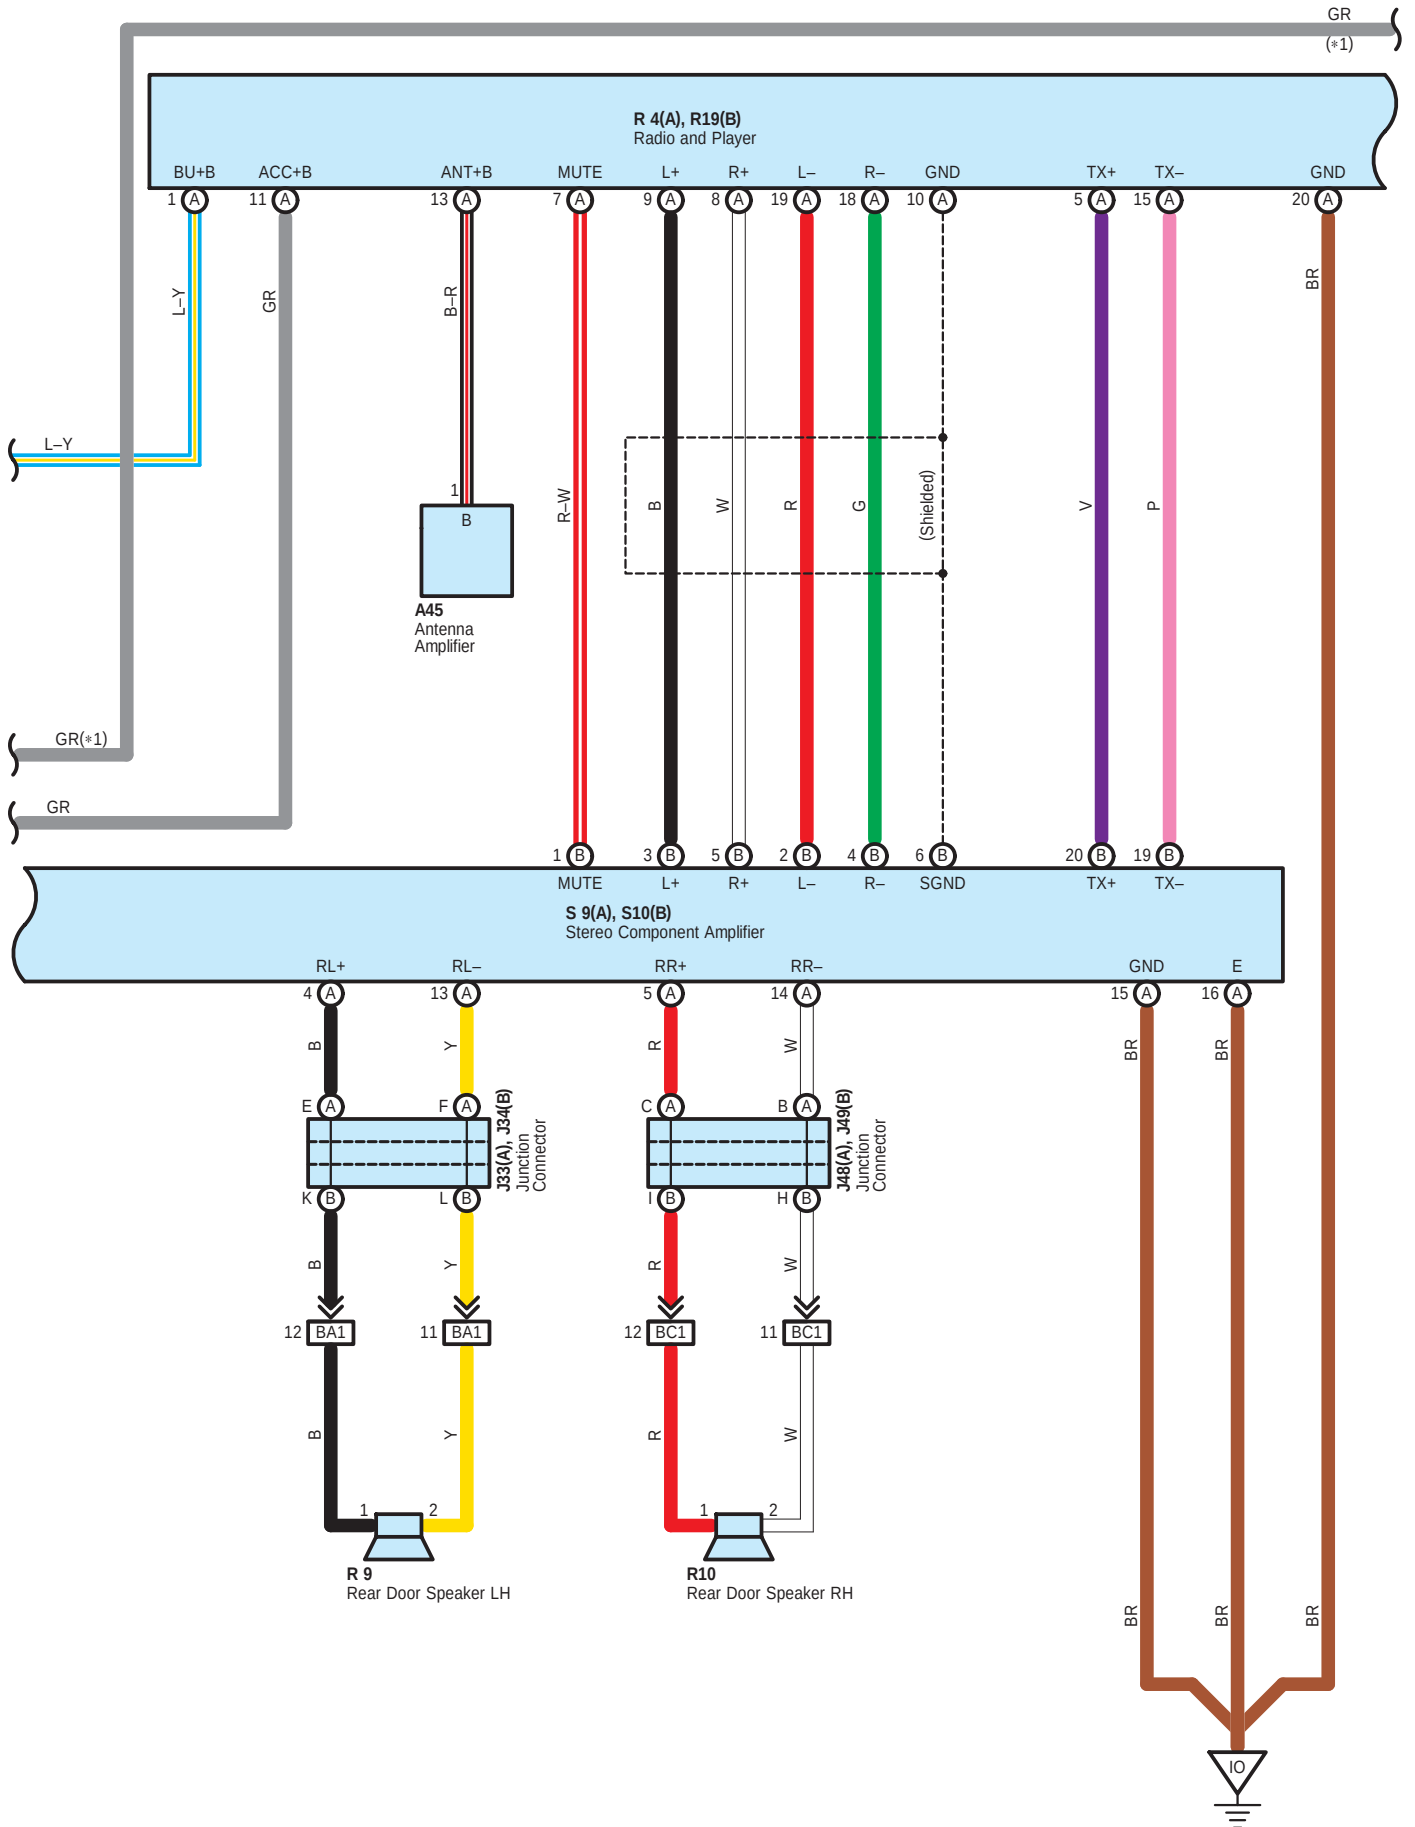

Audio System with 10 Speaker

* 1 : w/ Rear Seat Audio System

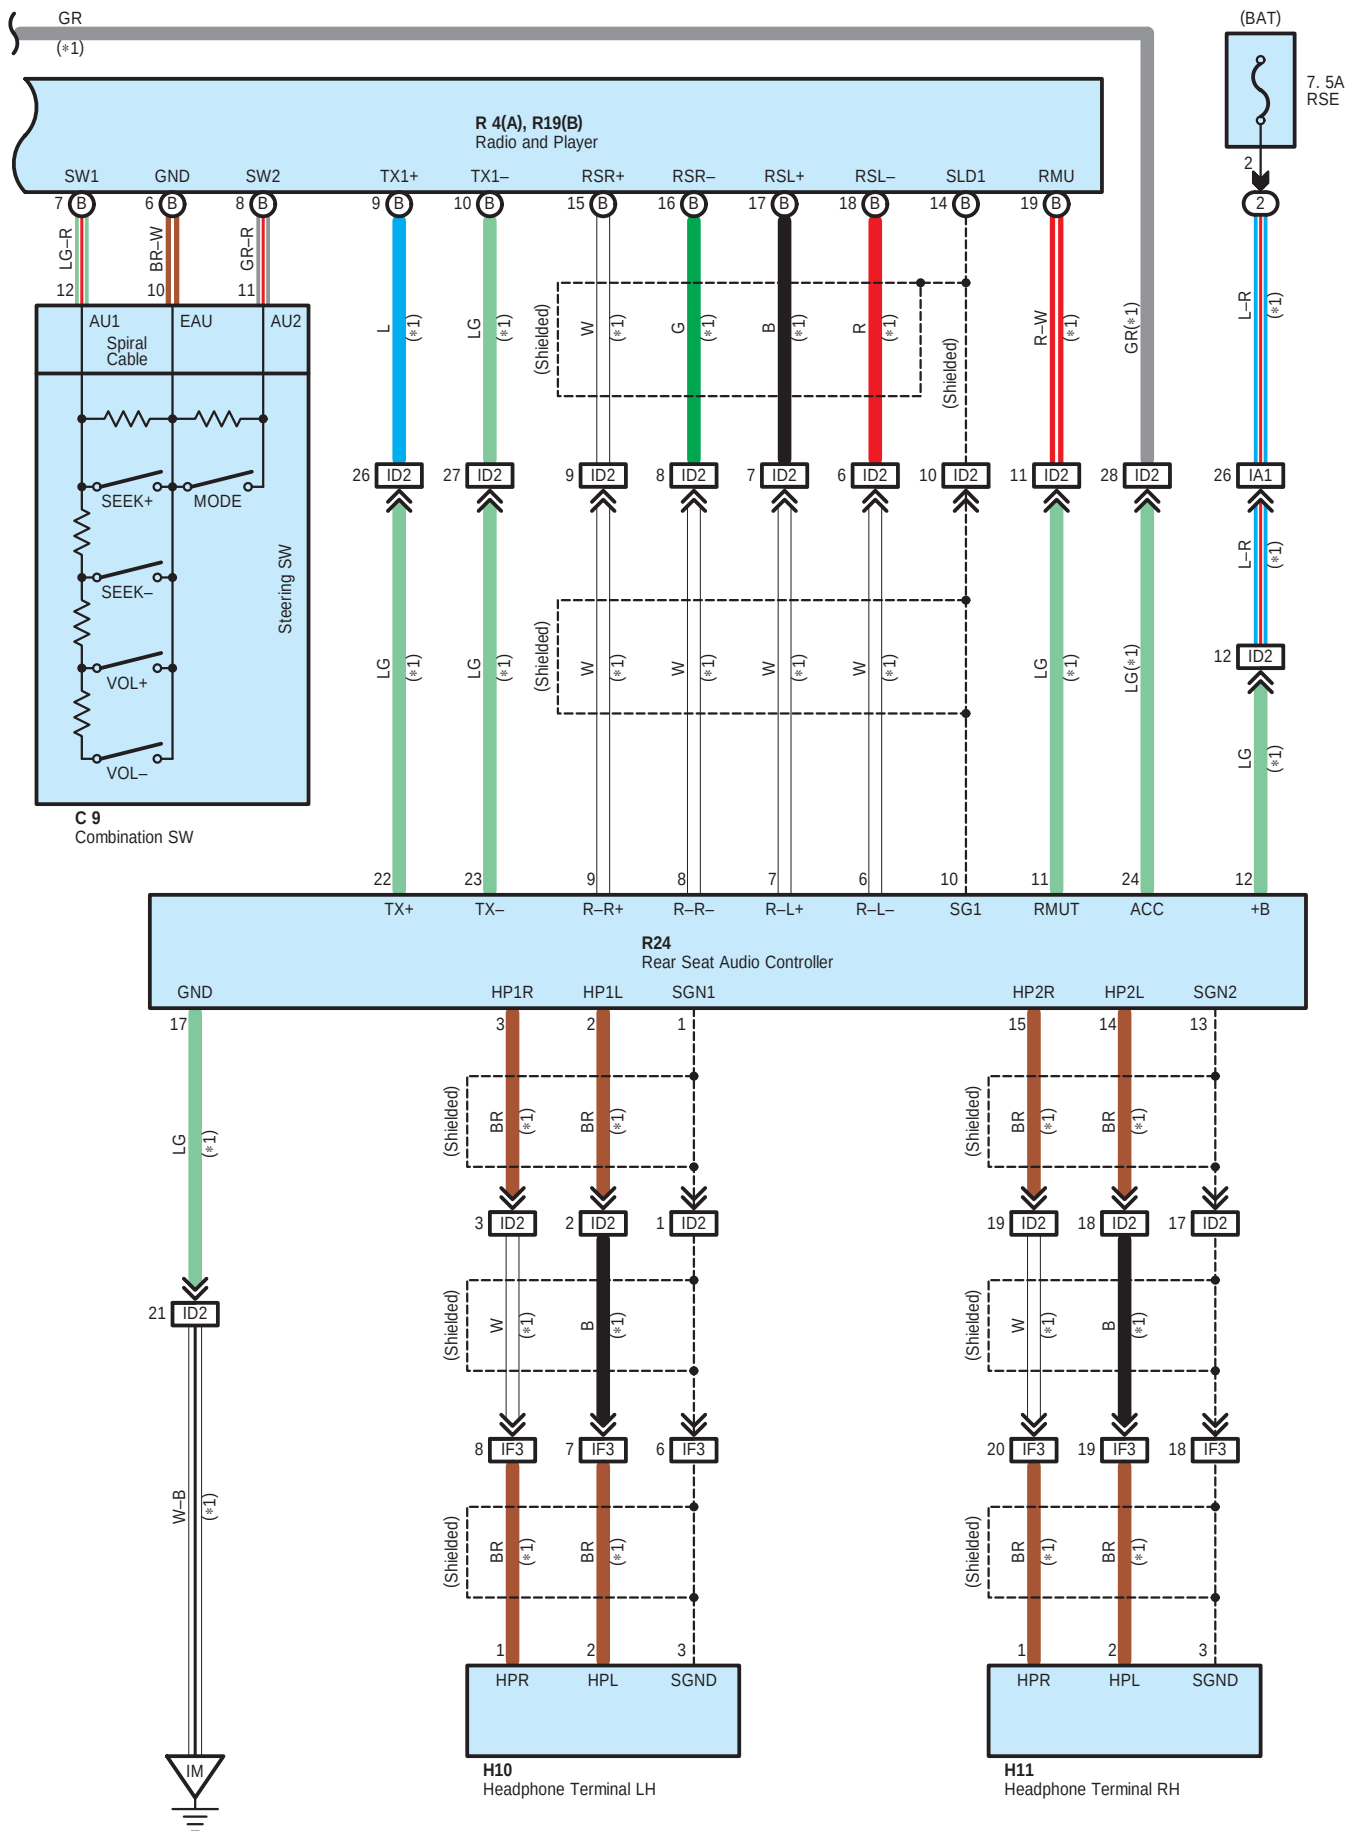

 : Parts Location

Code		See Page		Code		See Page		Code		See Page					
A36		42		J11		B		44		R10		47			
A45		42		J33		A		44		R19		B		45	
C9		42		J34		B		44		R24				47	
E4		43		J37		A		44		S9		A		45	
F14		46		J38		B		44		S10		B		45	
F15		46		J48		A		44		T12				47	
H10		43		J49		B		44		T13				47	
H11		43		R4		A		45							
J10		A		44		R9		47							

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	26	Engine Room R/B No.2 (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1F		
1J	33	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
2A	29	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2B		
2C		
3A	36	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	51	Engine Room Main Wire and Cowl Wire (Cowl Side Panel LH)
IB1	51	Front Door LH Wire and Cowl Wire (Left Kick Panel)
ID2	51	Cowl Wire and Roof Wire (Left Side of Instrument Panel)
IF3	51	Console Box Wire and Cowl Wire (Rear Console)
II2	51	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IL1	51	Engine Room Main Wire and Cowl Wire (Cowl Side Panel RH)
BA1	52	Rear Door No.2 Wire and Floor No.2 Wire (Center Pillar LH)
BC1	52	Rear Door No.1 Wire and Floor No.1 Wire (Center Pillar RH)

 : Ground Points

Code	See Page	Ground Points Location
IM	51	Rear Console
IO	51	Instrument Panel Brace RH