


Audio System with 6 Speaker

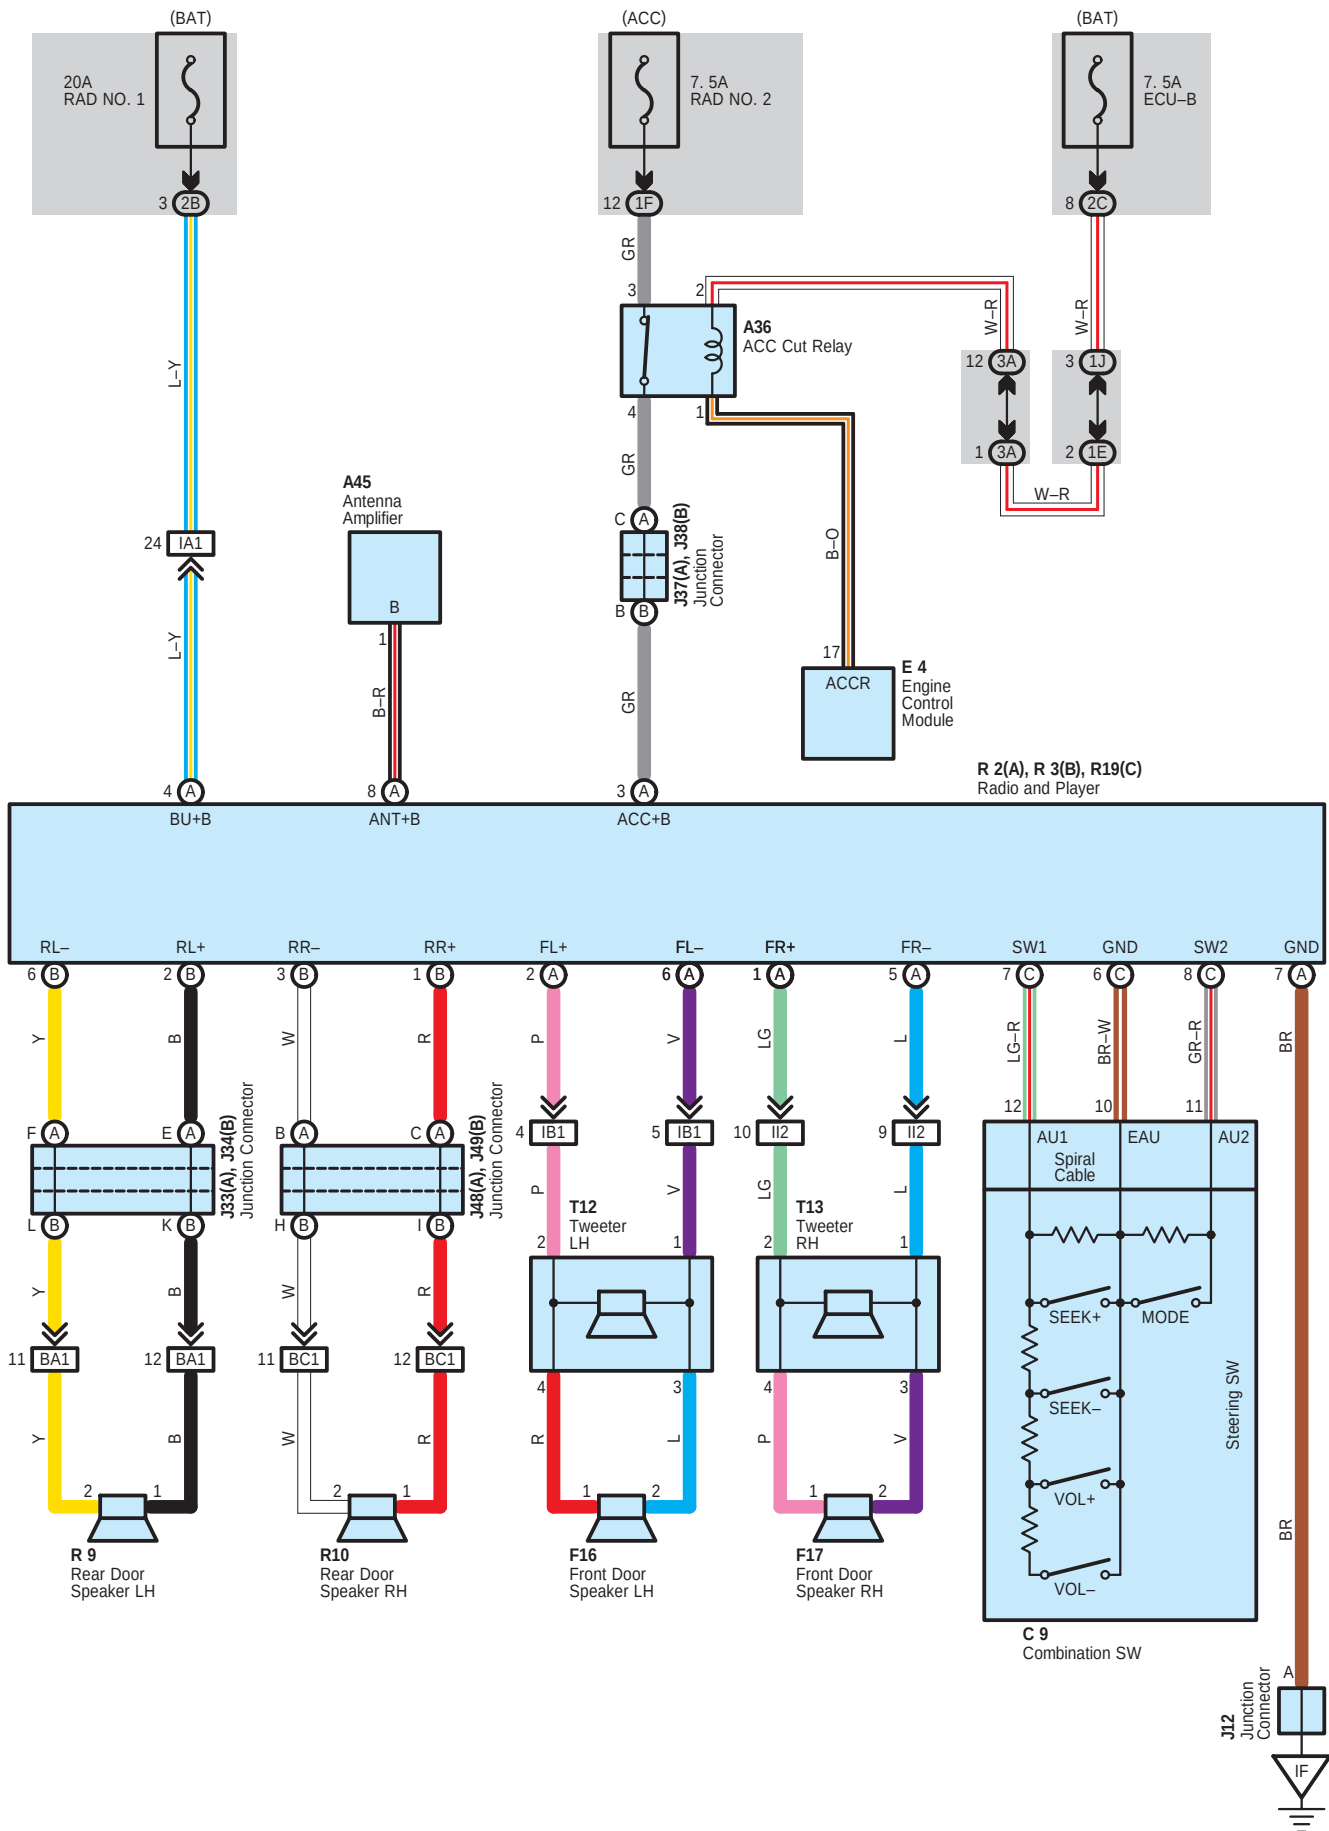

 : Parts Location

Code	See Page	Code		See Page	Code		See Page
A36	42	J33	A	44	R3	B	45
A45	42	J34	B	44	R9		47
C9	42	J37	A	44	R10		47
E4	43	J38	B	44	R19	C	45
F16	46	J48	A	44	T12		47
F17	46	J49	B	44	T13		47
J12	44	R2	A	45			

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1F		
1J	33	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
2B	29	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2C		
3A	36	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	51	Engine Room Main Wire and Cowl Wire (Cowl Side Panel LH)
IB1	51	Front Door LH Wire and Cowl Wire (Left Kick Panel)
II2	51	Front Door RH Wire and Cowl Wire (Right Kick Panel)
BA1	52	Rear Door No.2 Wire and Floor No.2 Wire (Center Pillar LH)
BC1	52	Rear Door No.1 Wire and Floor No.1 Wire (Center Pillar RH)

 : Ground Points

Code	See Page	Ground Points Location
IF	51	Instrument Panel Brace LH