



Combination Meter

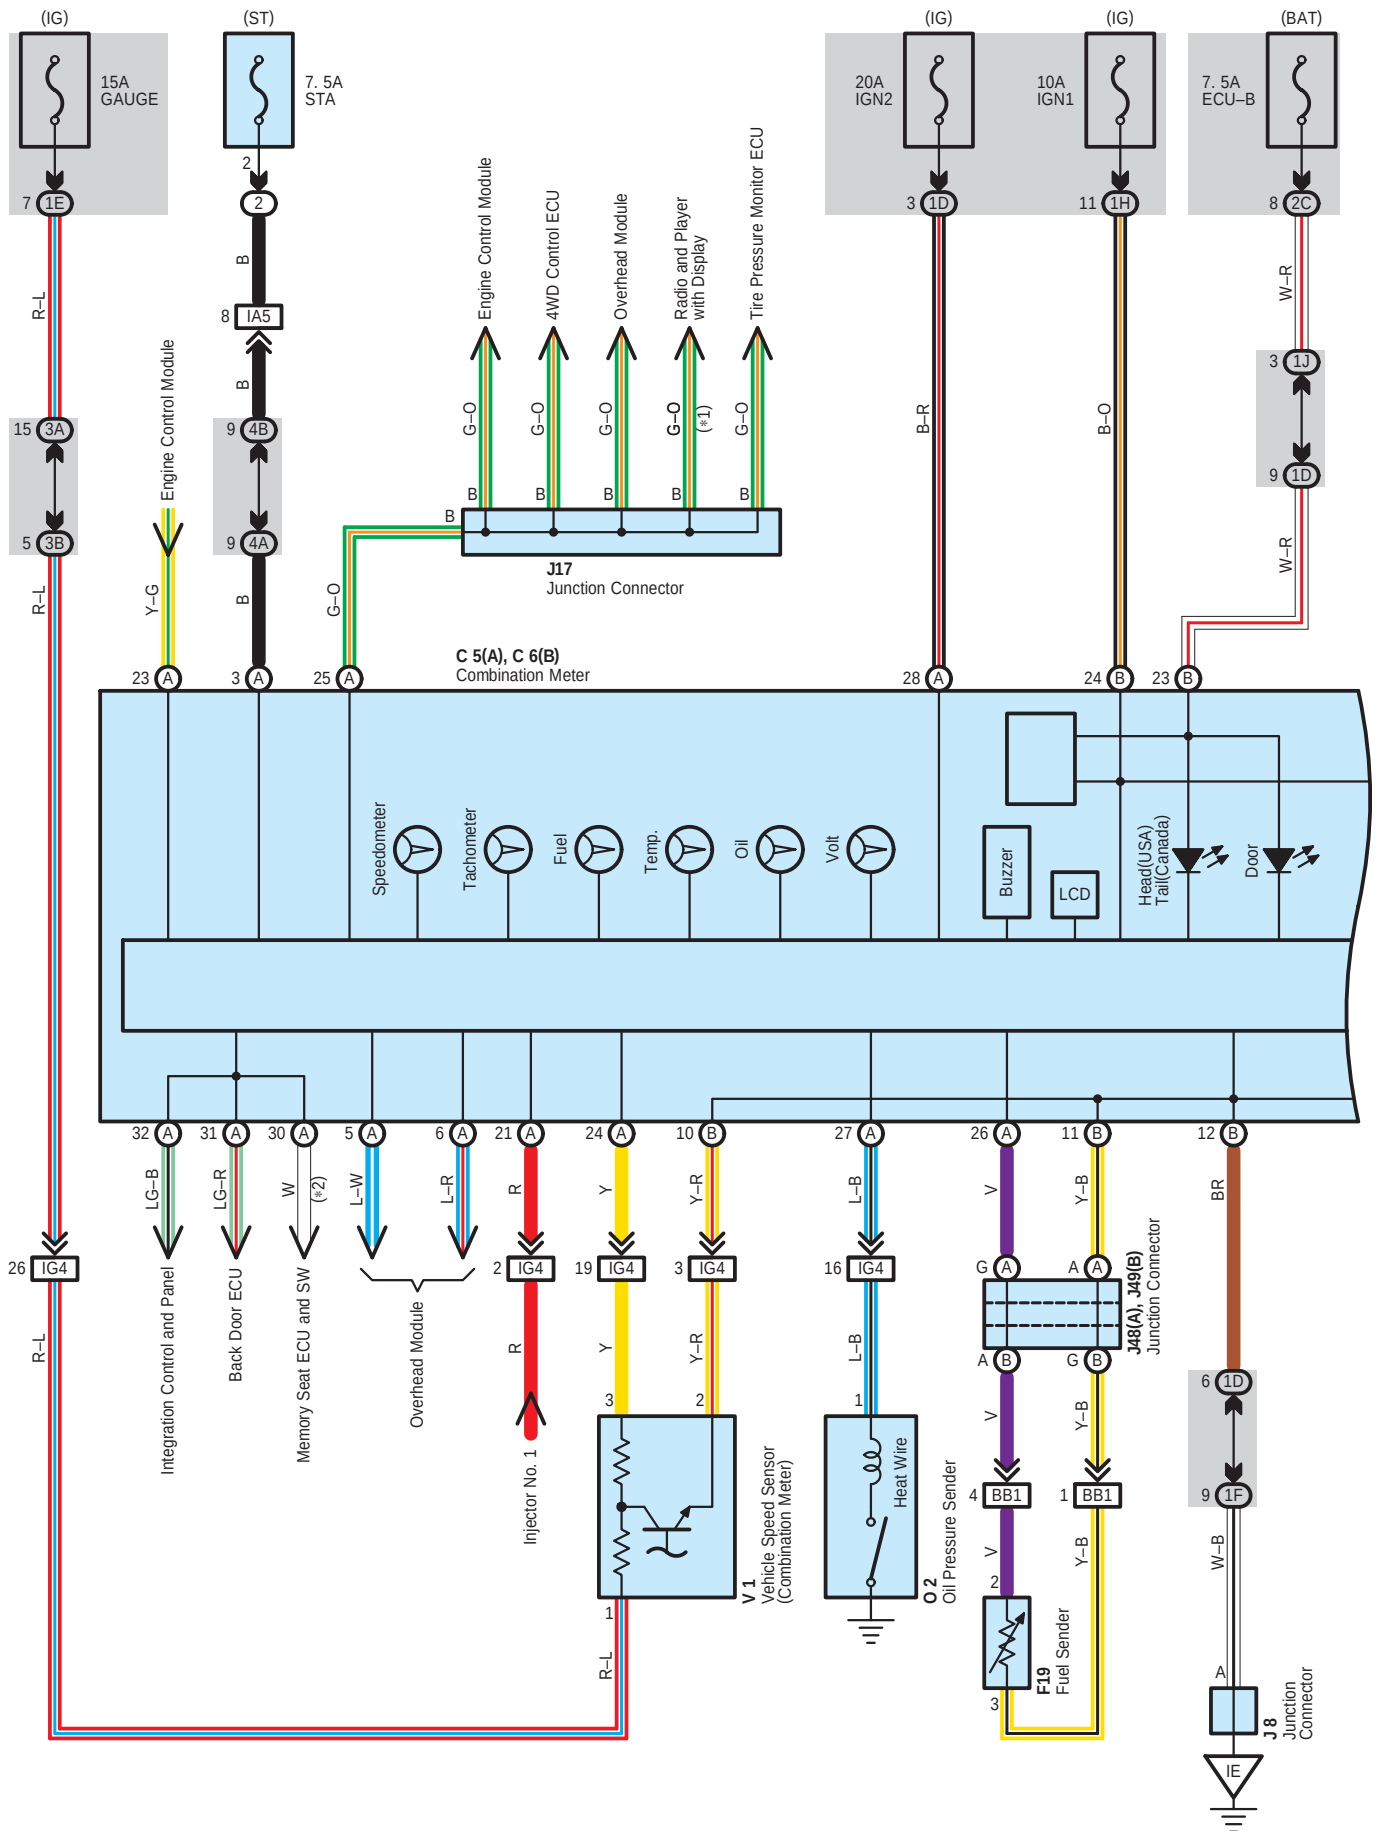


- * 1 : w/ Navigation System
- * 2 : w/ Driving Position Memory


C 5(A), C 6(B)
Combination Meter

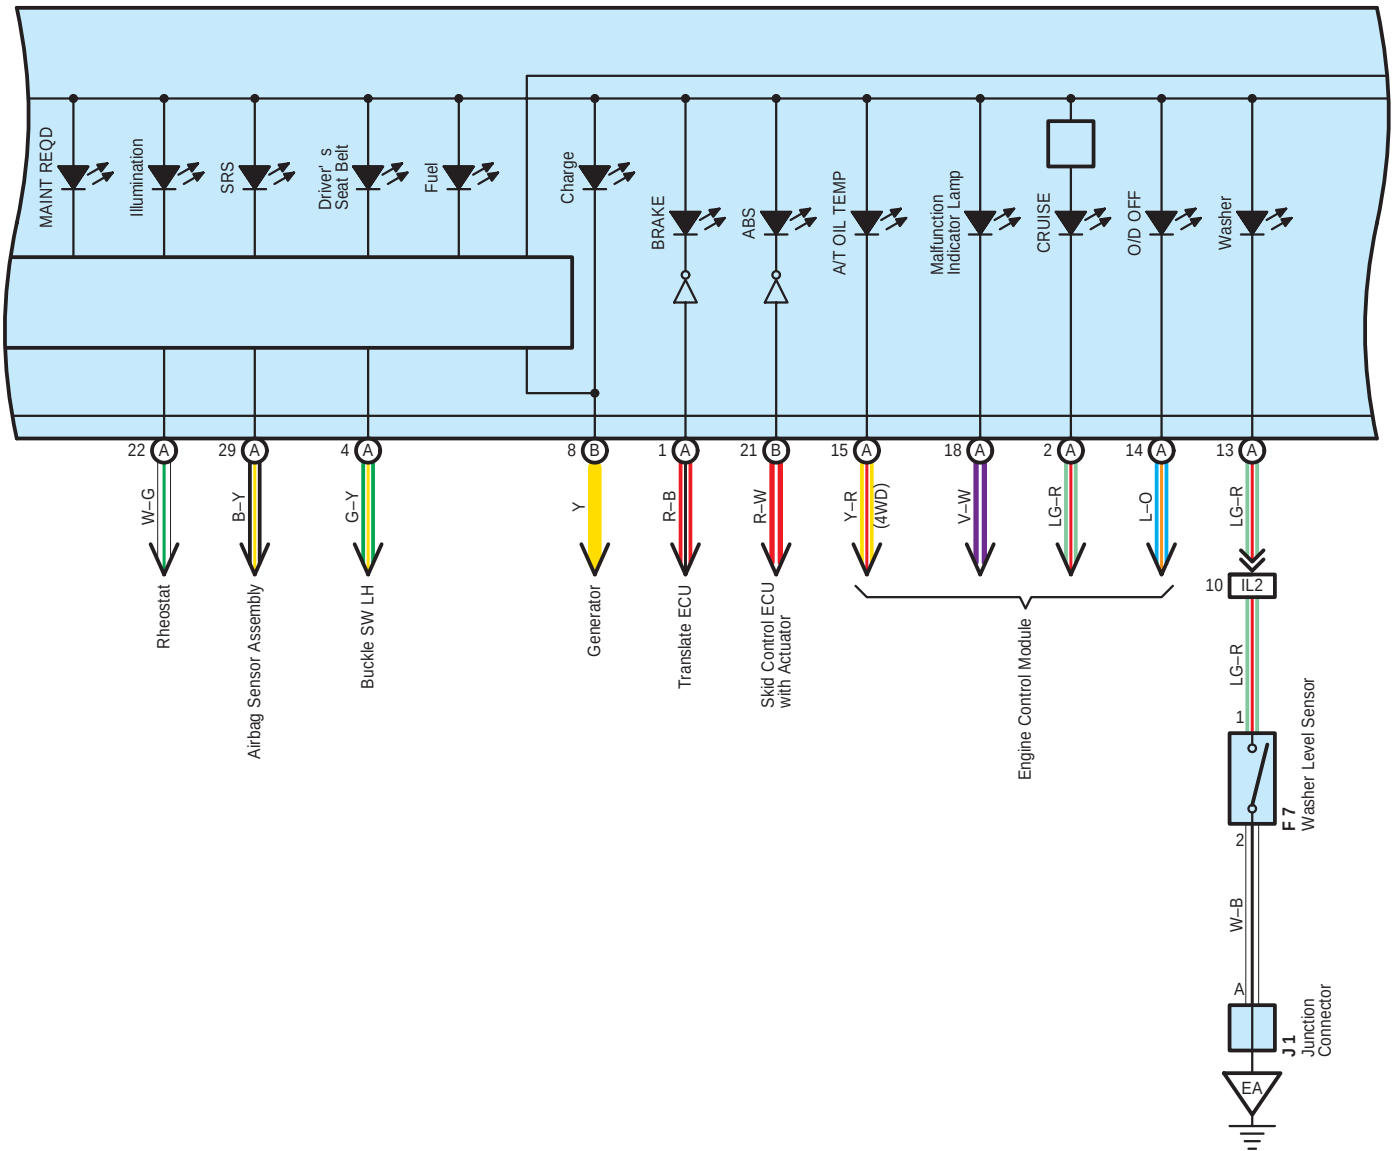

Combination Meter

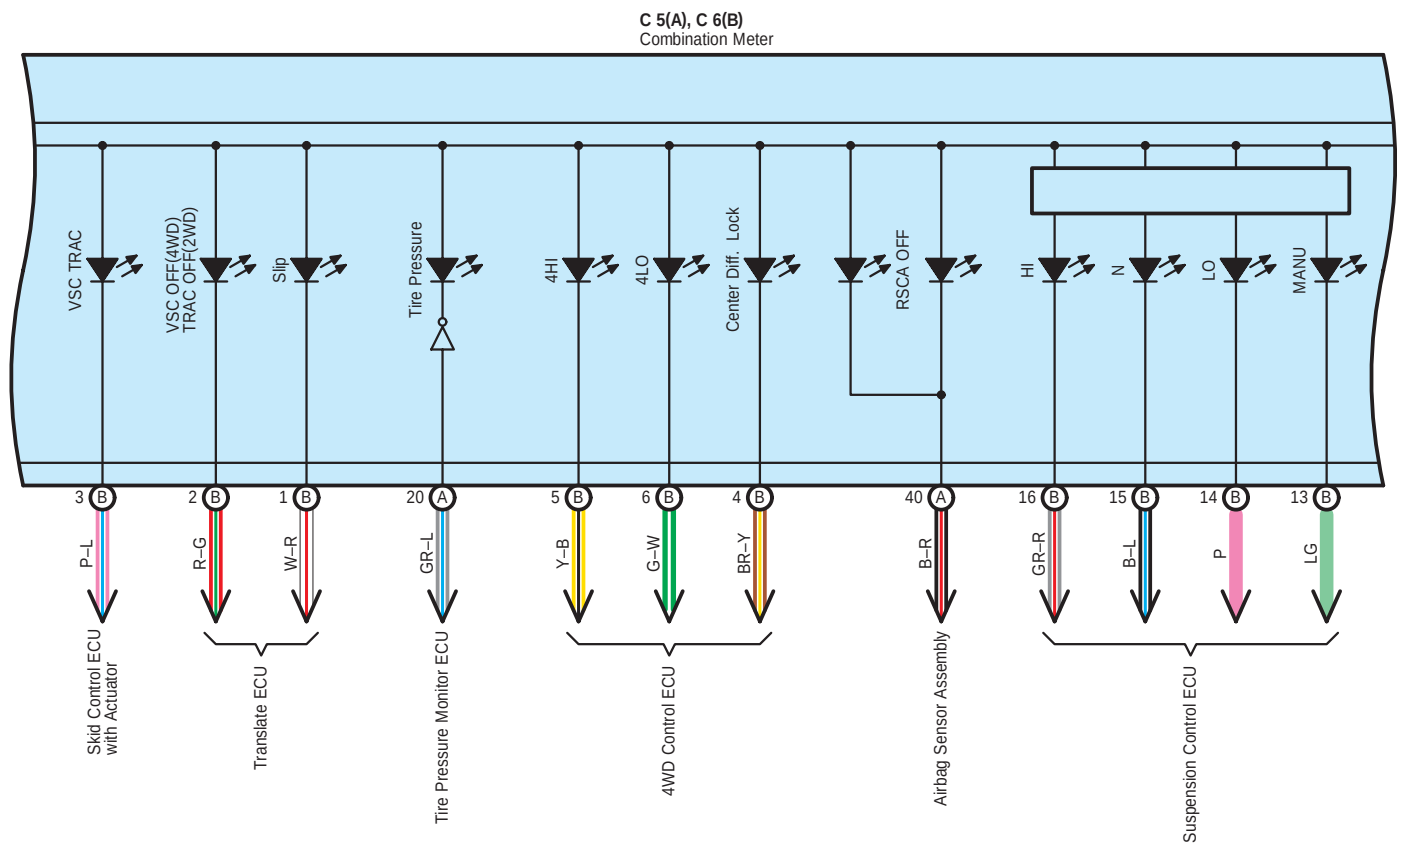

- * 3 : w/ Daytime Running Light
- * 4 : w/o Daytime Running Light

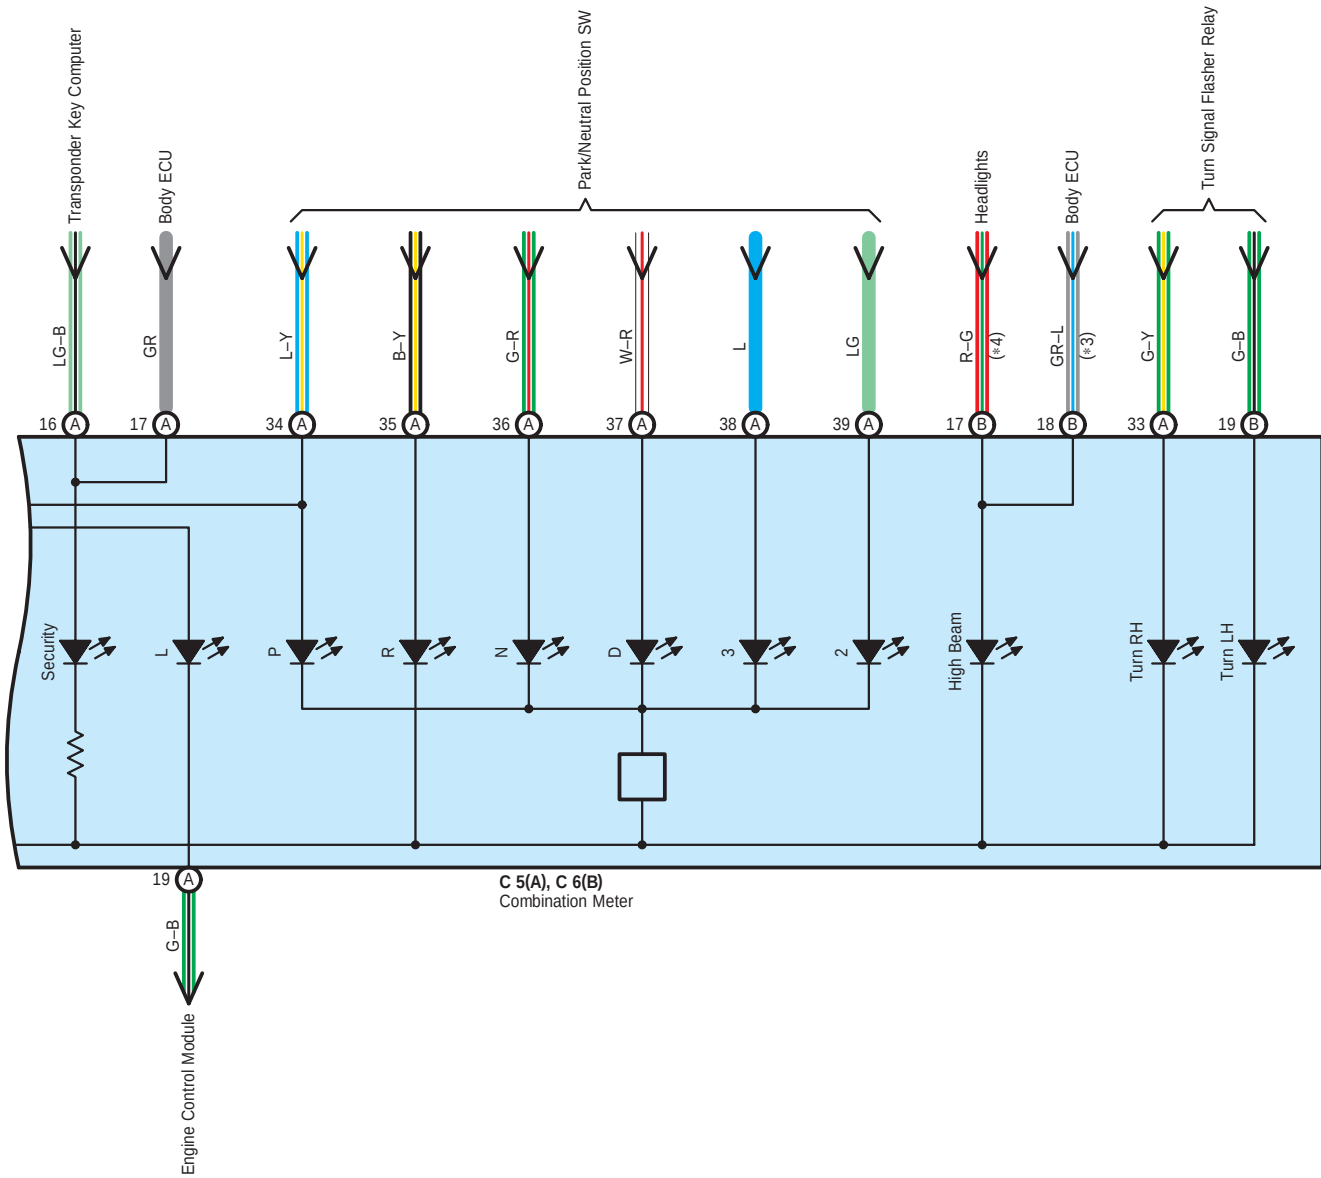

Combination Meter

: Parts Location

Code		See Page	Code		See Page	Code		See Page
C5	A	42	J1	41		J49	B	44
C6	B	42	J8	44		O2		41
F7		40	J17	44		V1		41
F19		46	J48	A	44			

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	26	Engine Room R/B No.2 (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1F		
1H		
1J	33	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
2C	29	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3A	36	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)
3B		
4A	38	Cowl Wire and Sub J/B No.4 (Upper the Accelerator Pedal)
4B		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA5	51	Engine Room Main Wire and Cowl Wire (Cowl Side Panel LH)
IG4	51	Engine Wire and Cowl Wire (Right Side of Instrument Panel)
IL2	51	Engine Room Main Wire and Cowl Wire (Cowl Side Panel RH)
BB1	52	Frame Wire and Floor No.1 Wire (Under the Front Passenger's Seat)

: Ground Points

Code	See Page	Ground Points Location
EA	50	Radiator Side Support RH
IE	51	Cowl Side Panel LH

