




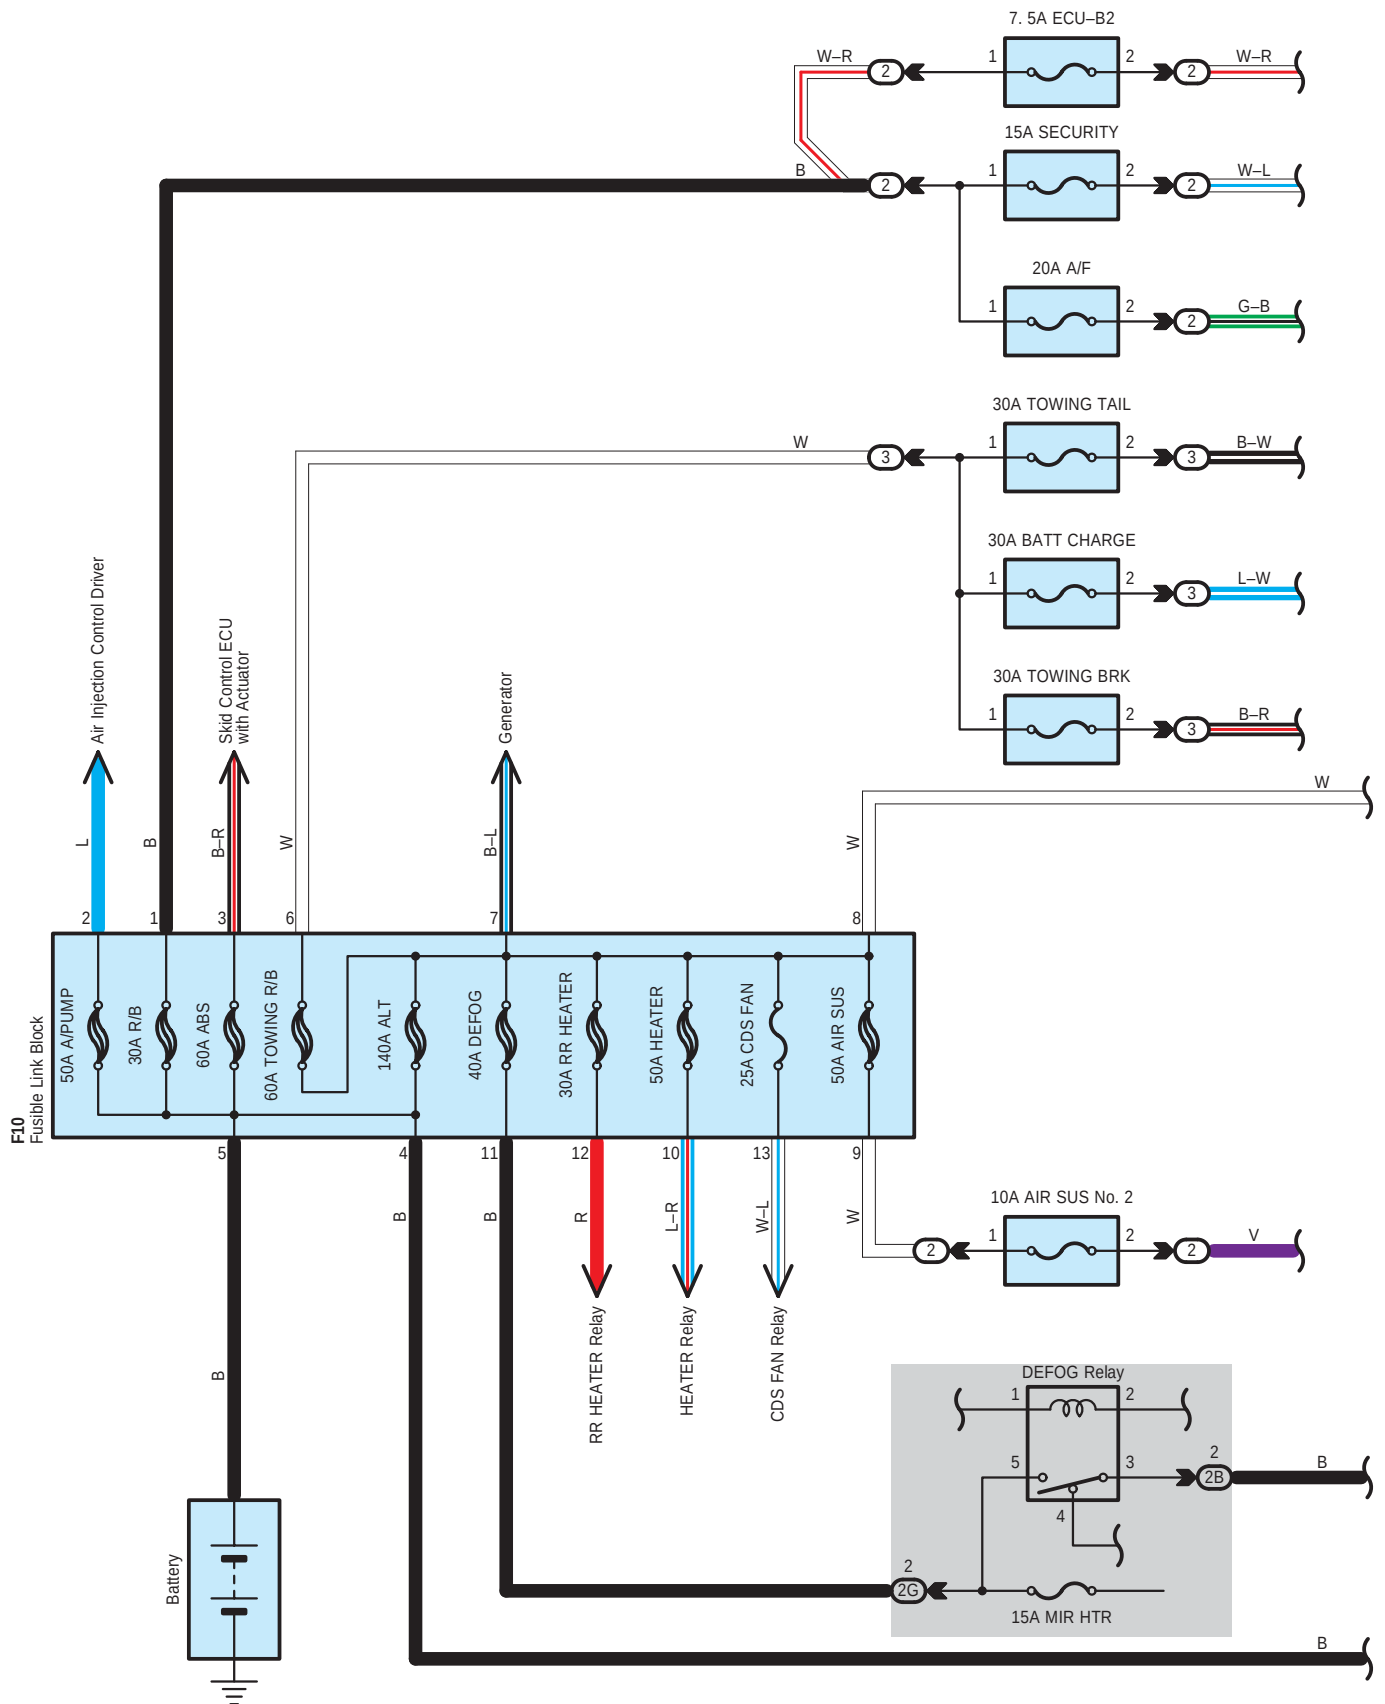

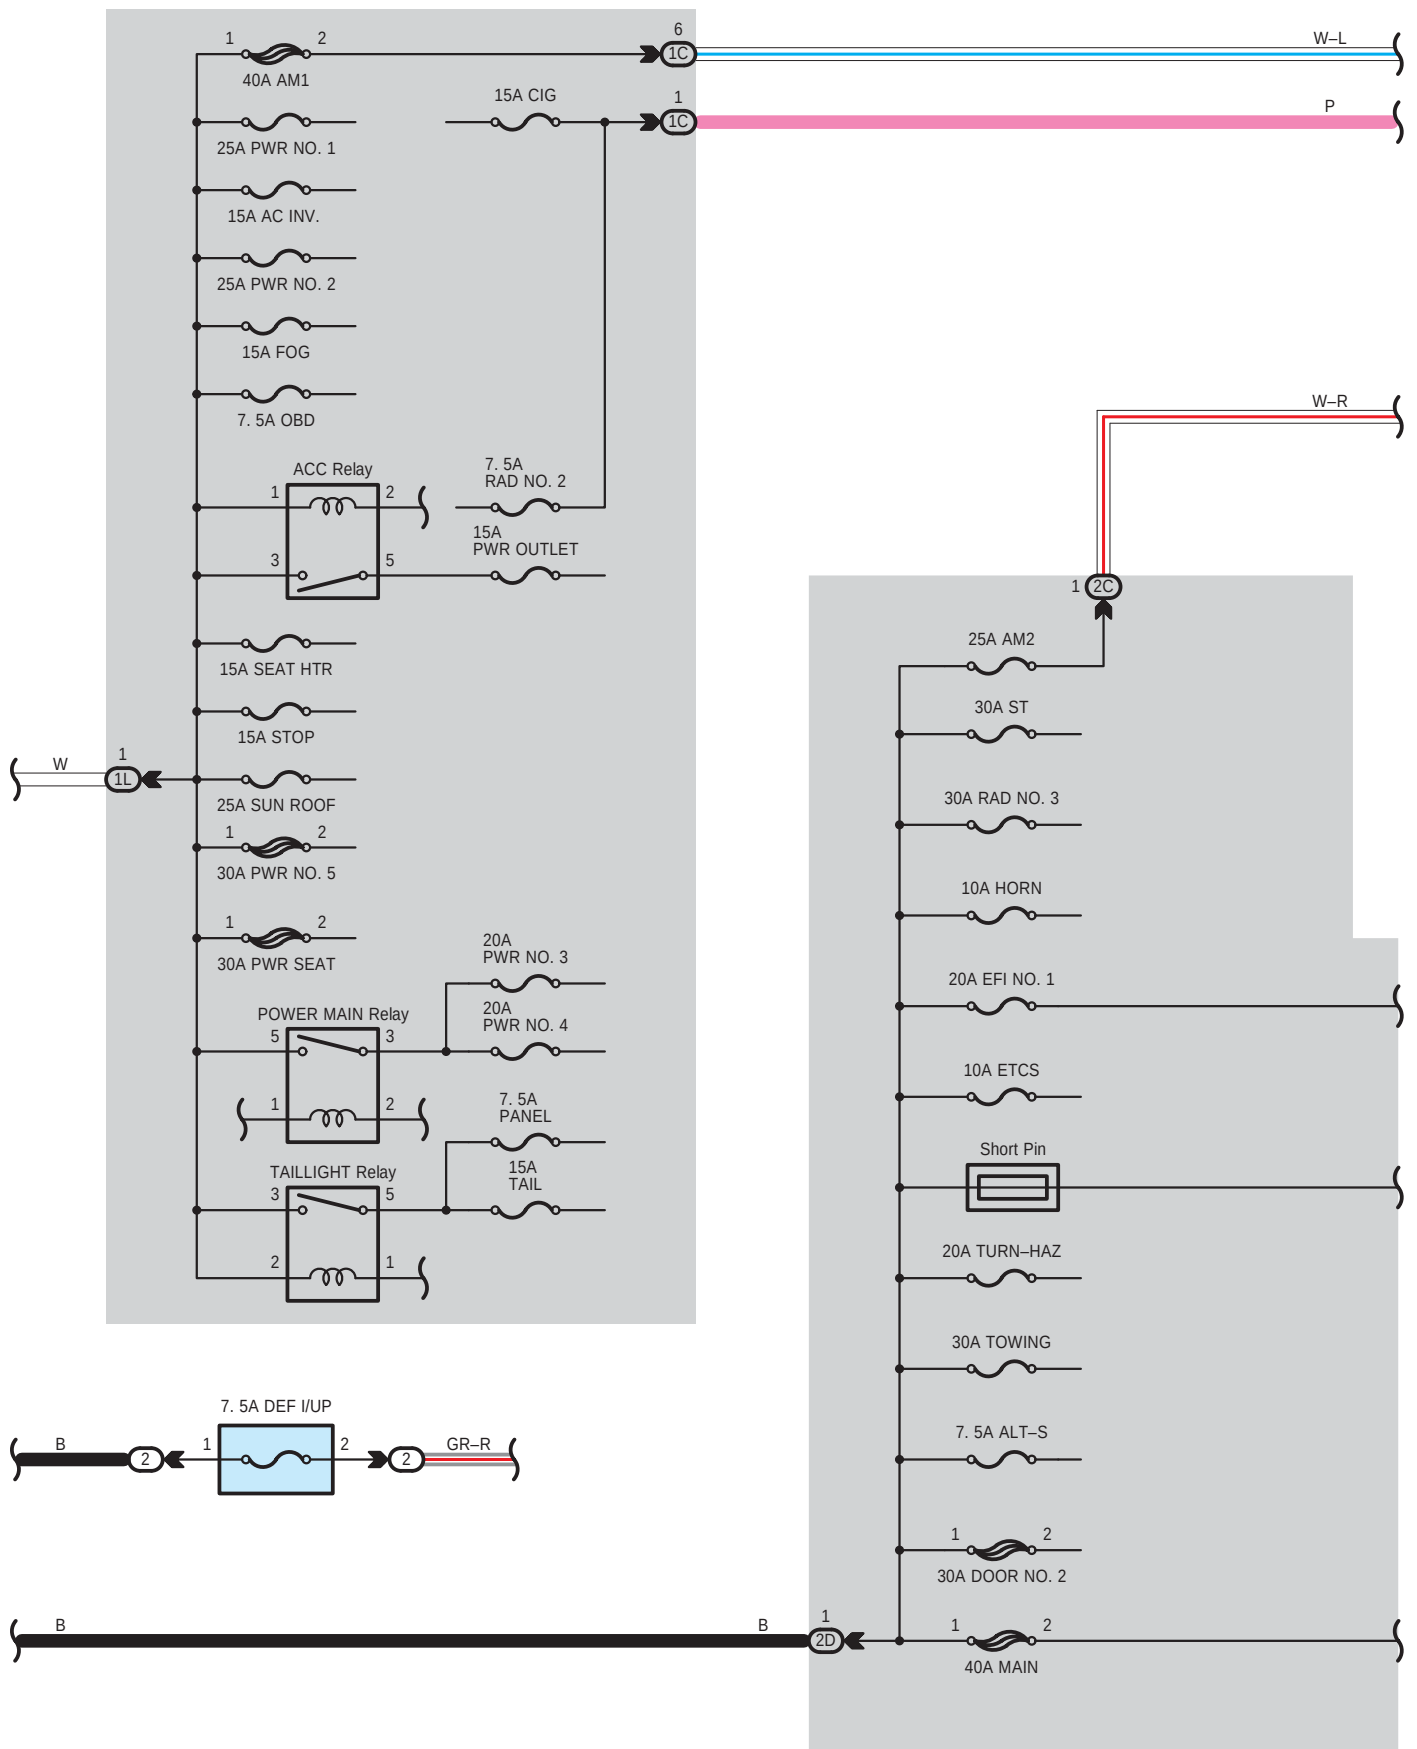

Power Source

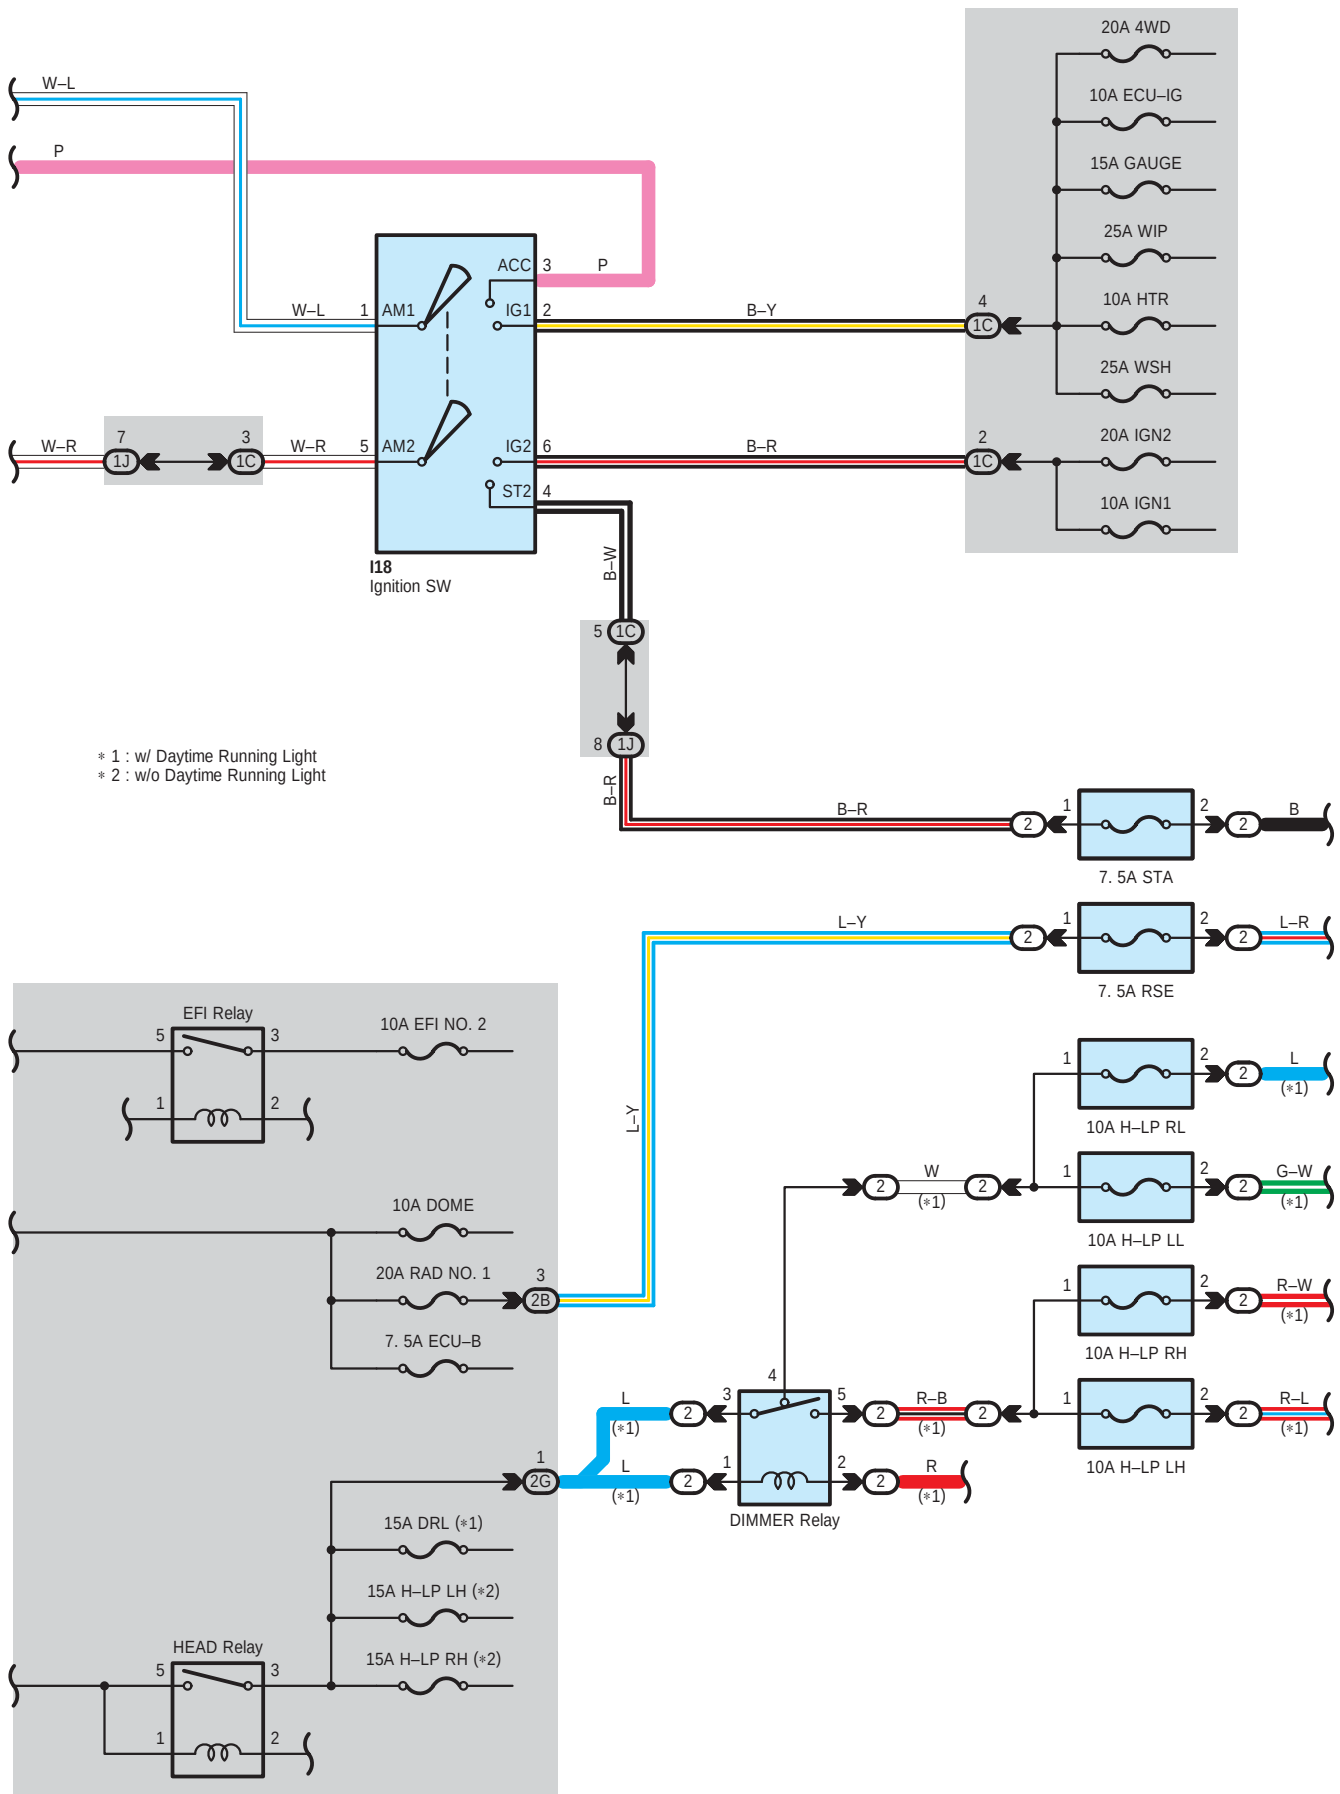

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
F10	22, 40	I18	43		

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	26	Engine Room R/B No.2 (Engine Compartment Left)
3	26	Engine Room R/B No.3 (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1J	33	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1L		
2B	29	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2C		
2D		
2G		