


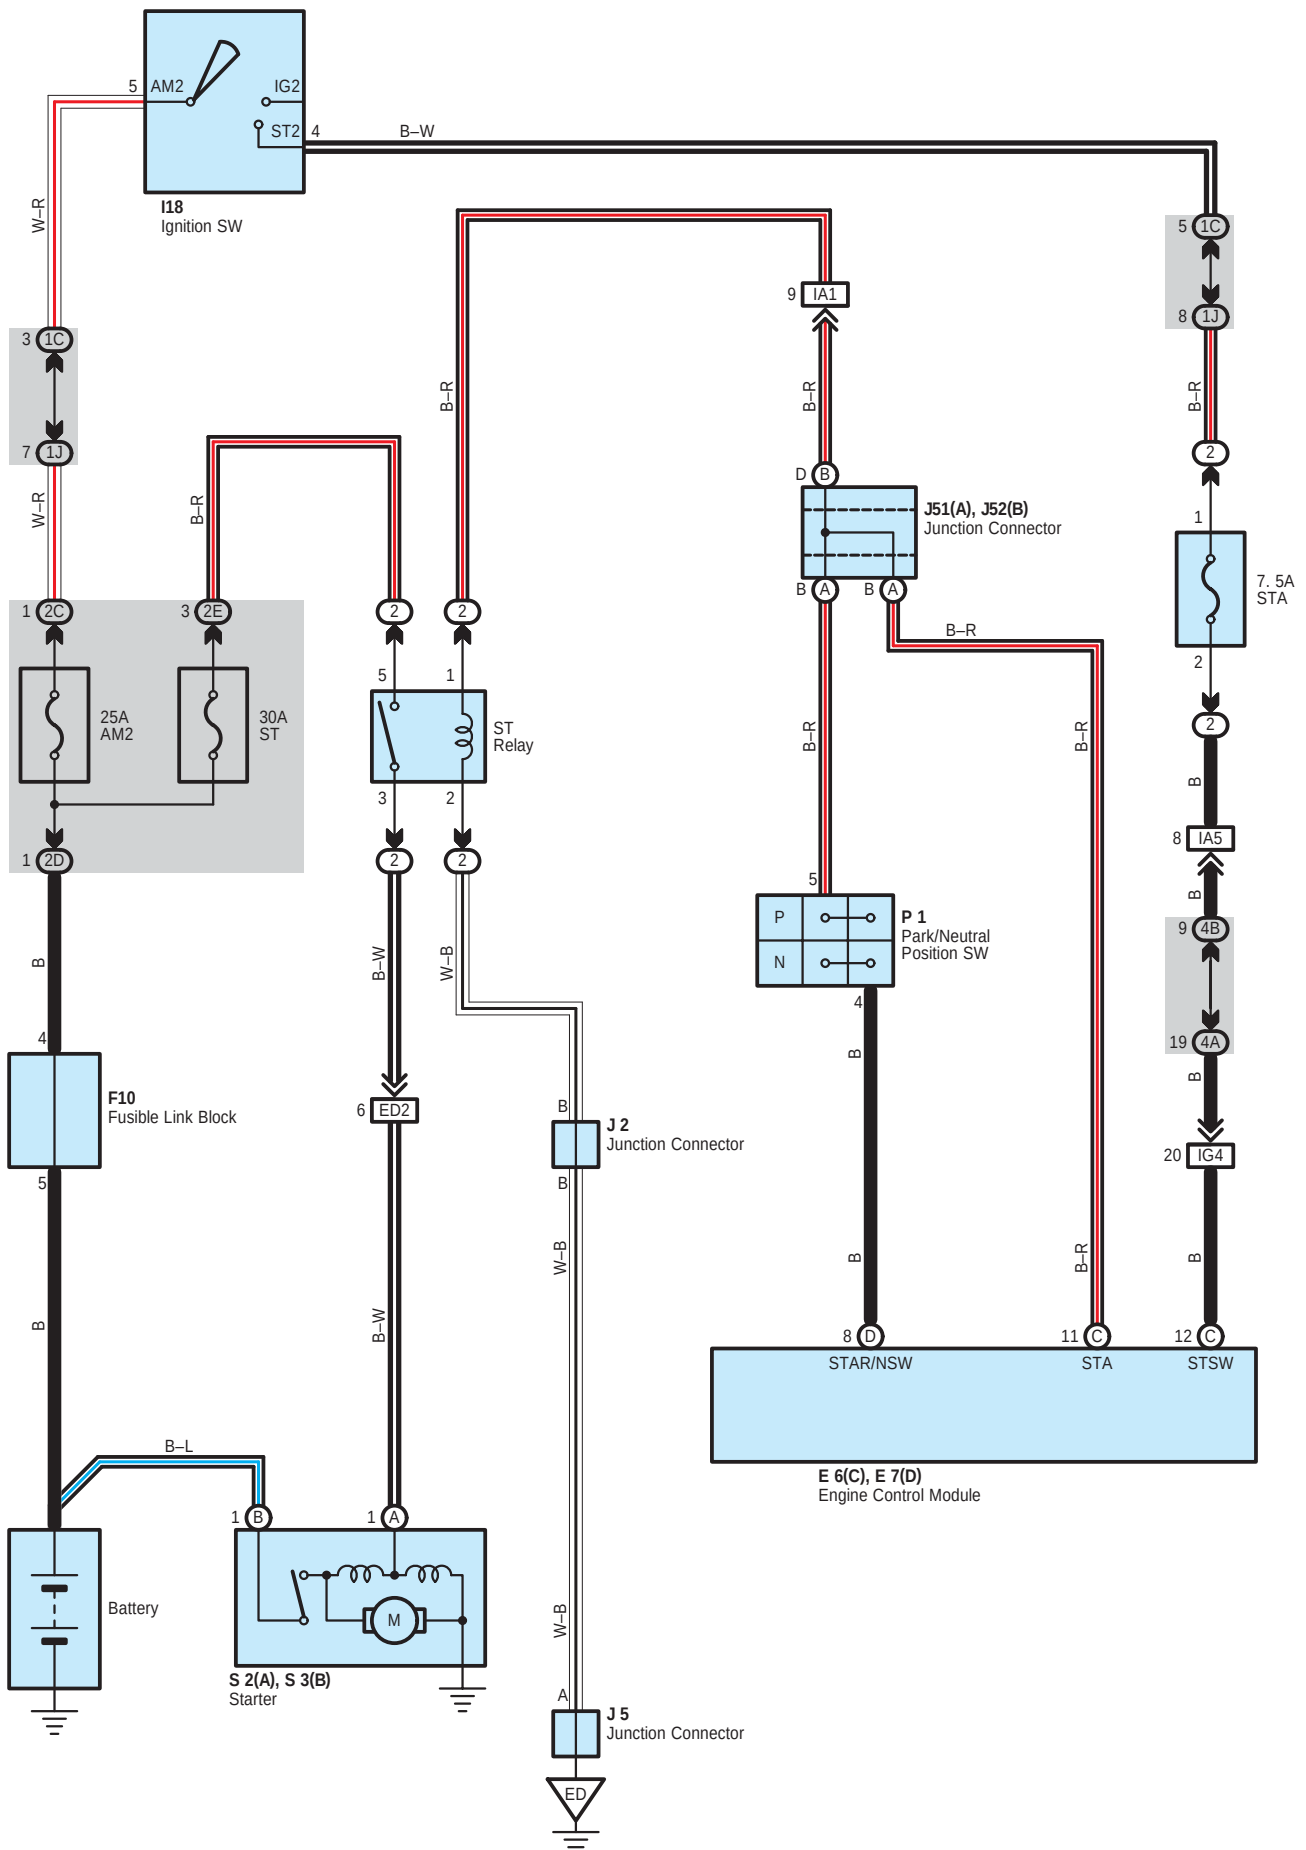

 : Parts Location

Code		See Page	Code		See Page	Code		See Page
E6	C	43	J2	41		P1	41	
E7	D	43	J5	41		S2	A	41
F10		22, 40	J51	A	44	S3	B	41
I18		43	J52	B	44			

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	26	Engine Room R/B No.2 (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1J	33	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
2C	29	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2D		
2E		
4A	38	Cowl Wire and Sub J/B No.4 (Upper the Accelerator Pedal)
4B		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ED2	50	Engine No.2 Wire and Engine Room Main Wire (Under the Engine Room J/B)
IA1	51	Engine Room Main Wire and Cowl Wire (Cowl Side Panel LH)
IA5		
IG4	51	Engine Wire and Cowl Wire (Right Side of Instrument Panel)

 : Ground Points

Code	See Page	Ground Points Location
ED	50	Front Fender Apron LH