



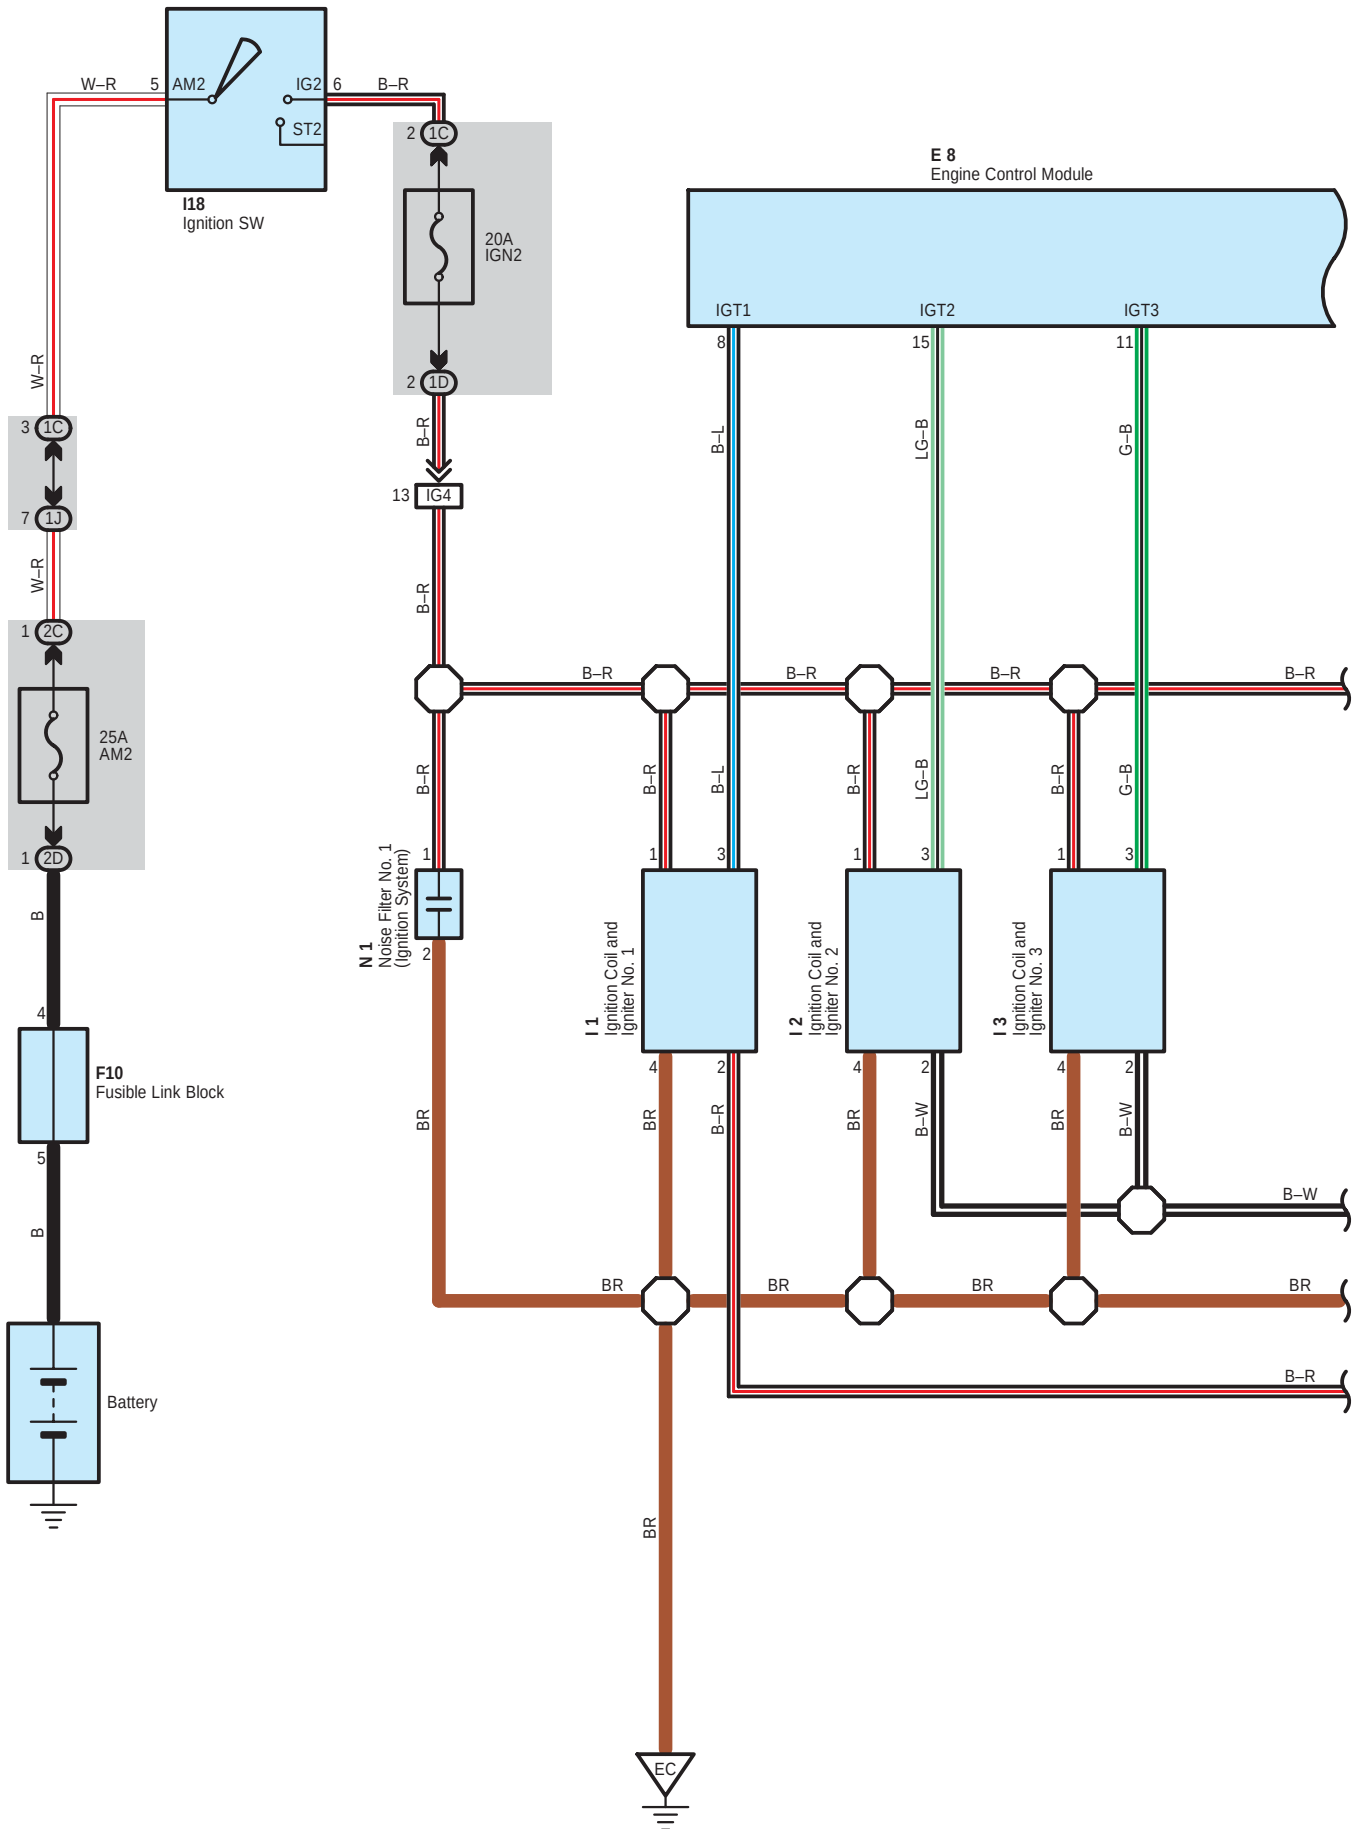

**E 8**  
Engine Control Module

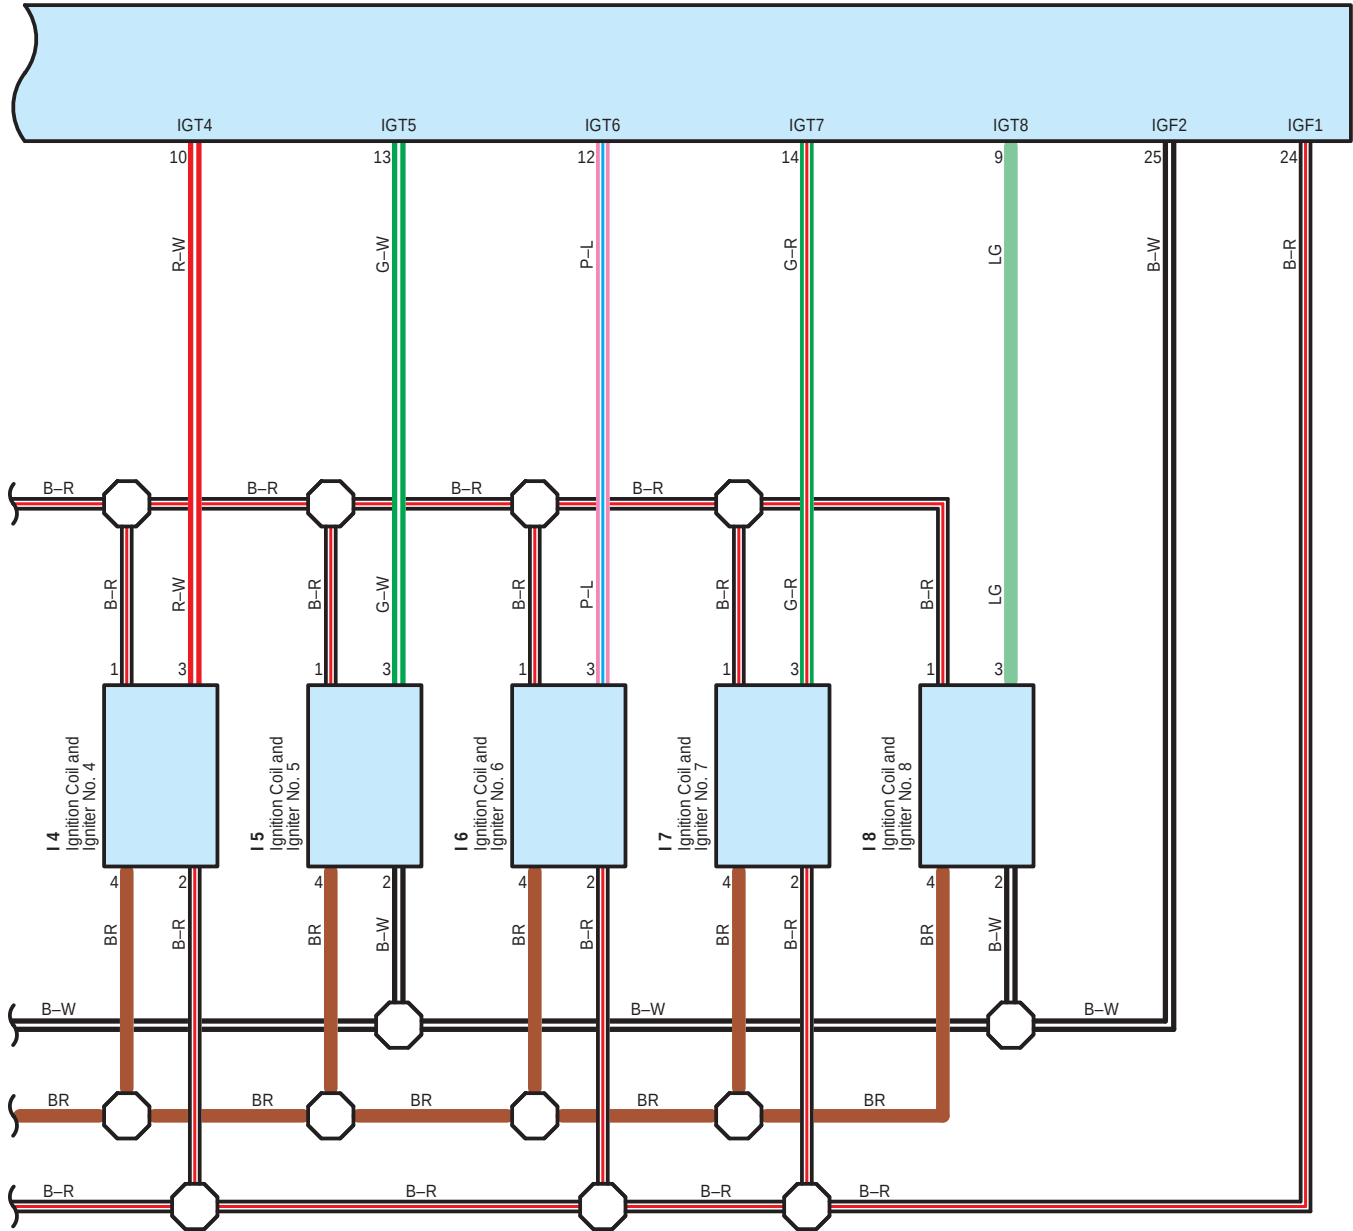

# Ignition

## : Parts Location

| Code | See Page | Code | See Page | Code | See Page |
|------|----------|------|----------|------|----------|
| E8   | 43       | I3   | 41       | I7   | 41       |
| F10  | 22, 40   | I4   | 41       | I8   | 41       |
| I1   | 41       | I5   | 41       | I18  | 43       |
| I2   | 41       | I6   | 41       | N1   | 41       |

## : Junction Block and Wire Harness Connector

| Code | See Page | Junction Block and Wire Harness (Connector Location)                |
|------|----------|---------------------------------------------------------------------|
| 1C   | 33       | Cowl Wire and Instrument Panel J/B (Lower Finish Panel)             |
| 1D   |          |                                                                     |
| 1J   | 33       | Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel) |
| 2C   | 29       | Engine Room Main Wire and Engine Room J/B (Engine Compartment Left) |
| 2D   |          |                                                                     |

## : Connector Joining Wire Harness and Wire Harness

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location) |
|------|----------|------------------------------------------------------------|
| IG4  | 51       | Engine Wire and Cowl Wire (Right Side of Instrument Panel) |

## : Ground Points

| Code | See Page | Ground Points Location           |
|------|----------|----------------------------------|
| EC   | 50       | Front Left Side of Cylinder Head |

