



Engine Immobiliser System

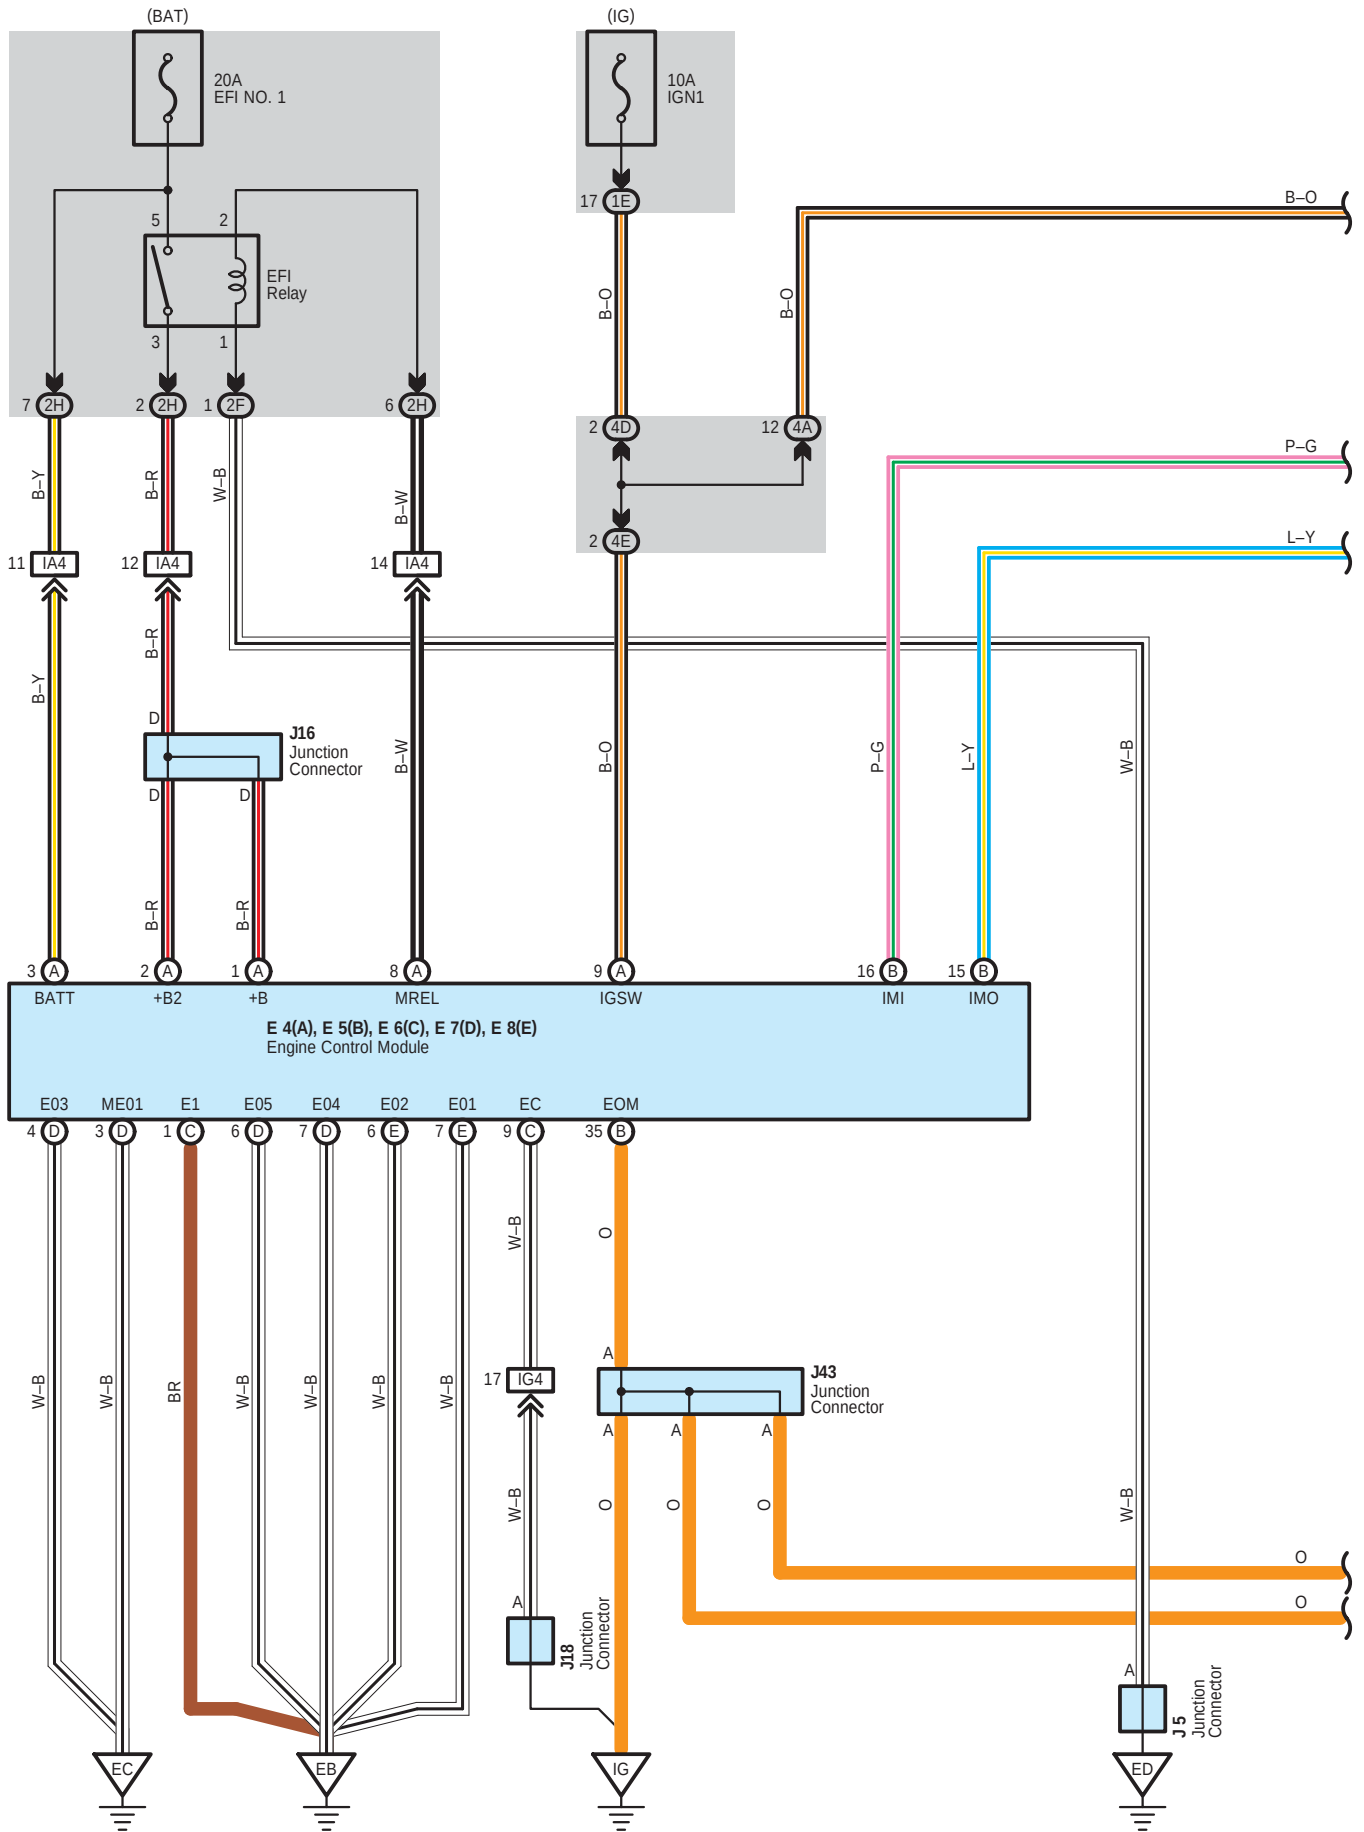

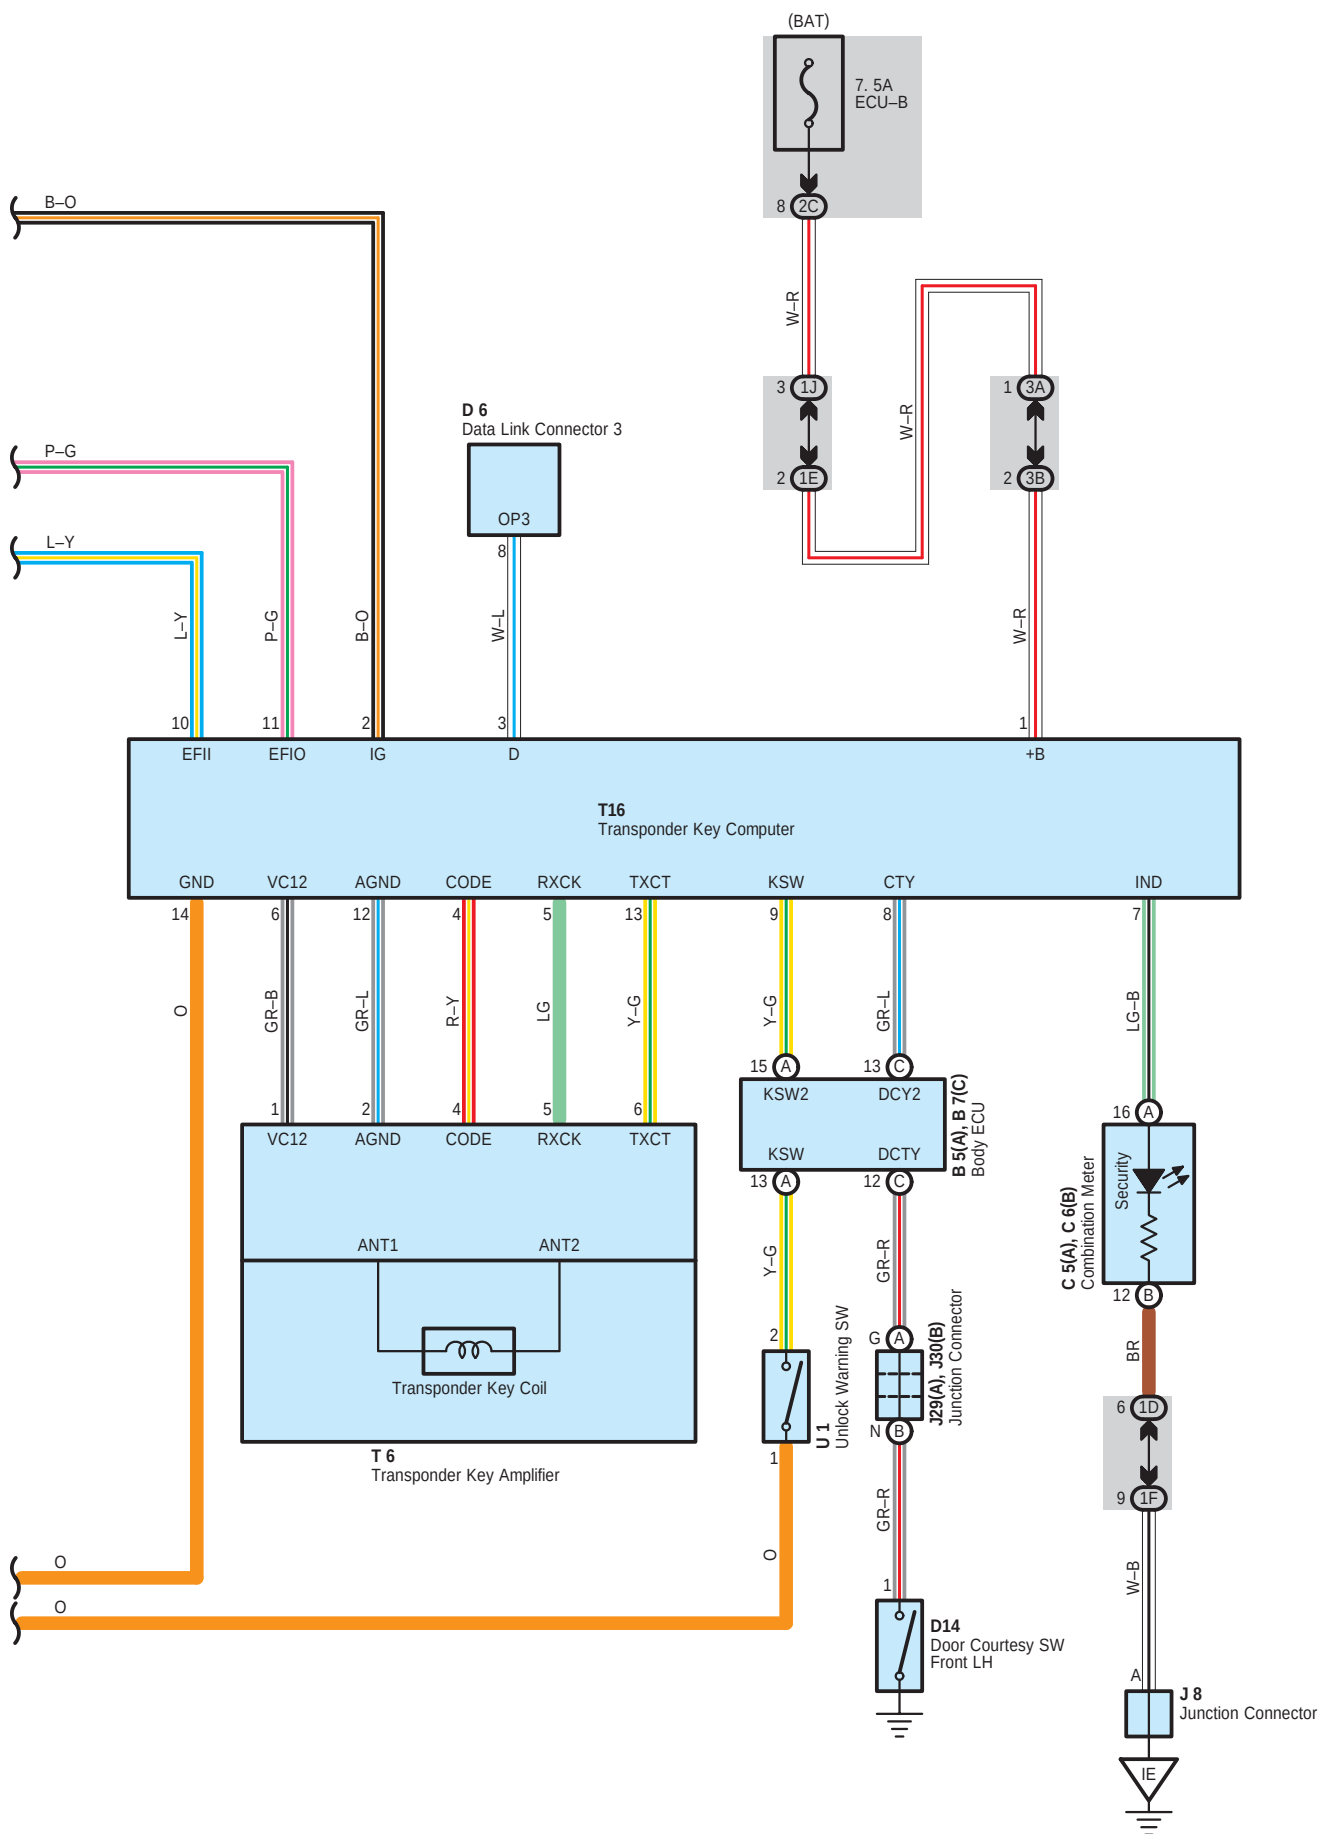

Engine Immobiliser System

: Parts Location

Code			See Page			Code			See Page		
B5	A	42	E5	B	43	J18		44			
B7	C	42	E6	C	43	J29	A	44			
C5	A	42	E7	D	43	J30	B	44			
C6	B	42	E8	E	43	J43		44			
D6		43	J5		41	T6		45			
D14		46	J8		44	T16		45			
E4	A	43	J16		44	U1		45			

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1F		
1J	33	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
2C	29	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2F		
2H		
3A	36	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)
3B		
4A	38	Cowl Wire and Sub J/B No.4 (Upper the Accelerator Pedal)
4D		
4E		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA4	51	Engine Room Main Wire and Cowl Wire (Cowl Side Panel LH)
IG4	51	Engine Wire and Cowl Wire (Right Side of Instrument Panel)

: Ground Points

Code	See Page	Ground Points Location
EB	50	Rear Left Side of Cylinder Head
EC	50	Front Left Side of Cylinder Head
ED	50	Front Fender Apron LH
IE	51	Cowl Side Panel LH
IG	51	Cowl Side Panel RH

