



Headlight and Front Fog Light without Daytime Running Light

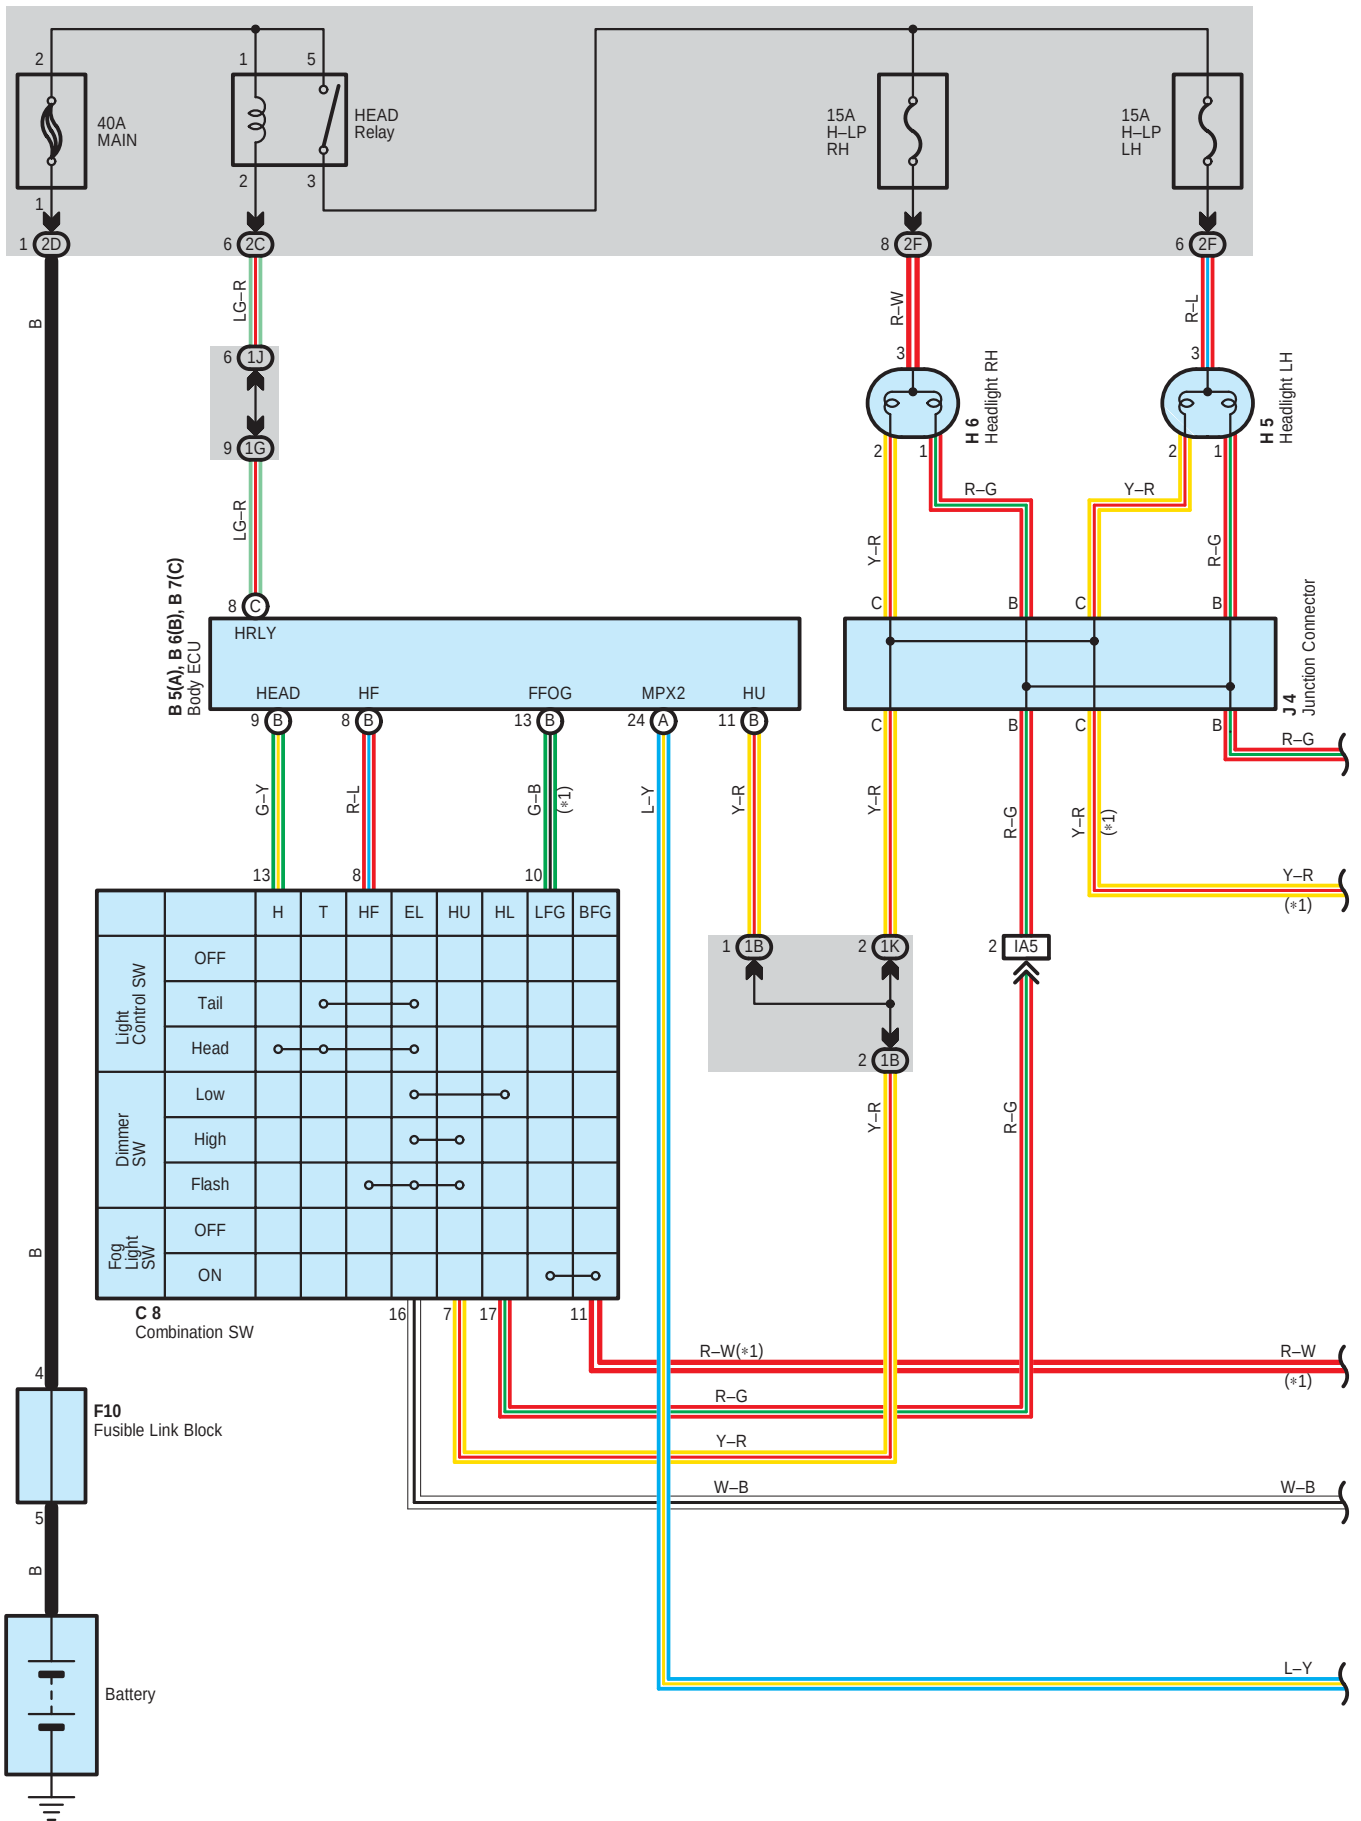

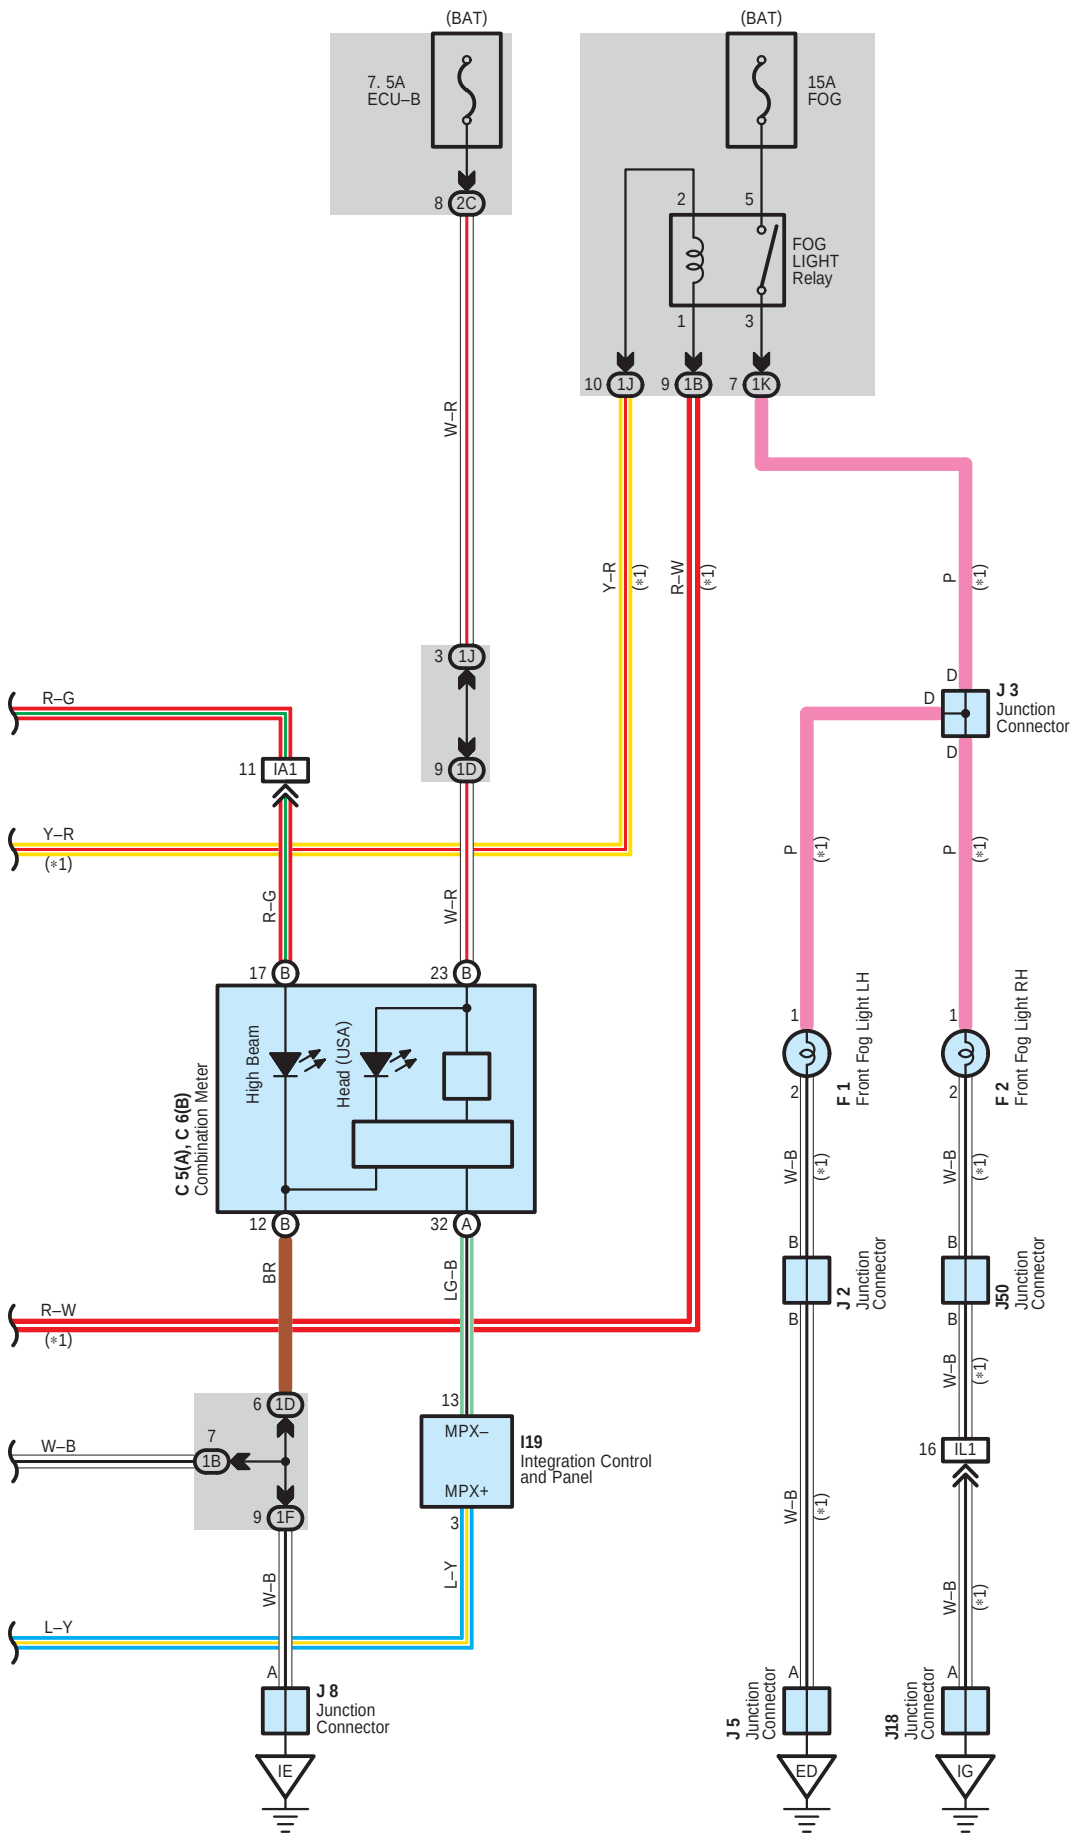

Headlight and Front Fog Light without Daytime Running Light

: Parts Location

Code		See Page	Code	See Page	Code	See Page
B5	A	42	F2	40	J4	41
B6	B	42	F10	22, 40	J5	41
B7	C	42	H5	40	J8	44
C5	A	42	H6	40	J18	44
C6	B	42	I19	43	J50	41
C8		42	J2	41		
F1		40	J3	41		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1D		
1F		
1G		
1J	33	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1K		
2C	29	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2D		
2F		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	51	Engine Room Main Wire and Cowl Wire (Cowl Side Panel LH)
IA5		
IL1	51	Engine Room Main Wire and Cowl Wire (Cowl Side Panel RH)

: Ground Points

Code	See Page	Ground Points Location
ED	50	Front Fender Apron LH
IE	51	Cowl Side Panel LH
IG	51	Cowl Side Panel RH

