



Taillight

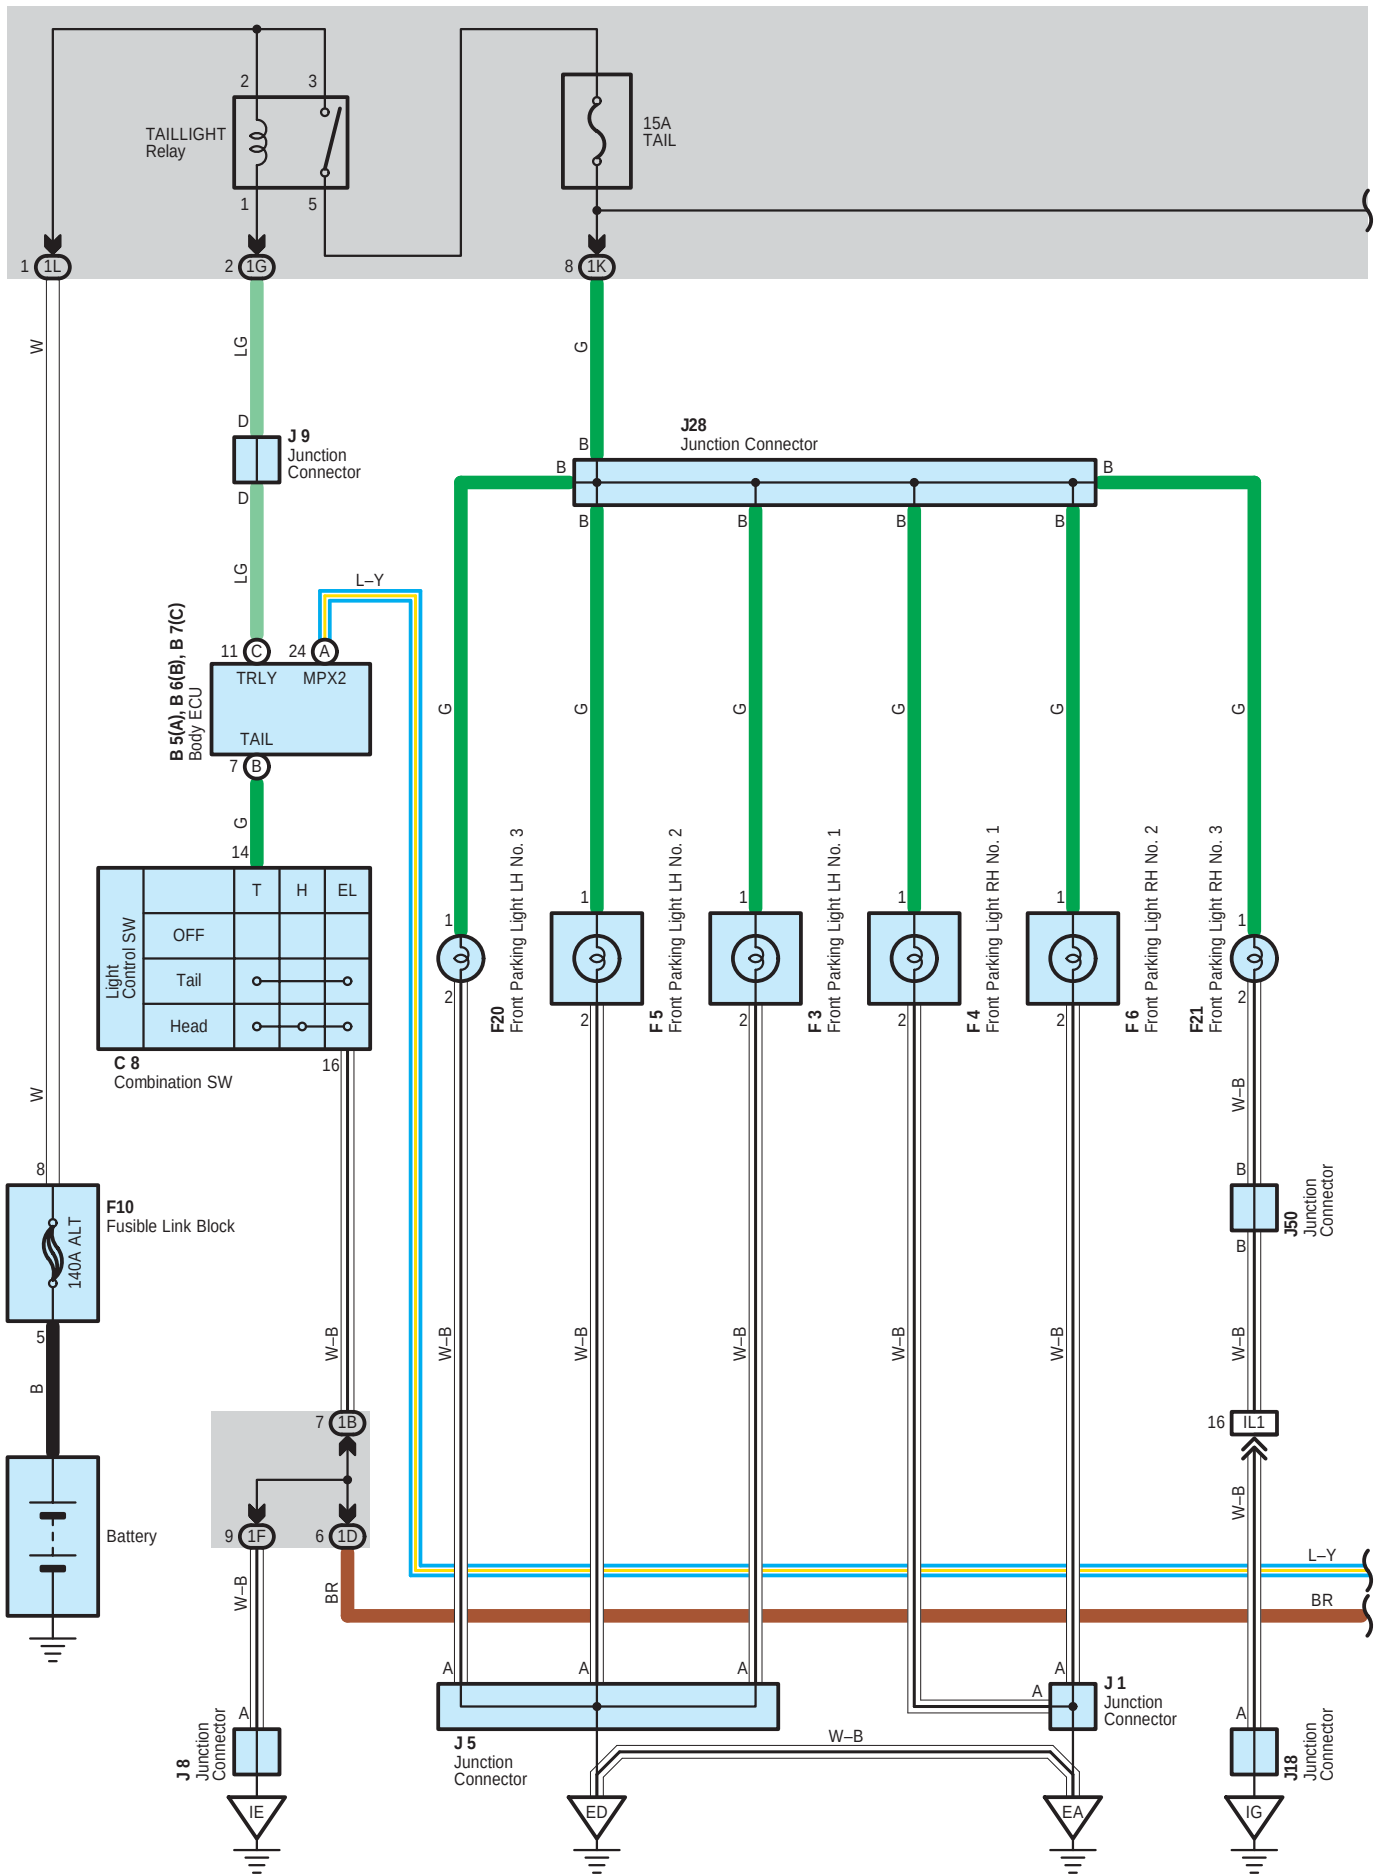

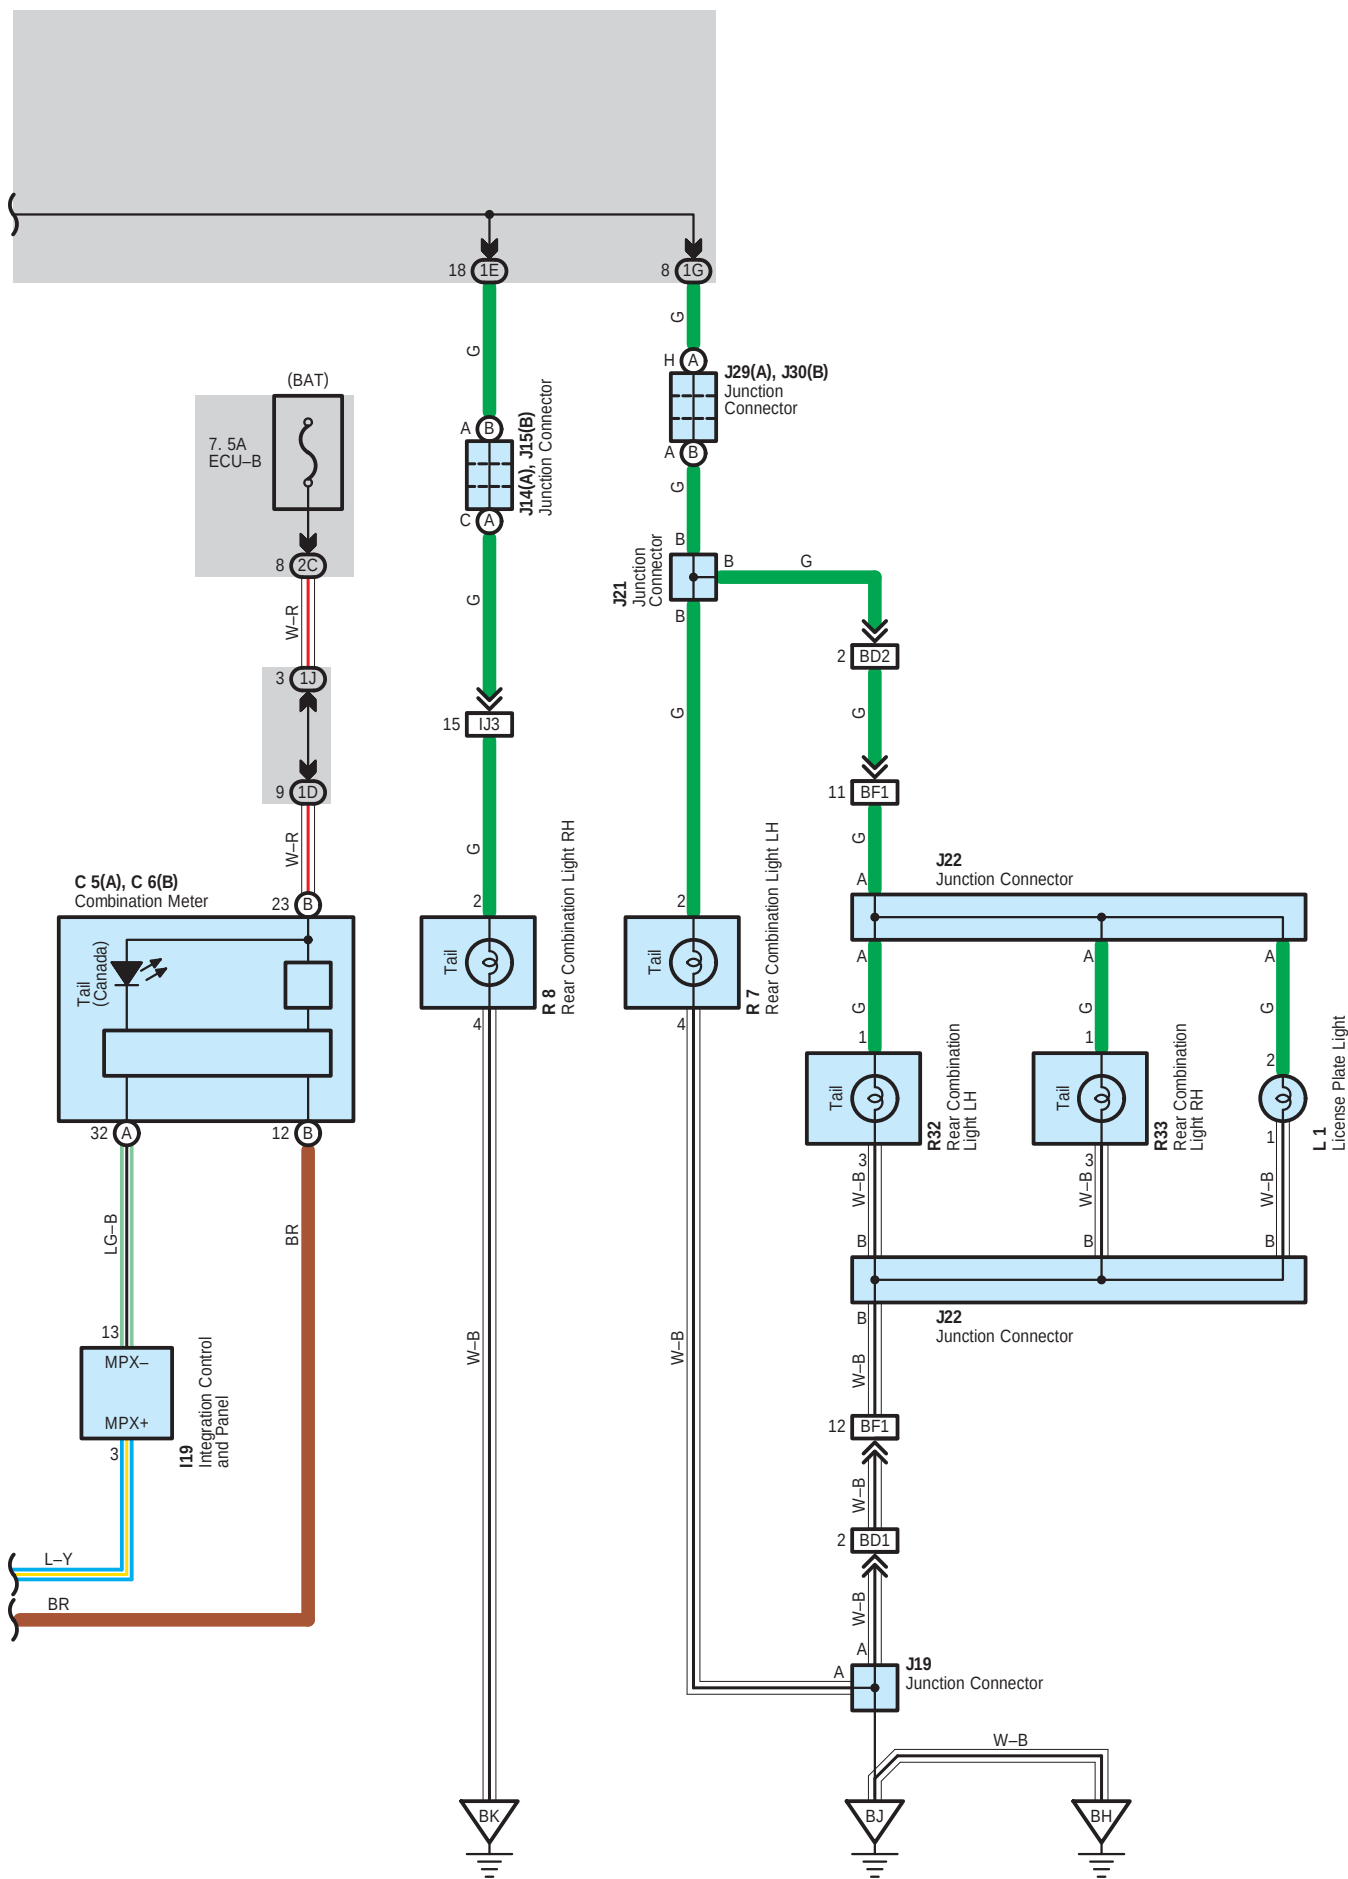

Taillight

: Parts Location

Code		See Page	Code		See Page	Code		See Page
B5	A	42	F20	40		J21	46	
B6	B	42	F21	40		J22	46	
B7	C	42	I19	43		J28	41	
C5	A	42	J1	41		J29	A	44
C6	B	42	J5	41		J30	B	44
C8		42	J8	44		J50		41
F3		40	J9	44		L1		47
F4		40	J14	A	44	R7		47
F5		40	J15	B	44	R8		47
F6		40	J18	44		R32		47
F10		22, 40	J19	46		R33		47

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1D		
1E		
1F		
1G		
1J	33	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1K		
1L		
2C	29	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IJ3	51	Floor No.1 Wire and Cowl Wire (Right Kick Panel)
IL1	51	Engine Room Main Wire and Cowl Wire (Cowl Side Panel RH)
BD1	52	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)
BD2		
BF1	52	Back Door No.2 Wire and Back Door No.1 Wire (Left Side of Back Door)

: Ground Points

Code	See Page	Ground Points Location
EA	50	Radiator Side Support RH
ED	50	Front Fender Apron LH
IE	51	Cowl Side Panel LH
IG	51	Cowl Side Panel RH
BH	52	Center Pillar LH
BJ	52	Quarter Panel LH
BK	52	Center Pillar RH

