





F RELAY LOCATIONS

[Engine Compartment]

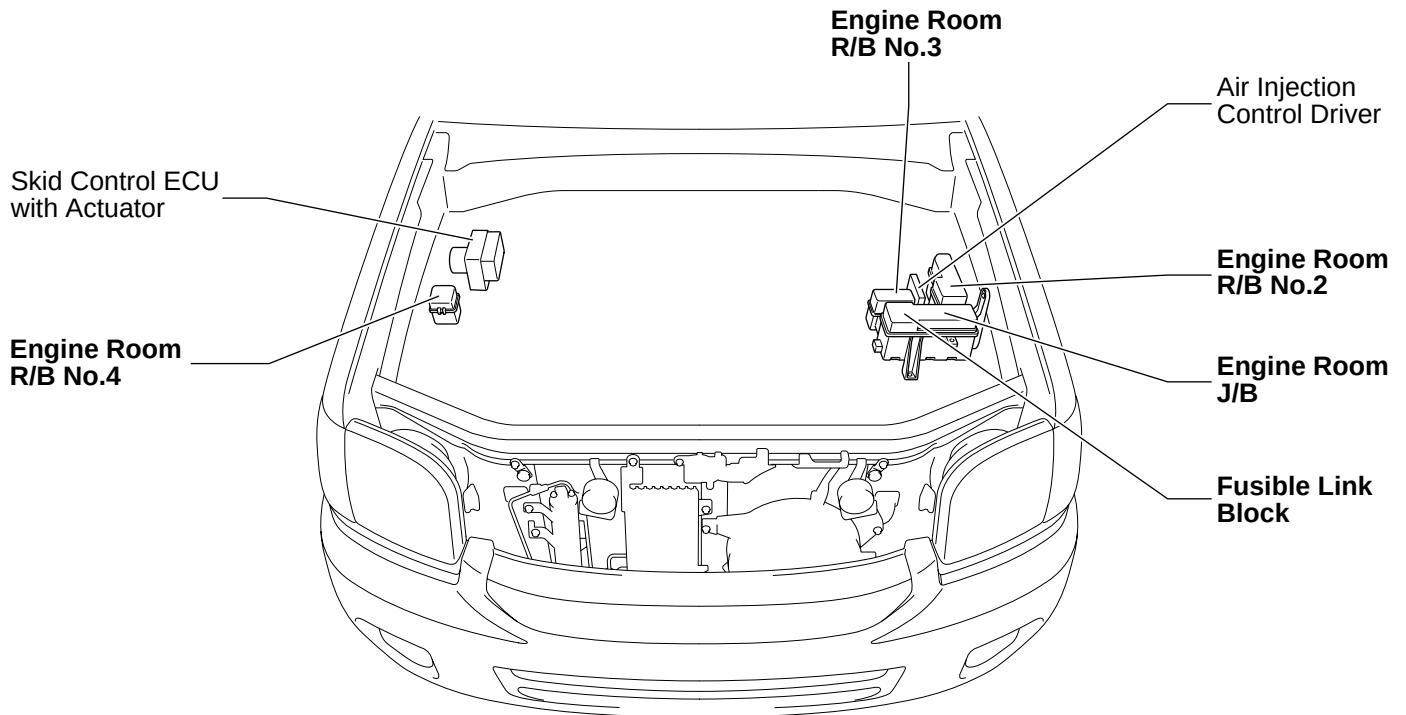

[Instrument Panel]

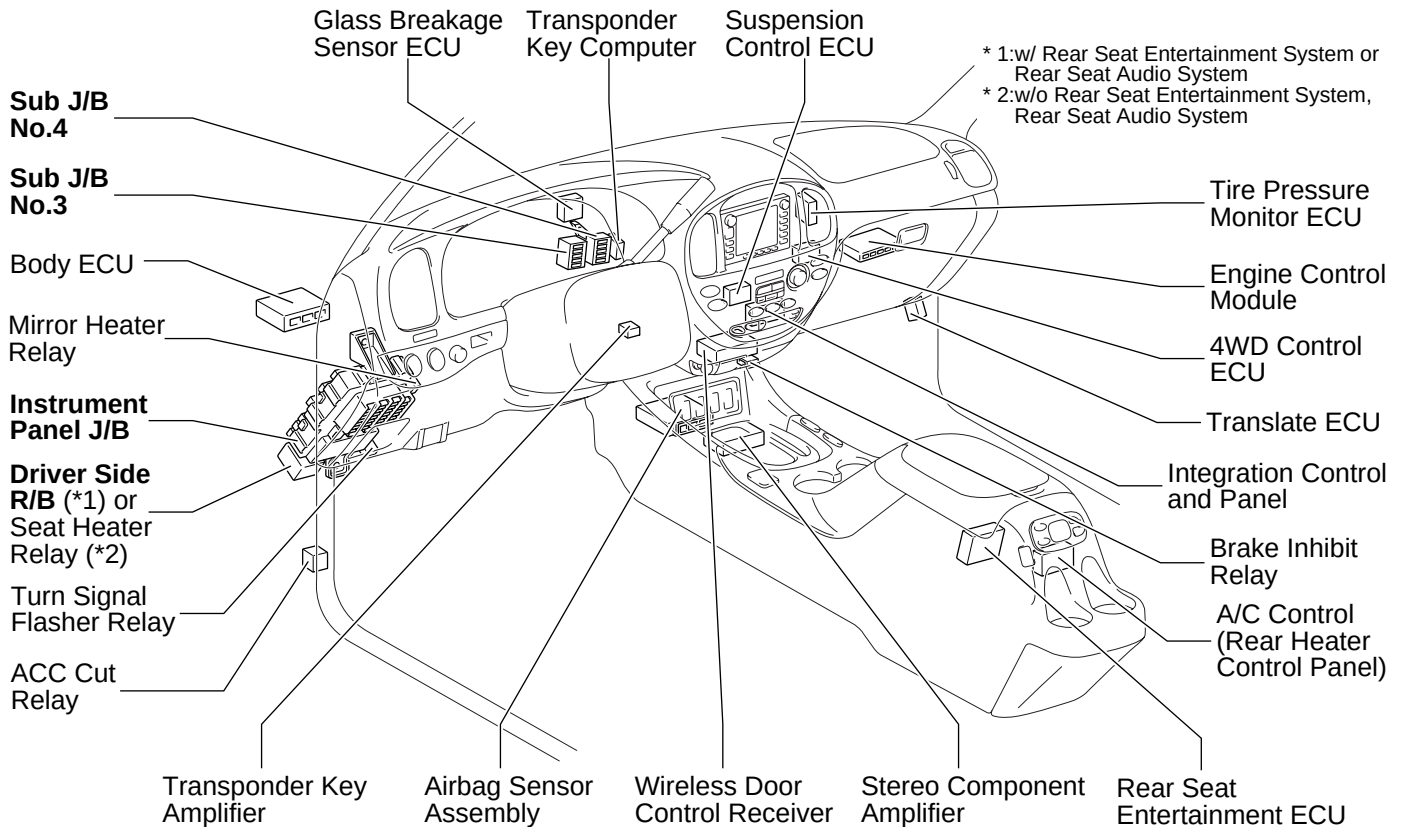


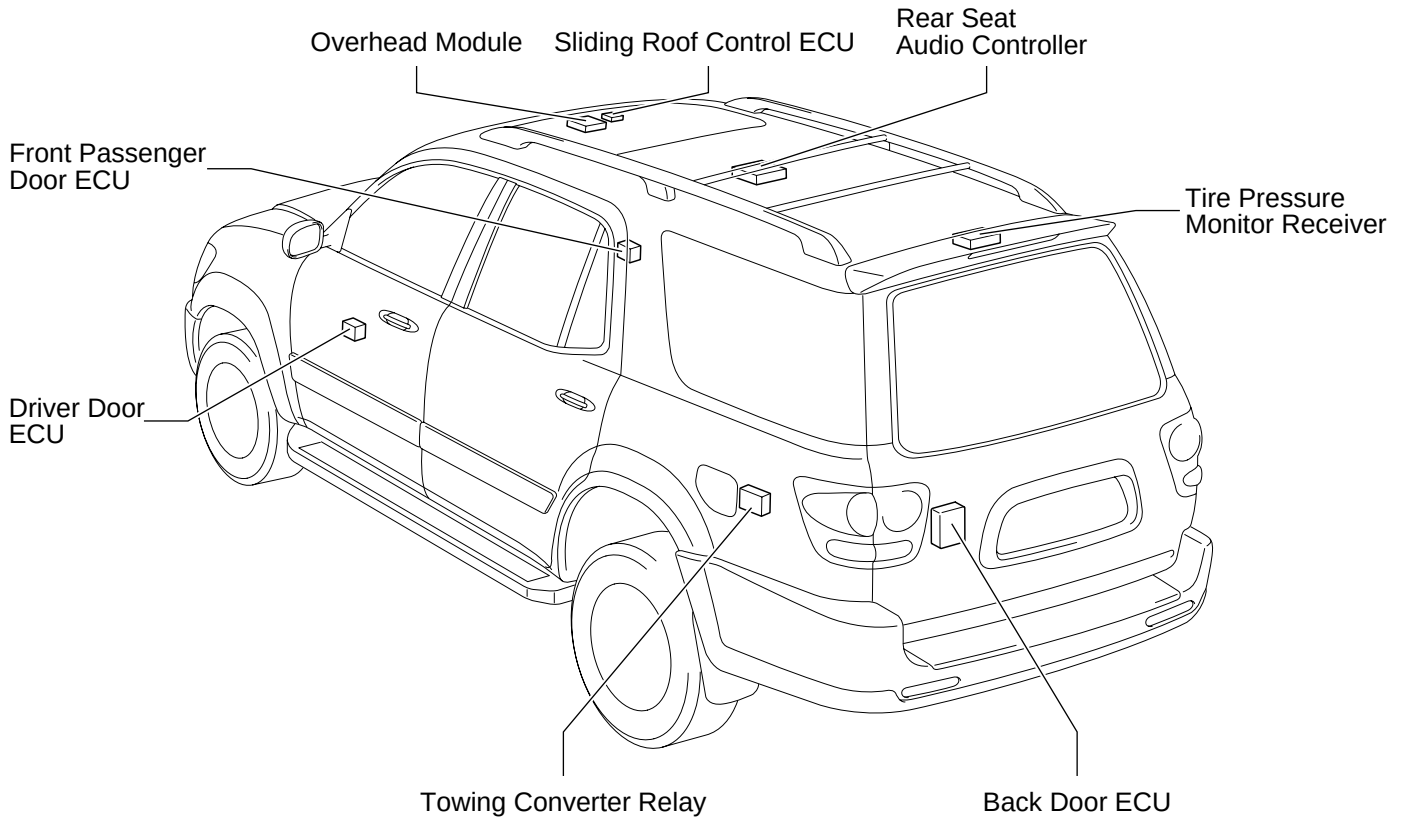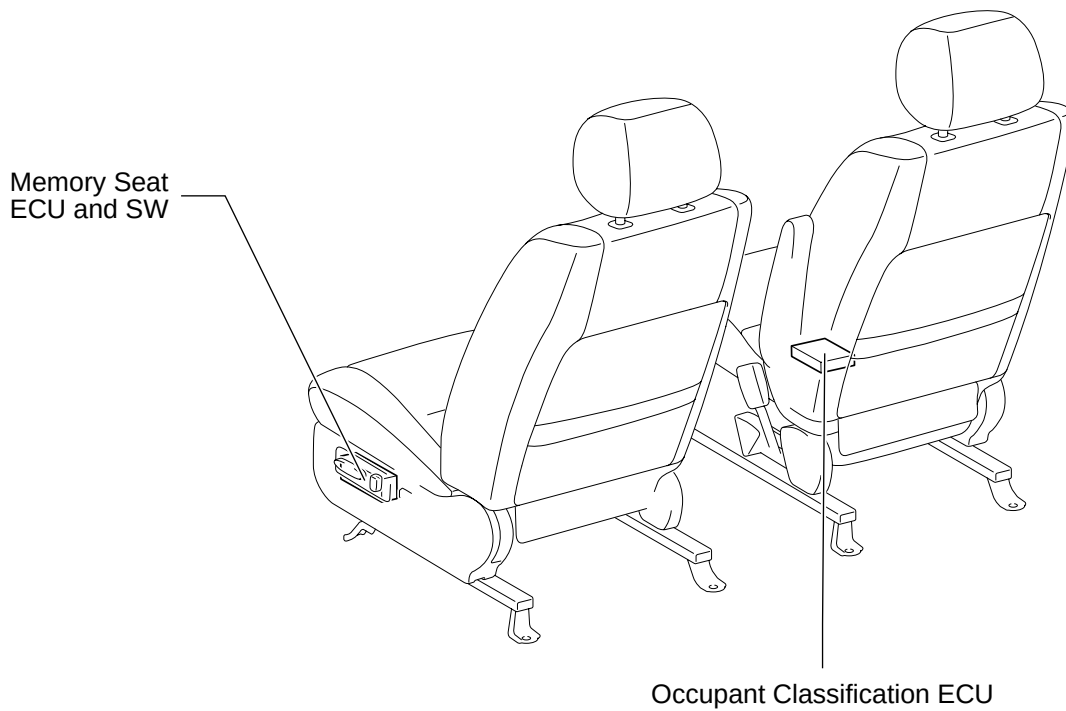[Body]**[Seat]**


F RELAY LOCATIONS

Fusible Link Block


Engine Compartment Left (See Page 20)
[Inside Engine Room J/B]

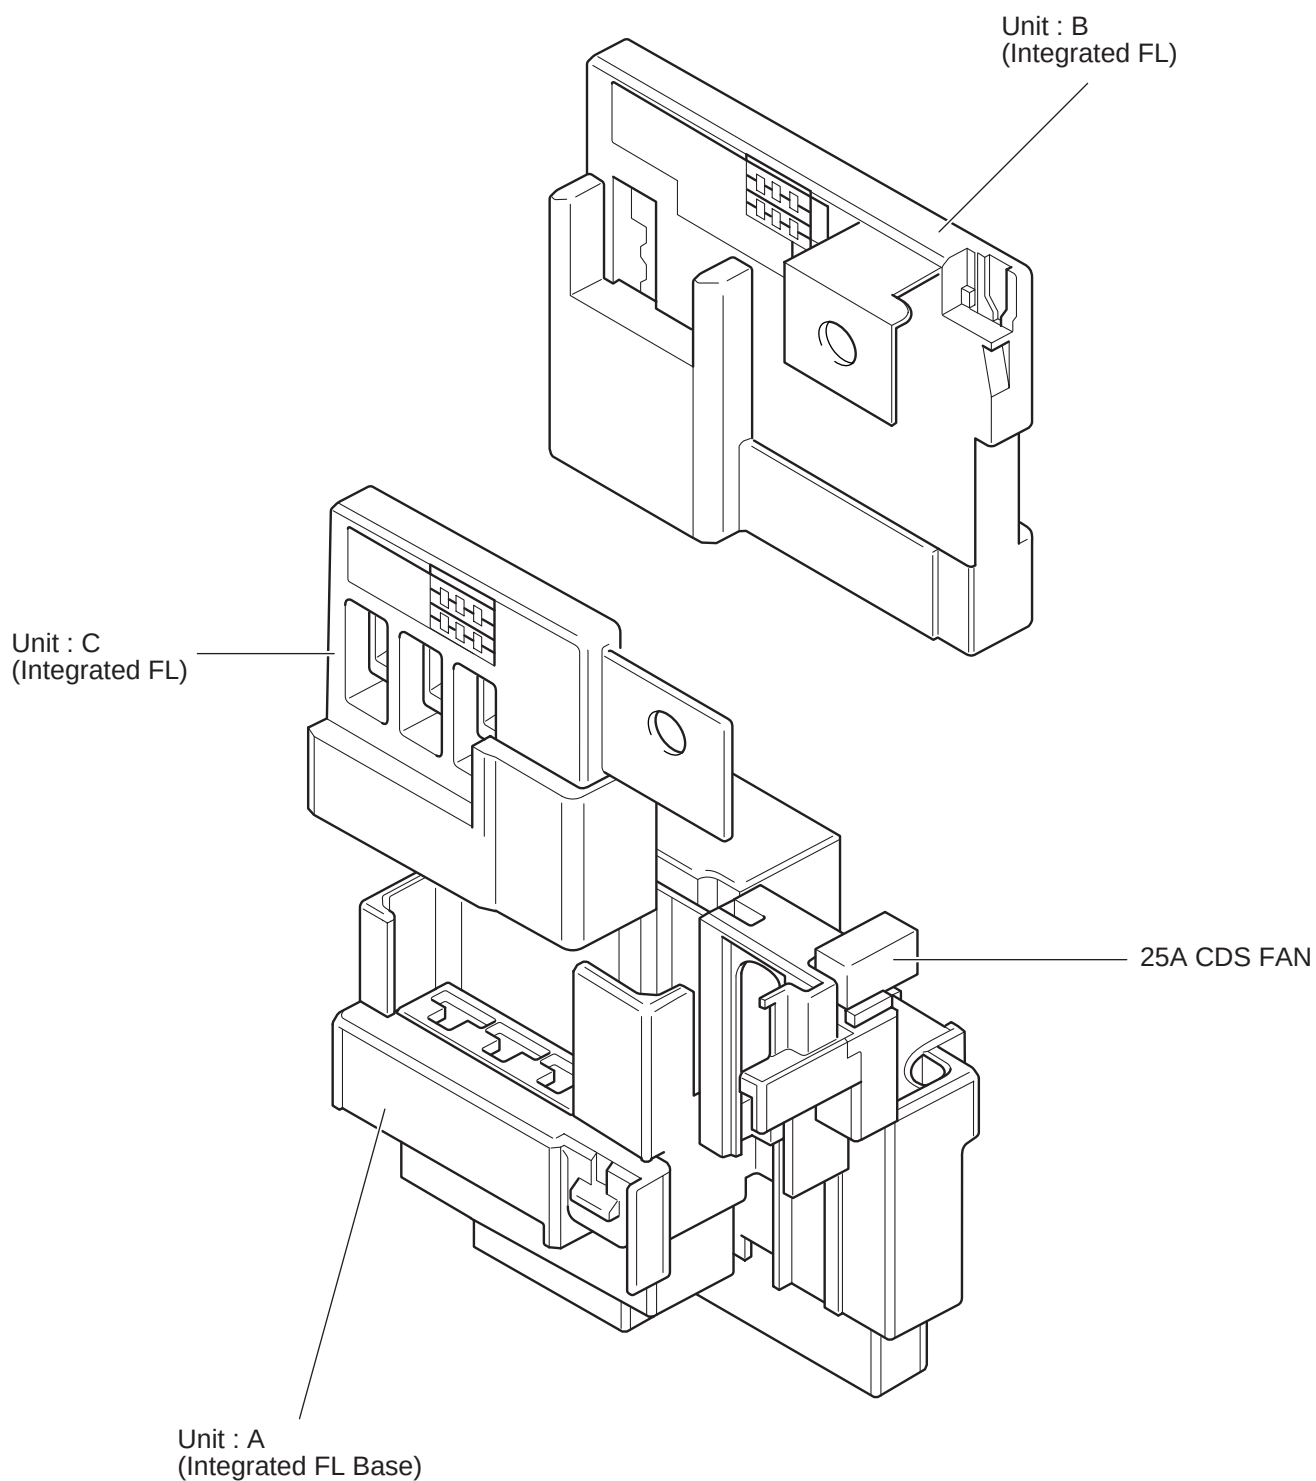

[Unit : A (Integrated FL Base)]

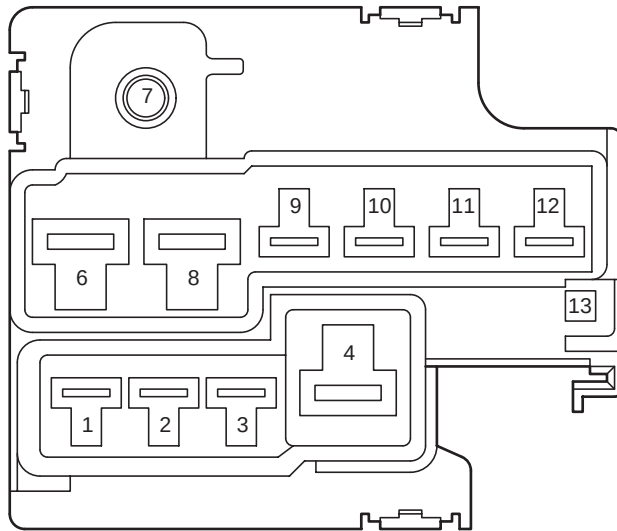

Top View



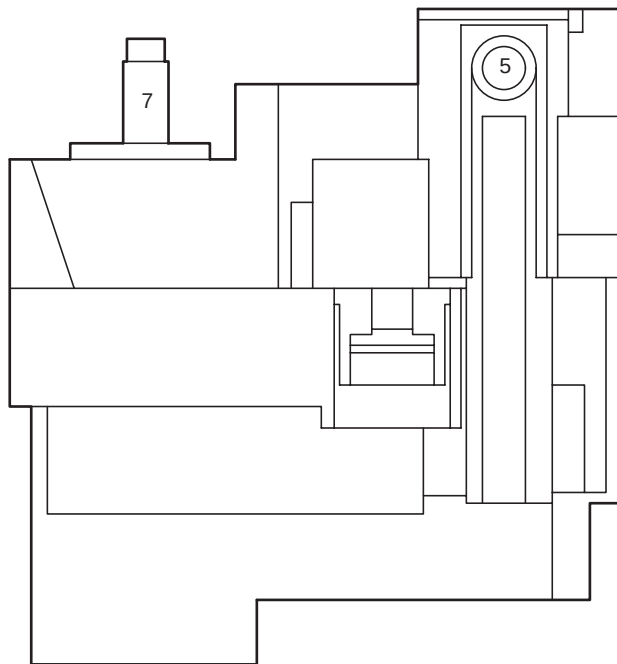


Side View


F RELAY LOCATIONS

Fusible Link Block	Engine Compartment Left (See Page 20) [Inside Engine Room J/B]
---------------------------	---


[Unit : B (Integrated FL)]

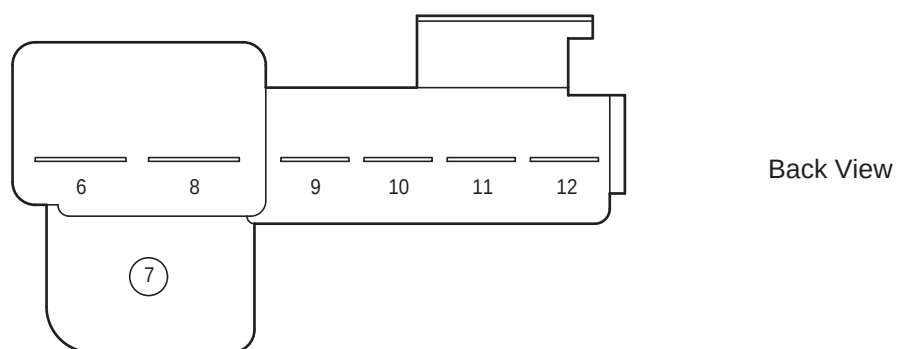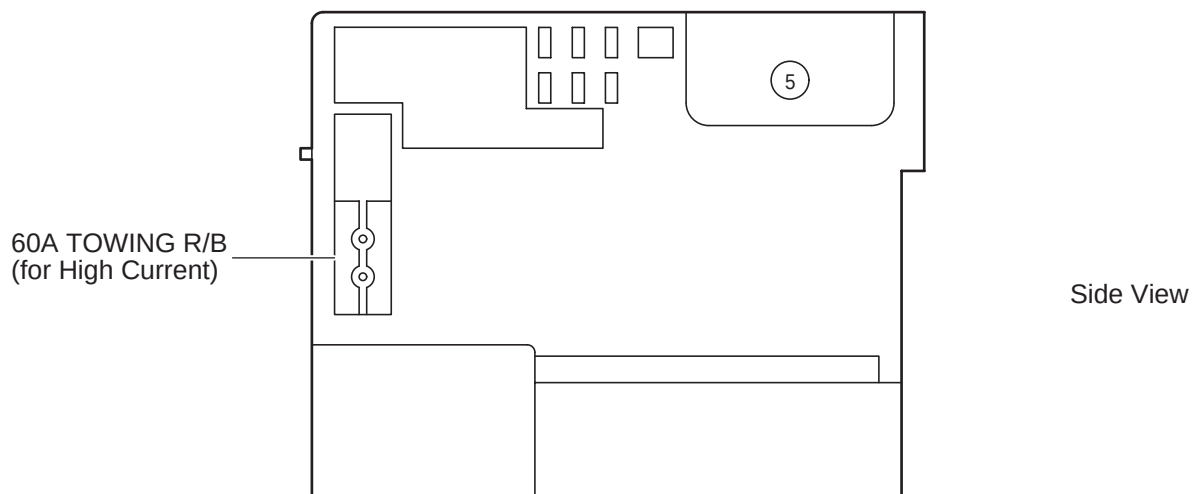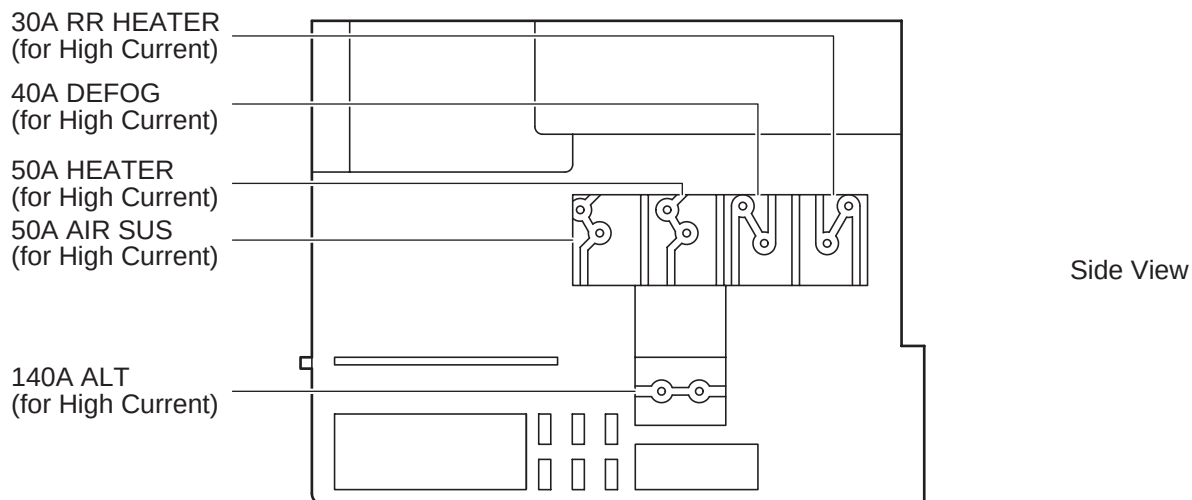

[Unit : C (Integrated FL)]

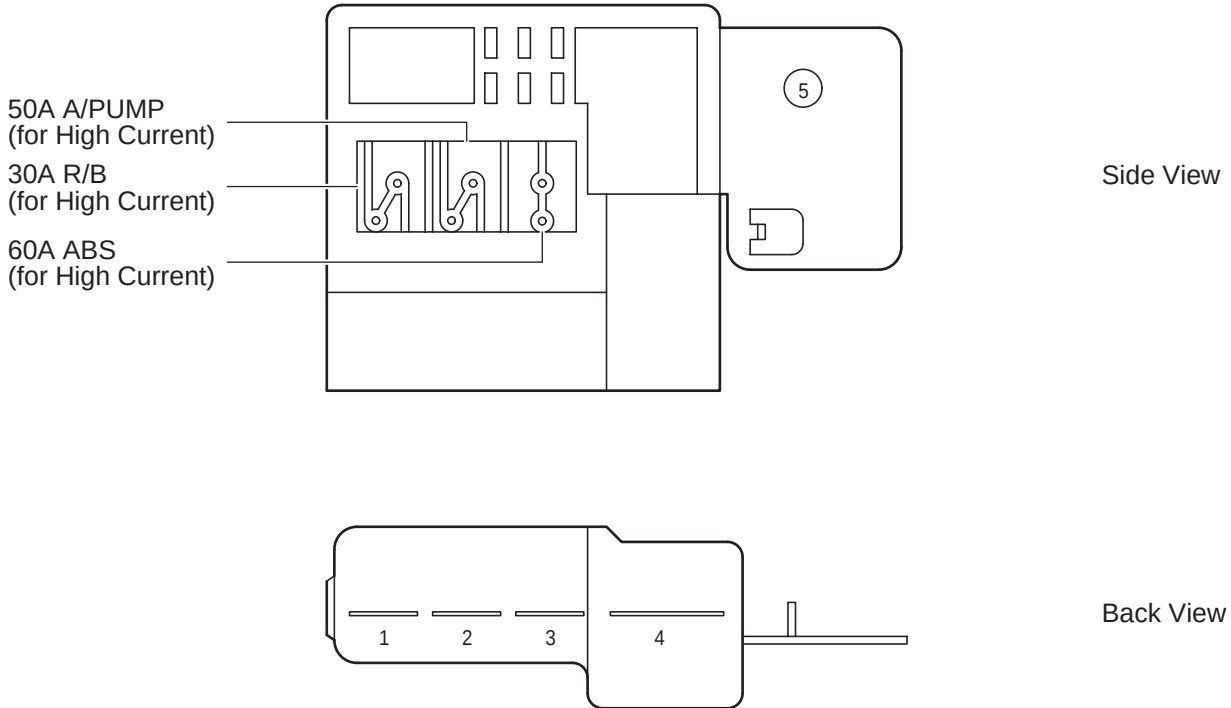


[Fusible Link Block Inner Circuit]

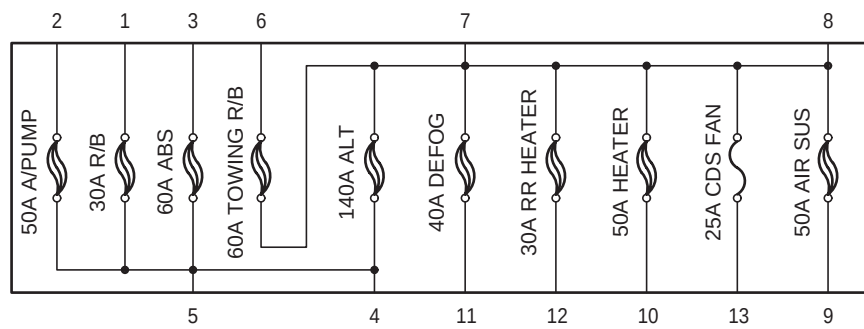




F RELAY LOCATIONS

② : Engine Room R/B No.2 Engine Compartment Left (See Page 20)

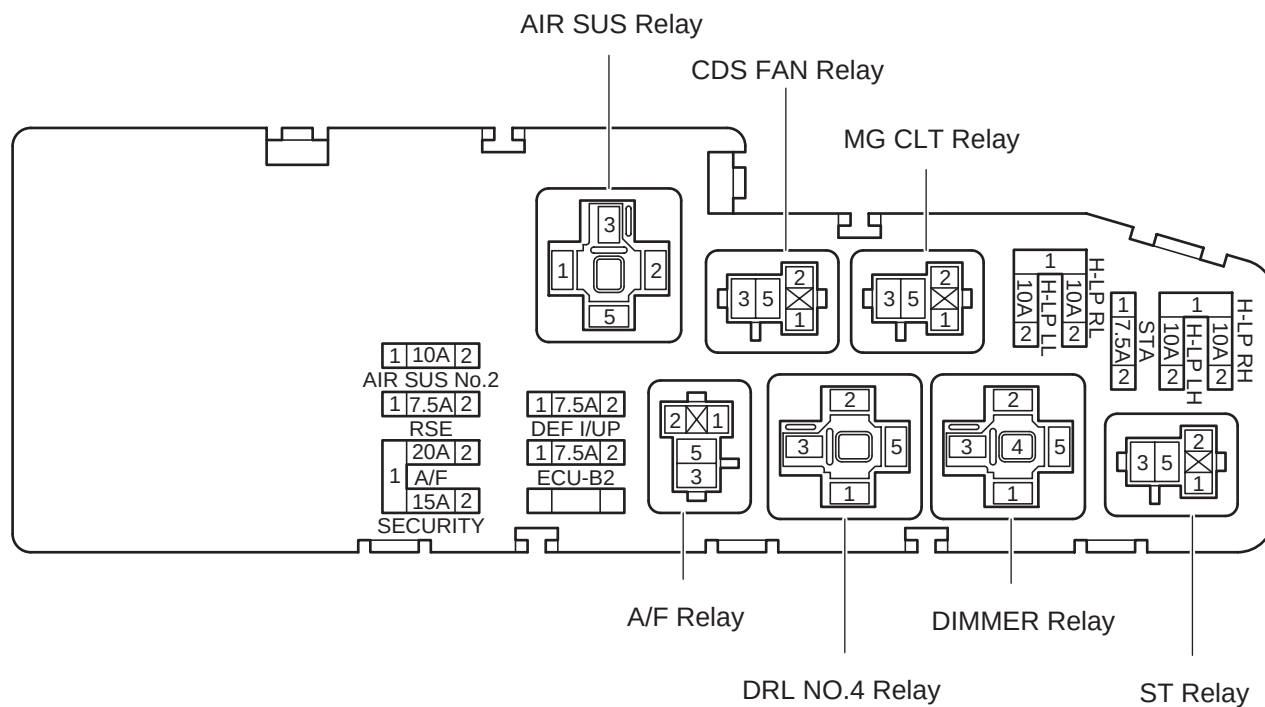

③ : Engine Room R/B No.3 Engine Compartment Left (See Page 20)

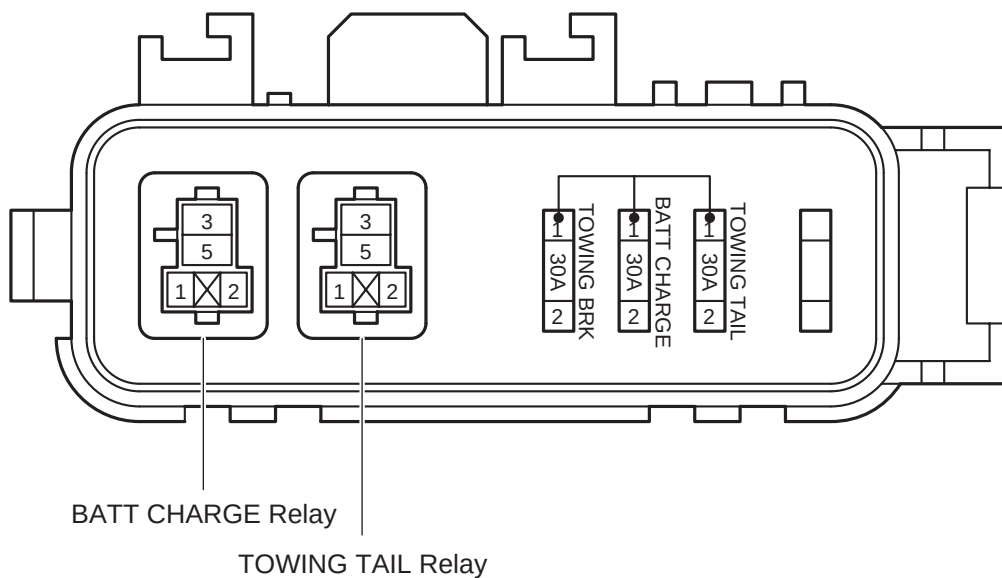

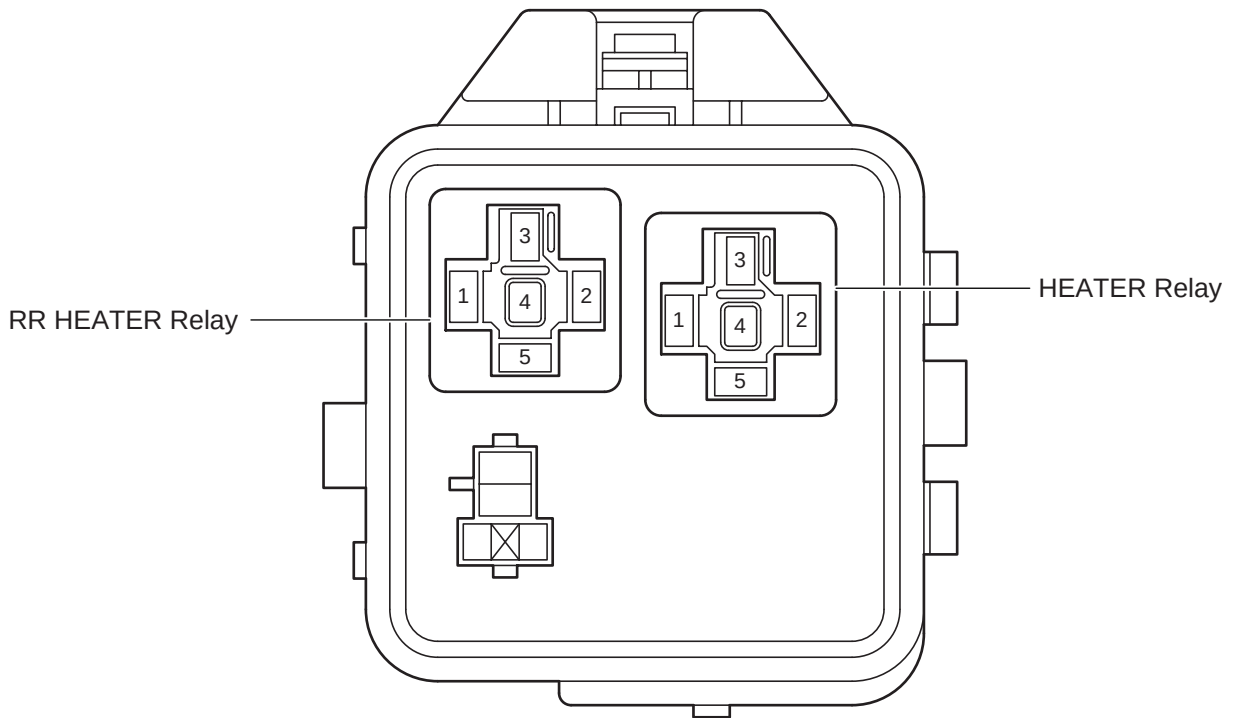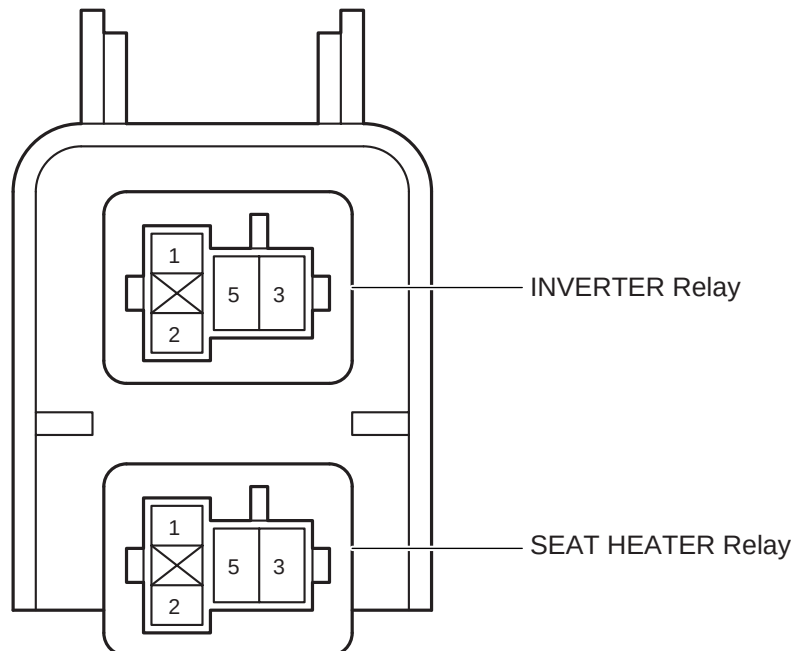
④ : Engine Room R/B No.4 Engine Compartment Right (See Page 20)**⑤ : Driver Side R/B Under the Instrument Panel J/B (See Page 20)**


F RELAY LOCATIONS

 : Engine Room J/B

Engine Compartment Left (See Page 20)


*1 : 15A DRL (w/ Daytime Running Light)
15A H-LP LH (w/o Daytime Running Light)
*2 : w/o Daytime Running Light

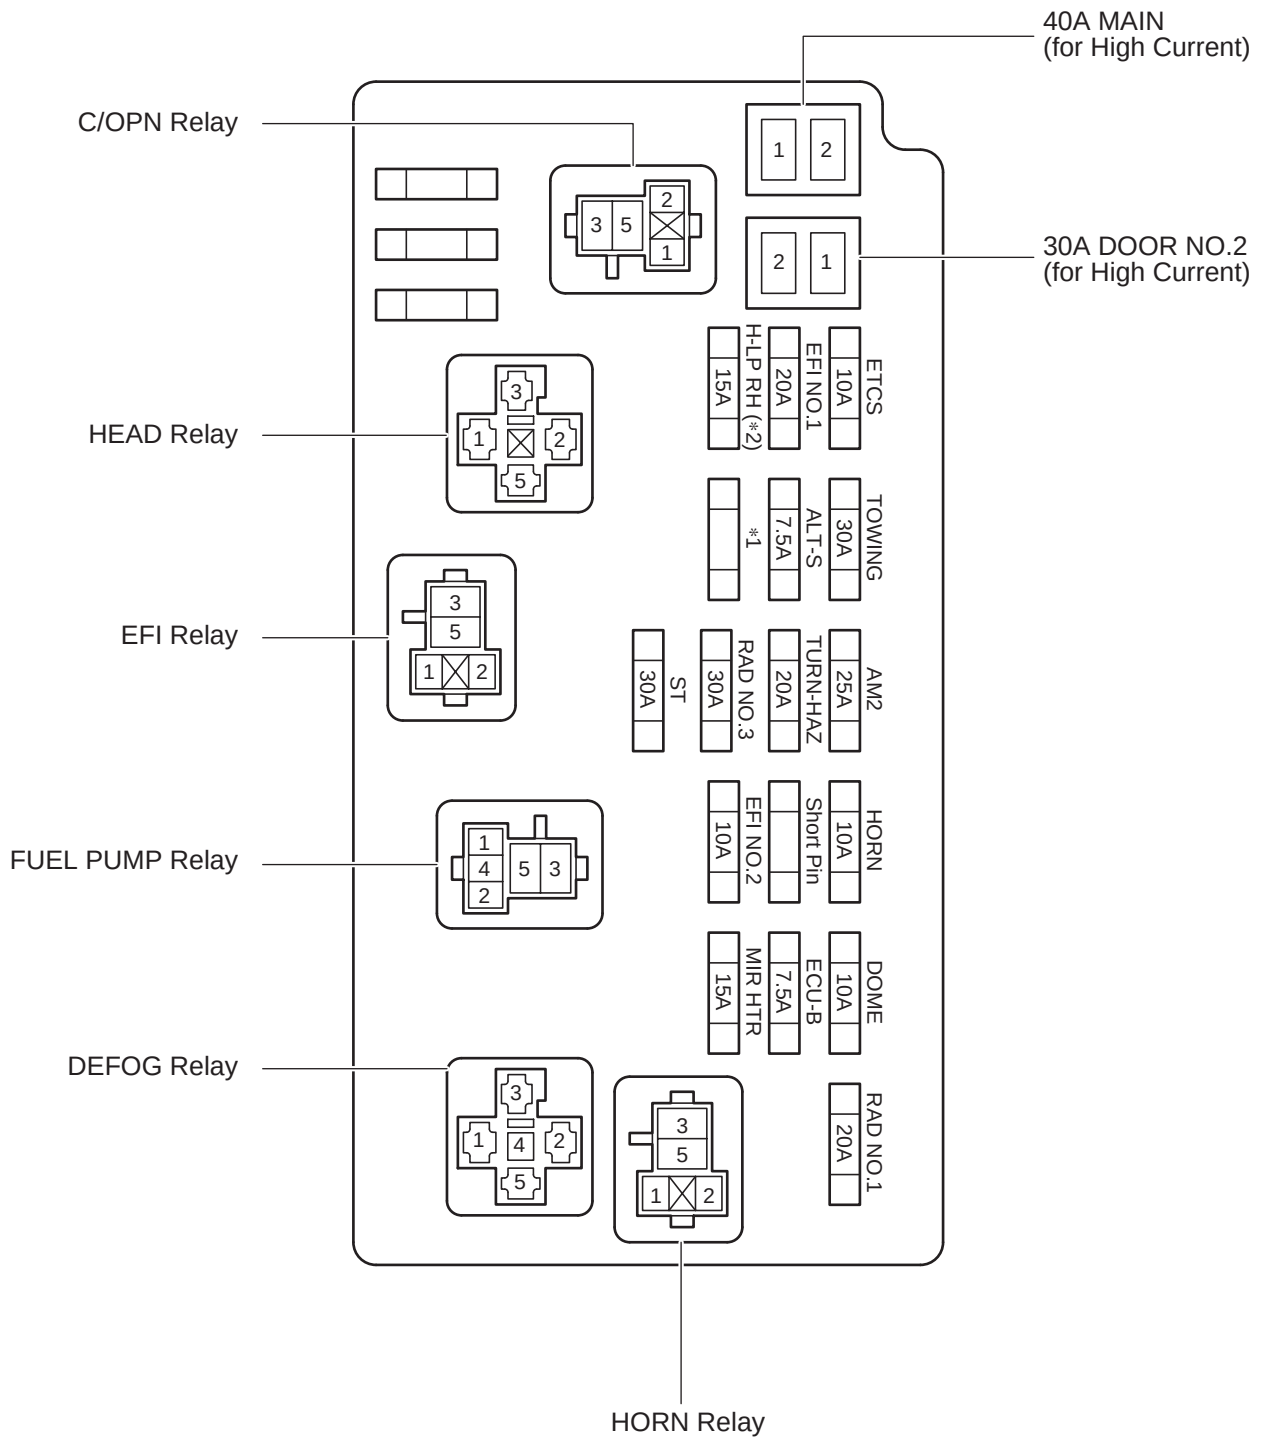

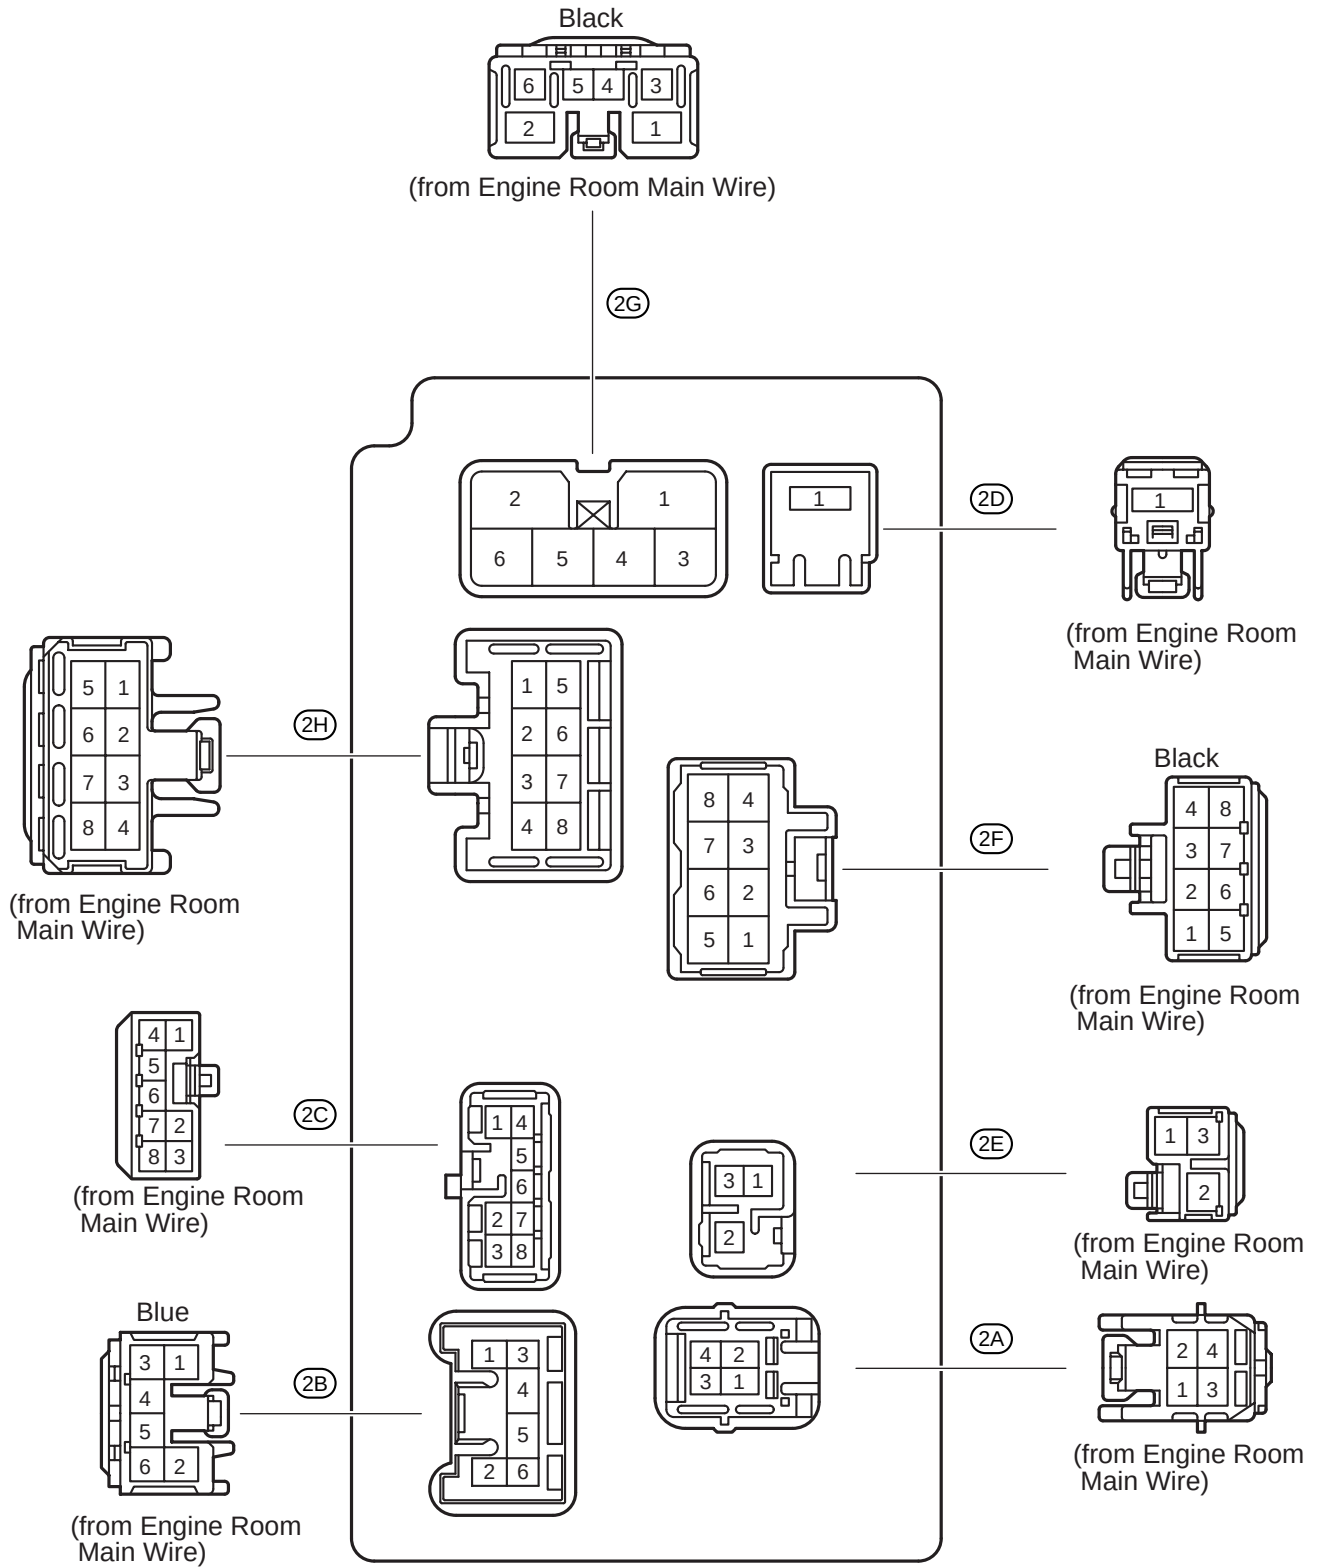

F RELAY LOCATIONS


[Engine Room J/B Inner Circuit]

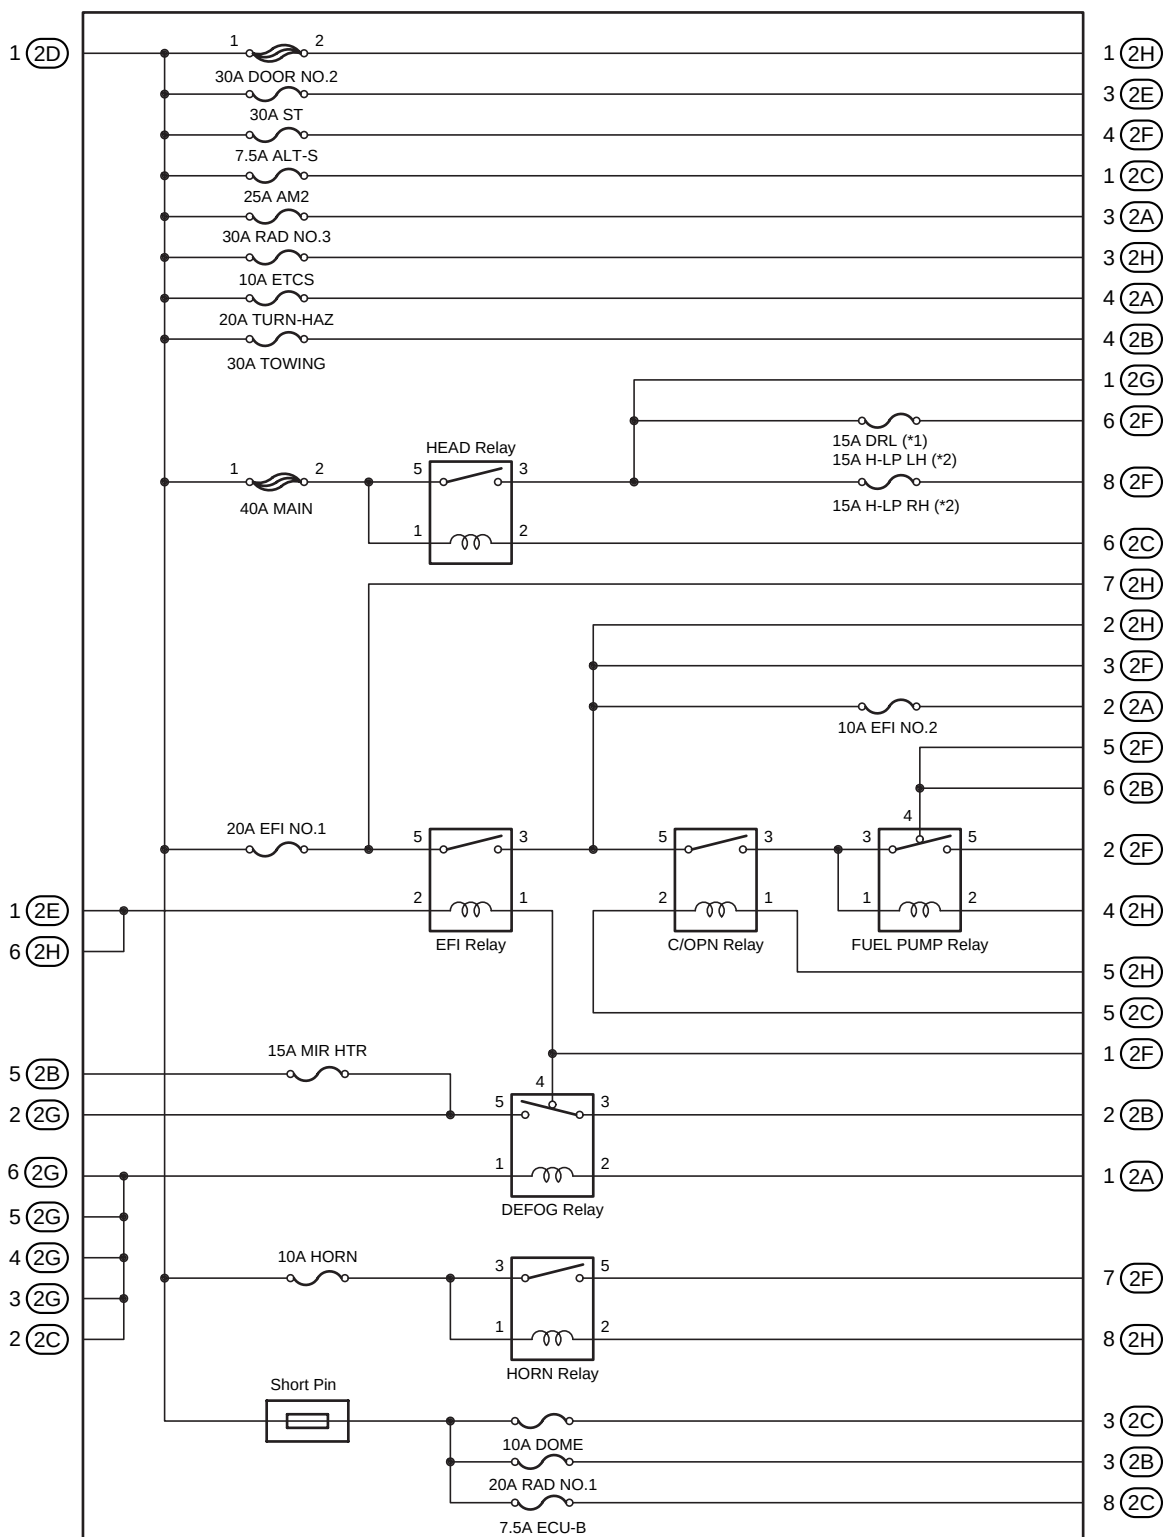


* 1:w/ Daytime Running Light
* 2:w/o Daytime Running Light

F RELAY LOCATIONS


 : Instrument Panel J/B	 : Lower Finish Panel (See Page 20)
--	--

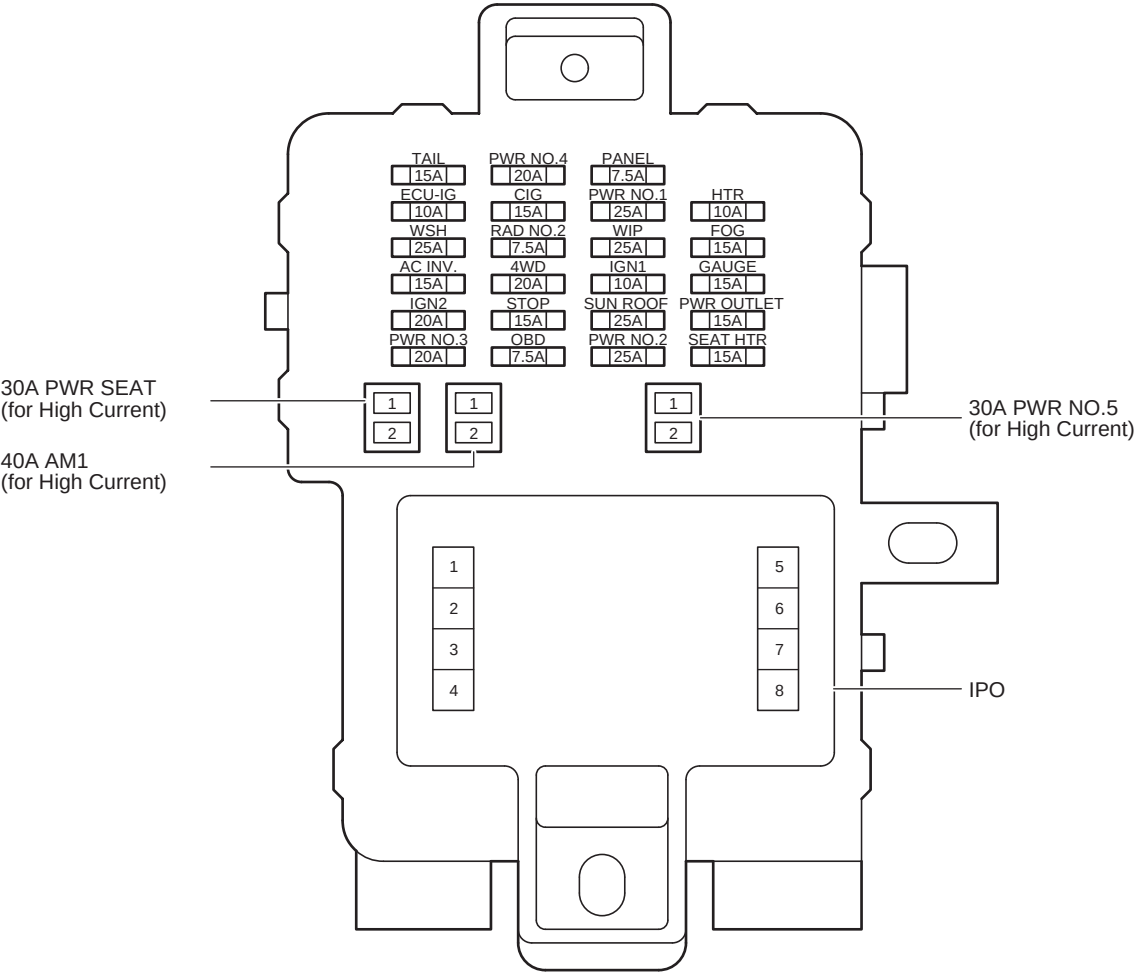

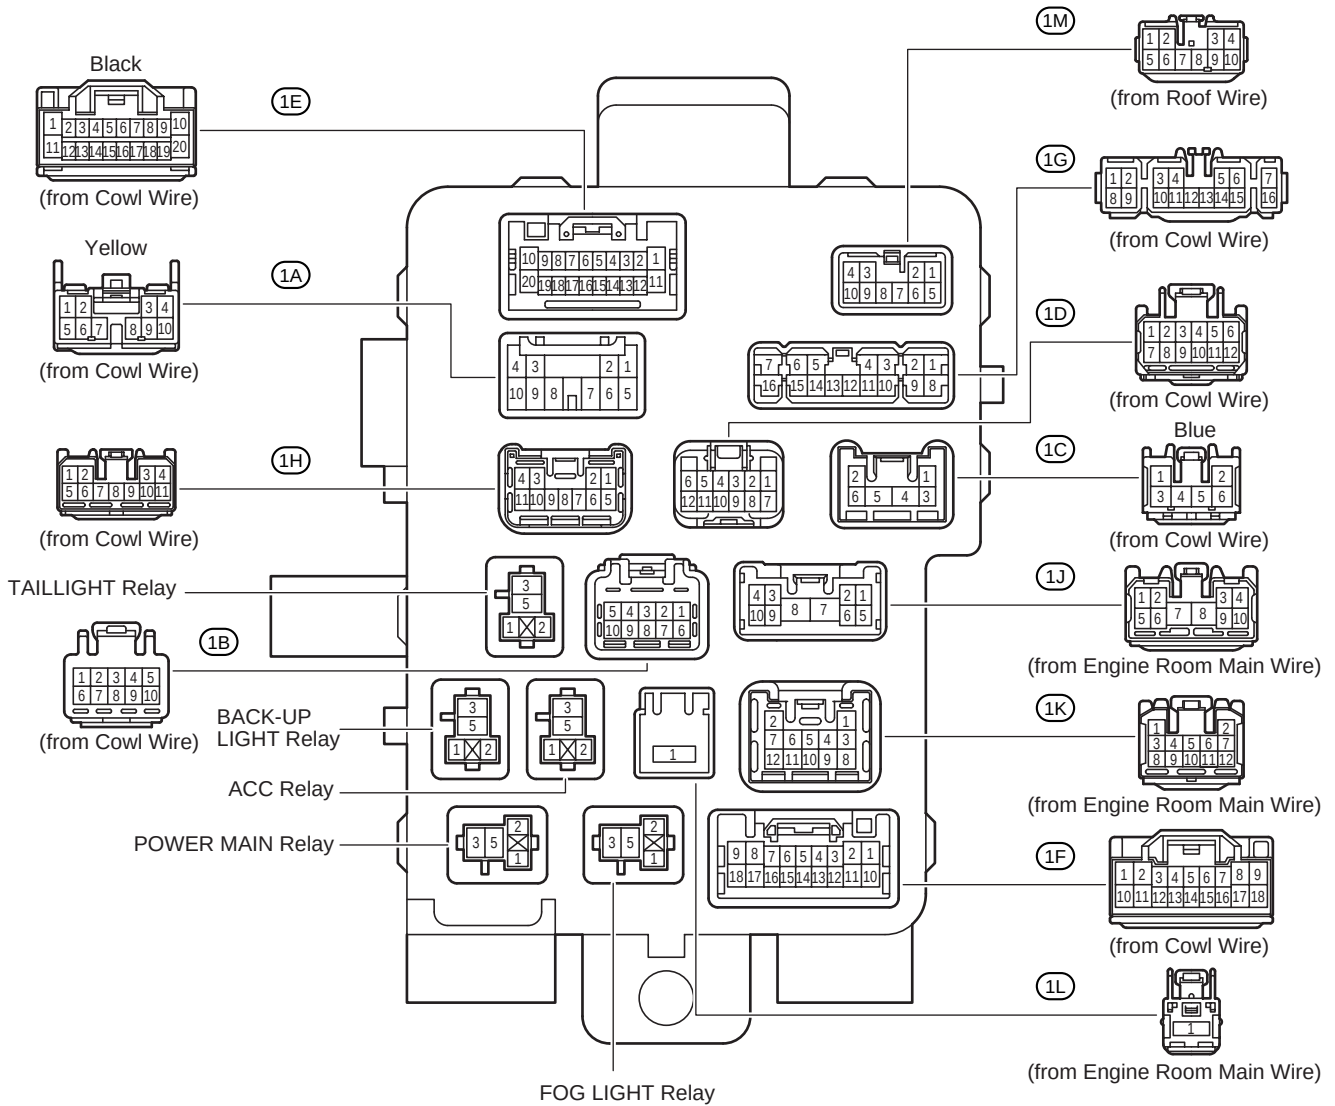


F RELAY LOCATIONS

[Instrument Panel J/B Inner Circuit]

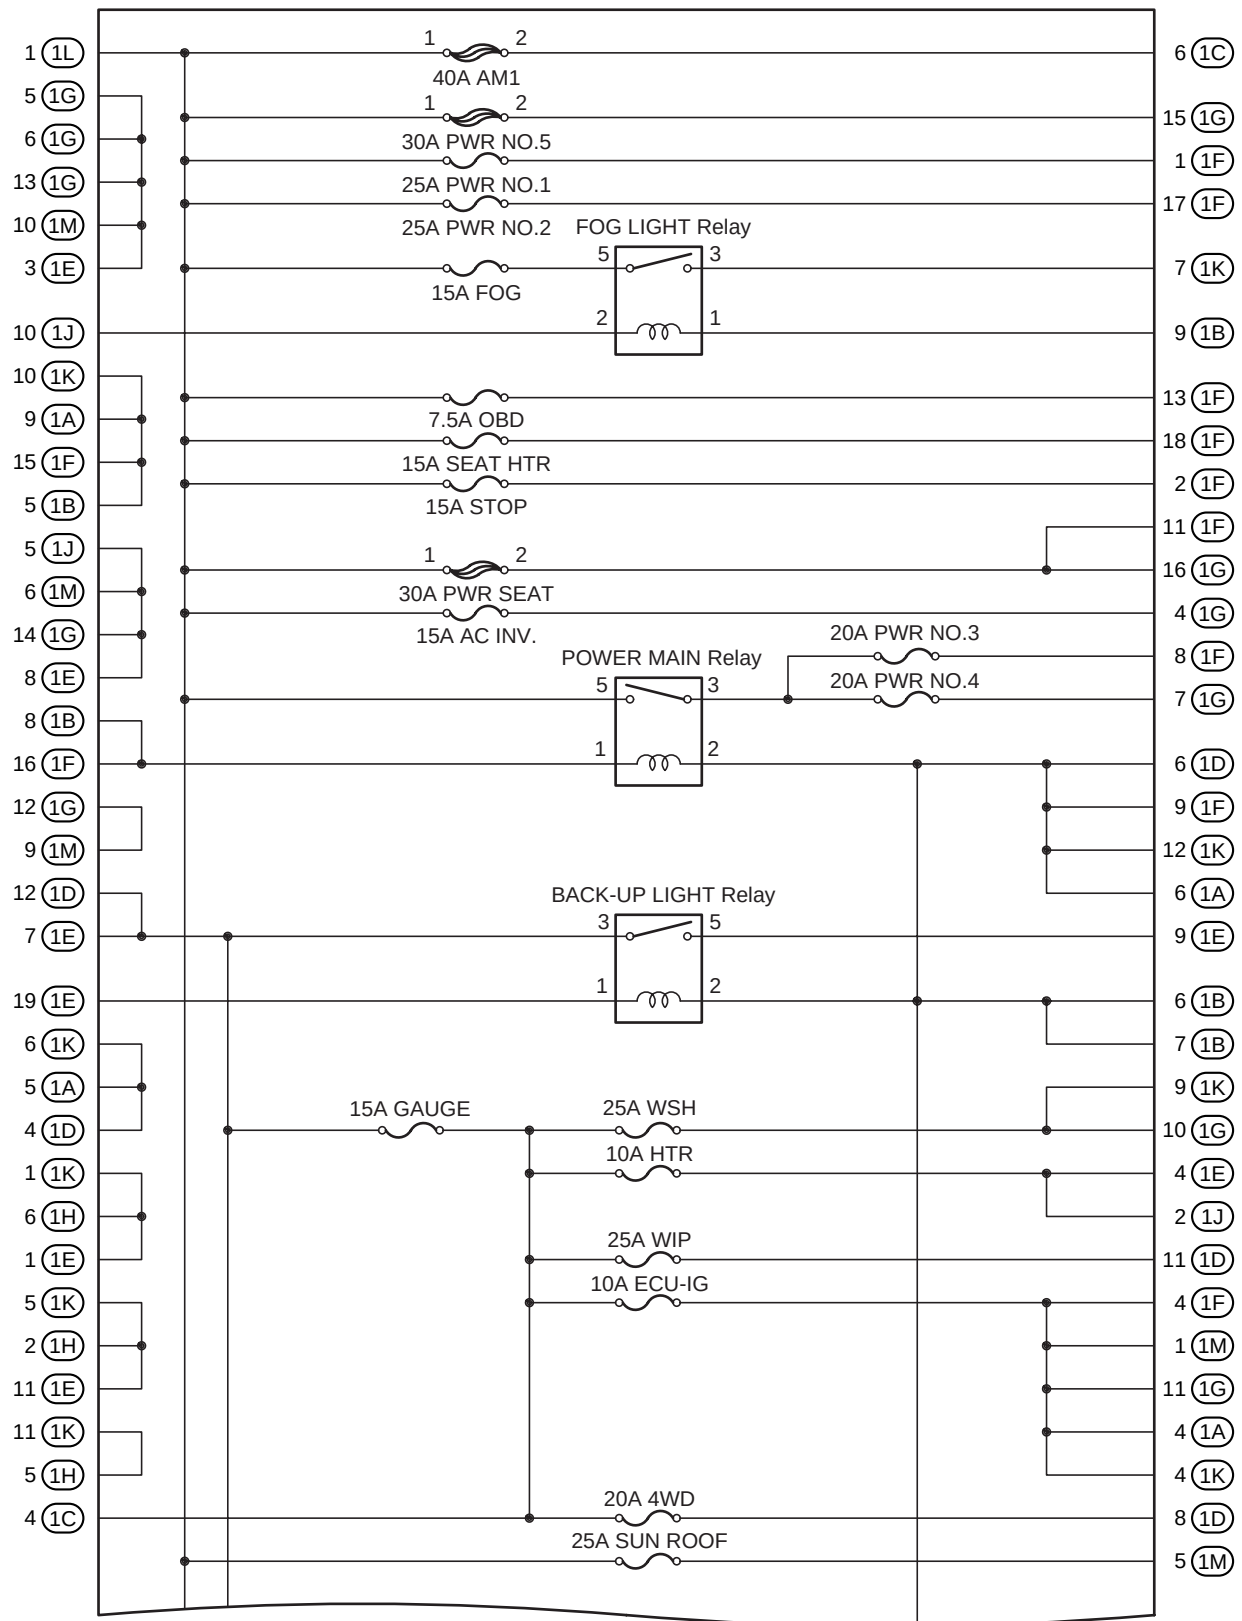


(Cont. Next Page)

(Cont'd)

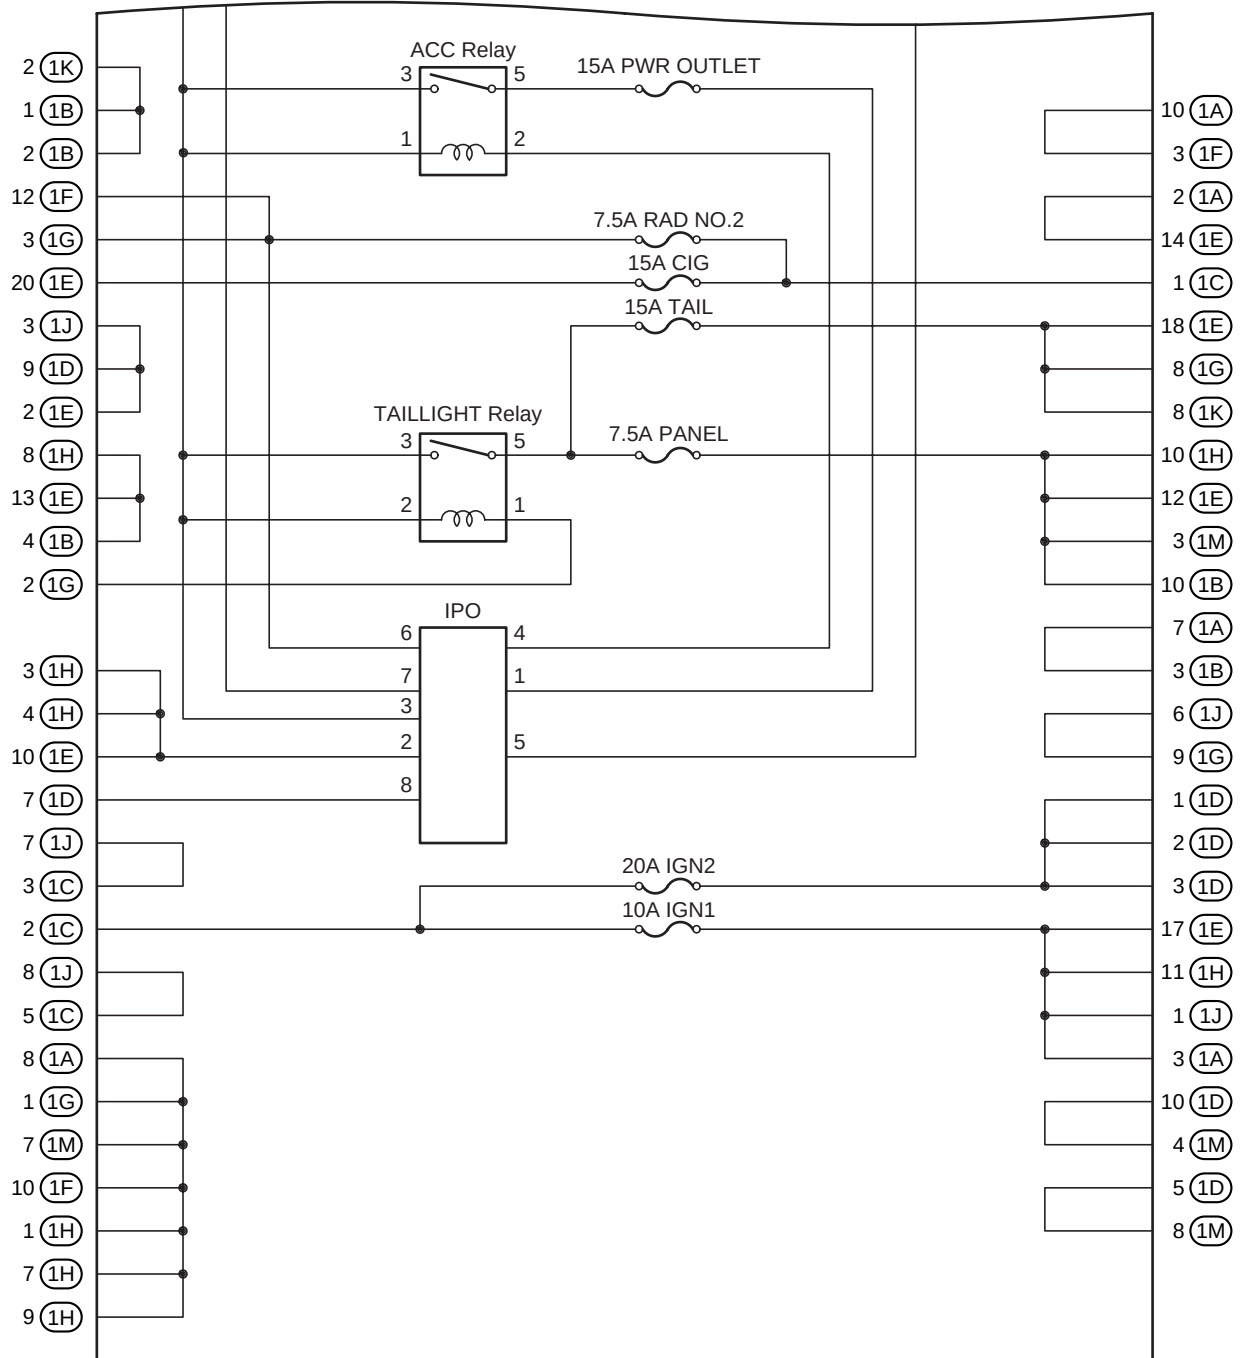


F RELAY LOCATIONS

 : Sub J/B No.3	Upper the Accelerator Pedal (See Page 20)
--	---

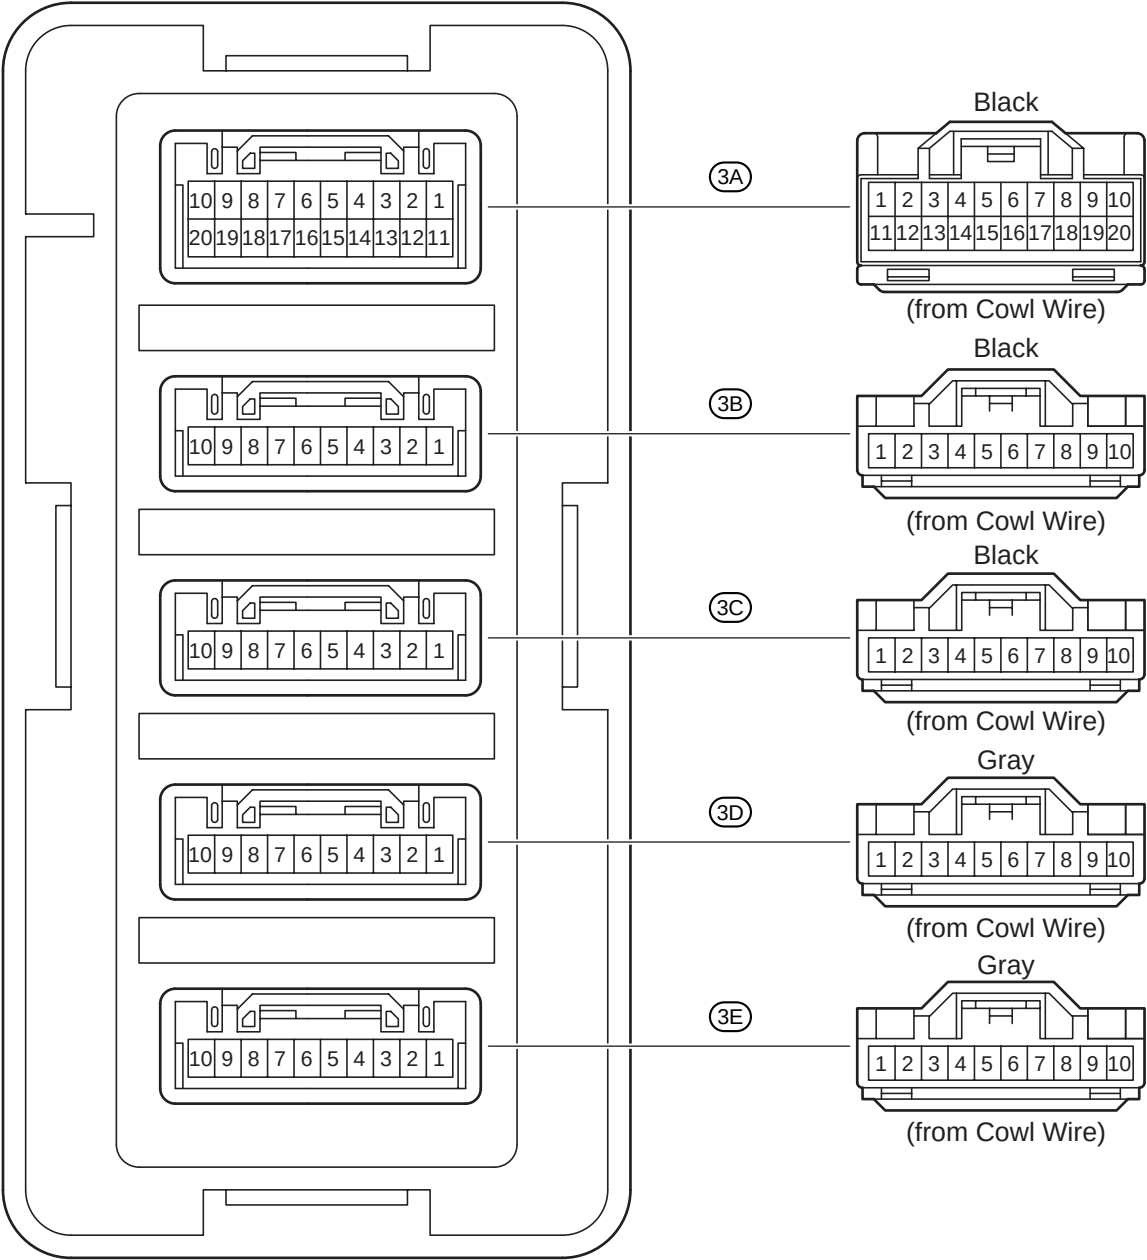


[Sub J/B No.3 Inner Circuit]

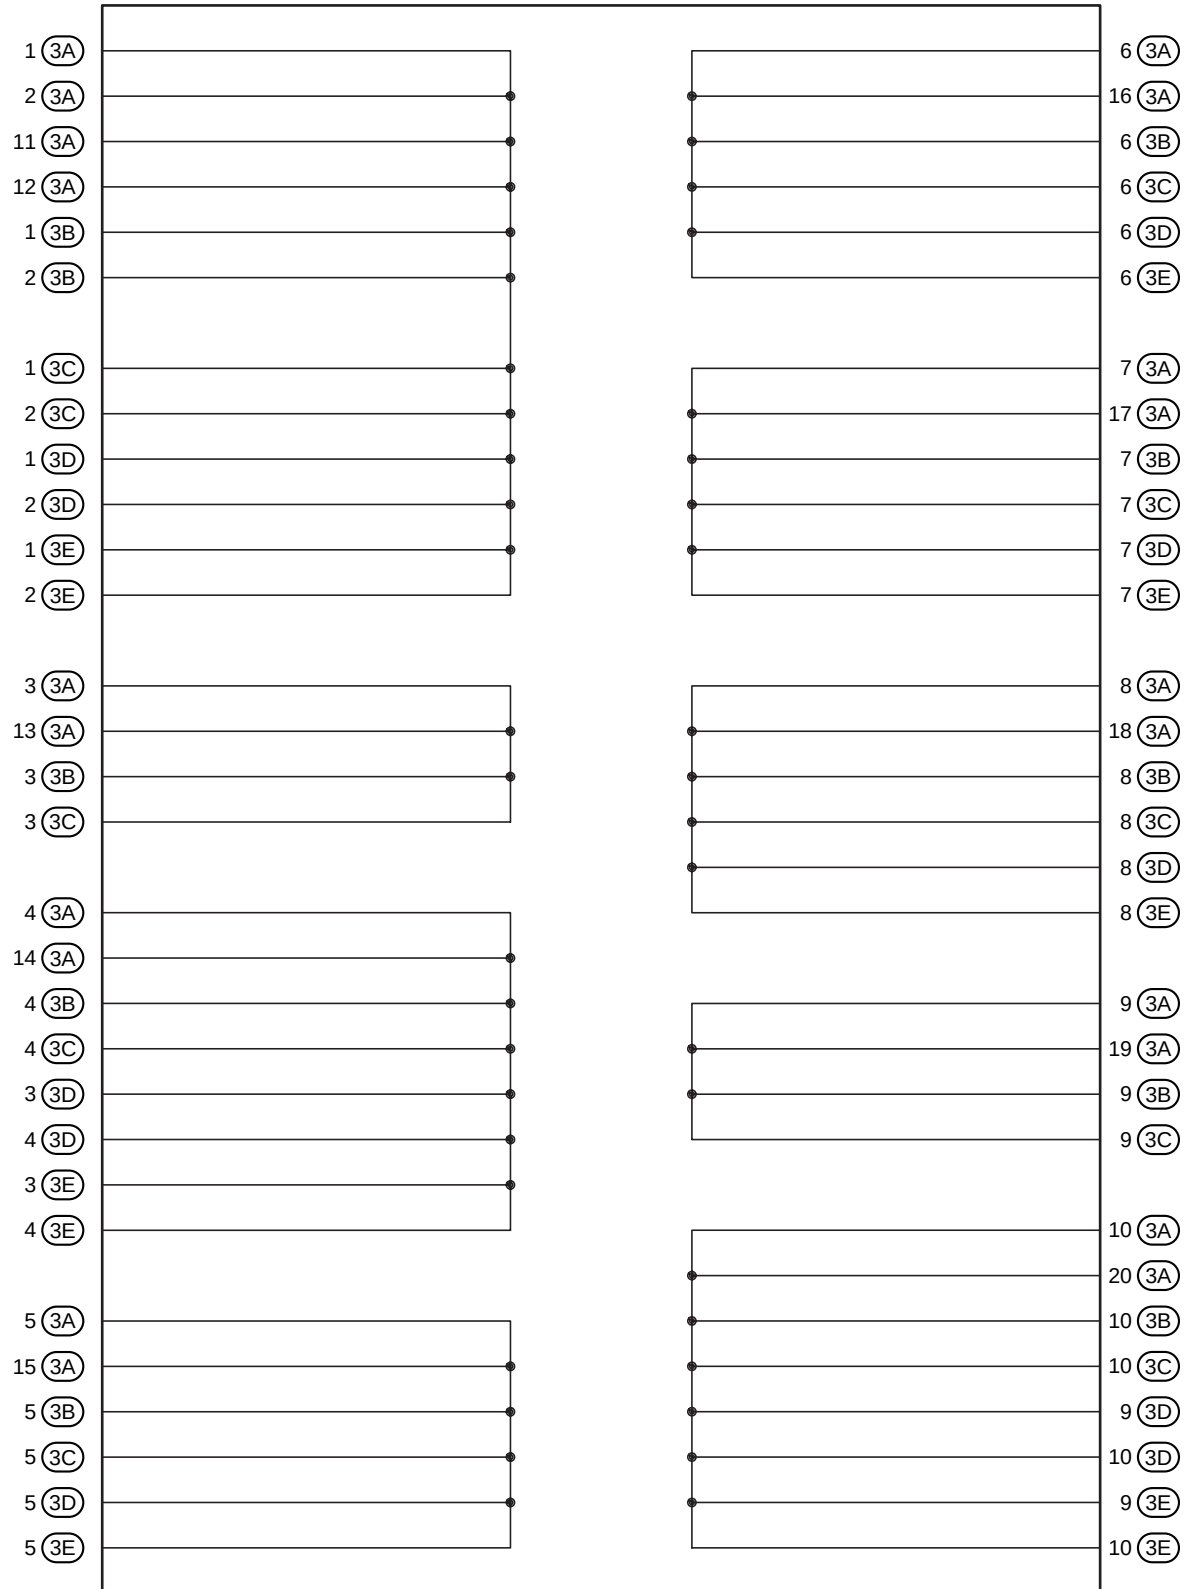

F RELAY LOCATIONS

○ : Sub J/B No.4

Upper the Accelerator Pedal (See Page 20)

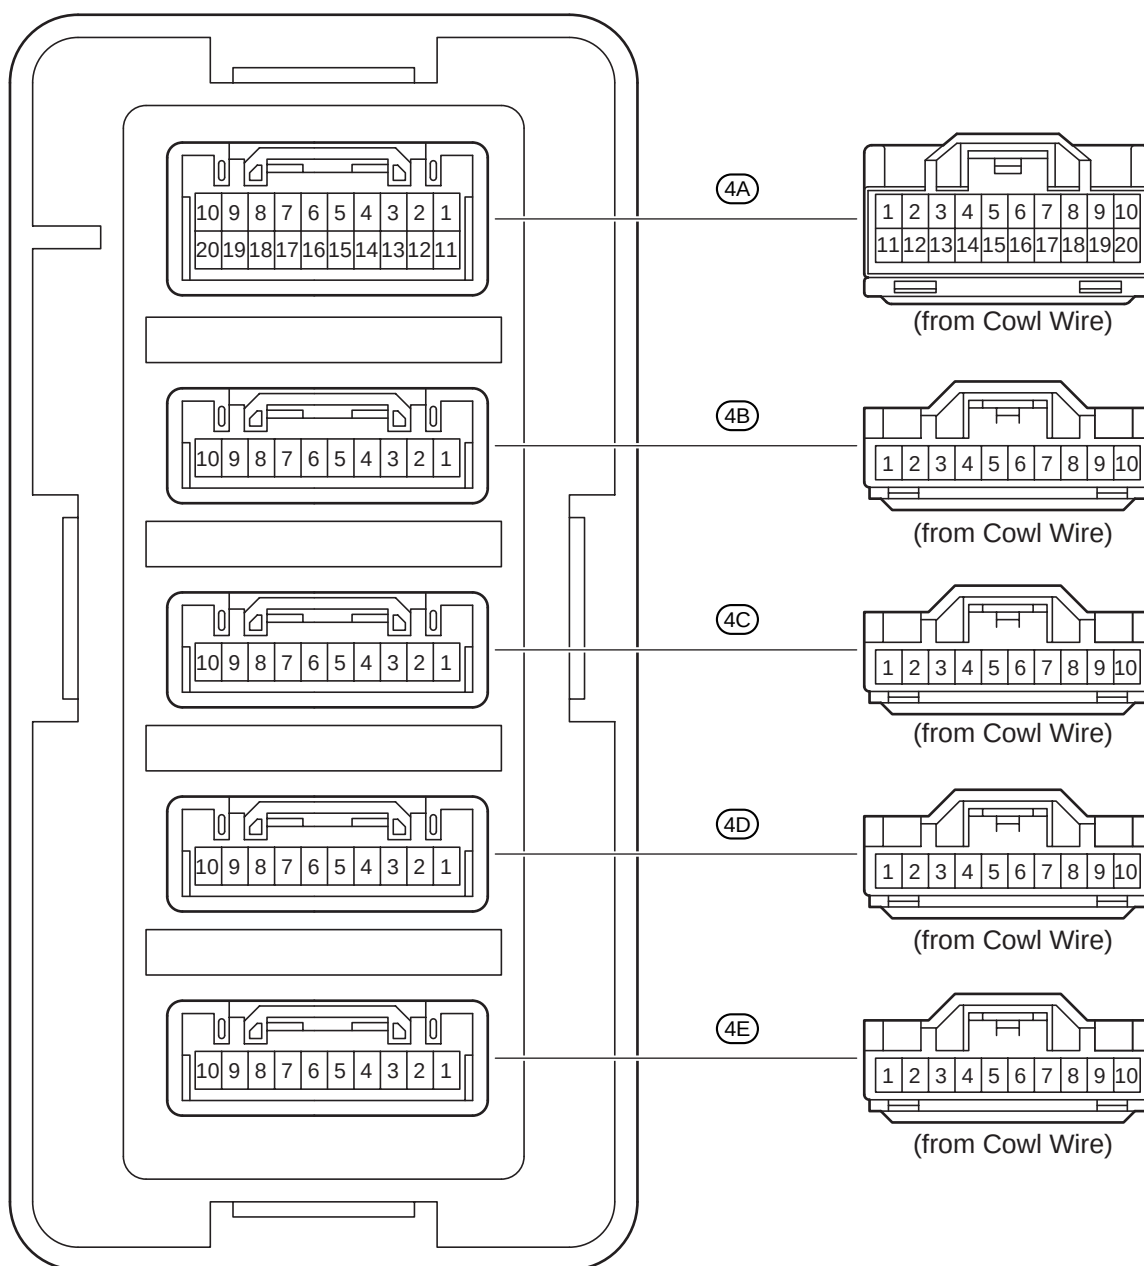

[Sub J/B No.4 Inner Circuit]