

2006 SEQUOIA ELECTRICAL WIRING DIAGRAM SYSTEM CIRCUITS

	Page
ABS	194
Accessory Meter	224
Air Conditioning	290
Audio System (10 Speaker)	278
Audio System (10 Speaker w/ Navigation)	266
Audio System (10 Speaker w/ Navigation and Rear Seat Entertainment System)	258
Audio System (10 Speaker w/ Rear Seat Entertainment System)	270
Audio System (6 Speaker)	282
Automatic Glare-Resistant EC Mirror	232
Automatic Light Control	144
Back-Up Light	110
Charging	68
Cigarette Lighter	228
Combination Meter	284
Cruise Control	190
Door Lock Control	160
Electric Modulated Air Suspension	212
Electronically Controlled Transmission and A/T Indicator	184
Engine Control	70
Engine Immobiliser System	84
Front Fog Light (w/ Daytime Running Light)	88
Front Fog Light (w/o Daytime Running Light)	92
Front Wiper and Washer	178
Garage Door Opener	224
Headlight (w/ Daytime Running Light)	88
Headlight (w/o Daytime Running Light)	92
Horn	234
Ignition	64
Illumination	100
Interior Light	148
Key Reminder	146
Light Auto Turn Off System	140
Mirror Heater	256
Multi Mode 4WD	206
Multiplex Communication System (BEAN)	118
Multiplex Communication System (BEAN Bus)	114
Multiplex Communication System (CAN Bus)	116
Navigation System (w/ Rear Seat Entertainment System)	258
Navigation System (w/o Rear Seat Entertainment System)	266
Power Outlet (115V)	230
Power Outlet (12V)	228
Power Seat (Driver's Seat w/ Driving Position Memory)	246
Power Seat (Driver's Seat w/o Driving Position Memory)	250
Power Seat (Front Passenger's Seat)	252
Power Source	58
Power Window	154

	Page
Rear Window Defogger	256
Rear Wiper and Washer	180
Remote Control Mirror (w/ Driving Position Memory)	238
Remote Control Mirror (w/o Driving Position Memory)	244
Seat Belt Warning	146
Seat Heater	254
Sliding Roof	236
SRS	217
Starting	62
Stop Light	112
Taillight	96
Theft Deterrent	160
Tire Pressure Warning System	202
TRAC	194
Trailer Towing	106
Turn Signal and Hazard Warning Light	104
VSC	194
Wireless Door Lock Control	168