
 





* 1 : w/ Daytime Running Light

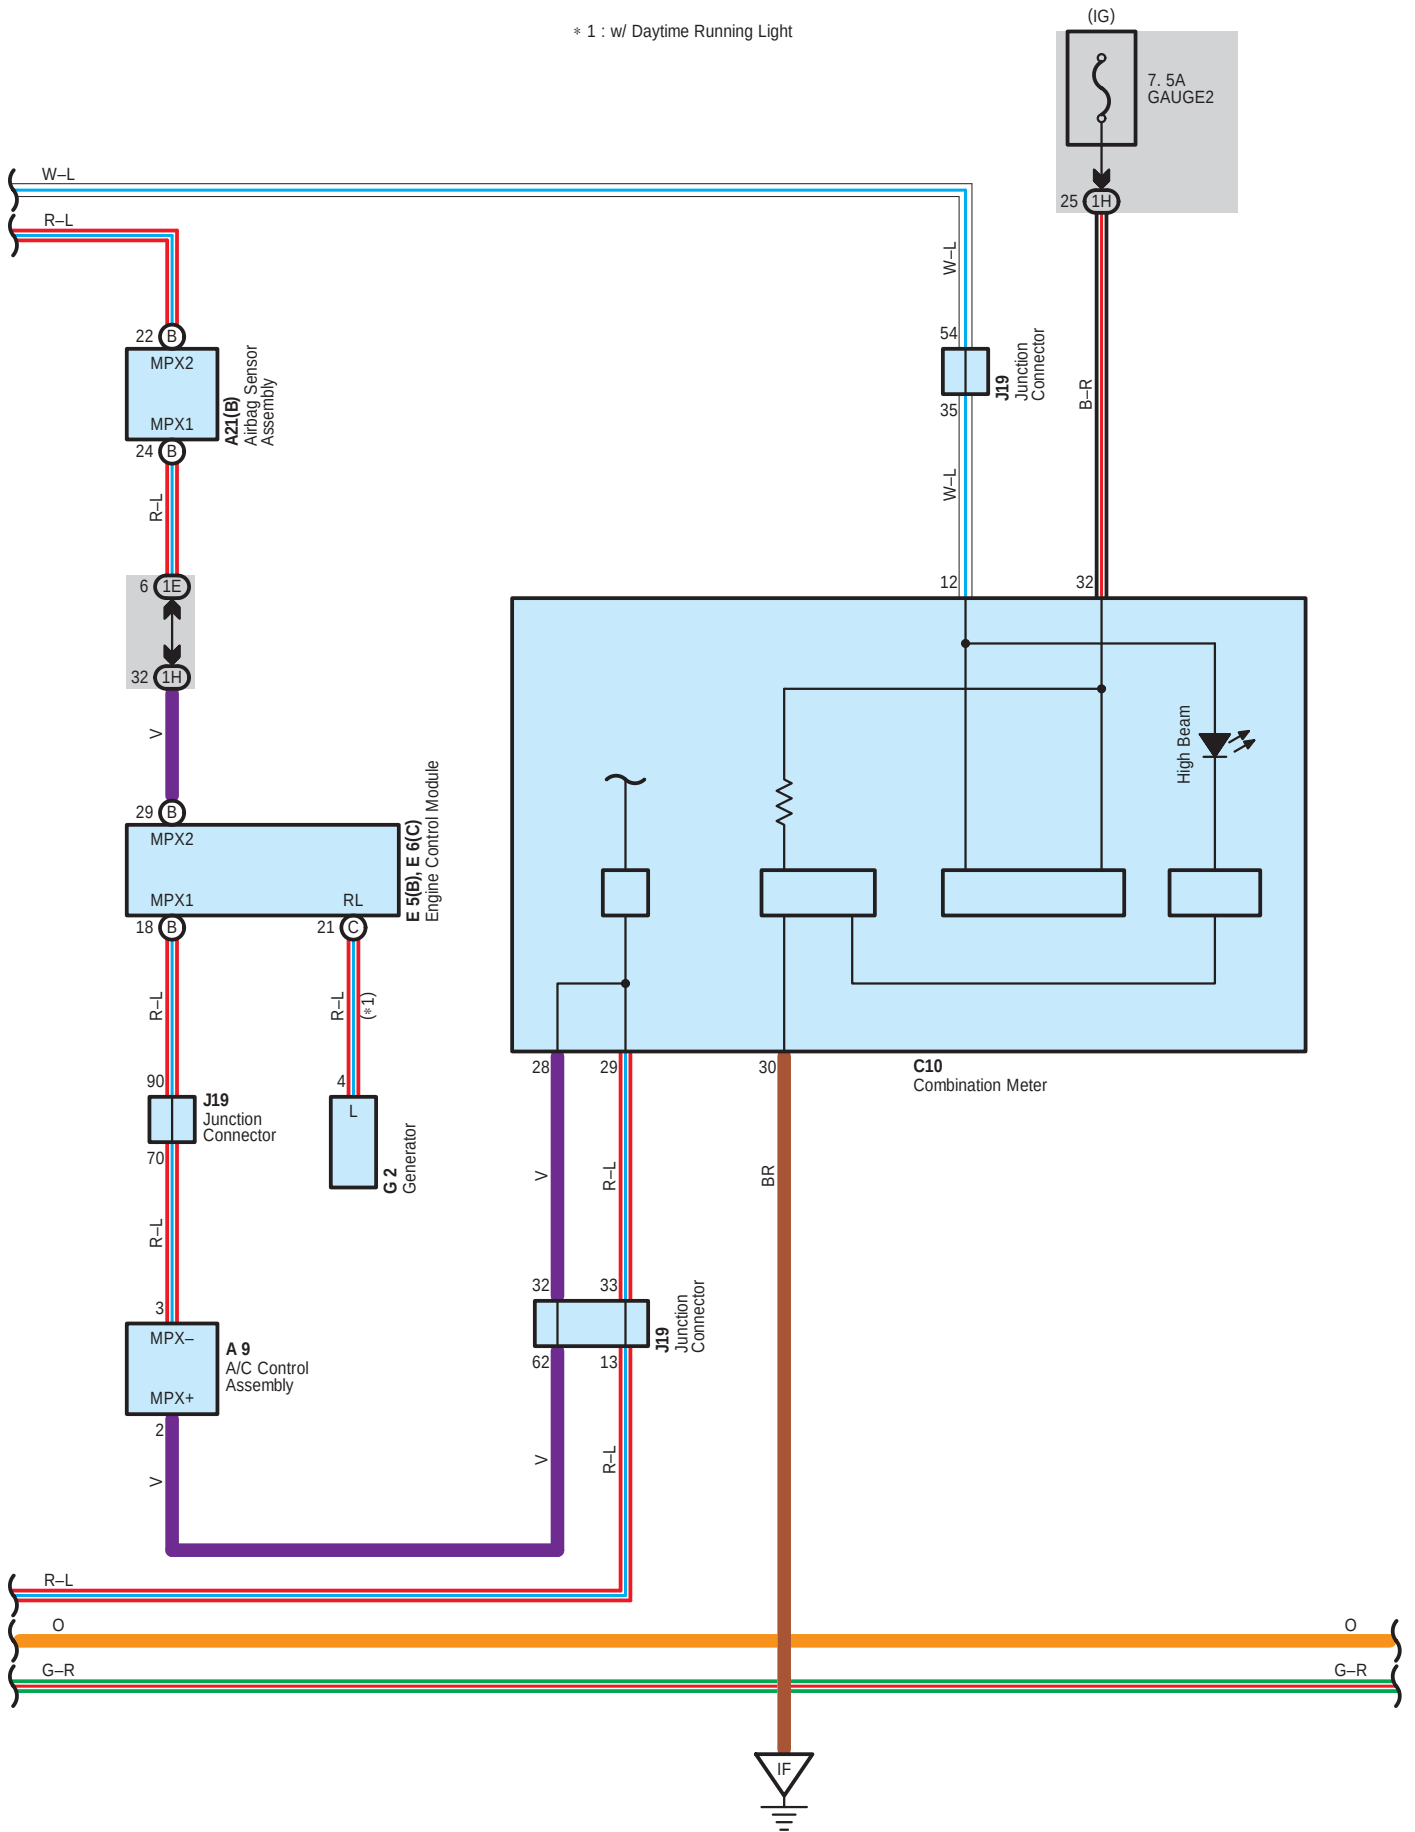



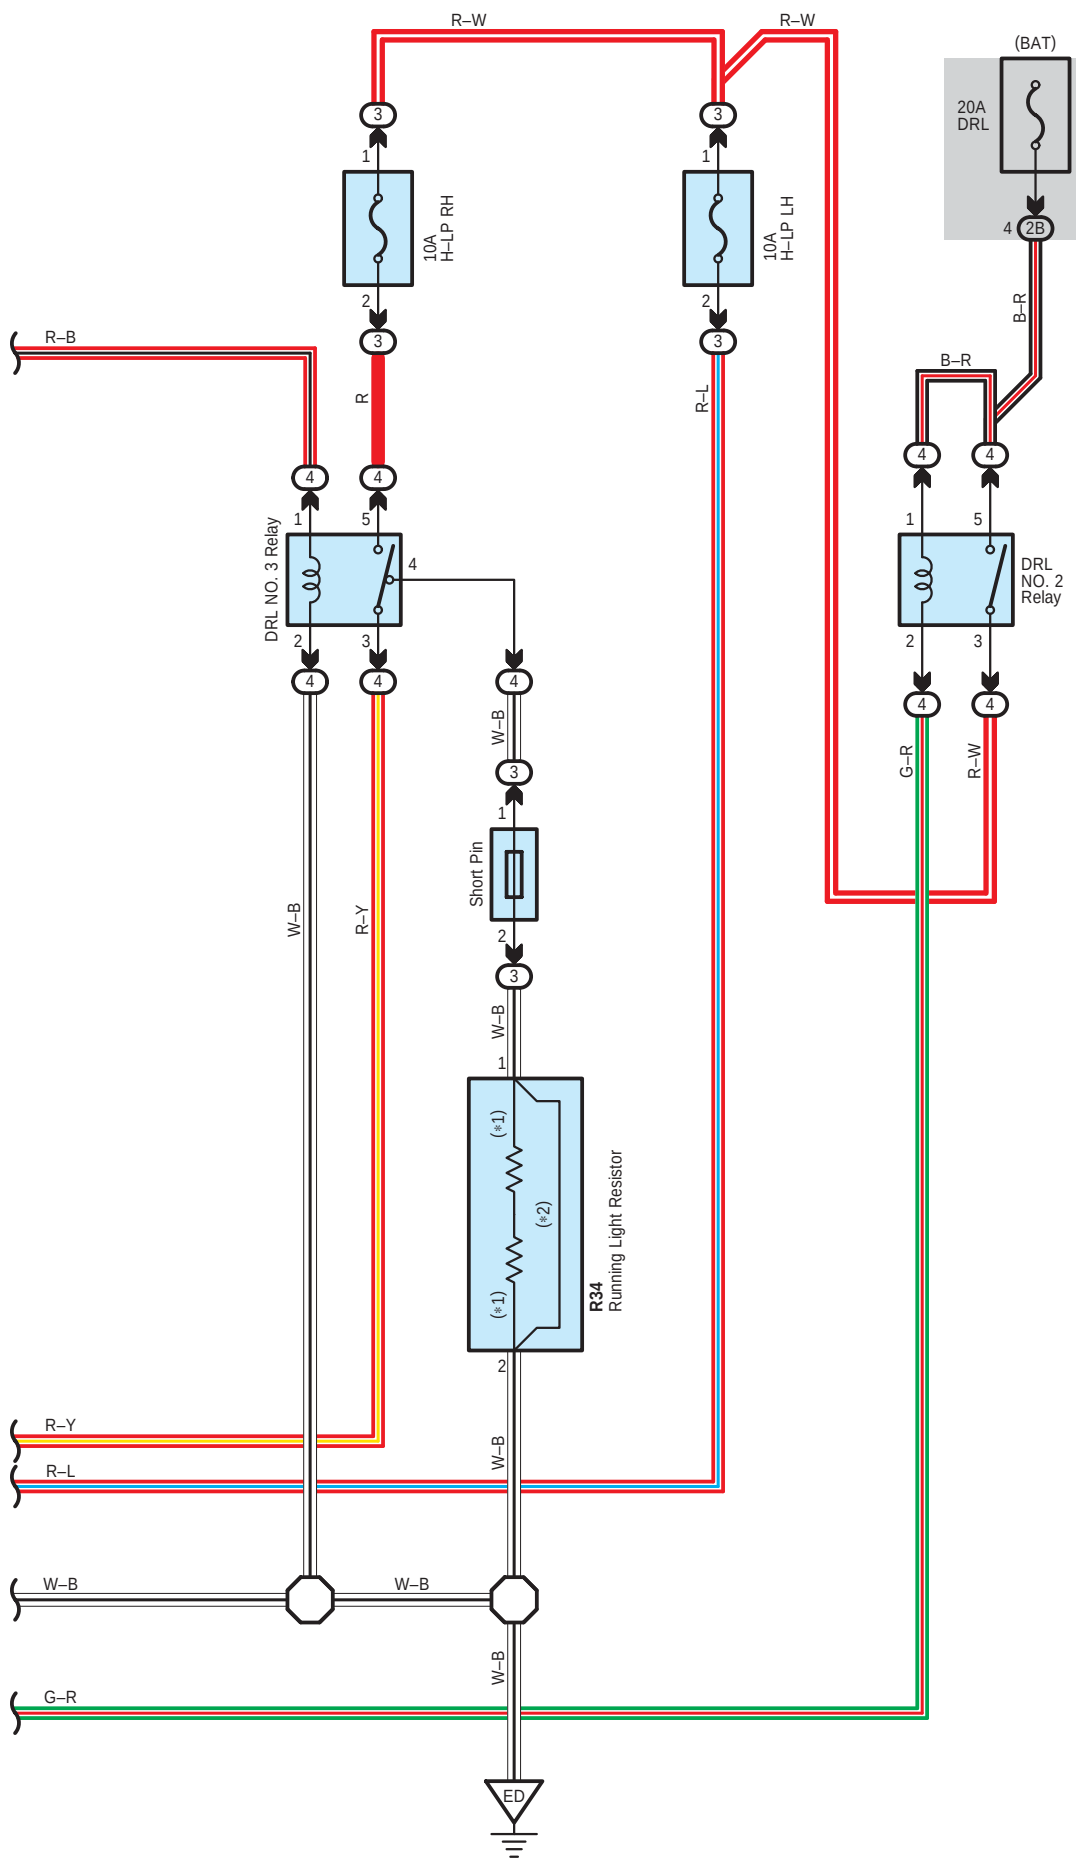

Headlight

: Parts Location

Code		See Page		Code		See Page		Code		See Page	
A9		38		E6	C	39		J2		37	
A21	B	38		G2		36		J5	A	40	
A25		38		H3		36		J6	B	40	
B6	A	38		H4		36		J19		40	
B7	B	38		H5		36		J20		40	
C10		39		H6		36		J27		40	
C11		39		H7		36		P6		41	
E5	B	39		H8		36		R34		37	

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	26	R/B No.3 (Engine Compartment Left)
4	27	R/B No.4 (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1H	30	
1K	31	
1L		
1N		
2B	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2C		
2F		
2G		

: Ground Points

Code	See Page	Ground Points Location
EA	50	Front Side of the Right Fender Apron
ED	50	Front Side of the Left Fender Apron
IE	52	Left Kick Panel
IF	52	Instrument Panel Brace LH

