


Light Auto Turn Off System

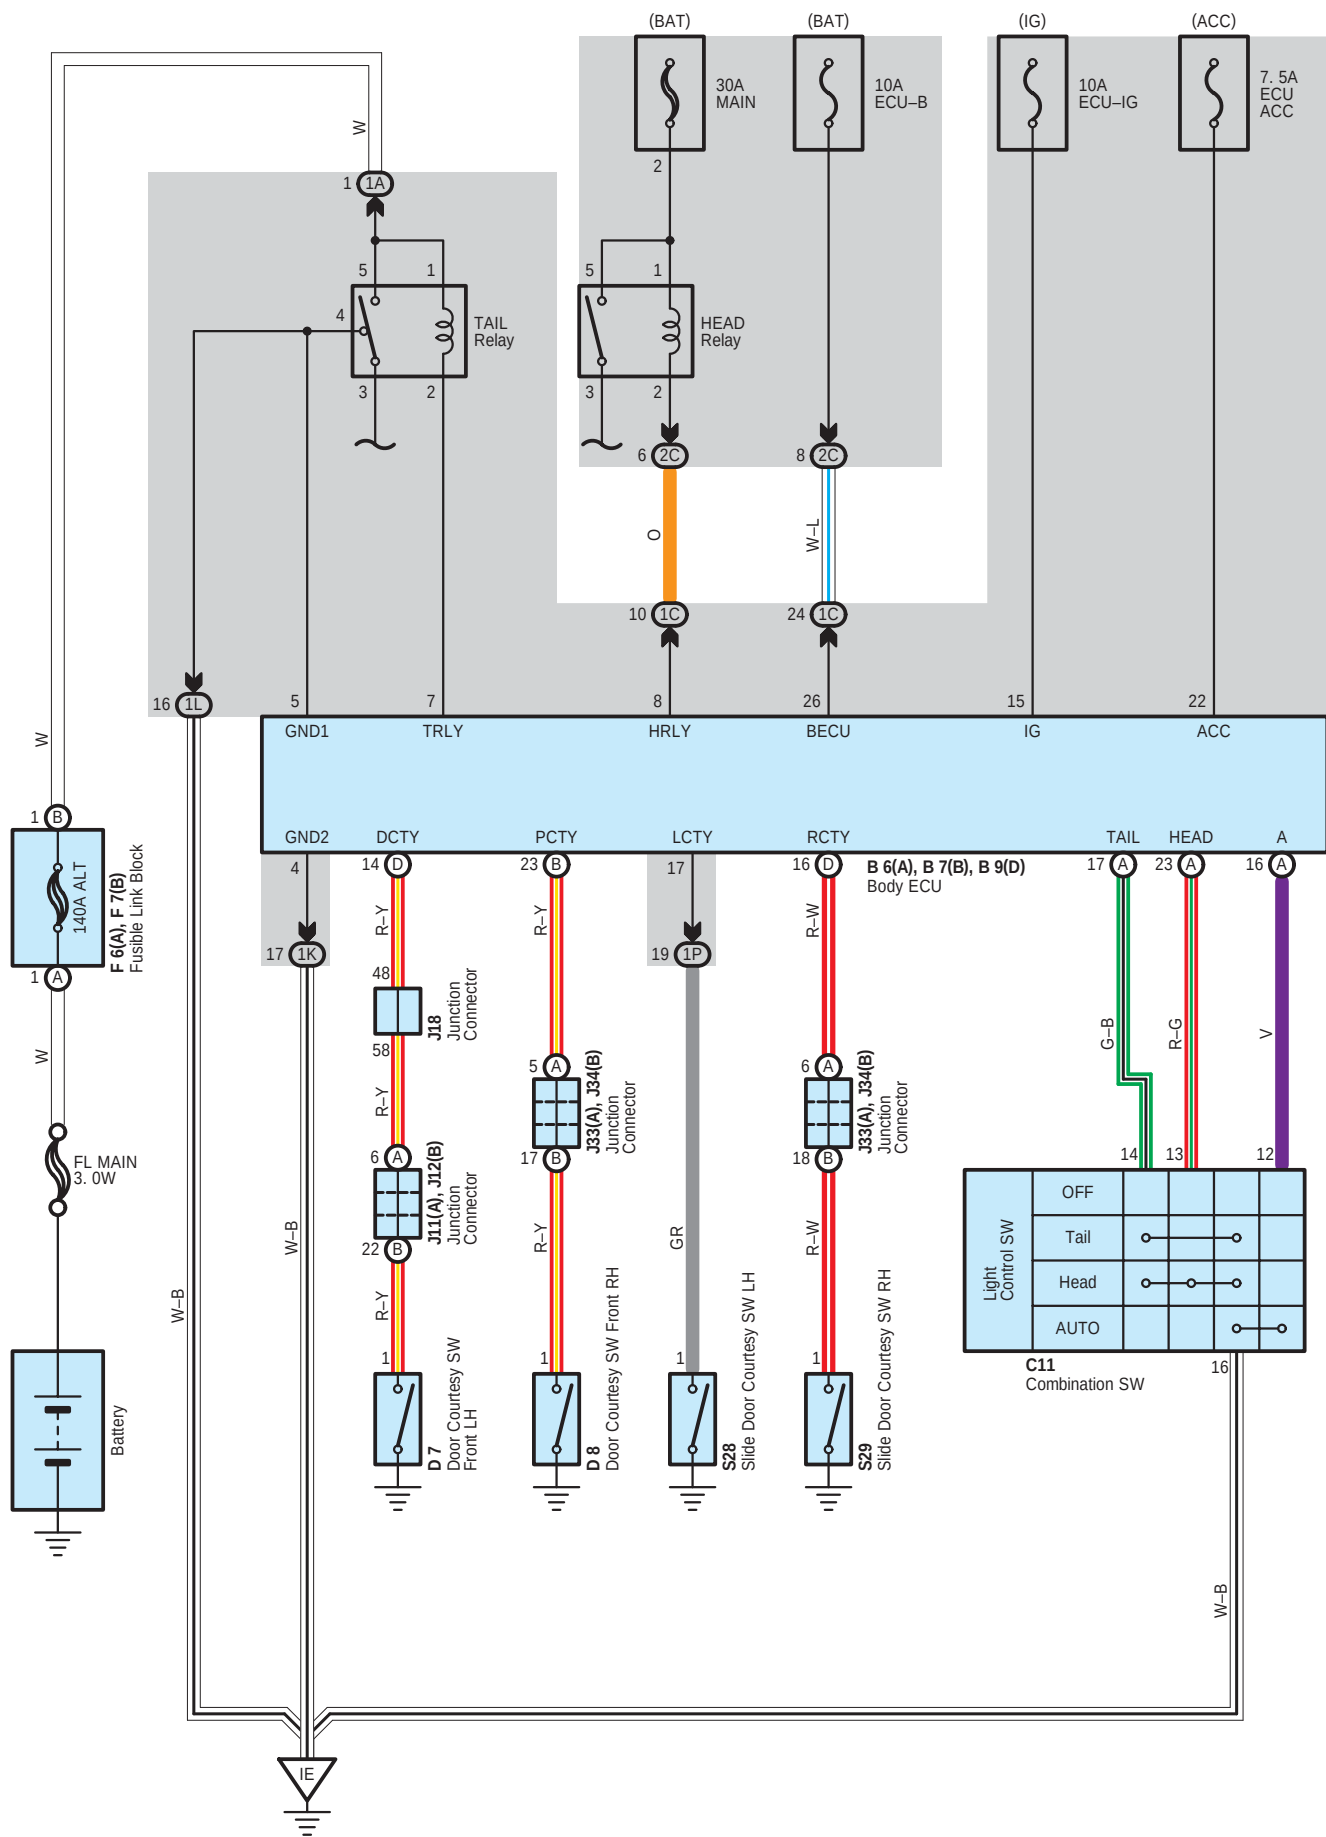

 : Parts Location

Code		See Page	Code		See Page	Code		See Page
B6	A	38	D8		42	J18		40
B7	B	38	F6	A	36	J33	A	40
B9	D	38	F7	B	36	J34	B	40
C11		39	J11	A	40	S28		44
D7		42	J12	B	40	S29		44

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1C		
1K	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L		
1P	31	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

 : Ground Points

Code	See Page	Ground Points Location
IE	52	Left Kick Panel