



Turn Signal and Hazard Warning Light

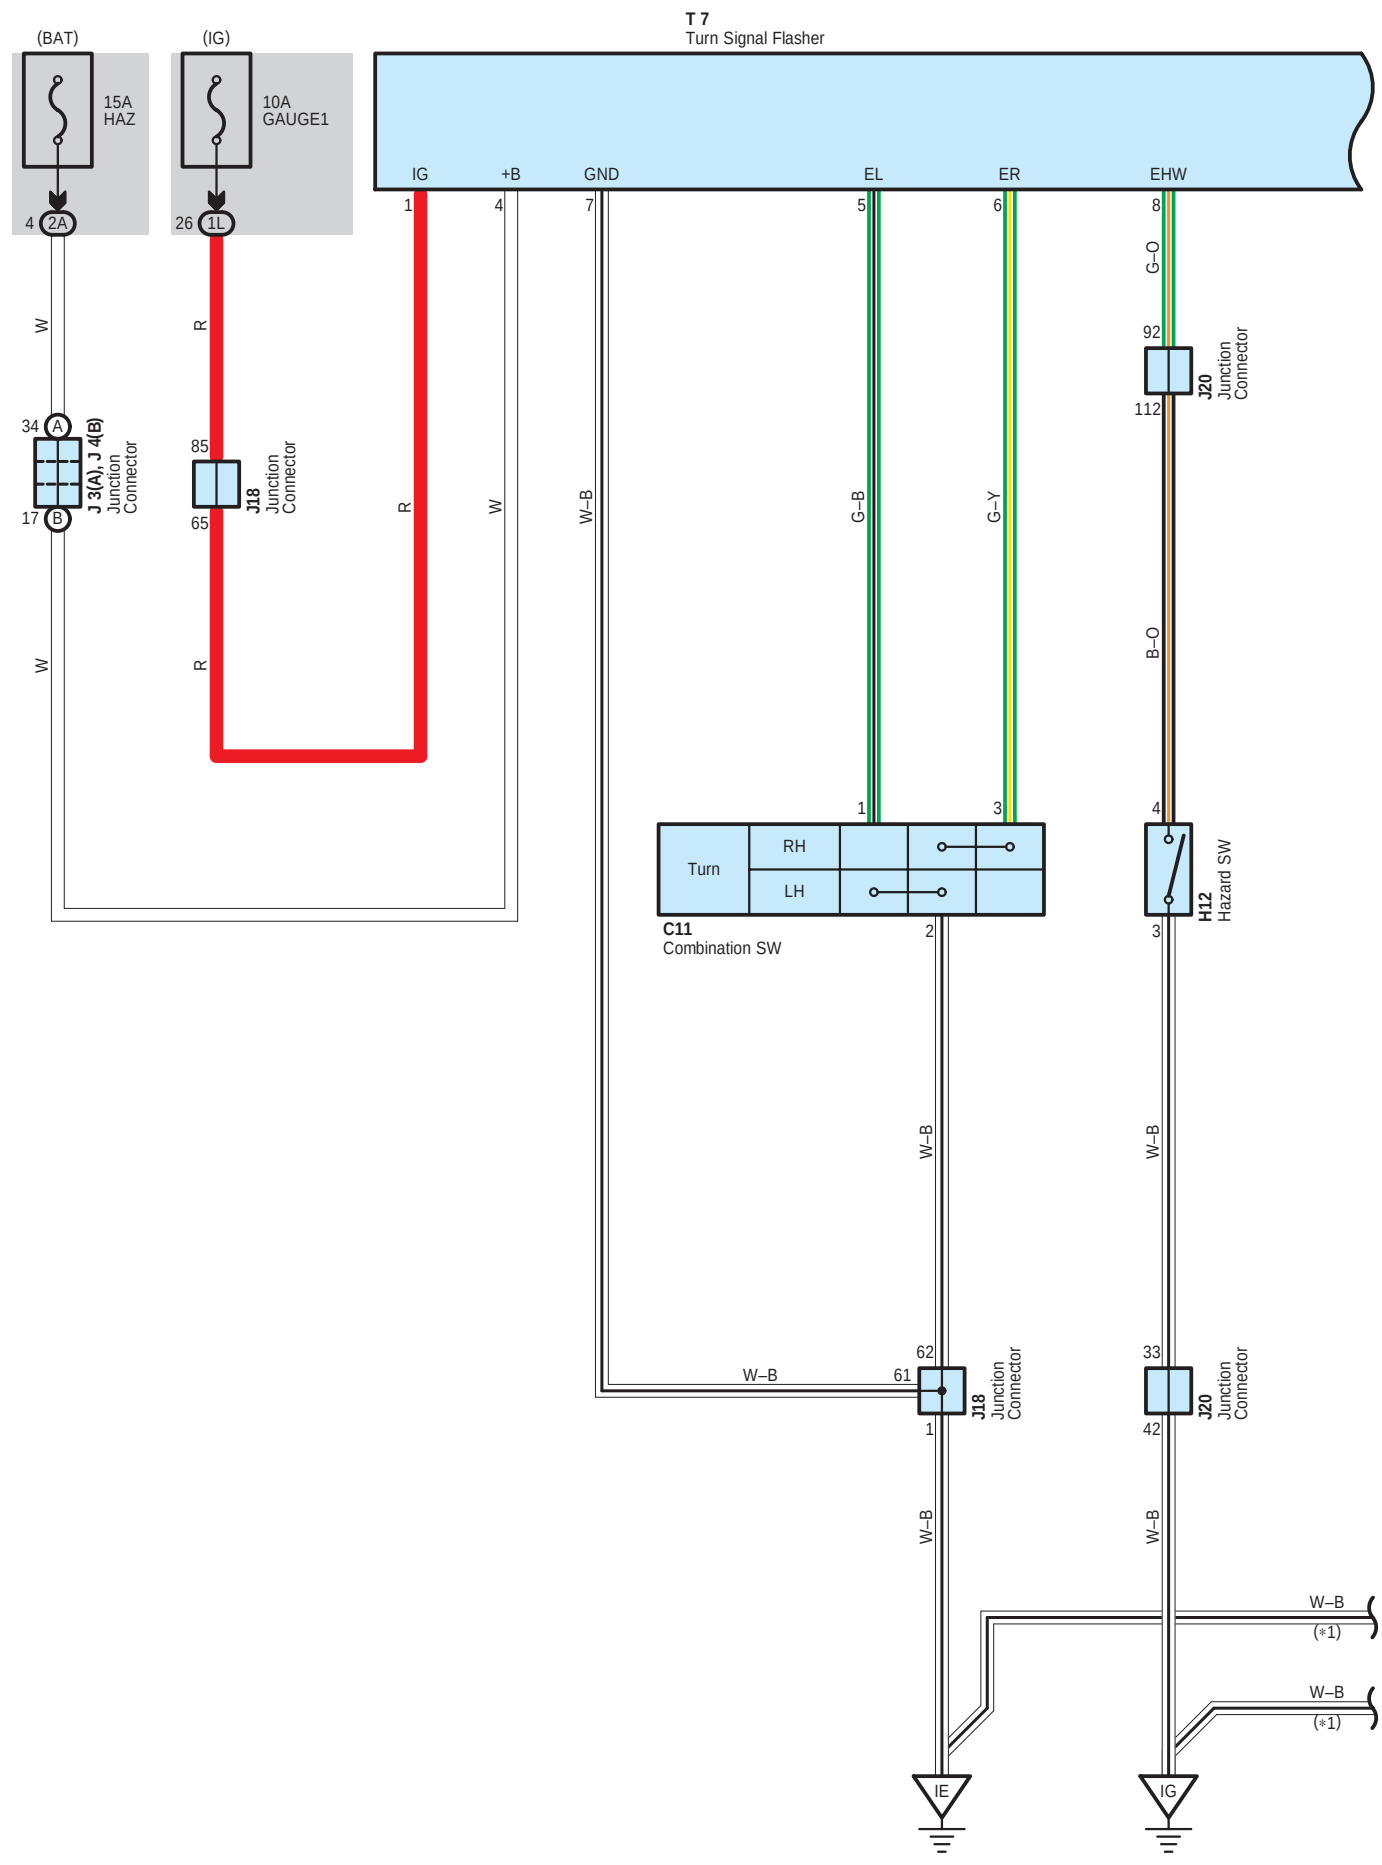

* 1 : w/ Driving Position Memory
 * 2 : w/o Driving Position Memory

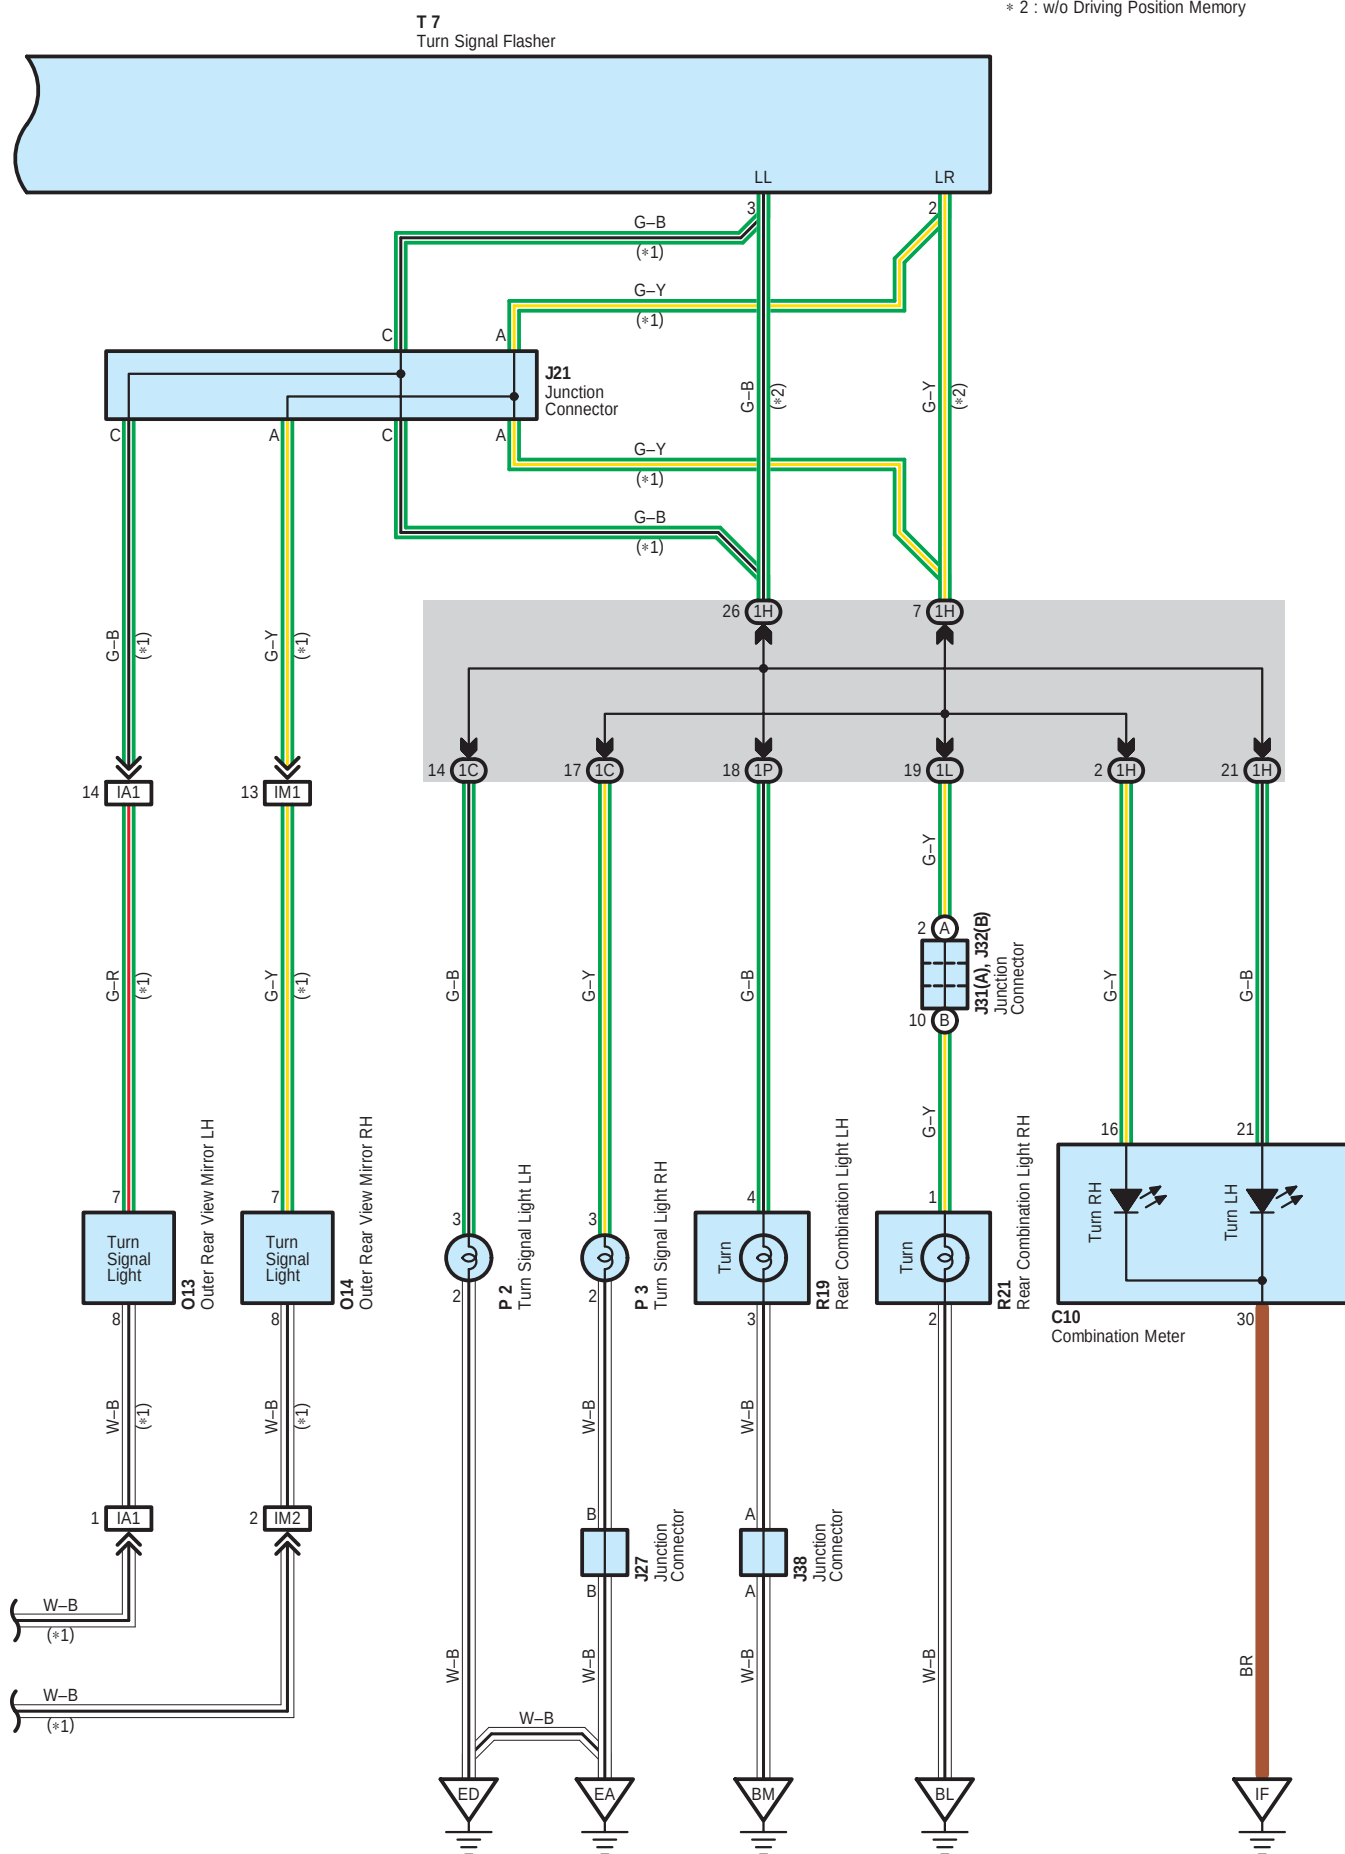

Turn Signal and Hazard Warning Light

: Parts Location

Code	See Page	Code	See Page	Code	See Page
C10	39	J21	40	P2	37
C11	39	J27	40	P3	37
H12	39	J31	A 40	R19	44
J3	A 40	J32	B 40	R21	44
J4	B 40	J38	43	T7	41
J18	40	O13	45		
J20	40	O14	45		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1H	30	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L	31	
1P	31	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)
2A	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	52	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IM1	53	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IM2		

: Ground Points

Code	See Page	Ground Points Location
EA	50	Front Side of the Right Fender Apron
ED	50	Front Side of the Left Fender Apron
IE	52	Left Kick Panel
IF	52	Instrument Panel Brace LH
IG	52	Right Kick Panel
BL	54	Right Rear Quarter Panel
BM	54	Left Rear Quarter Panel

