




Interior Light

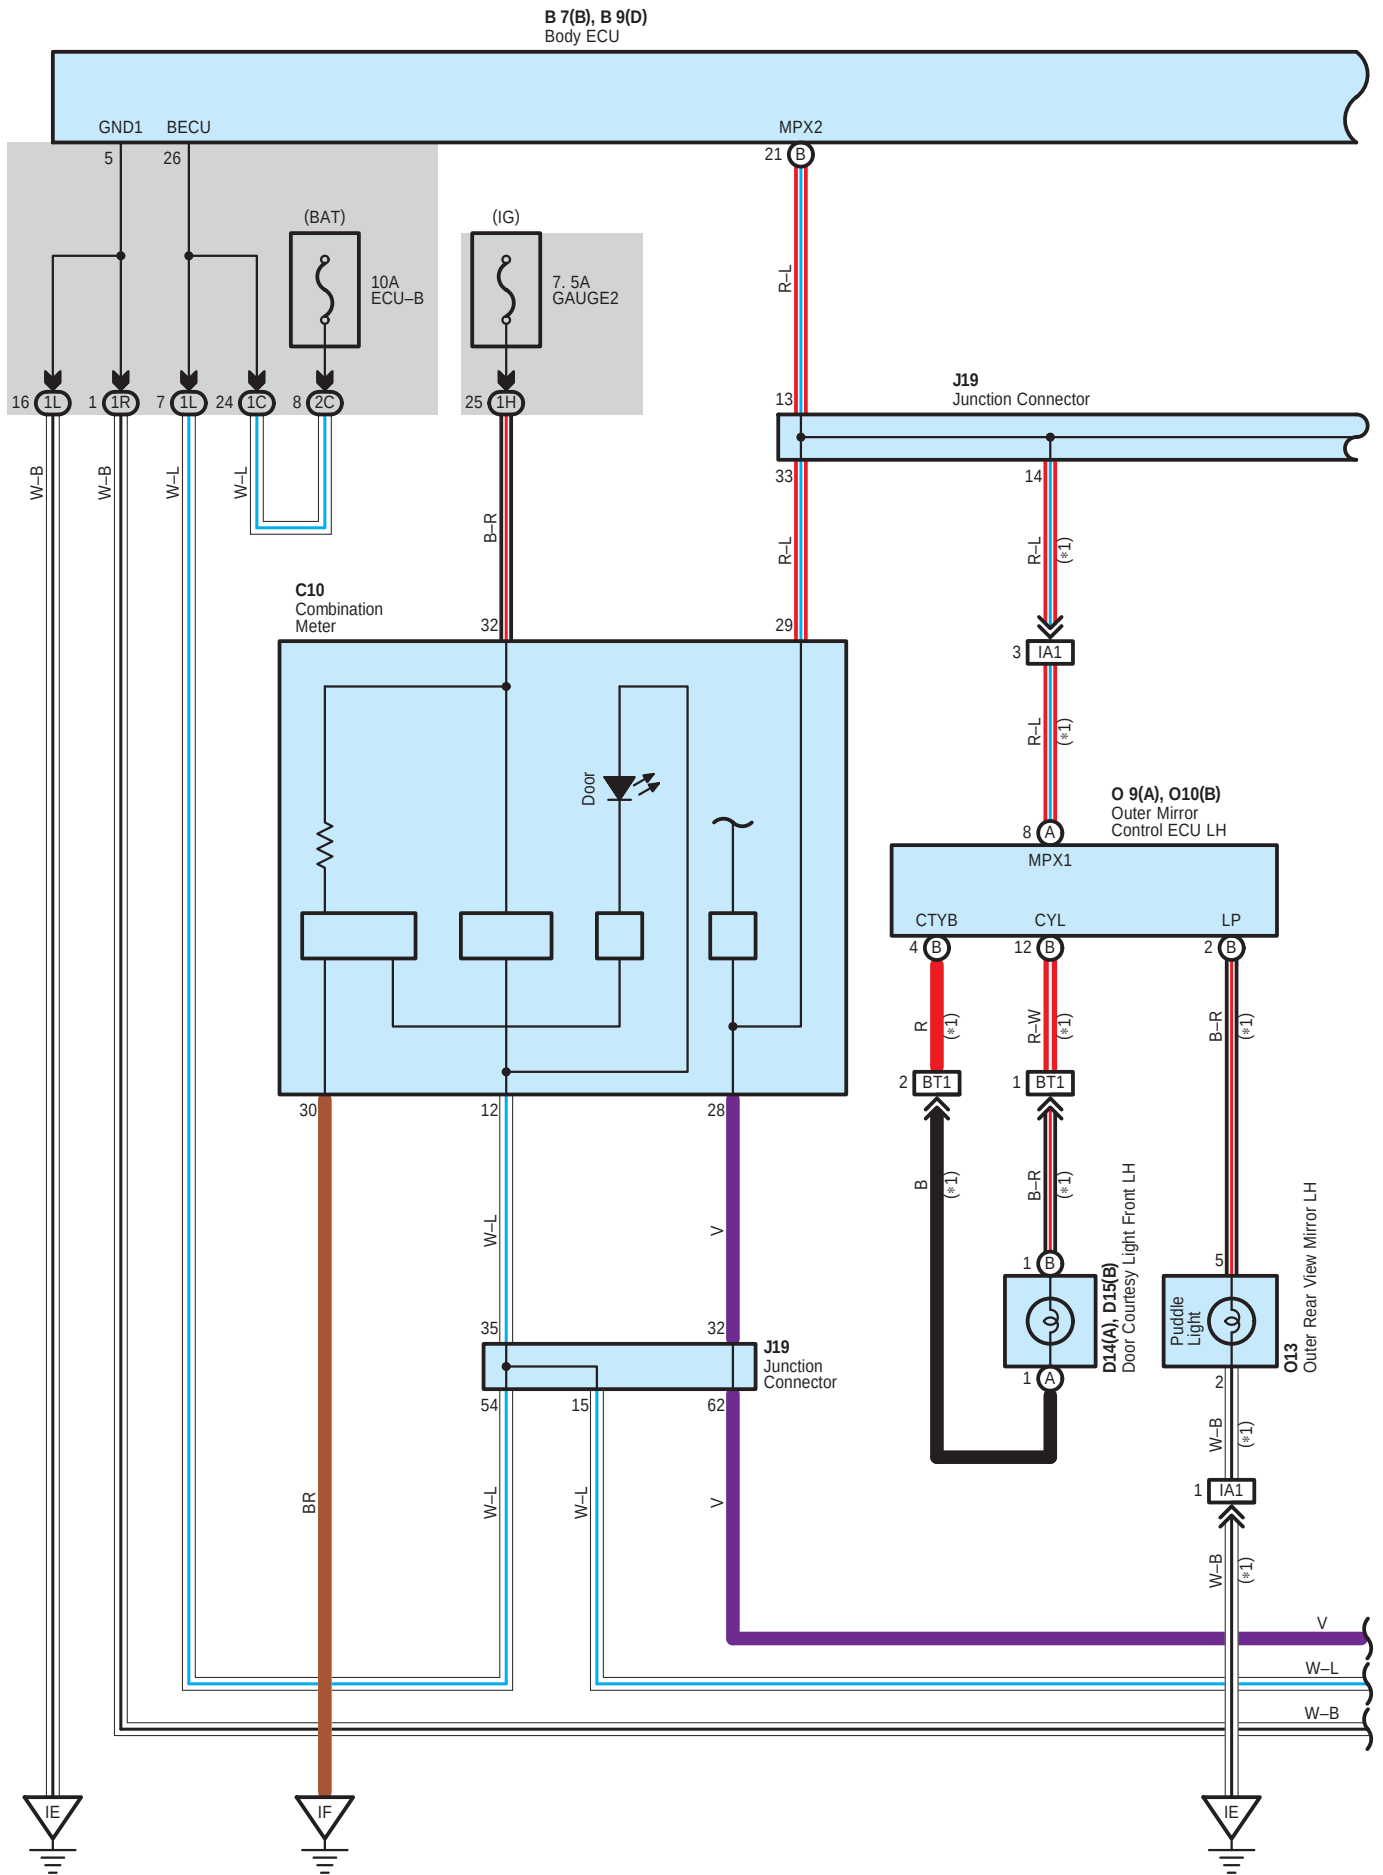


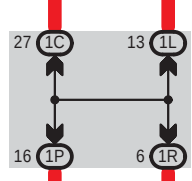

- * 1 : w/ Driving Position Memory
- * 2 : w/o Driving Position Memory


Interior Light

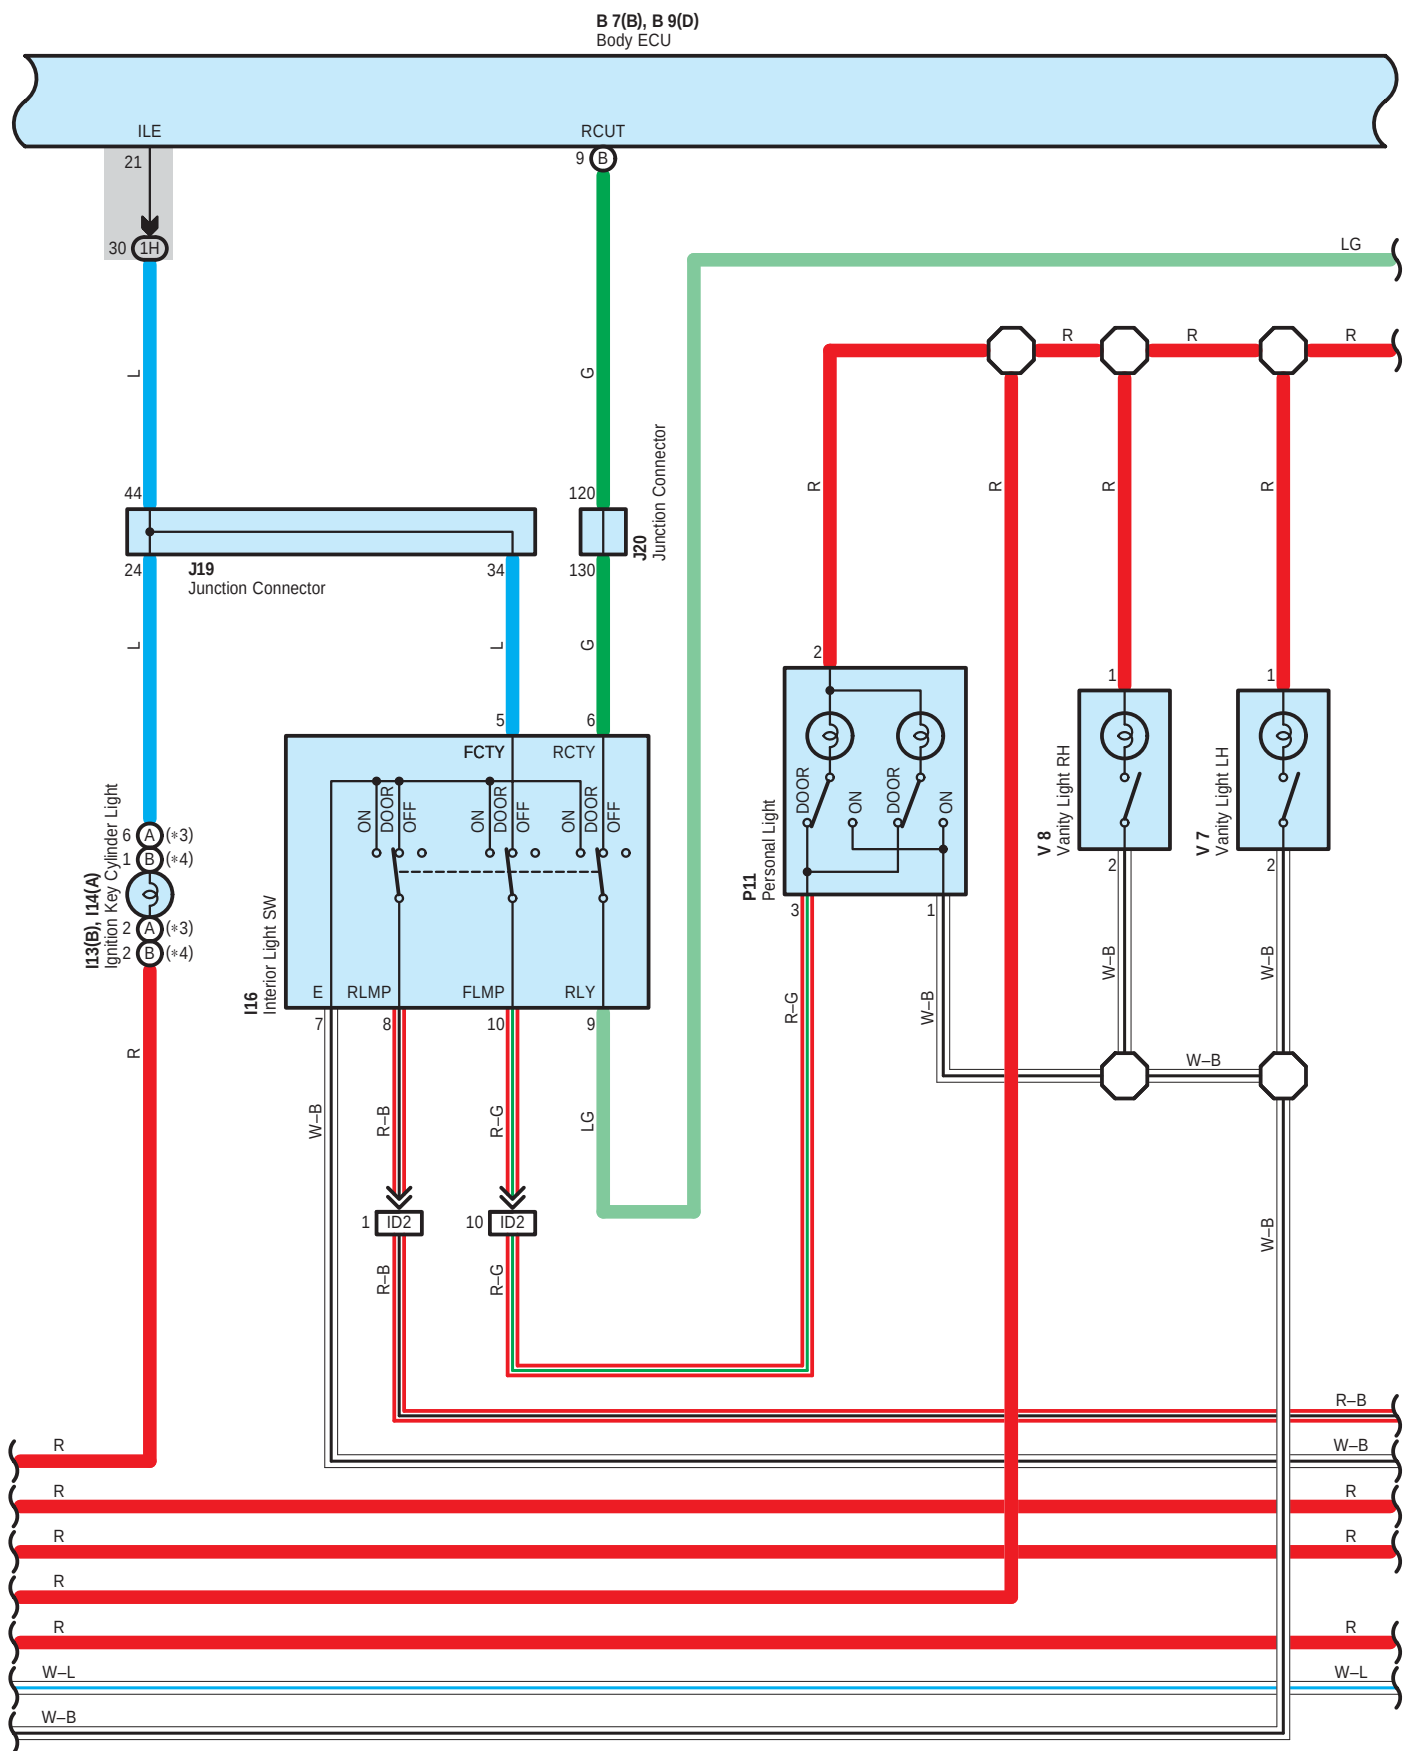

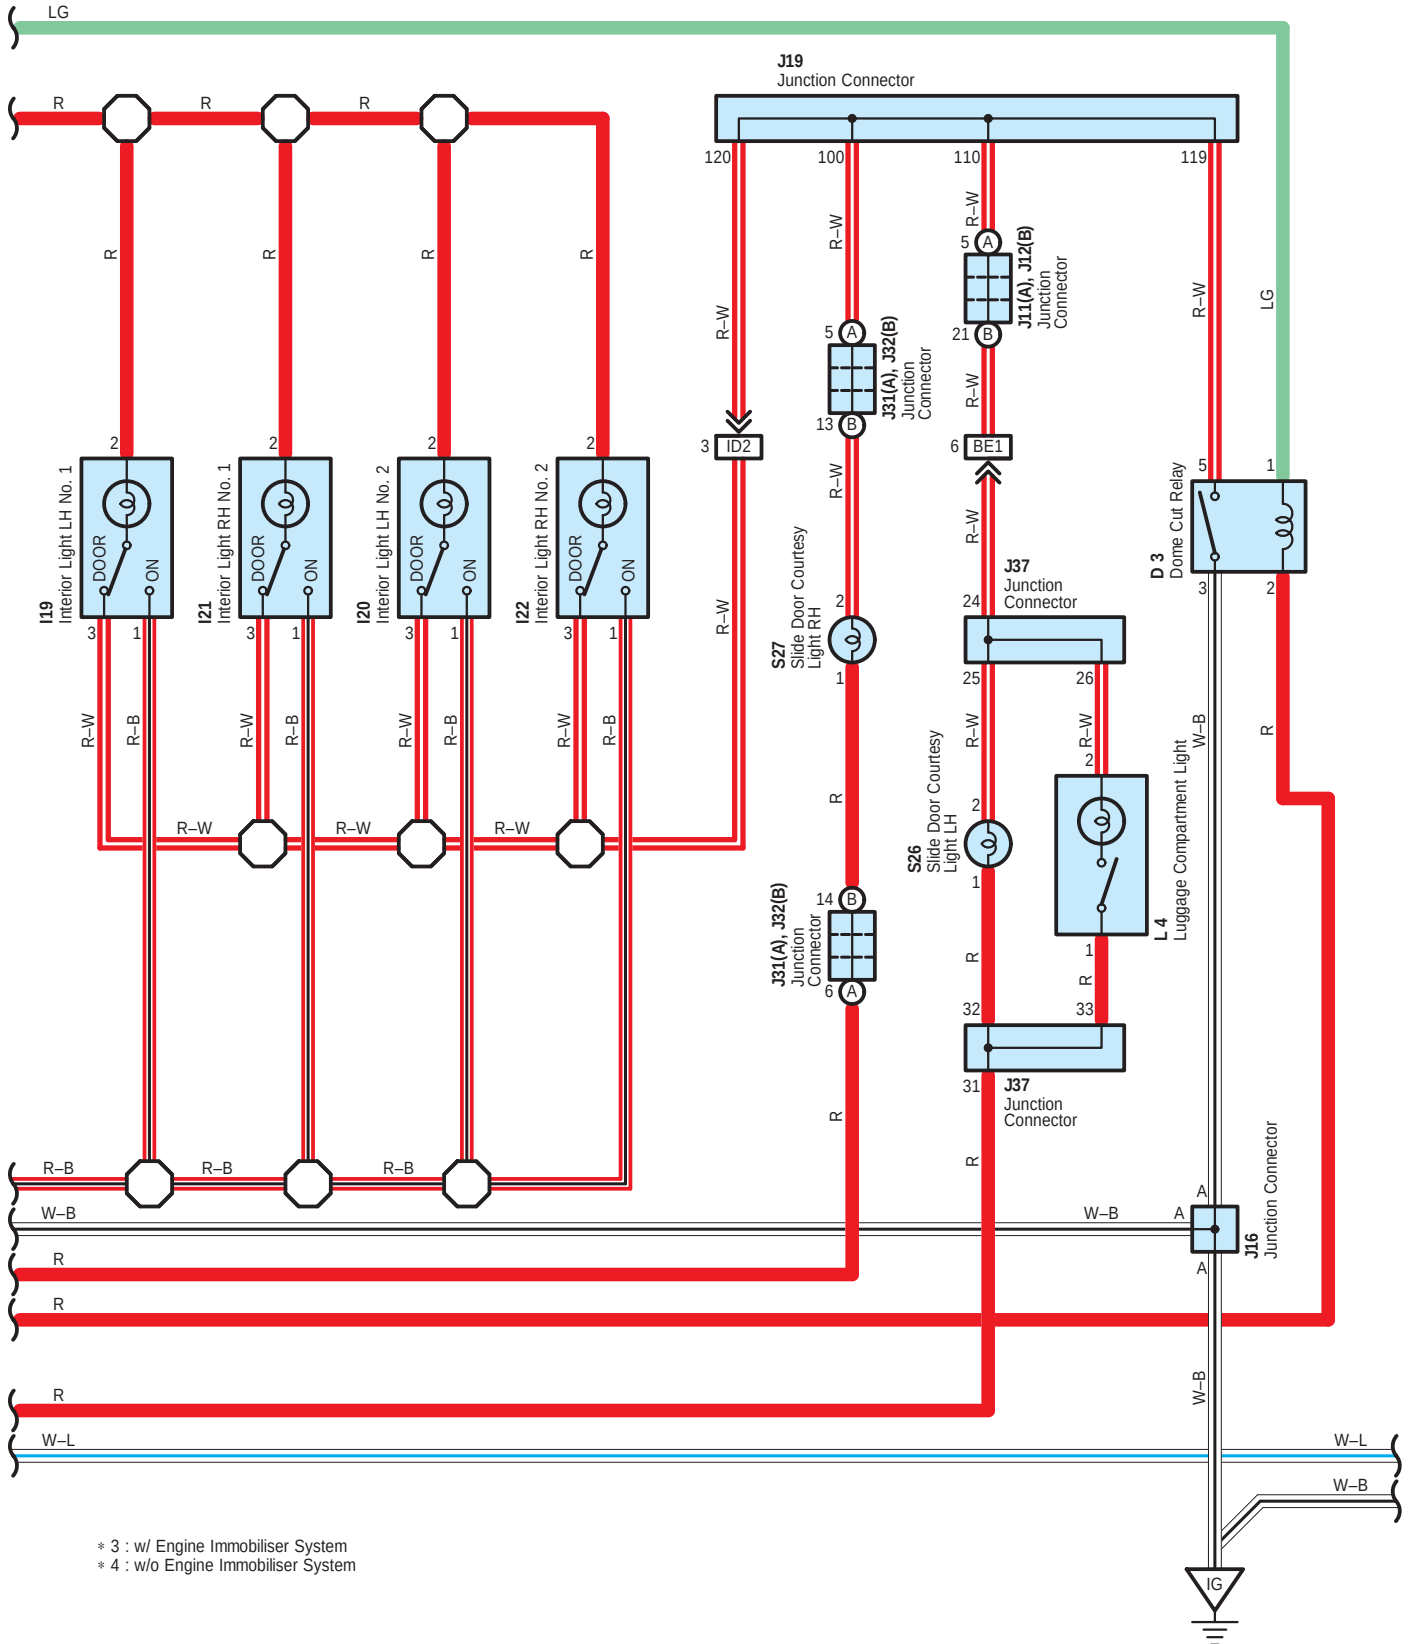


Interior Light

B 7(B), B 9(D)
Body ECU

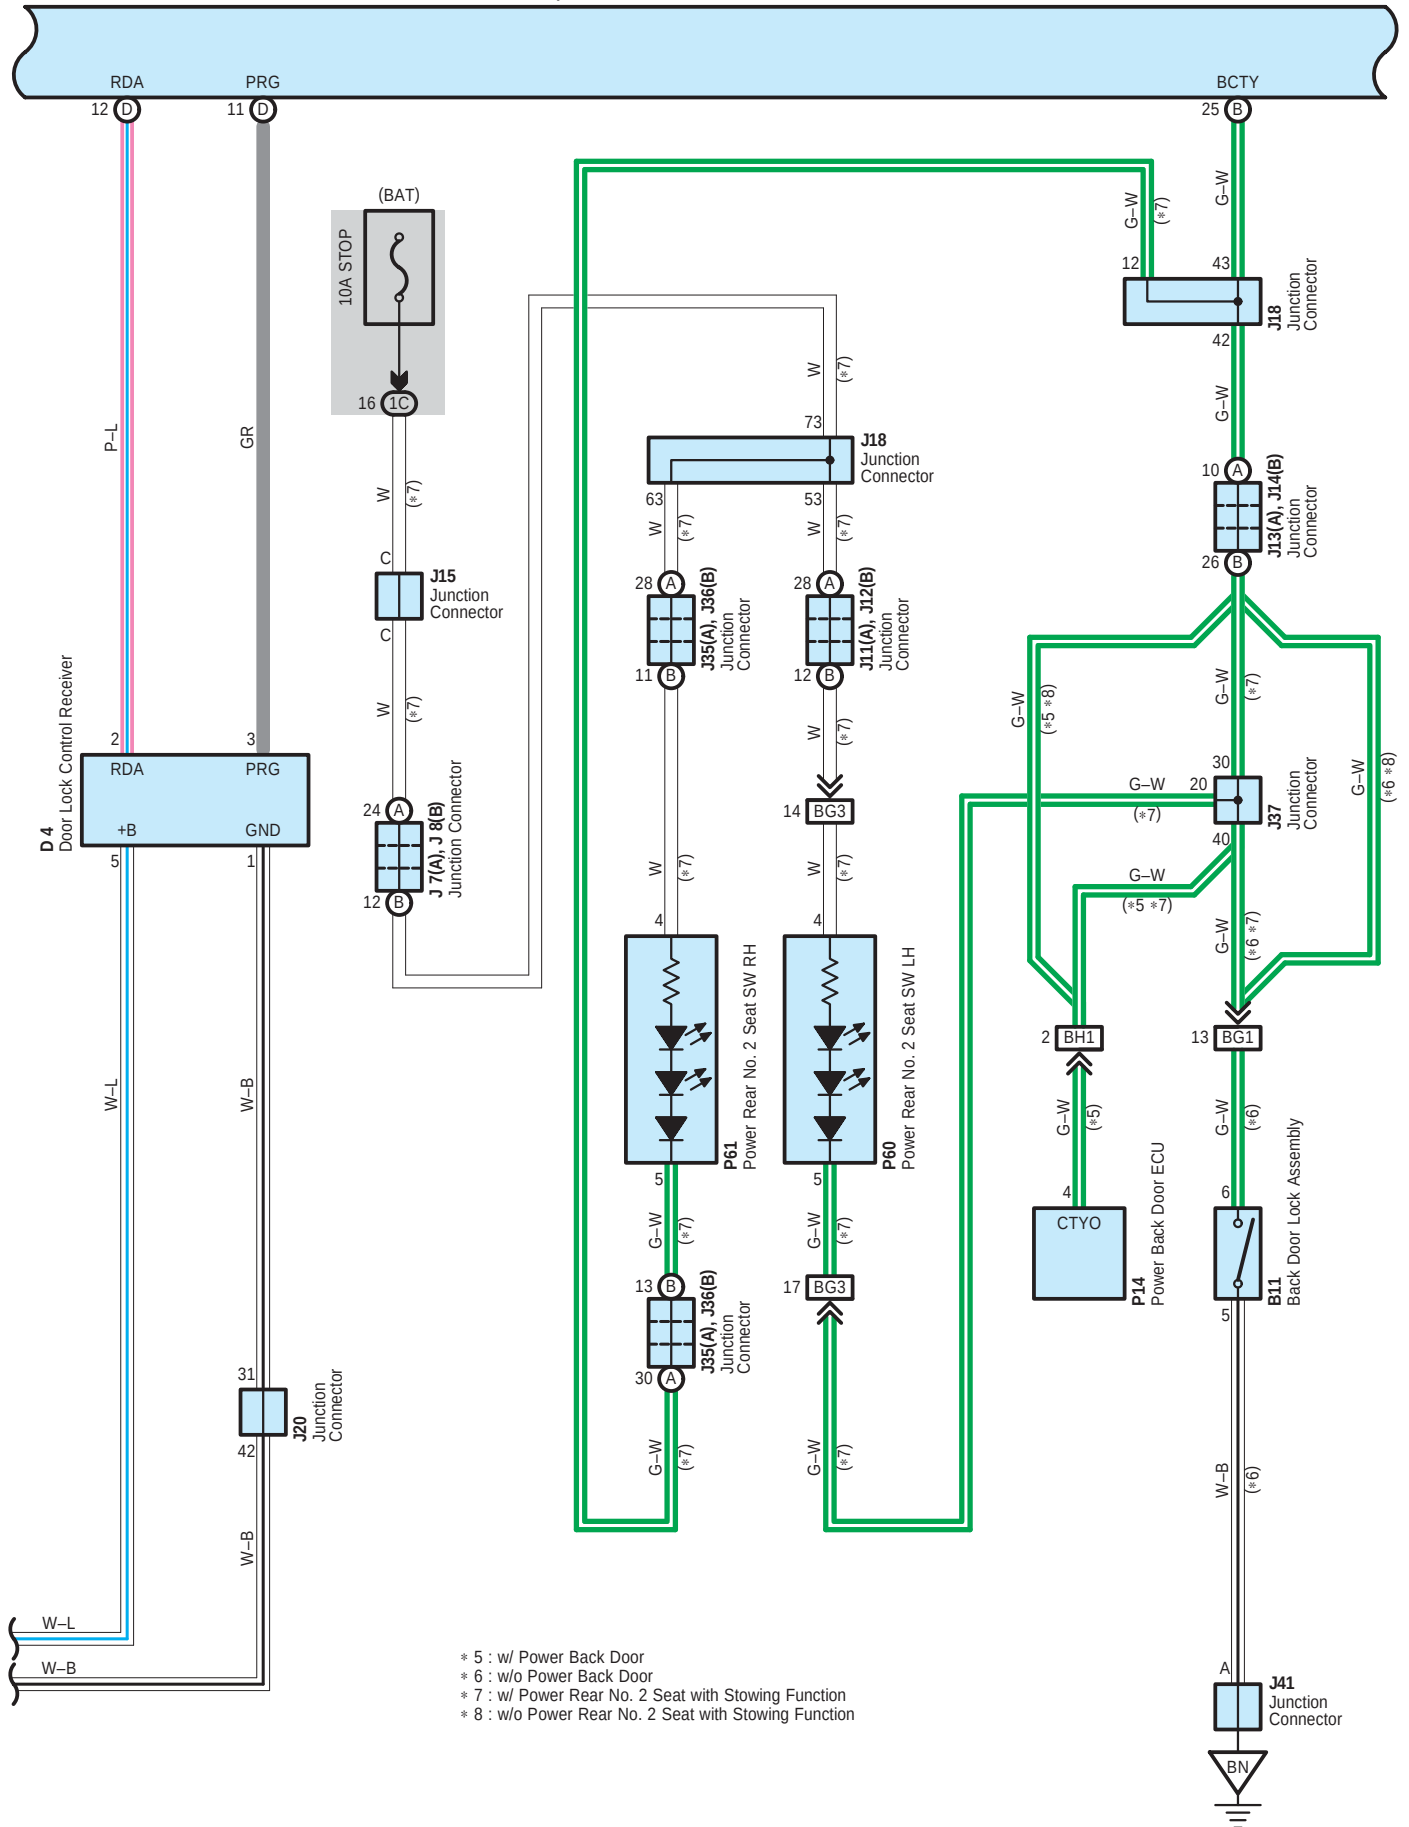

B 7(B), B 9(D)
Body ECU

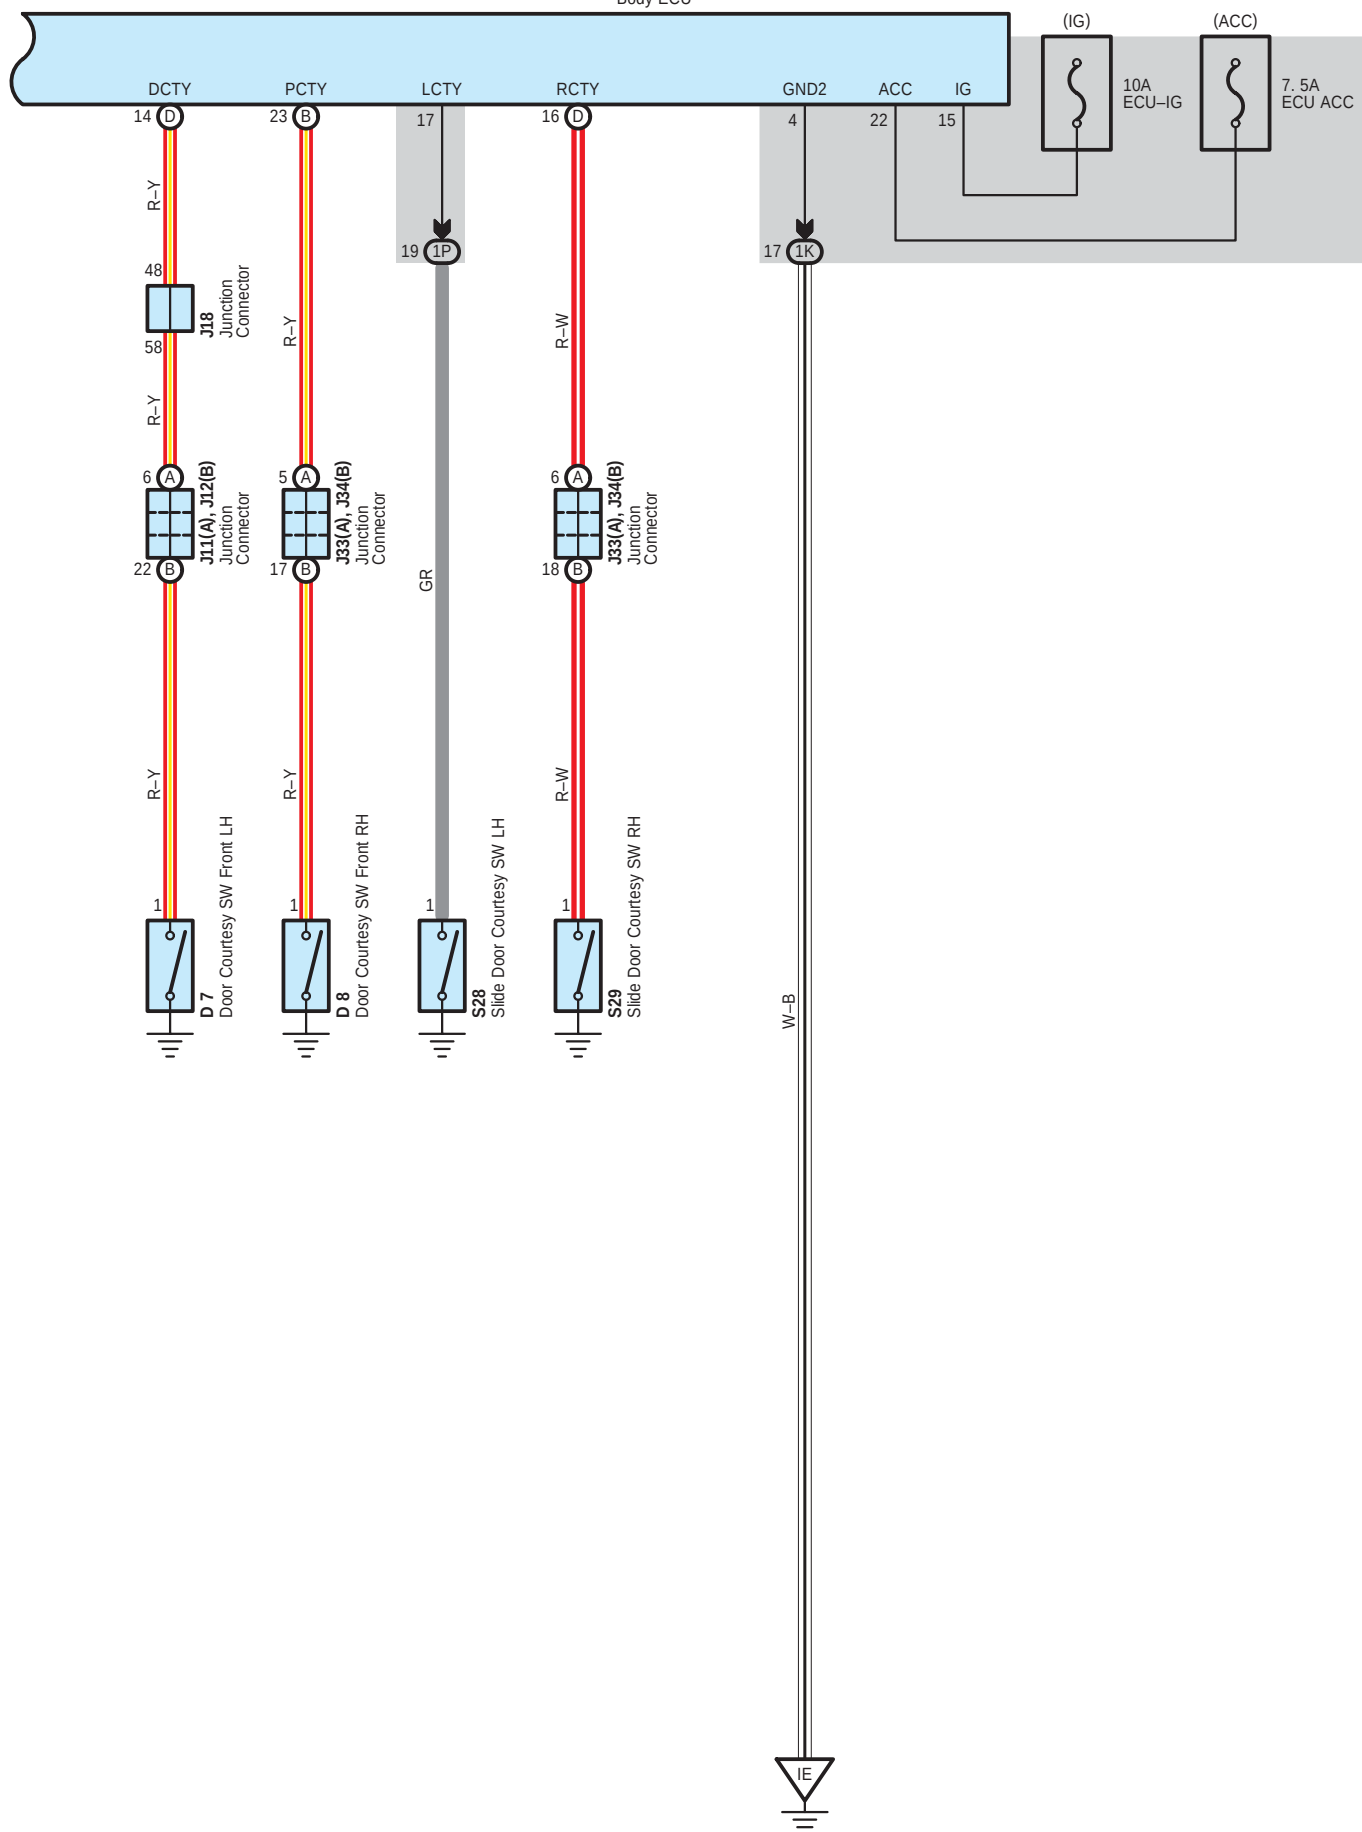

Interior Light

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A9	38	I21	42	J41	43
A21	B 38	I22	42	L4	43
B7	B 38	J7	A 40	O9	A 45
B9	D 38	J8	B 40	O10	B 45
B11	42	J11	A 40	O11	A 45
C10	39	J12	B 40	O12	B 45
D3	39	J13	A 40	O13	45
D4	39	J14	B 40	O14	45
D5	42	J15	40	P11	43
D6	42	J16	40	P14	43
D7	42	J18	40	P60	45
D8	42	J19	40	P61	45
D14	A 42	J20	40	S26	44
D15	B 42	J31	A 40	S27	44
E5	39	J32	B 40	S28	44
I13	B 39	J33	A 40	S29	44
I14	A 39	J34	B 40	V7	45
I16	39	J35	A 40	V8	45
I19	42	J36	B 40		
I20	42	J37	43		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1H	30	
1K	31	
1L		
1P	31	
1R	31	Roof Wire and Driver Side J/B (Lower Finish Panel)
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	52	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
ID2	52	Roof Wire and Instrument Panel Wire (Near the Driver Side J/B)
IM1	53	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IM2		
BE1	54	Floor No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)
BG1	55	Back Door No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)
BH1	55	Floor No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)
BT1	55	Front Door LH Wire and Courtesy Lamp Switch Wire Assembly (Inside Front Door Trim LH)

: Ground Points

Code	See Page	Ground Points Location
IE	52	Left Kick Panel
IF	52	Instrument Panel Brace LH
IG	52	Right Kick Panel
BN	54	Left Side of the Back Door

