





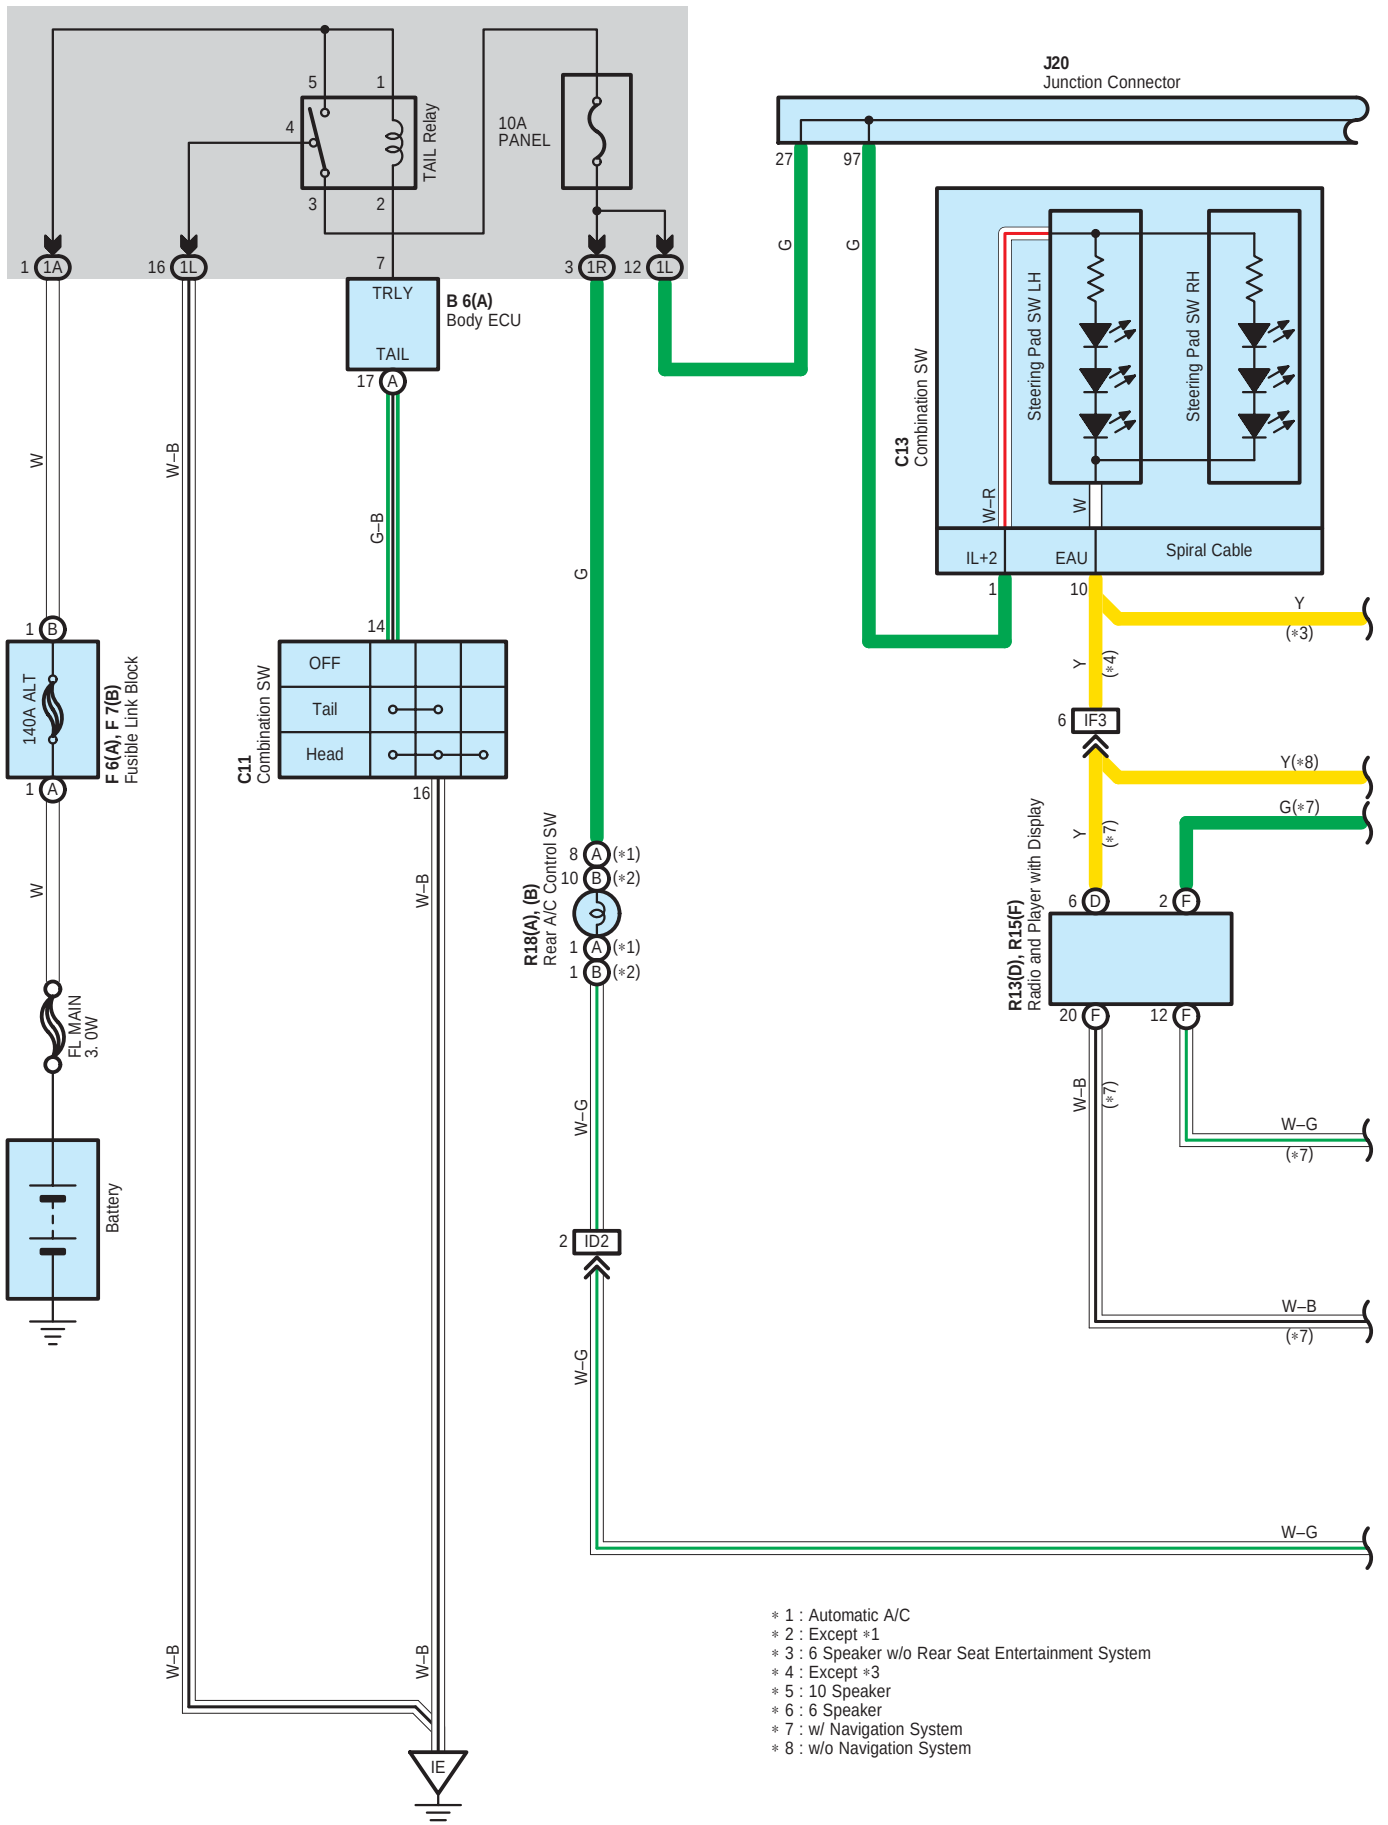

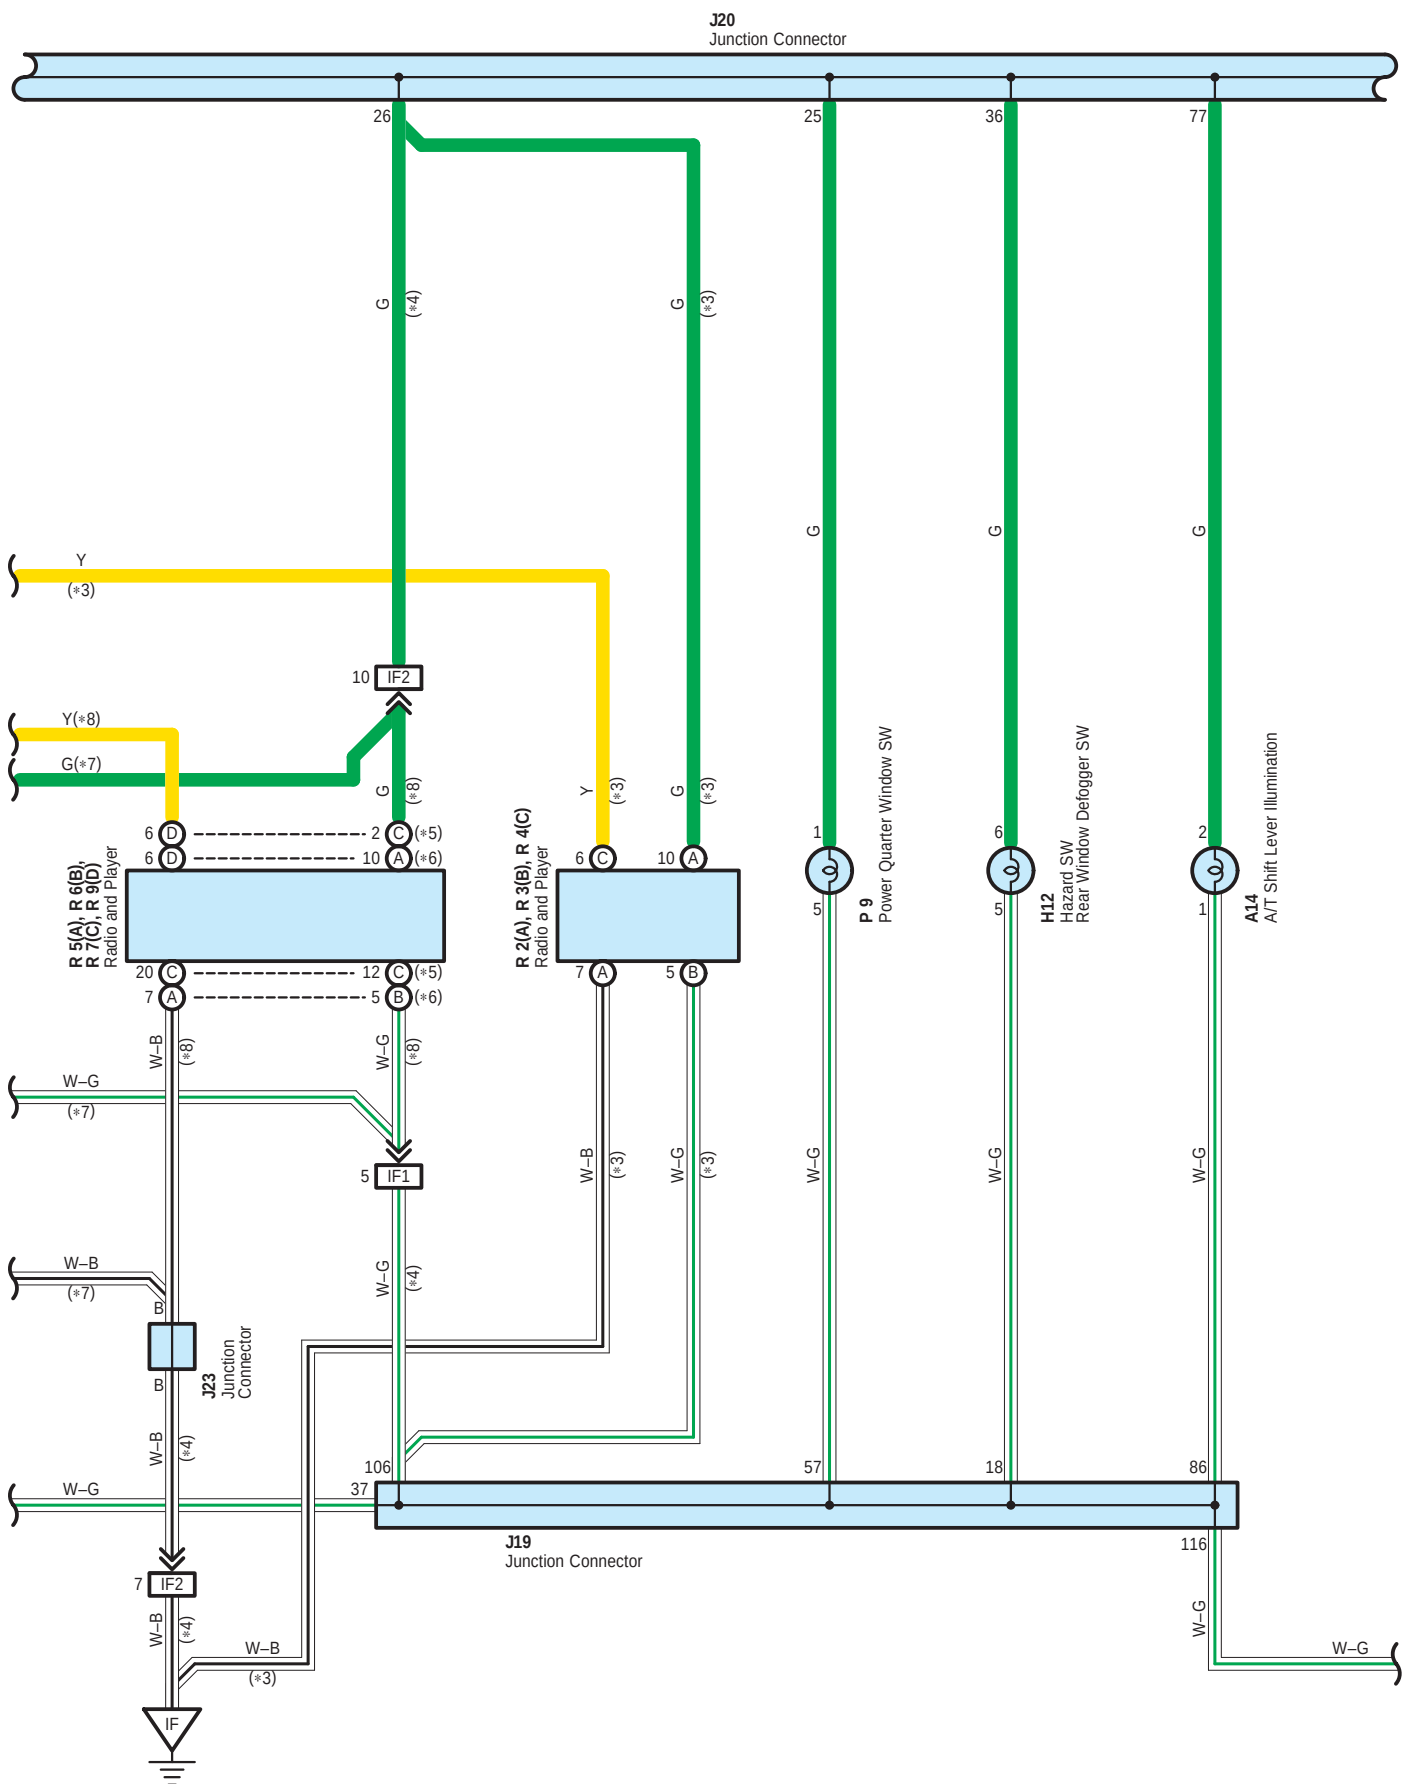

* 9 : w/ Power Back Door
*10 : Optitron Meter
*11 : Analog Meter

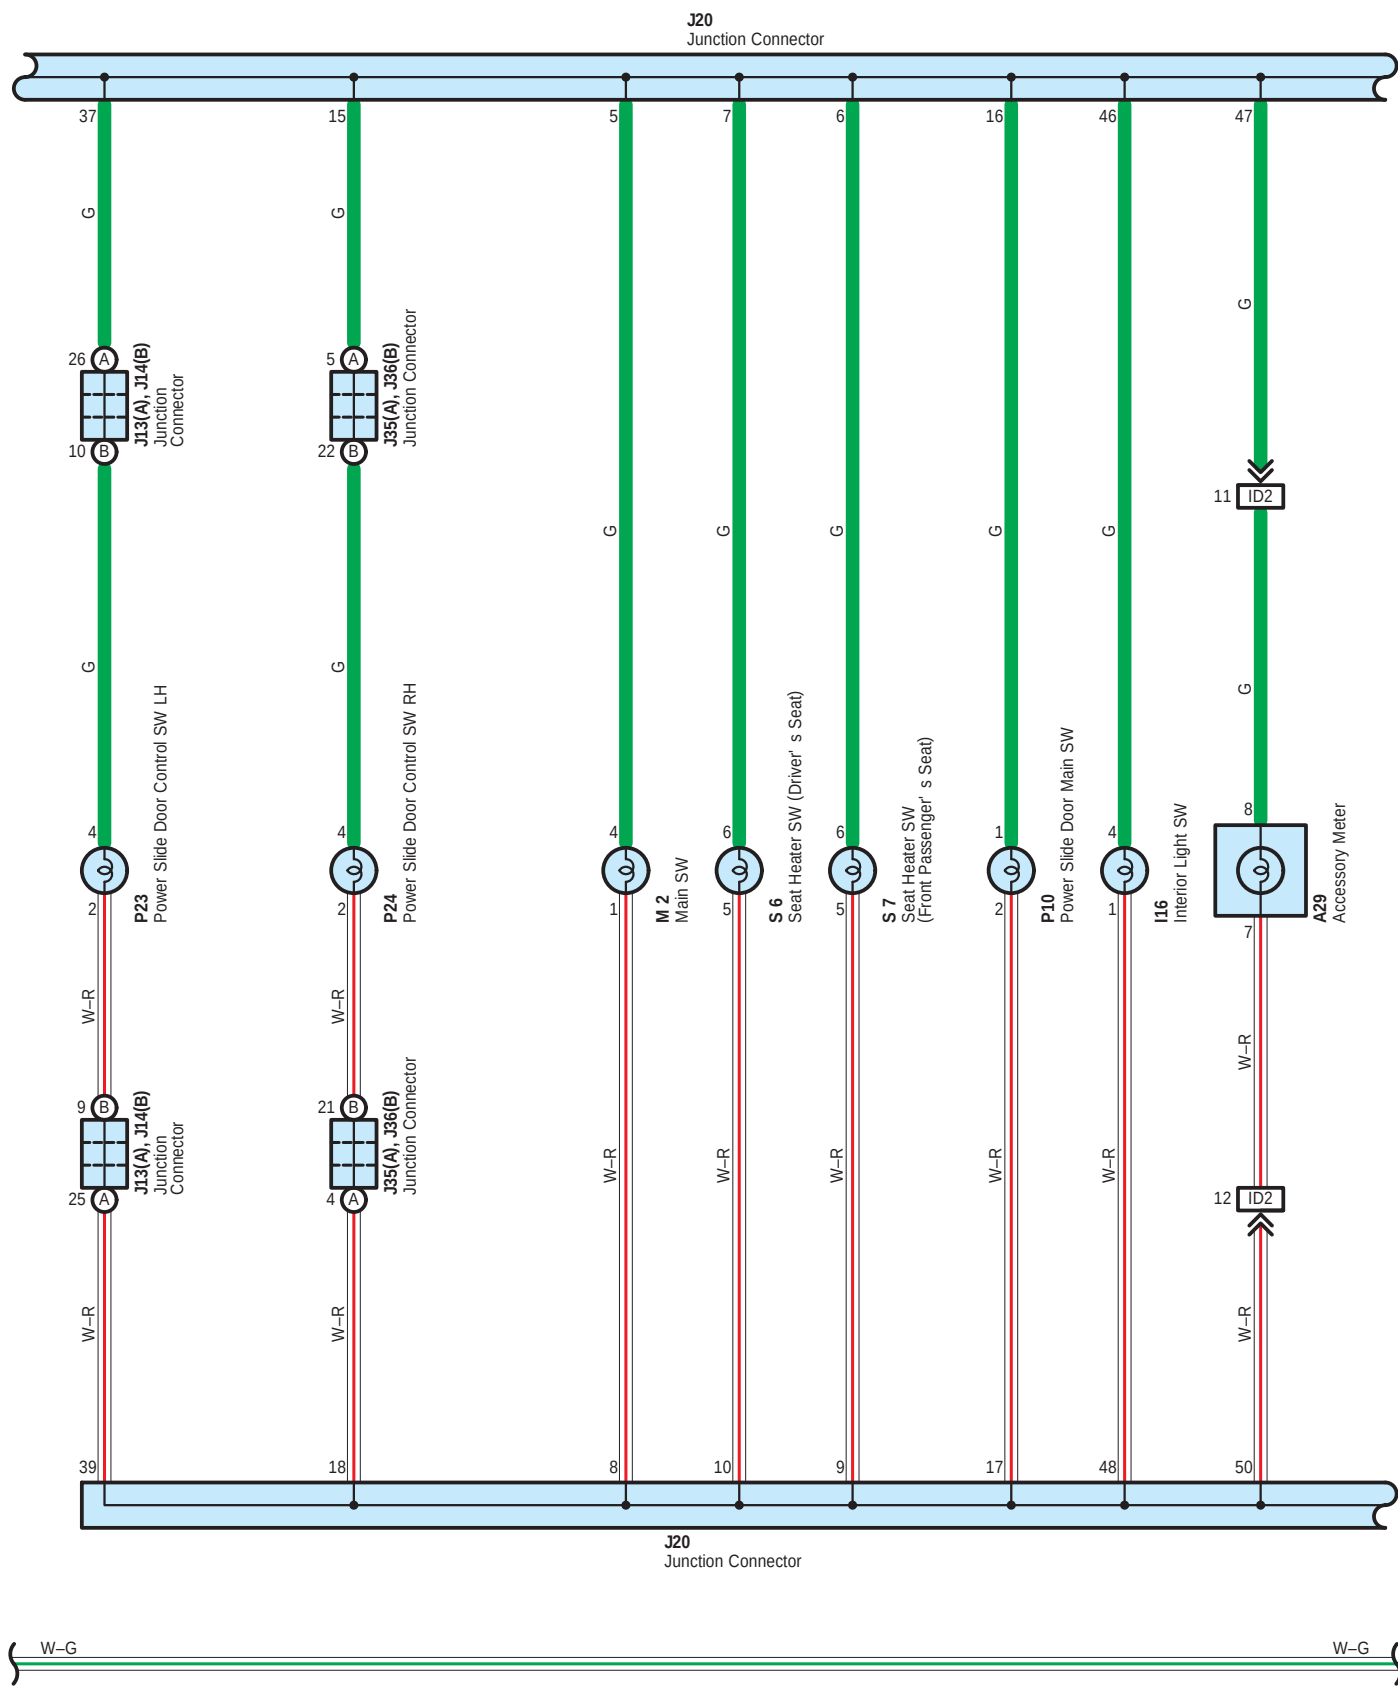

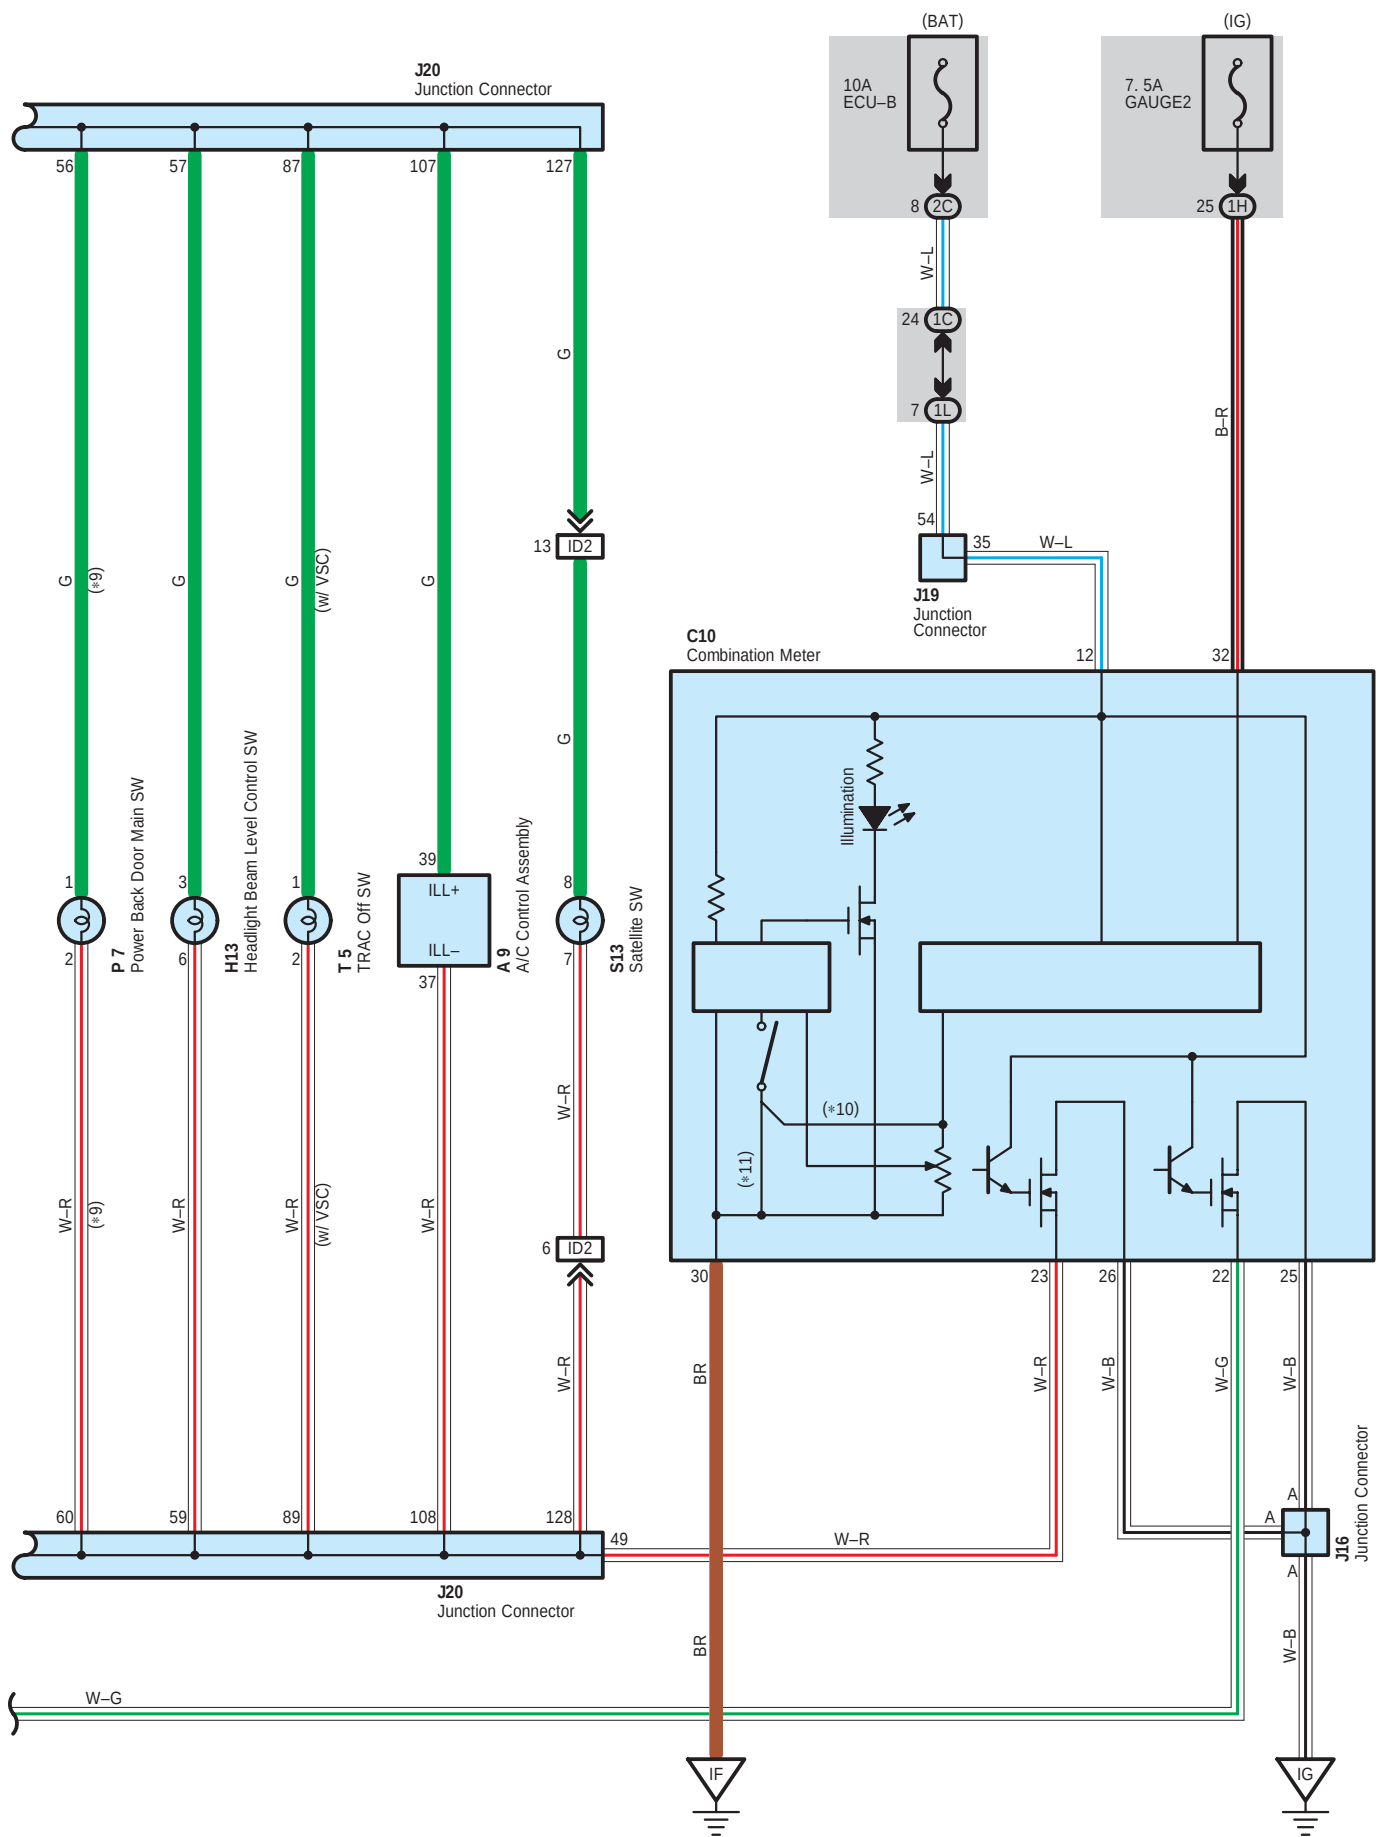

Illumination

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A9	38	J16	40	R4	C 41
A14	38	J19	40	R5	A 41
A29	42	J20	40	R6	B 41
B6	A 38	J23	40	R7	C 41
C10	39	J35	A 40	R9	D 41
C11	39	J36	B 40	R13	D 41
C13	39	M2	40	R15	F 41
F6	A 36	P7	41	R18	A 44
F7	B 36	P9	41		B 44
H12	39	P10	41	S6	41
H13	39	P23	43	S7	41
I16	39	P24	43	S13	44
J13	A 40	R2	A 41	T5	41
J14	B 40	R3	B 41		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1C		
1H	30	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L	31	
1R	31	Roof Wire and Driver Side J/B (Lower Finish Panel)
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID2	52	Roof Wire and Instrument Panel Wire (Near the Driver Side J/B)
IF1	52	Instrument Panel Wire and Instrument Panel No.2 Wire (Instrument Panel Center)
IF2		
IF3		

: Ground Points

Code	See Page	Ground Points Location
IE	52	Left Kick Panel
IF	52	Instrument Panel Brace LH
IG	52	Right Kick Panel

