



 : Parts Location

Code	See Page	Code		See Page	Code		See Page
H15	42	J31	A	40	R19		44
J2	37	J32	B	40	R21		44
J15	40	J37		43	S3	A	37
J18	40	J38		43	S12		41
J28	40	J41		43			

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
6	28	R/B No.6 (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1L	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1P	31	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IK1	53	Engine Room Main Wire and Instrument Panel Wire (Right Kick Panel)
BG1	55	Back Door No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)

 : Ground Points

Code	See Page	Ground Points Location
BL	54	Right Rear Quarter Panel
BM	54	Left Rear Quarter Panel
BN	54	Left Side of the Back Door