



Key Reminder

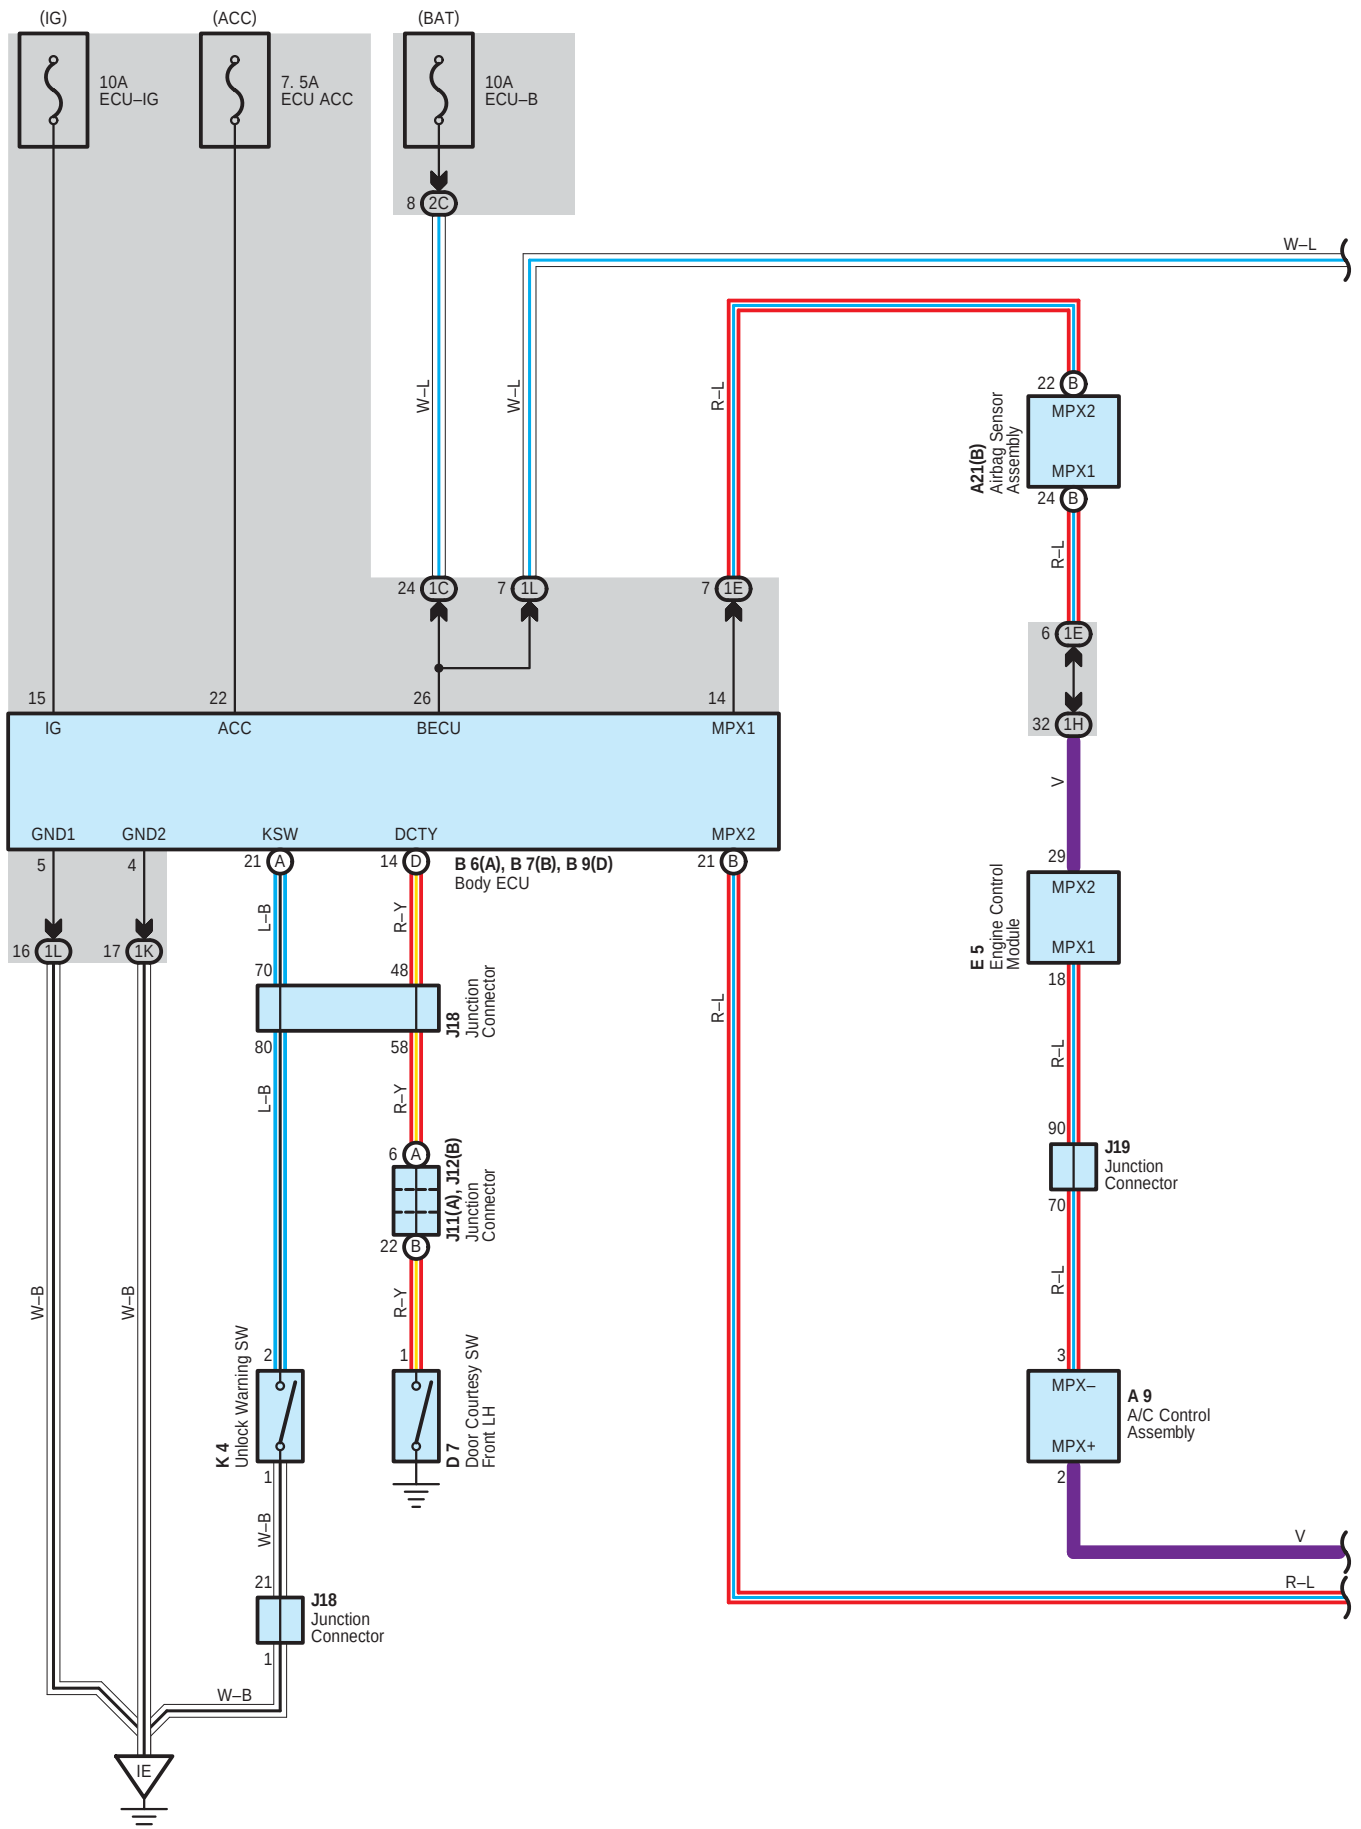

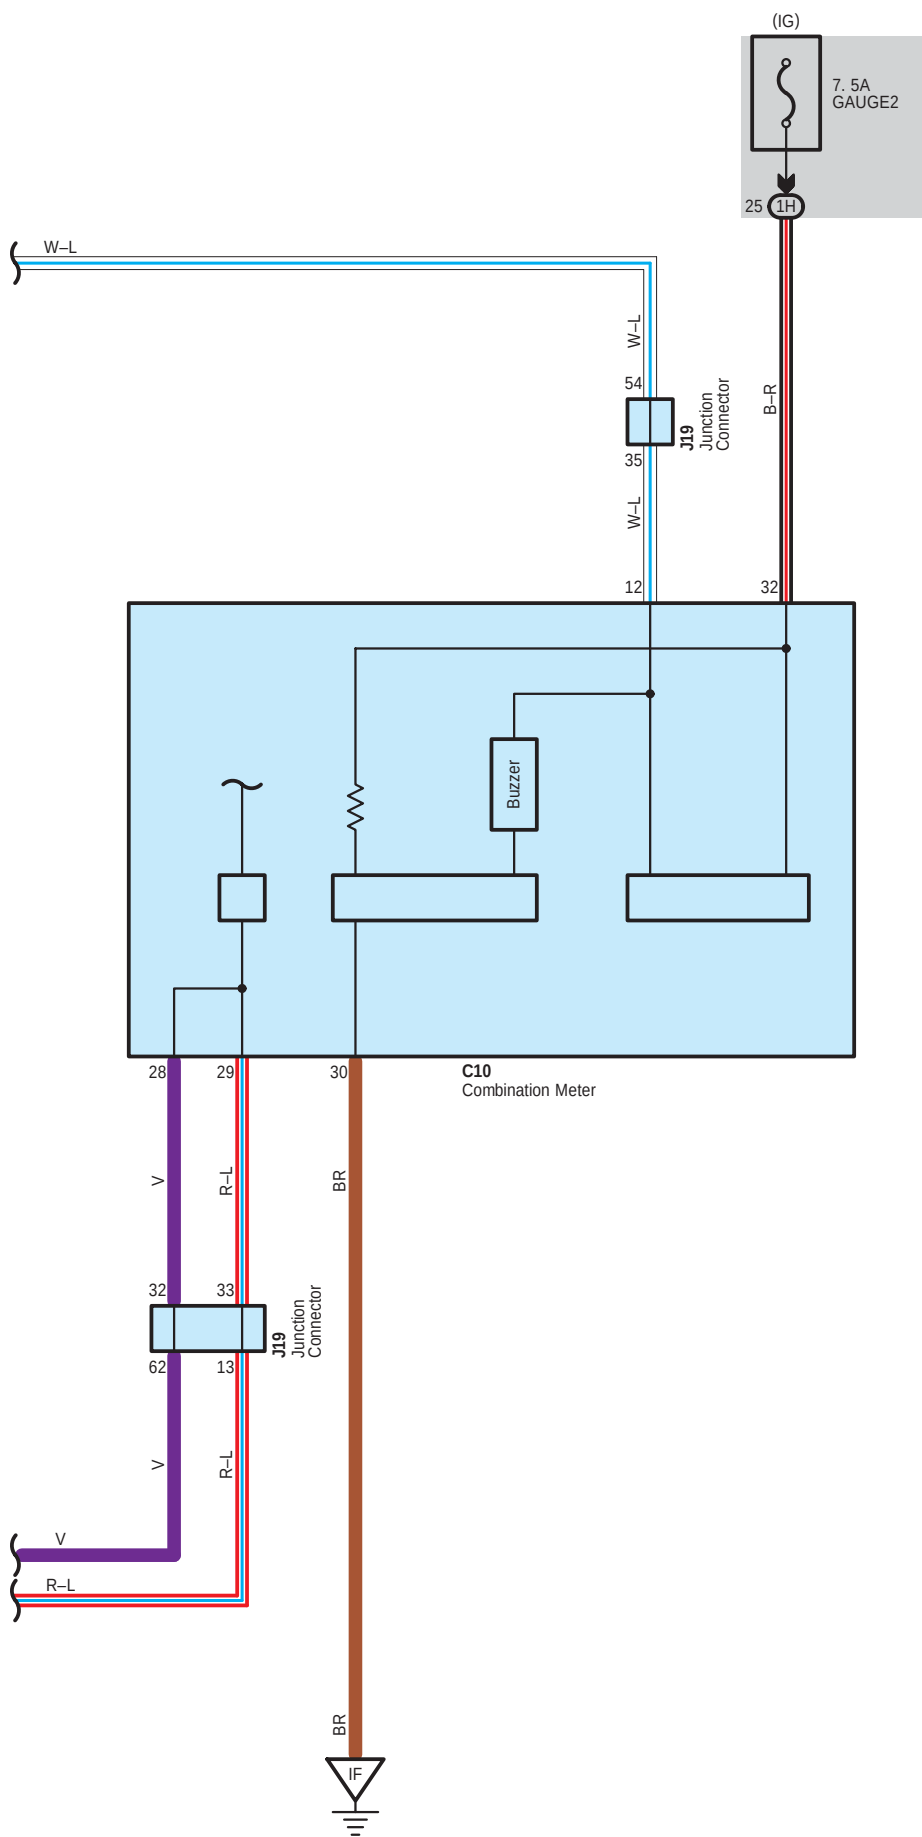

Key Reminder

: Parts Location

Code		See Page	Code		See Page	Code		See Page
A9		38	C10		39	J18		40
A21	B	38	D7		42	J19		40
B6	A	38	E5		39	K4		40
B7	B	38	J11	A	40			
B9	D	38	J12	B	40			

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1H	30	
1K	31	
1L		
2C	24	

: Ground Points

Code	See Page	Ground Points Location
IE	52	Left Kick Panel
IF	52	Instrument Panel Brace LH

