




Seat Belt Warning

- * 1 : w/ Side Airbag
- * 2 : w/o Side Airbag
- * 3 : w/ Power Seat
- * 4 : w/o Power Seat

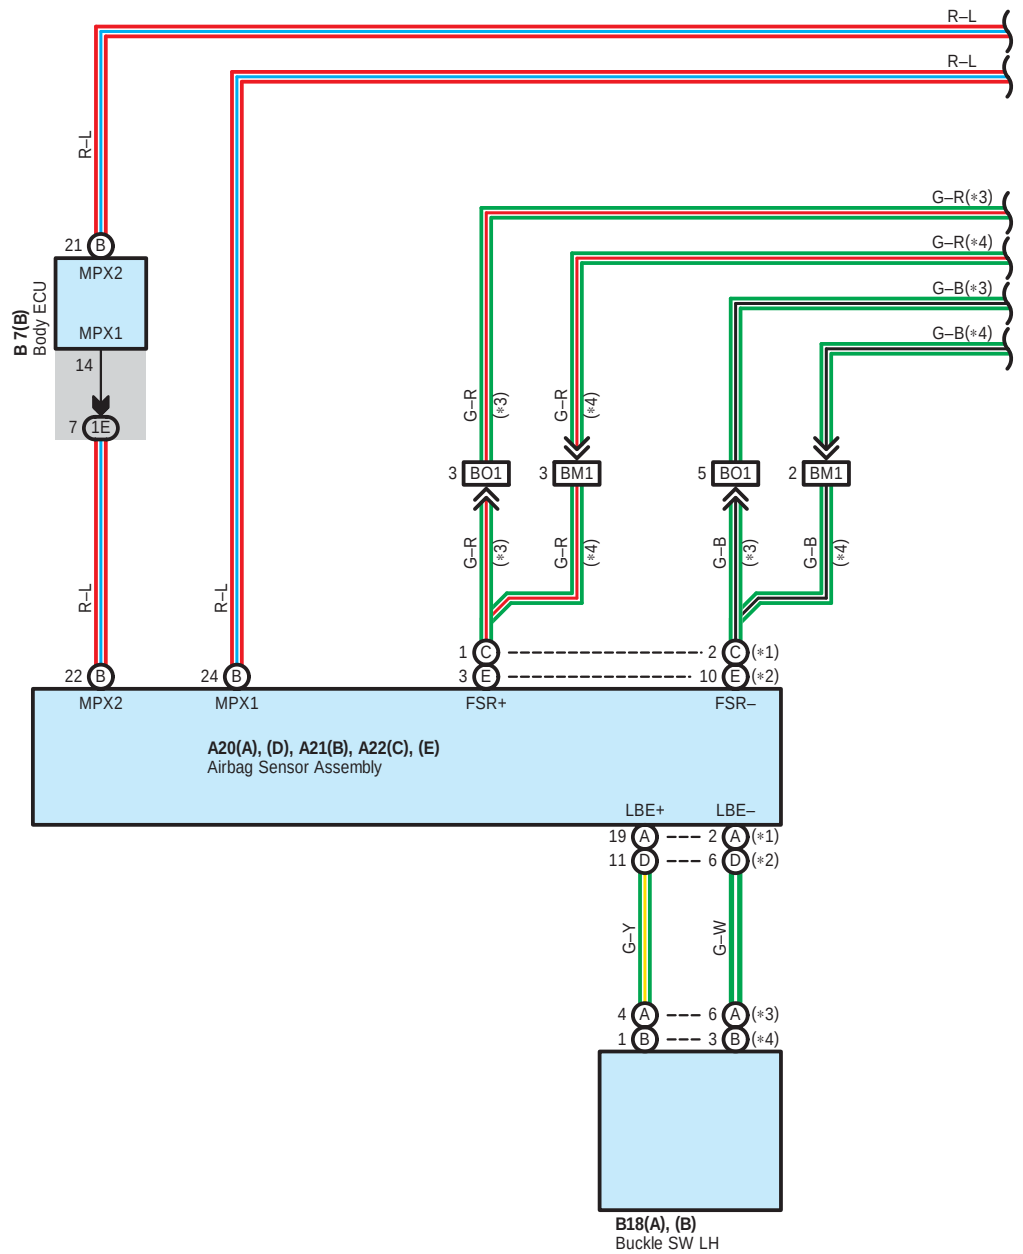

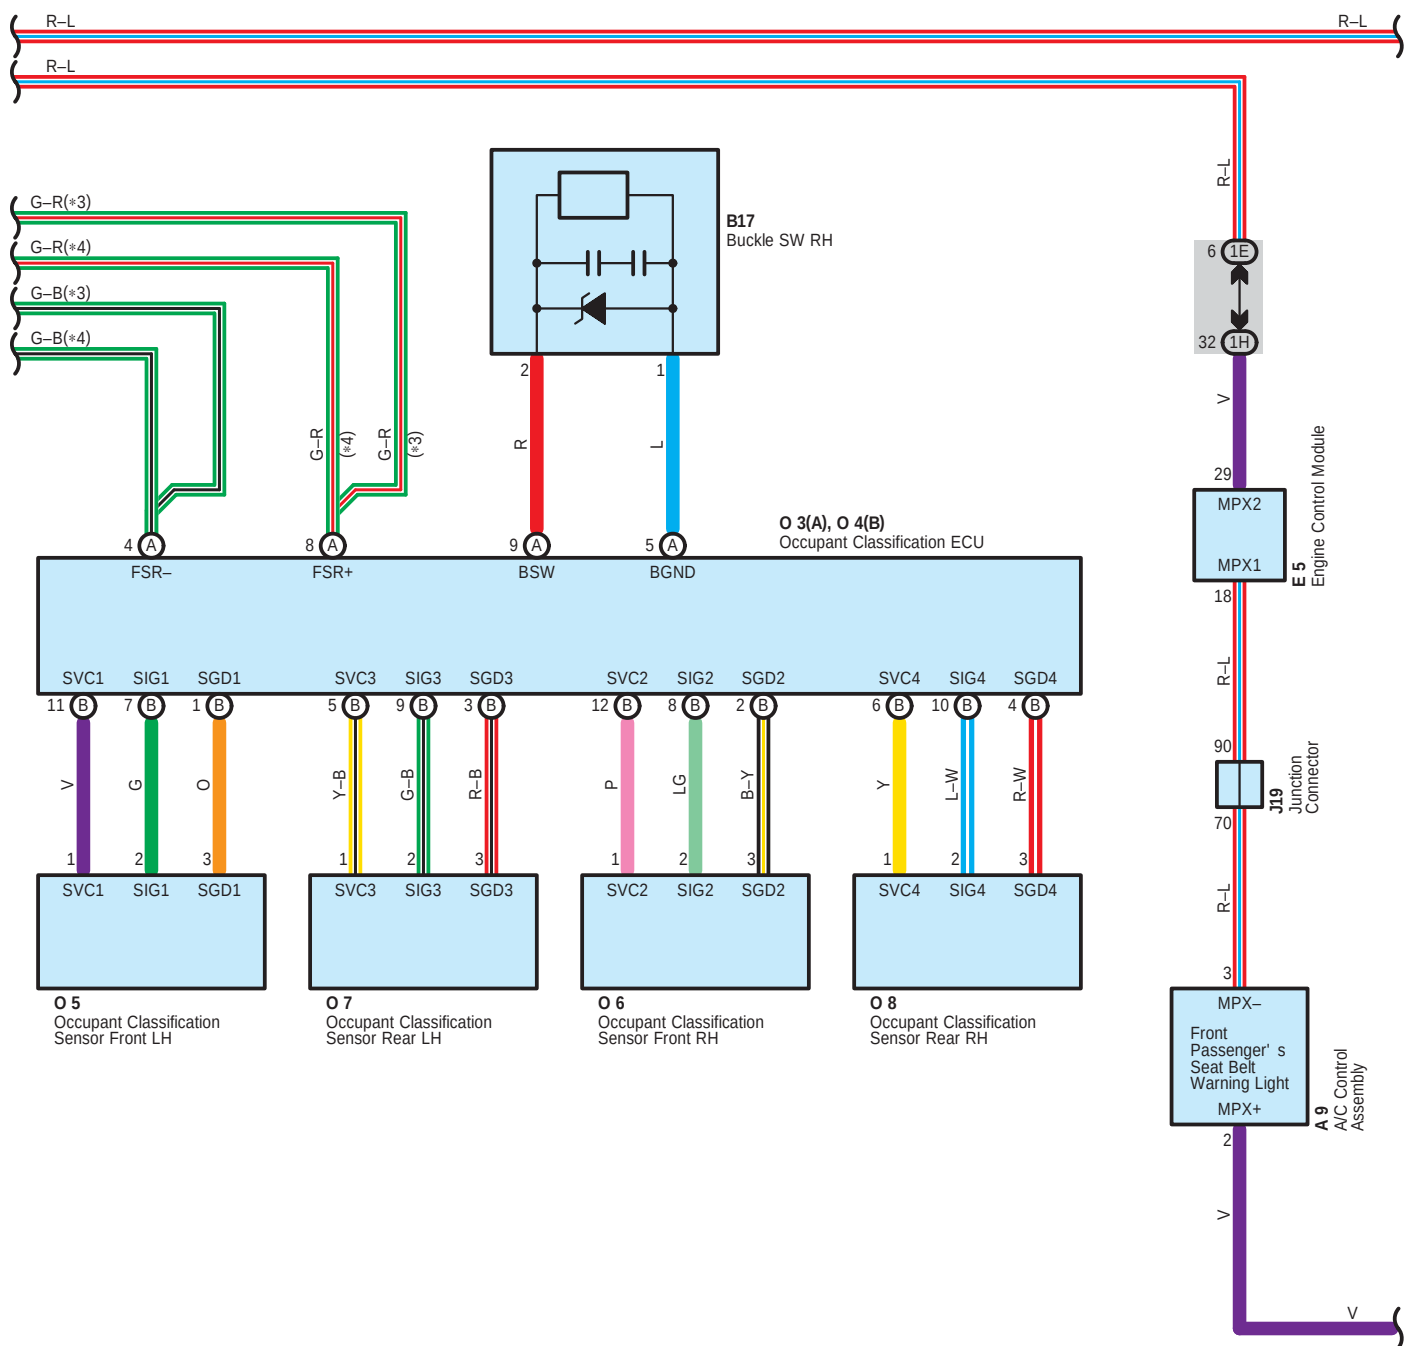

Seat Belt Warning

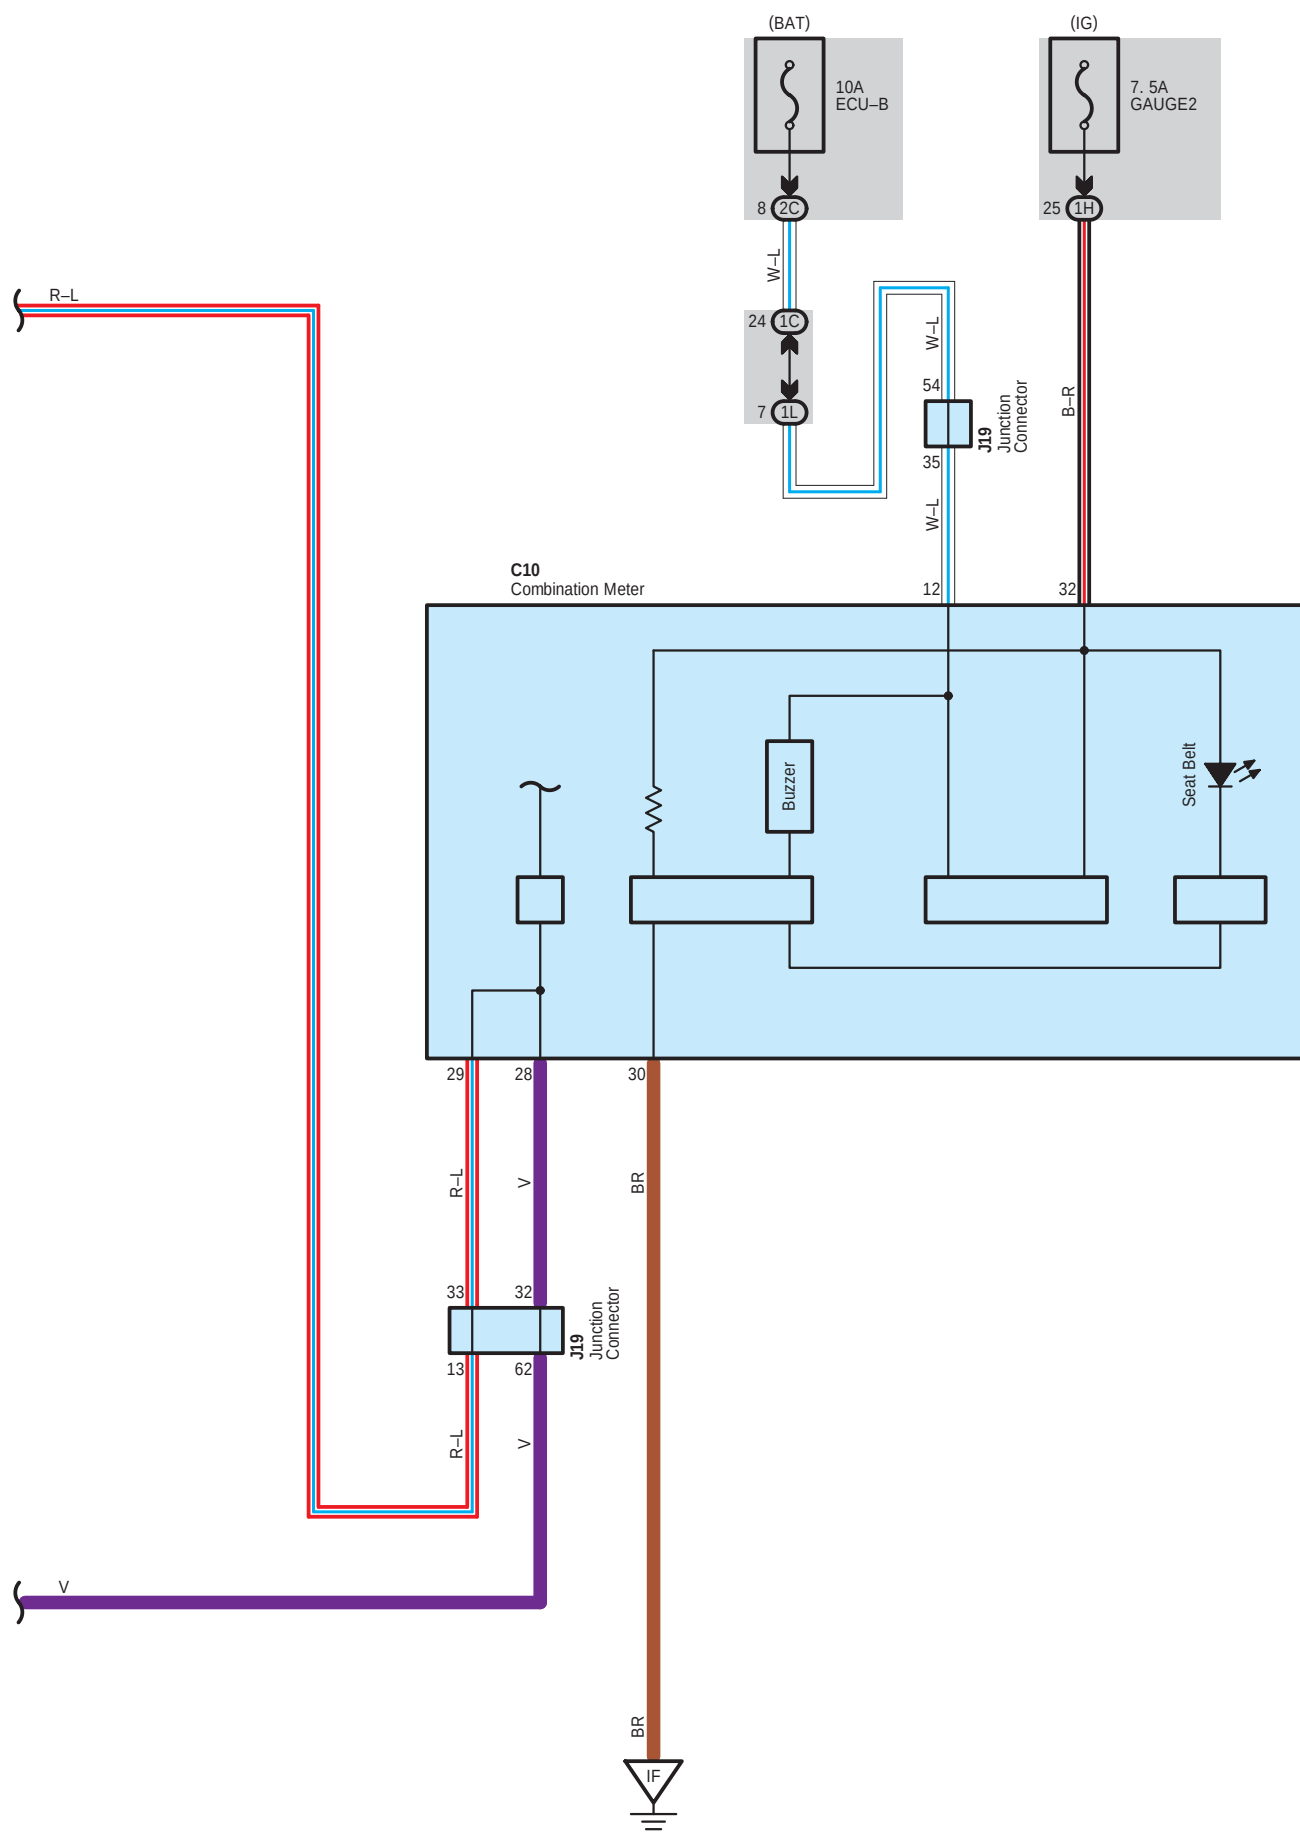

 : Parts Location

Code		See Page	Code		See Page	Code	See Page
A9		38	B18	A	47 (*2)	O5	46 (*1)
A20	A	38		B	46 (*1)		47 (*2)
	D	38			47 (*2)		O6
A21	B	38	C10		39	47 (*2)	
A22	C	38	E5		39	O7	
	E	38	J19		40		47 (*2)
B7	B	38	O3	A	46 (*1)	O8	46 (*1)
B17		46 (*1)			47 (*2)		47 (*2)
		47 (*2)		O4	B		46 (*1)
B18	A	46 (*1)	47 (*2)				

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1H	30	

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BM1	57 (*2)	Floor No.2 Wire and Seat No.1 Wire (Under the Front Passenger's Seat)
BO1	56 (*1)	Seat No.1 Wire and Floor No.2 Wire (Under the Front Passenger's Seat)

 : Ground Points

Code	See Page	Ground Points Location
IF	52	Instrument Panel Brace LH

* 1 : Front Seat w/ Power Seat * 2 : Front Seat w/o Power Seat * 3 : Rear No.2 Seat