




Power Window with Jam Protection

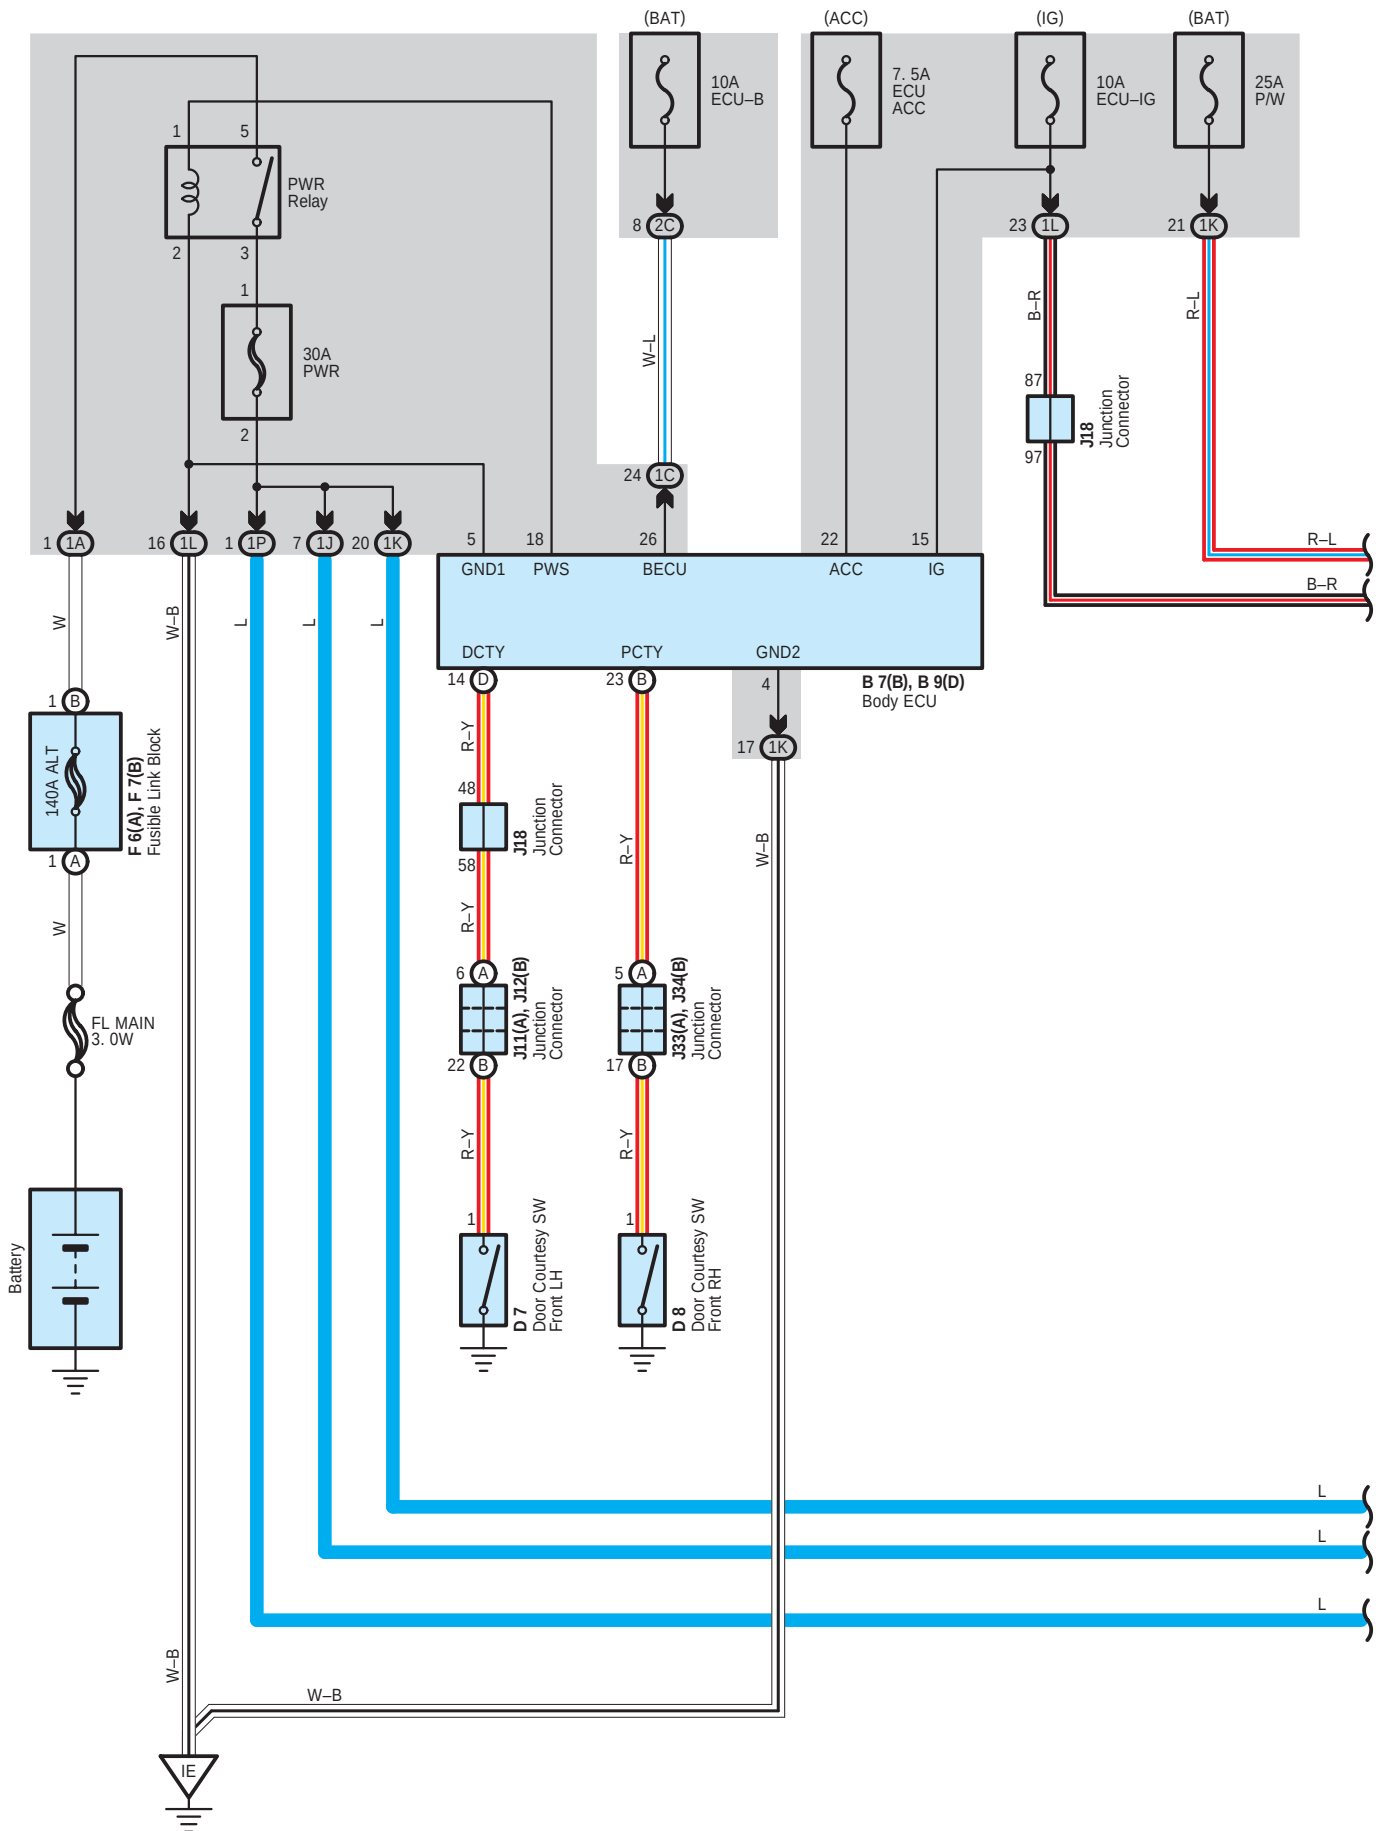

D 9
Power Window Master SW

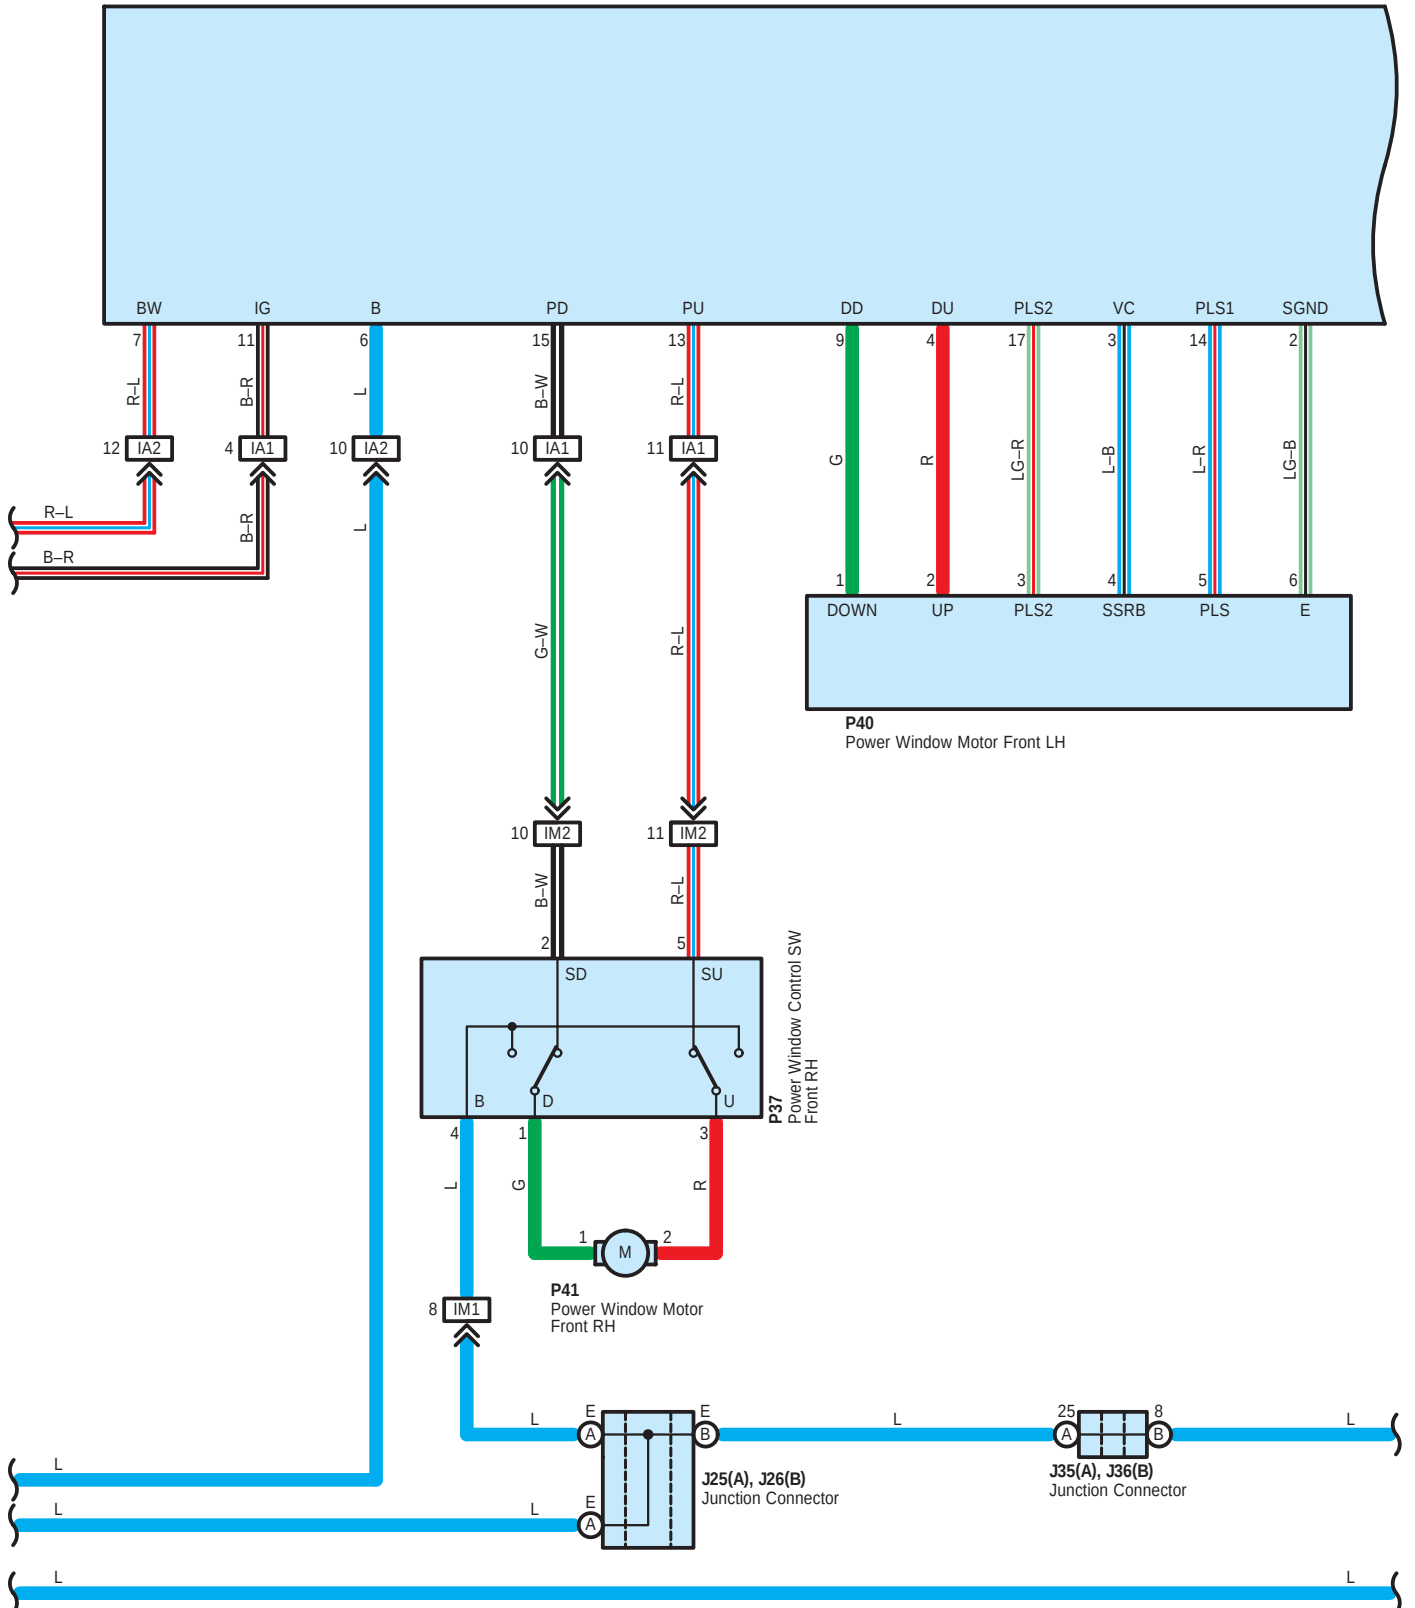

Power Window with Jam Protection

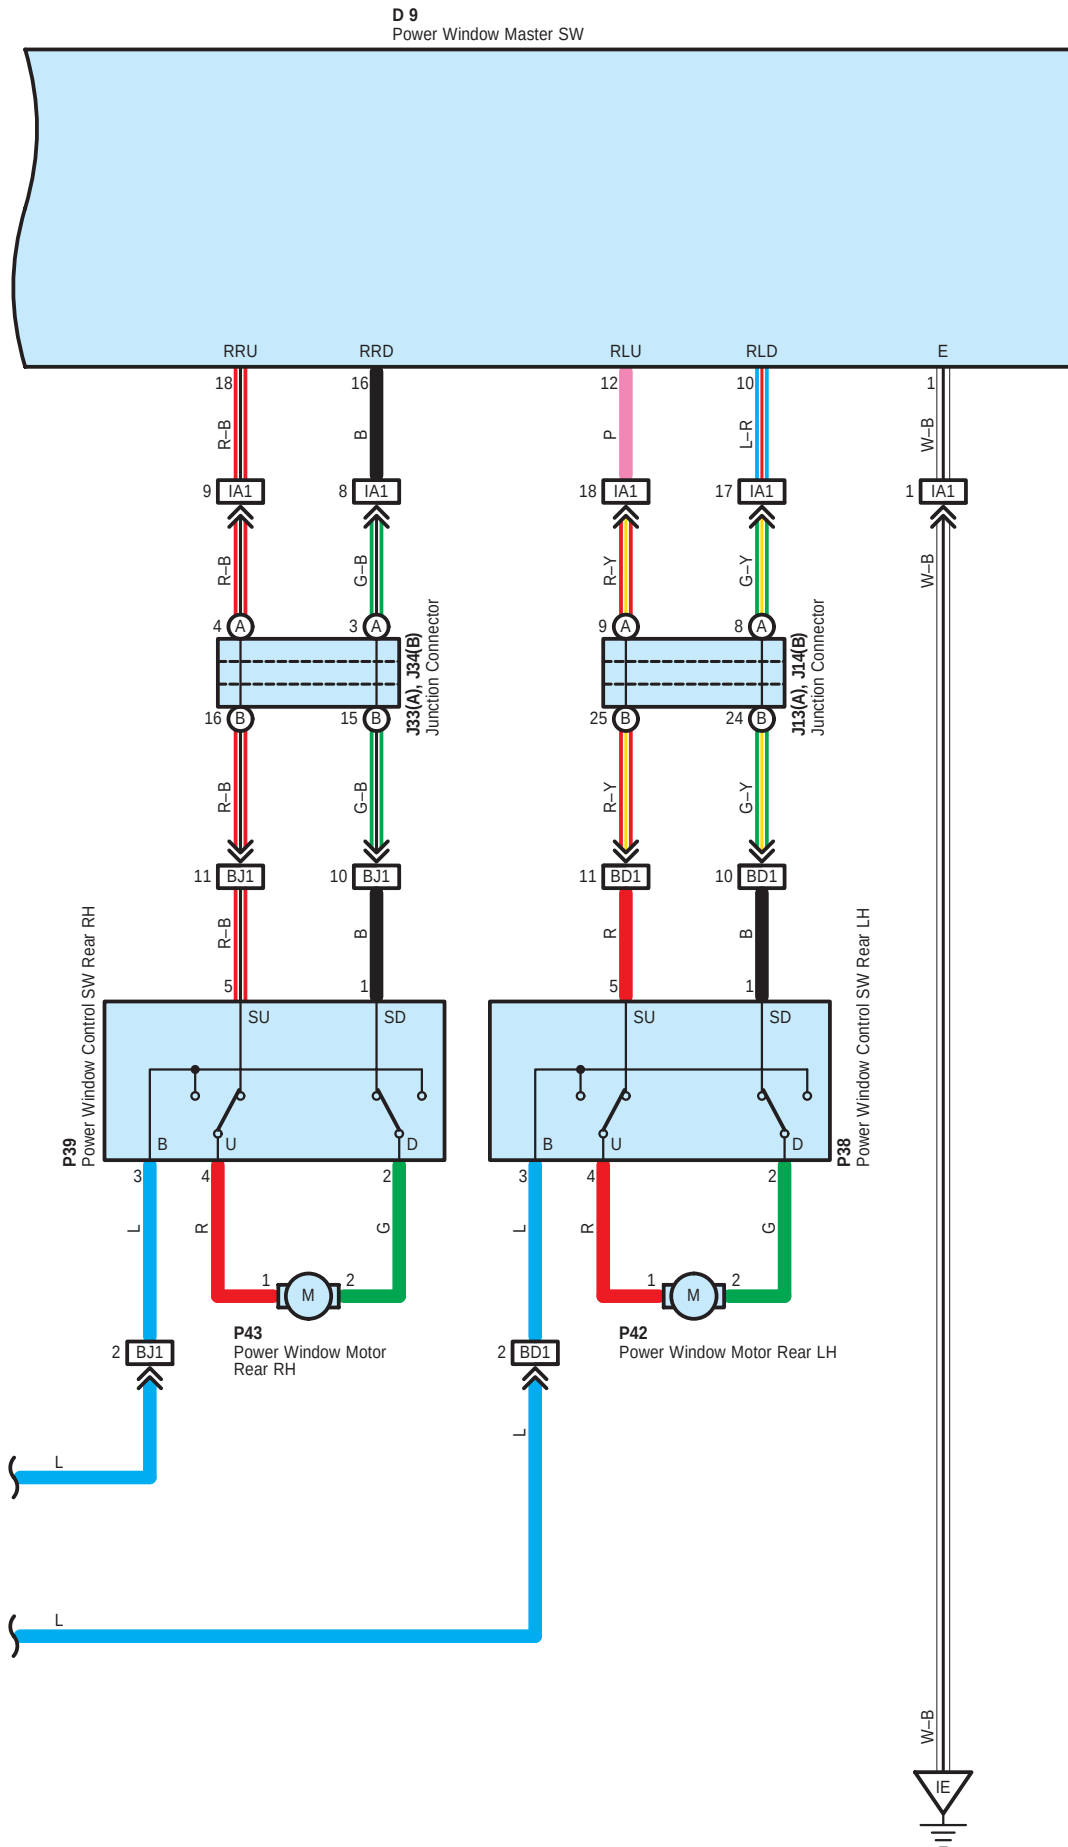

 : Parts Location

Code		See Page	Code		See Page	Code		See Page
B7	B	38	J13	A	40	P37	43	
B9	D	38	J14	B	40	P38	43	
D7		42	J18		40	P39	43	
D8		42	J25	A	40	P40	43	
D9		42	J26	B	40	P41	43	
F6	A	36	J33	A	40	P42	43	
F7	B	36	J34	B	40	P43	43	
J11	A	40	J35	A	40			
J12	B	40	J36	B	40			

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1C		
1J	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1K		
1L		
1P	31	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	52	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IA2		
IM1	53	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IM2		
BD1	54	Rear Door No.2 Wire and Floor No.1 Wire (On the Left Rear Wheel House)
BJ1	55	Rear Door No.1 Wire and Floor No.2 Wire (On the Right Rear Wheel House)

 : Ground Points

Code	See Page	Ground Points Location
IE	52	Left Kick Panel