





Power Back Door

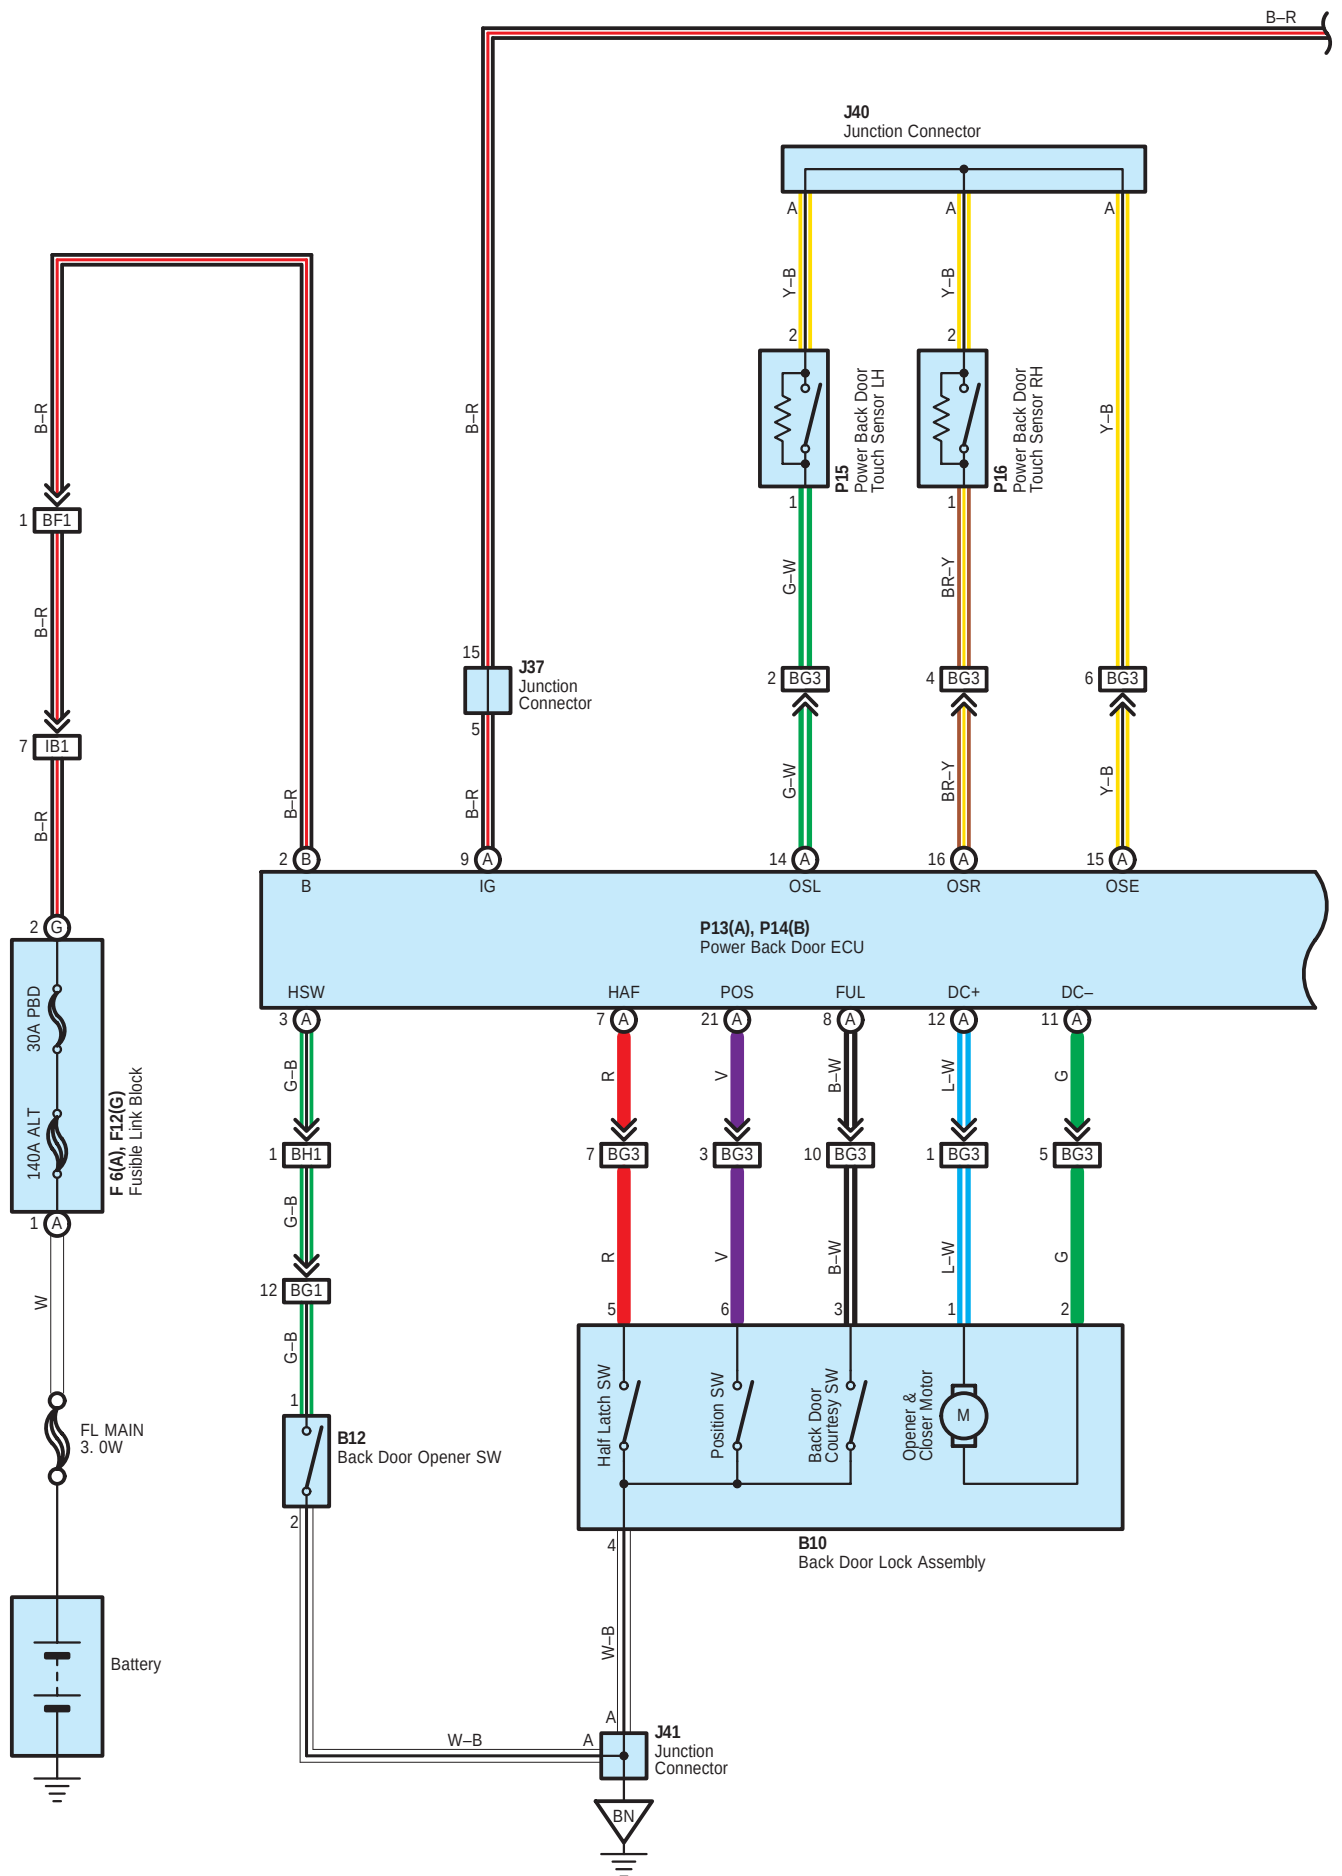

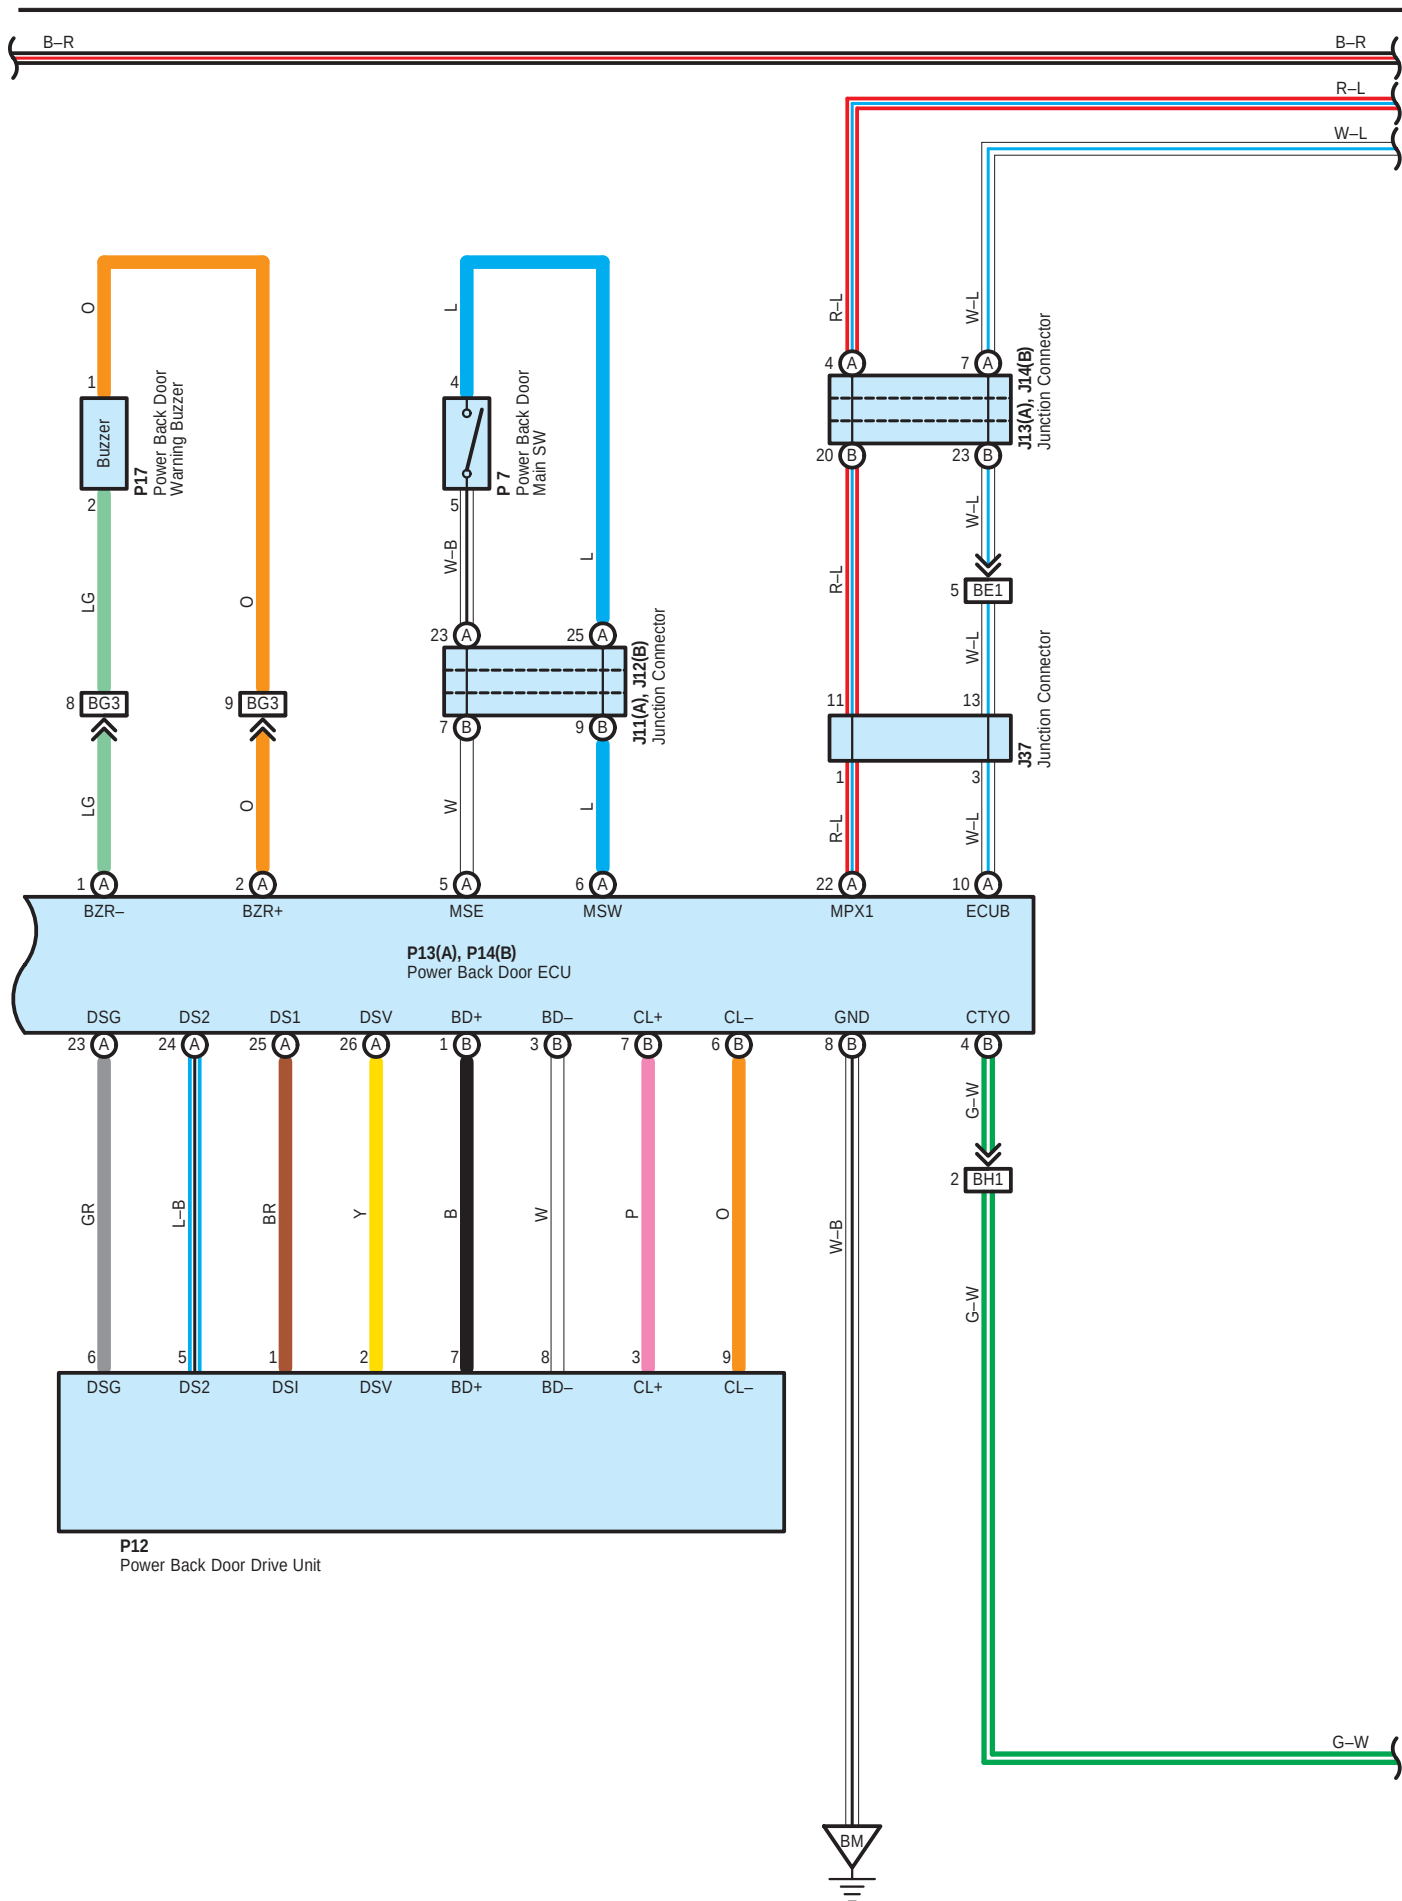

Power Back Door

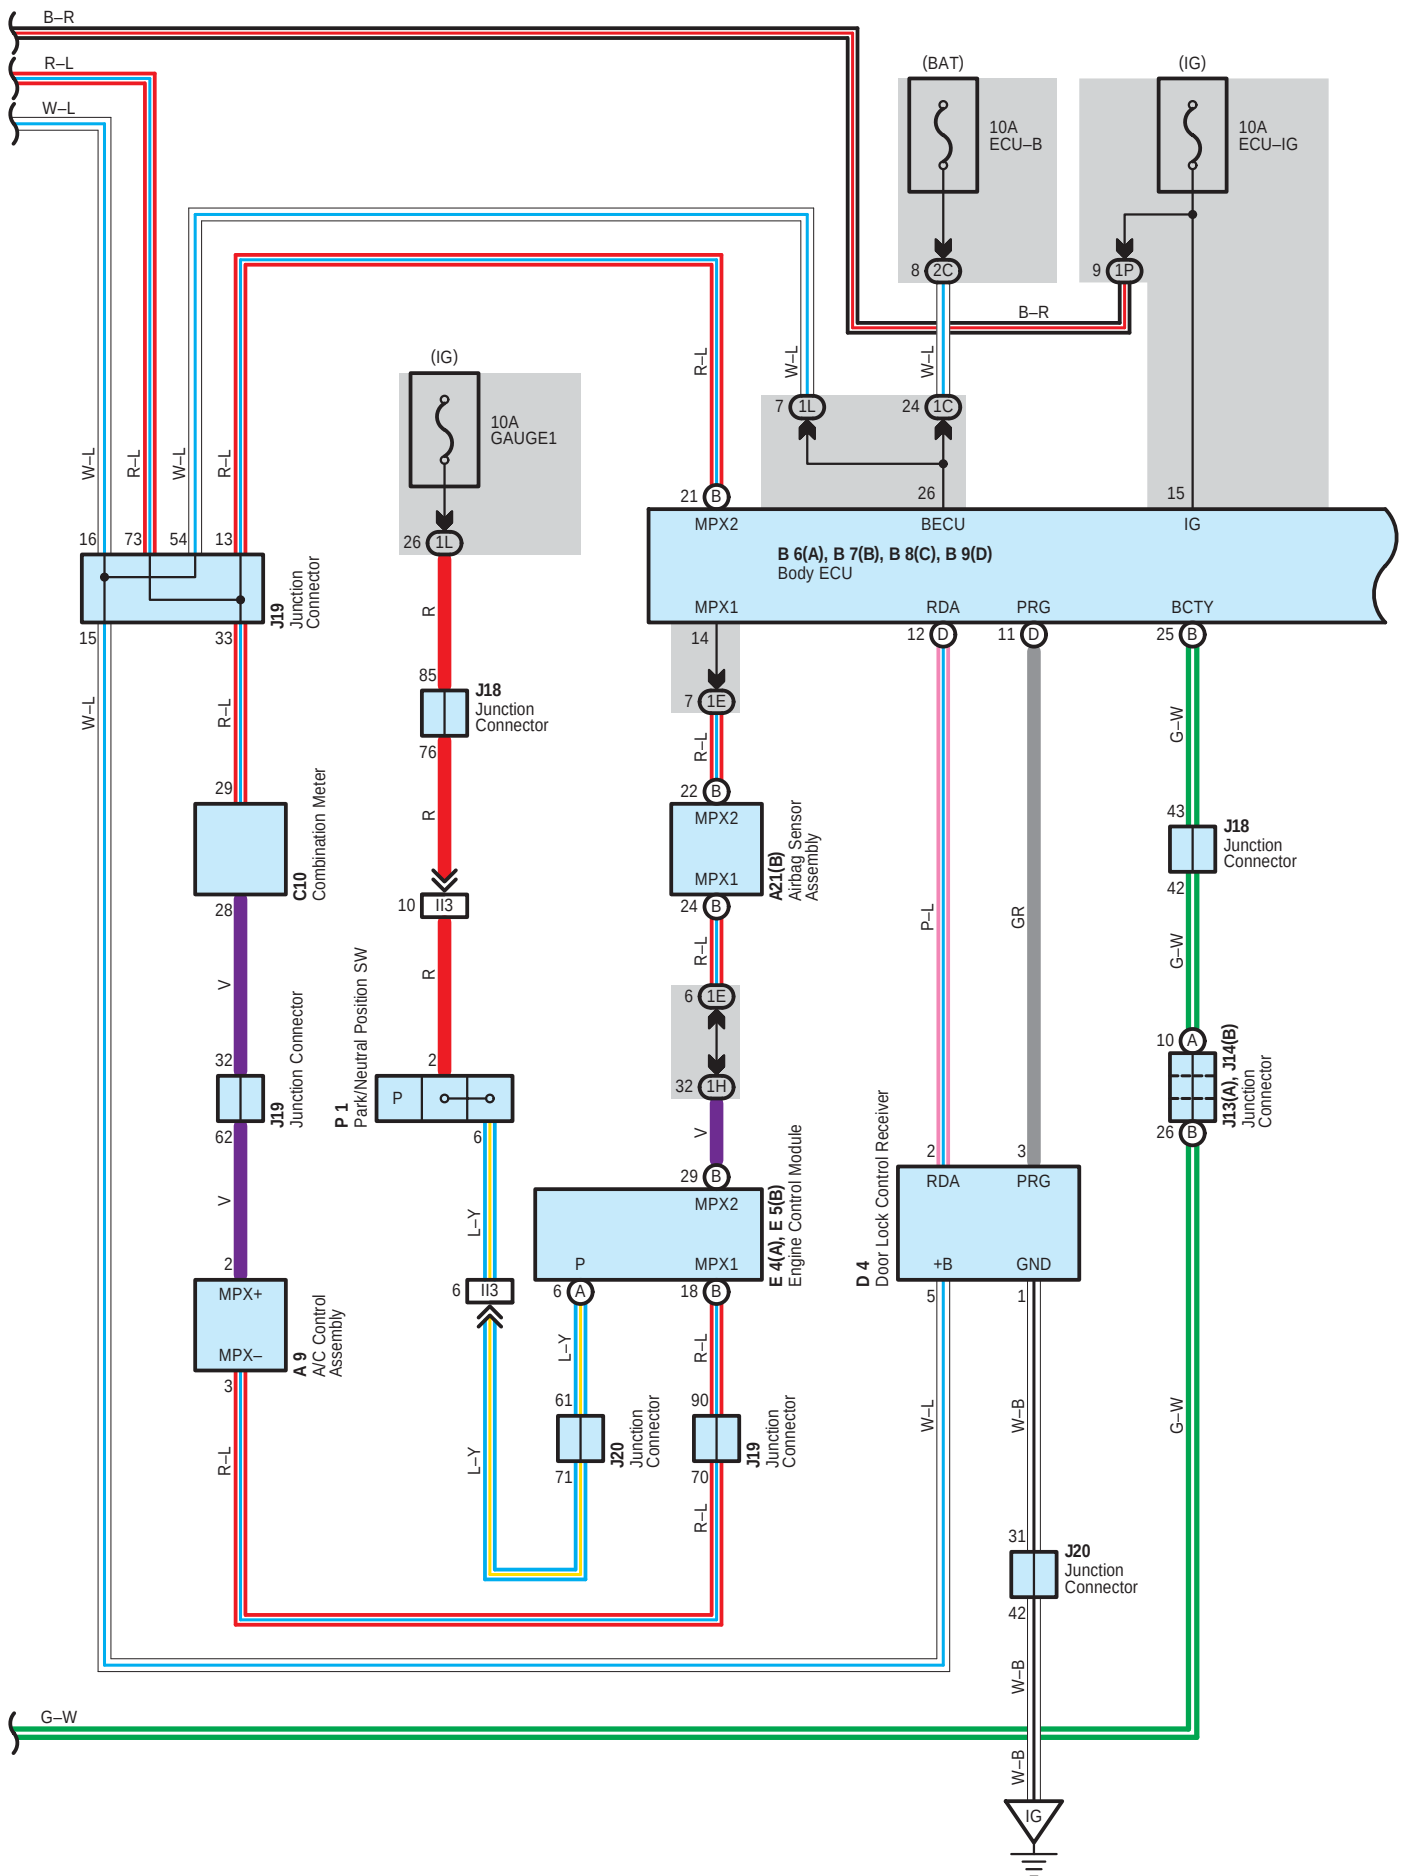

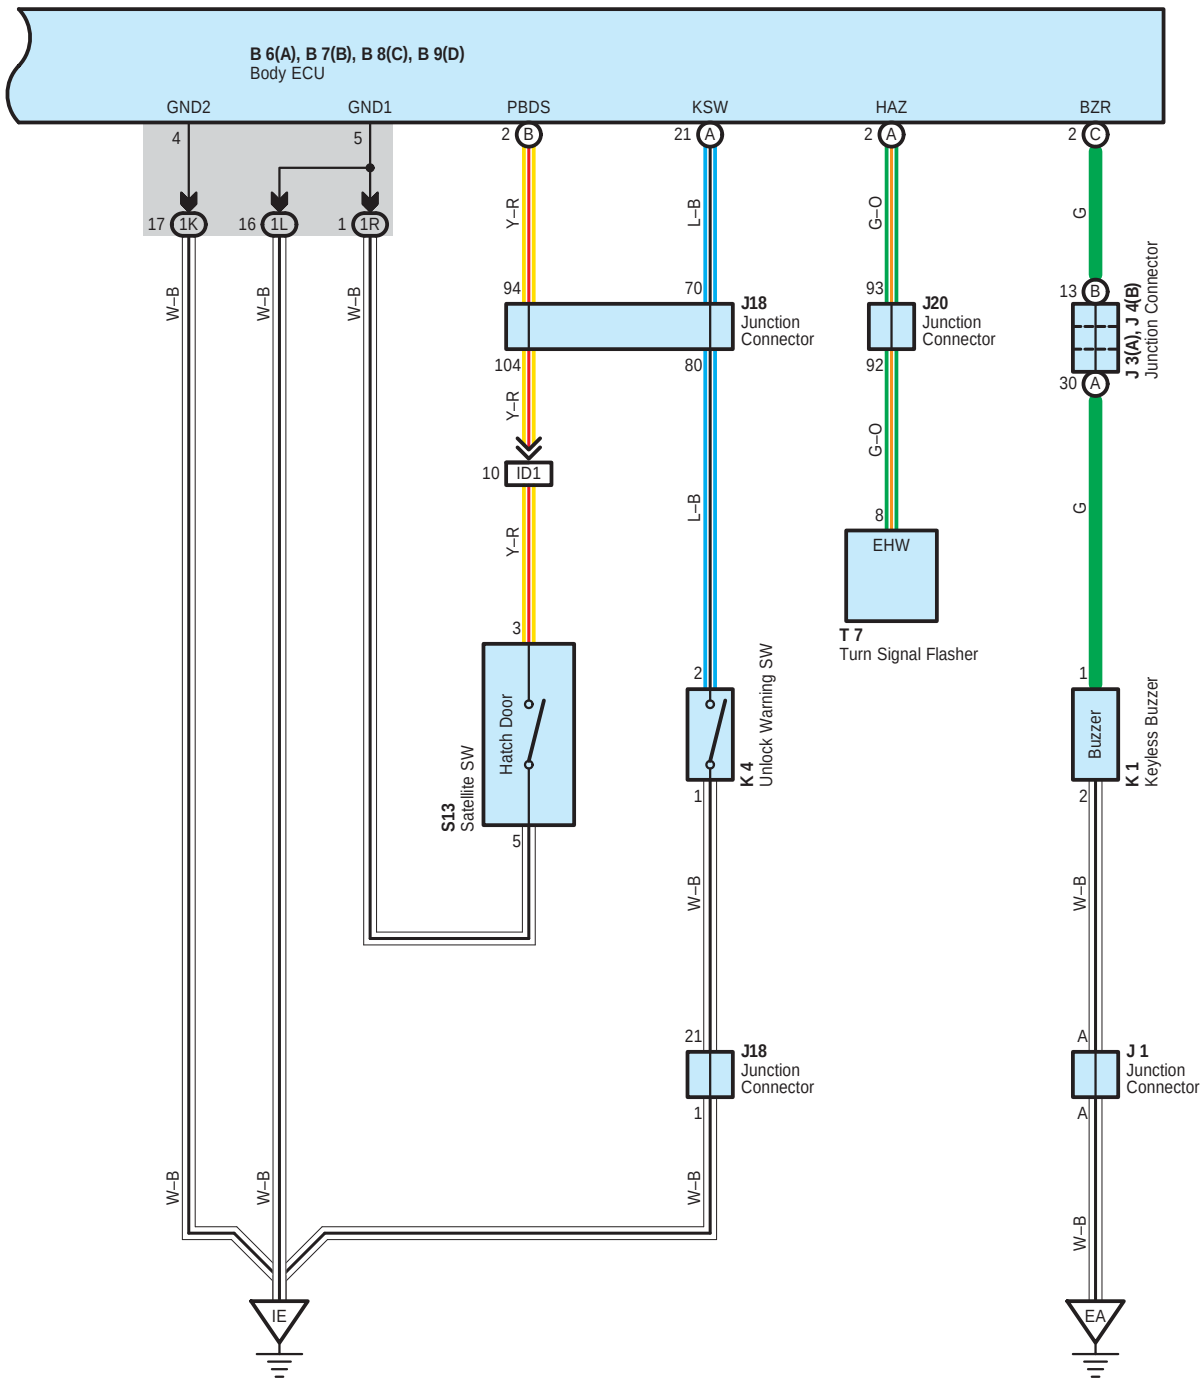

Power Back Door

System Outline

1. The Main Opening-and-Closing Operations

- (1) By pushing the remote control SW, the automatic opening and closing of the back door can be carried out.
 - (2) By pushing the operation SW formed in overhead console, the automatic opening and closing of the back door can be carried out.
 - (3) Assistant operation:
By pulling the back door from full open position, the automatic closing of the back door can be carried out.
- * The automatic opening (Closing) operation of the back door is possible only when the power back door main SW in the instrument panel of driver's seat part in ON.

2. Consideration of Safety

- (1) The power back door touch sensor is adopted.
If the power back door touch sensor which is arranged on the end of the back door detect something pinching or obstacle during the automatic operation, the door will be reversed in full open direction.
- (2) If something pinching or obstacle in the back door is detected by speed change of the move of the back door during the automatic operation, the door will be reversed in opposite direction of the advance direction.
- (3) If the remote control SW or the satellite SW is operated for someone feel danger, etc. during the automatic operation, the door will be reversed in opposite direction of the advance direction.

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
A9		38	F12	G	36	J41		43
A21	B	38	J1		37	K1		37
B6	A	38	J3	A	40	K4		40
B7	B	38	J4	B	40	P1		37
B8	C	38	J11	A	40	P7		41
B9	D	38	J12	B	40	P12		43
B10		42	J13	A	40	P13	A	43
B12		42	J14	B	40	P14	B	43
C10		39	J18		40	P15		43
D4		39	J19		40	P16		43
E4	A	39	J20		40	P17		43
E5	B	39	J37		43	S13		44
F6	A	36	J40		43	T7		41

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1H	30	
1K	31	
1L		
1P	31	
1R	31	Roof Wire and Driver Side J/B (Lower Finish Panel)
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	52	Engine Room Main Wire and Floor No.1 Wire (Left Cowl Side Panel)
ID1	52	Roof Wire and Instrument Panel Wire (Near the Driver Side J/B)
II3	53	Engine Wire and Instrument Panel Wire (Right Kick Panel)
BE1	54	Floor No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)
BF1		
BG1	55	Back Door No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)
BG3		
BH1	55	Floor No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)

 : Ground Points

Code	See Page	Ground Points Location
EA	50	Front Side of the Right Fender Apron
IE	52	Left Kick Panel
IG	52	Right Kick Panel
BM	54	Left Rear Quarter Panel
BN	54	Left Side of the Back Door