



Back Door Opener without Power Back Door

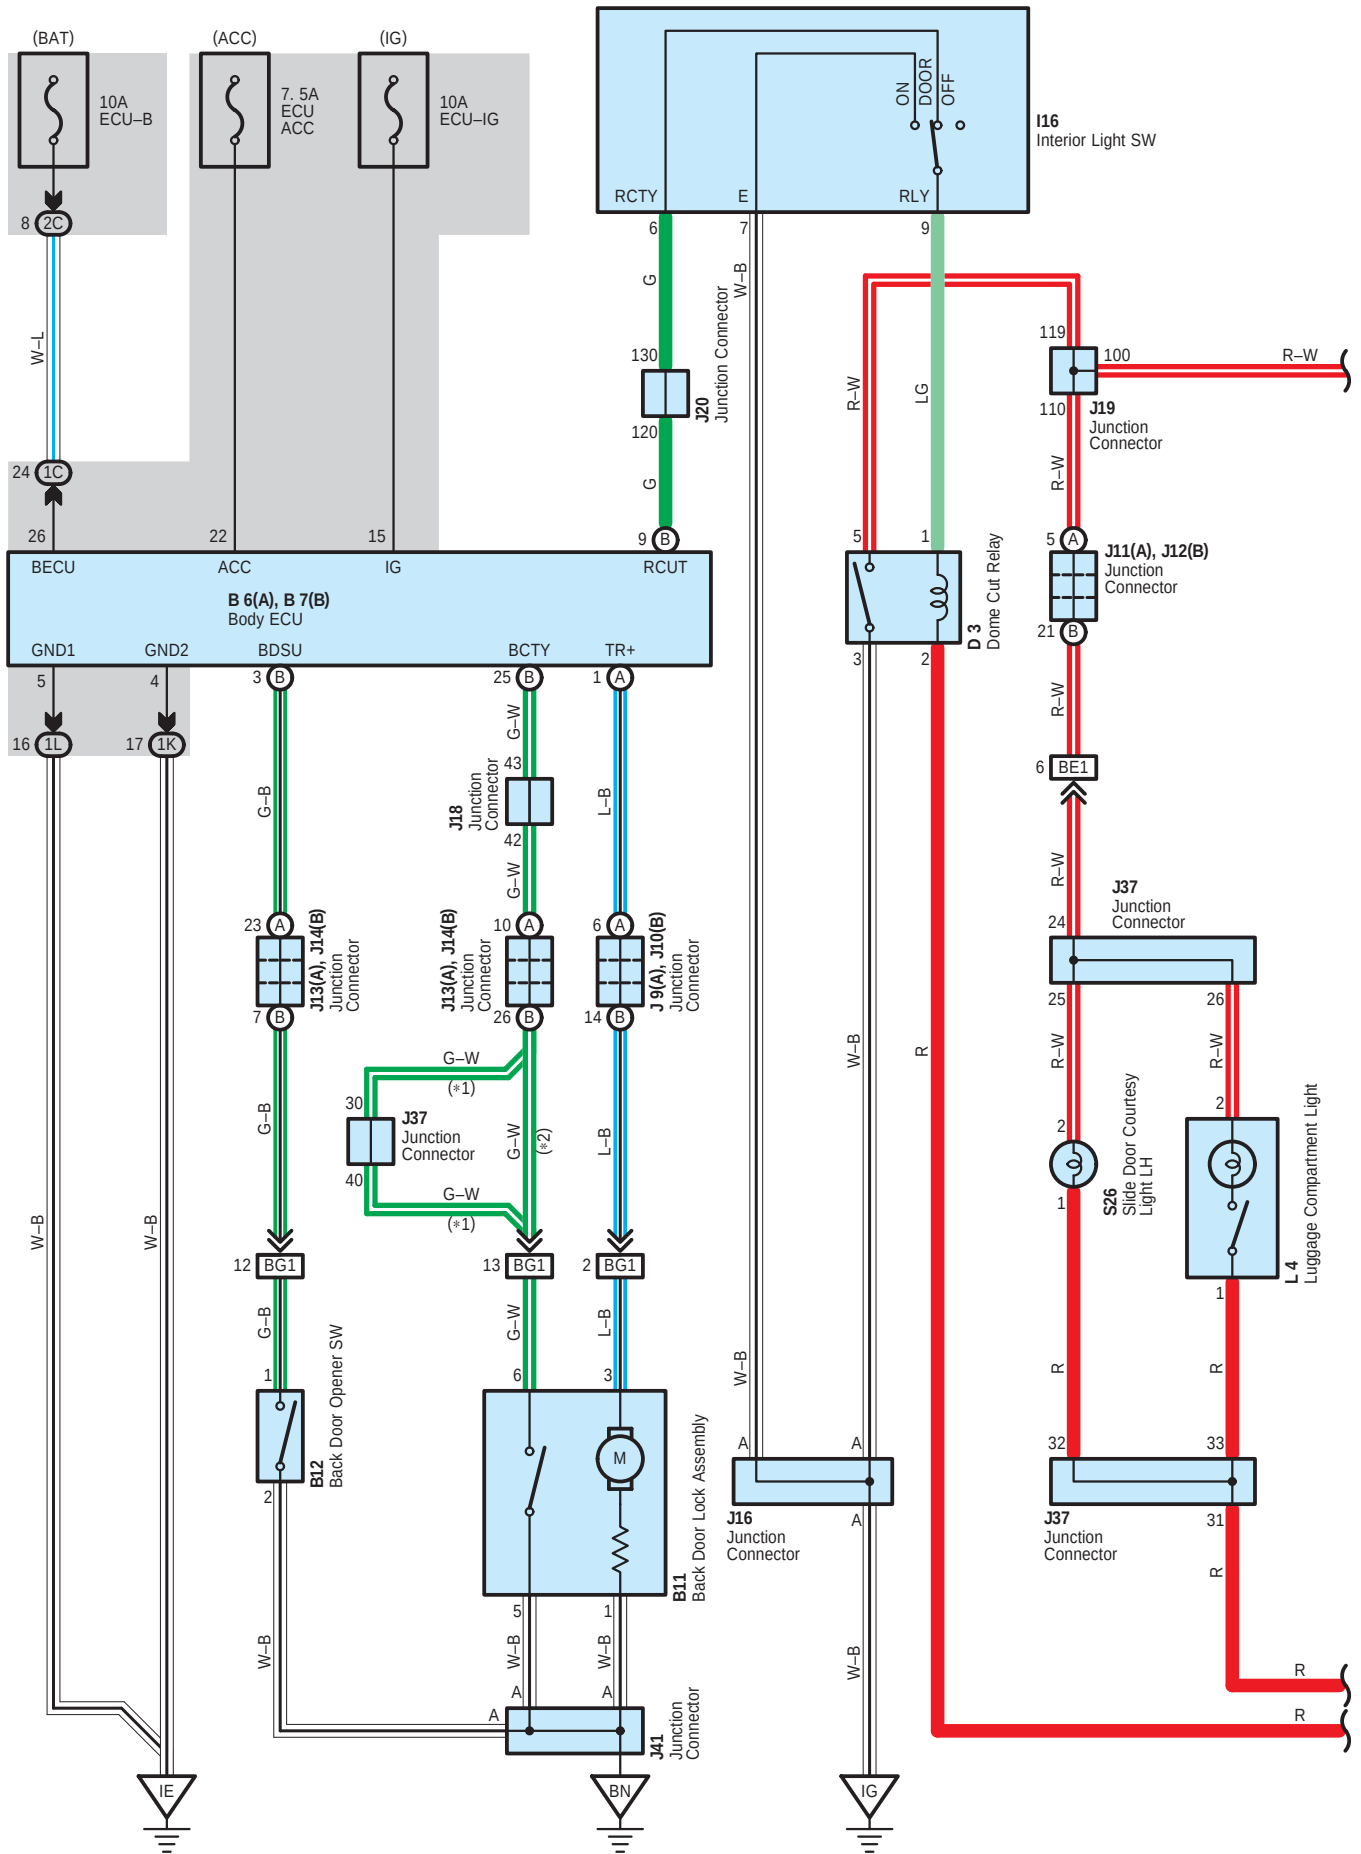

* 1 : w/ Power Rear No. 2 Seat with Stowing Function
 * 2 : w/o Power Rear No. 2 Seat with Stowing Function

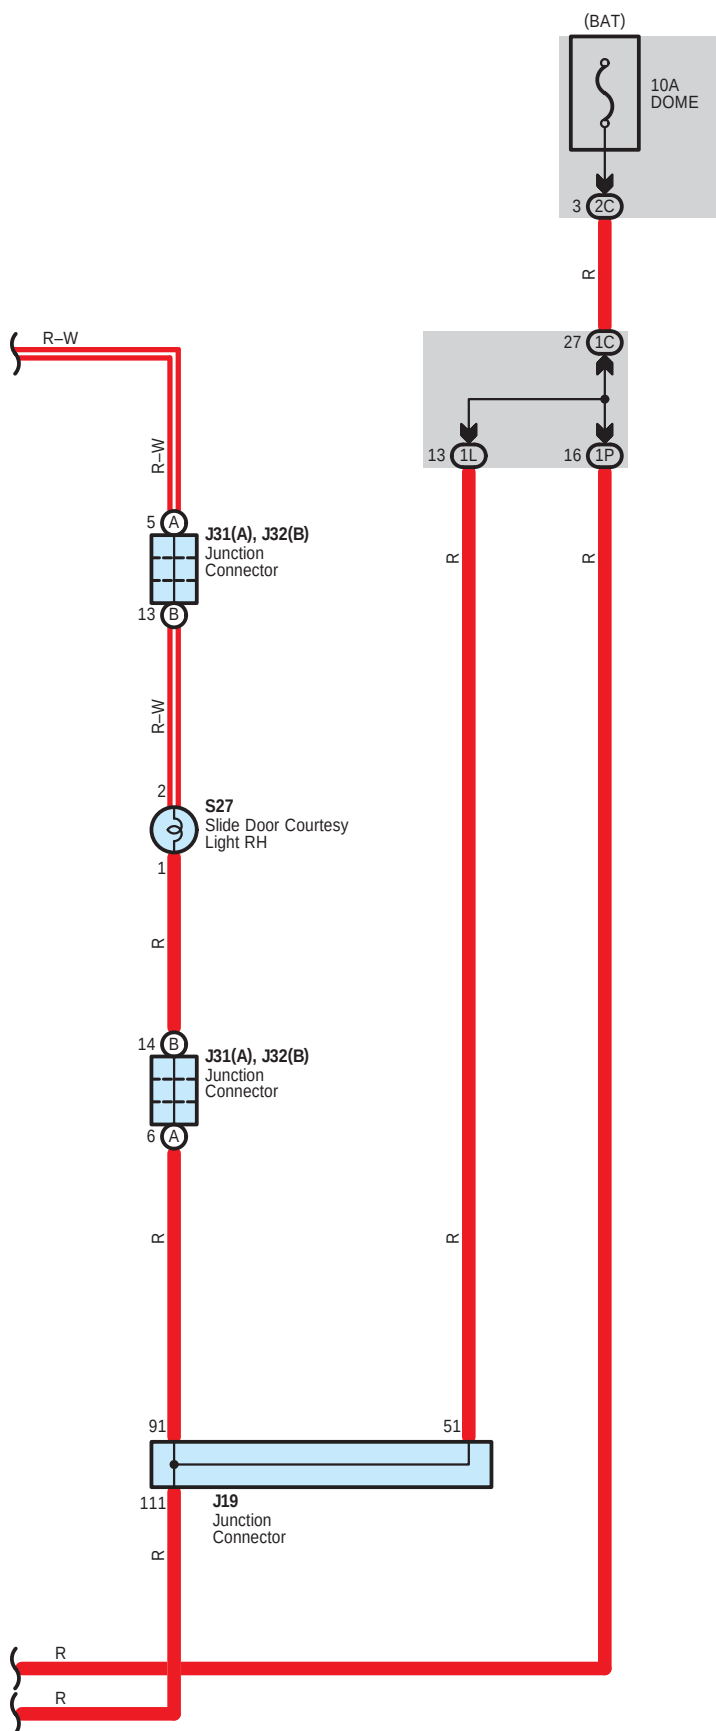

Back Door Opener without Power Back Door

: Parts Location

Code		See Page	Code		See Page	Code		See Page
B6	A	38	J11	A	40	J31	A	40
B7	B	38	J12	B	40	J32	B	40
B11		42	J13	A	40	J37		43
B12		42	J14	B	40	J41		43
D3		39	J16		40	L4		43
I16		39	J18		40	S26		44
J9	A	40	J19		40	S27		44
J10	B	40	J20		40			

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1K	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L		
1P	31	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BE1	54	Floor No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)
BG1	55	Back Door No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)

: Ground Points

Code	See Page	Ground Points Location
IE	52	Left Kick Panel
IG	52	Right Kick Panel
BN	54	Left Side of the Back Door

