



Door Lock Control

B 6(A), B 7(B), B 9(D)
Body ECU

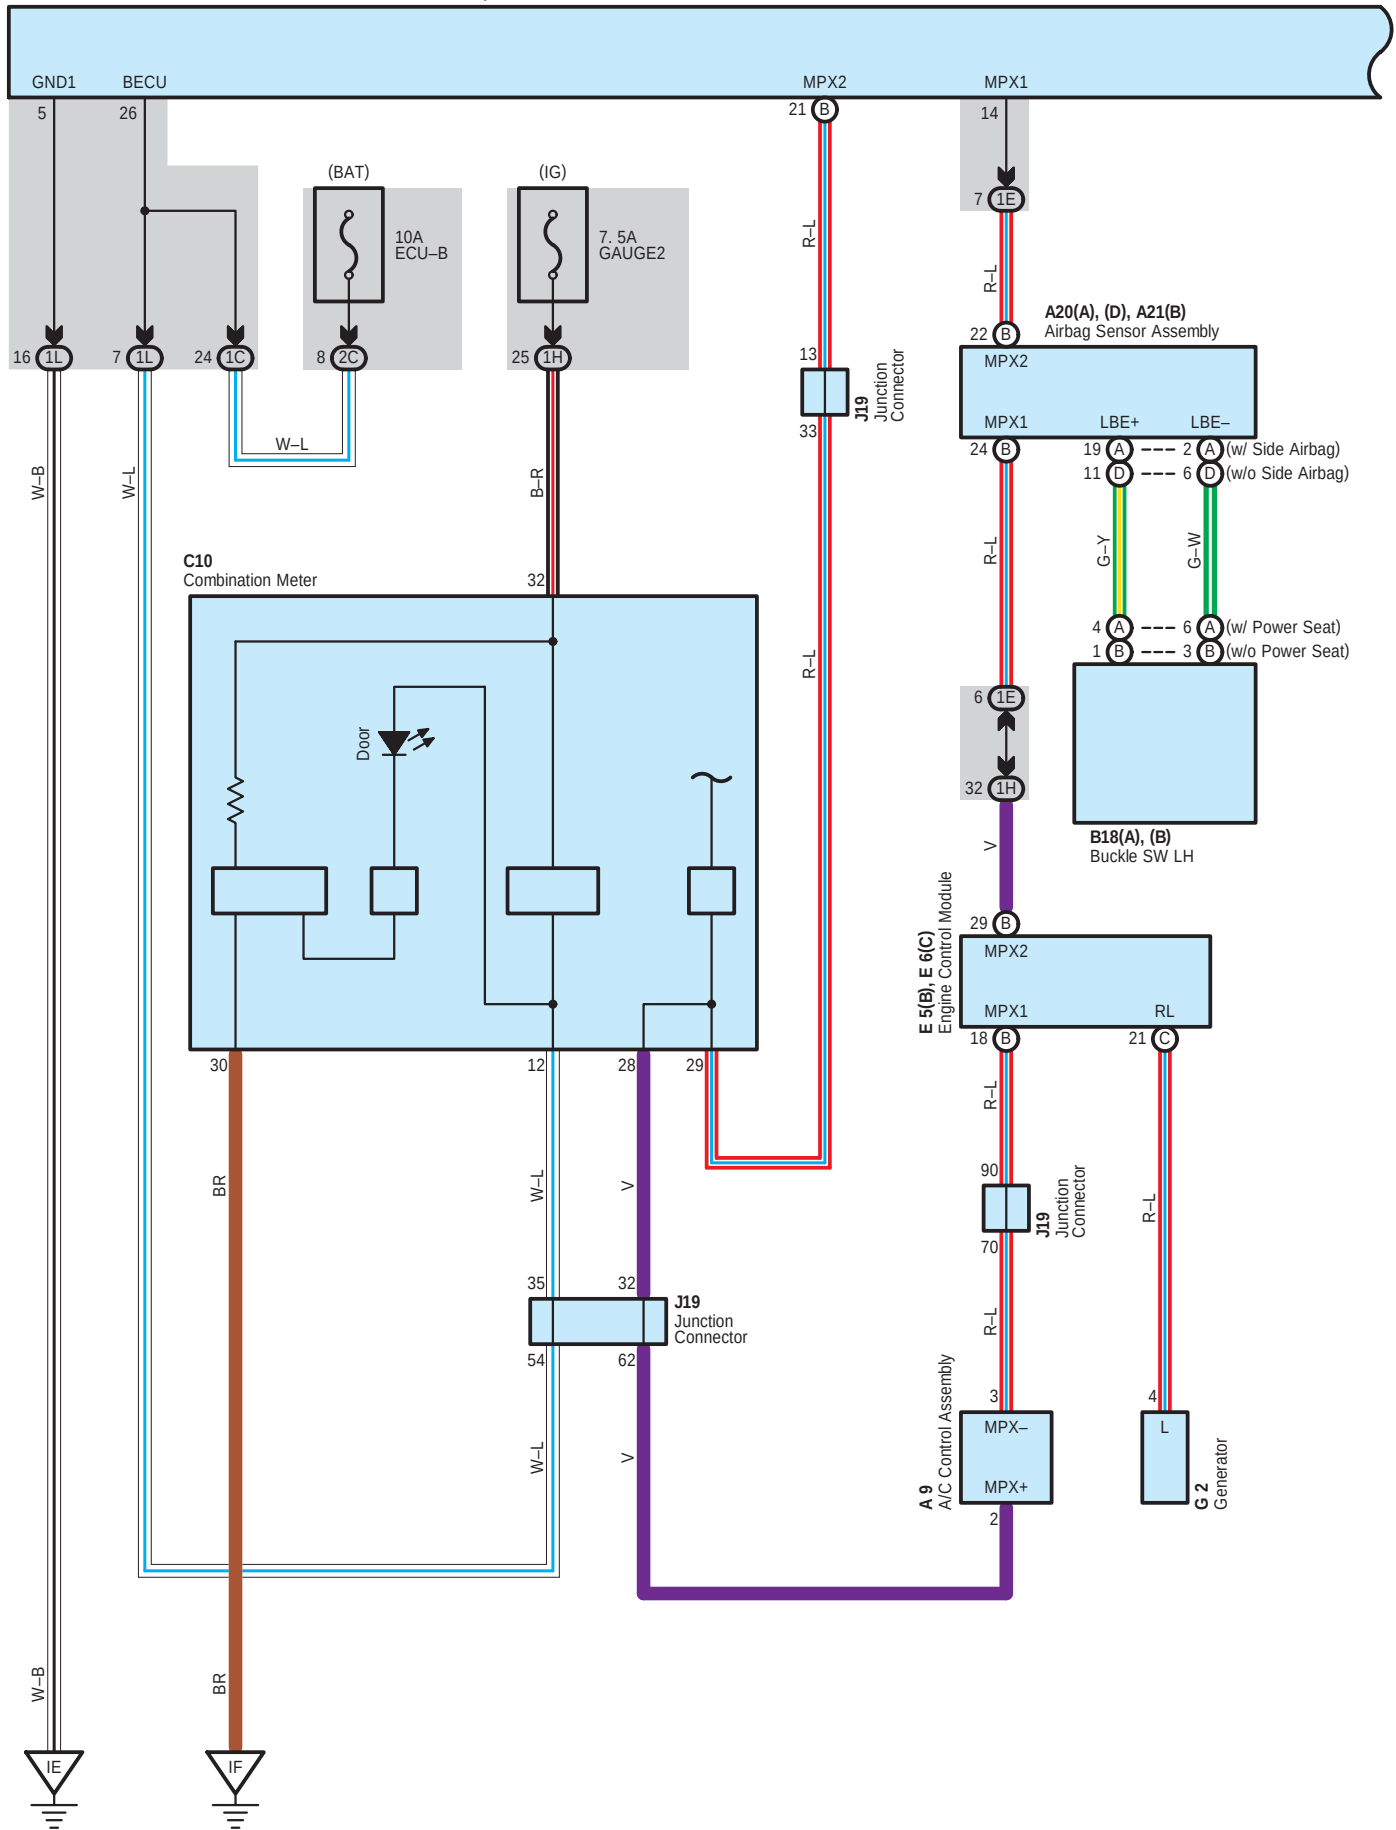


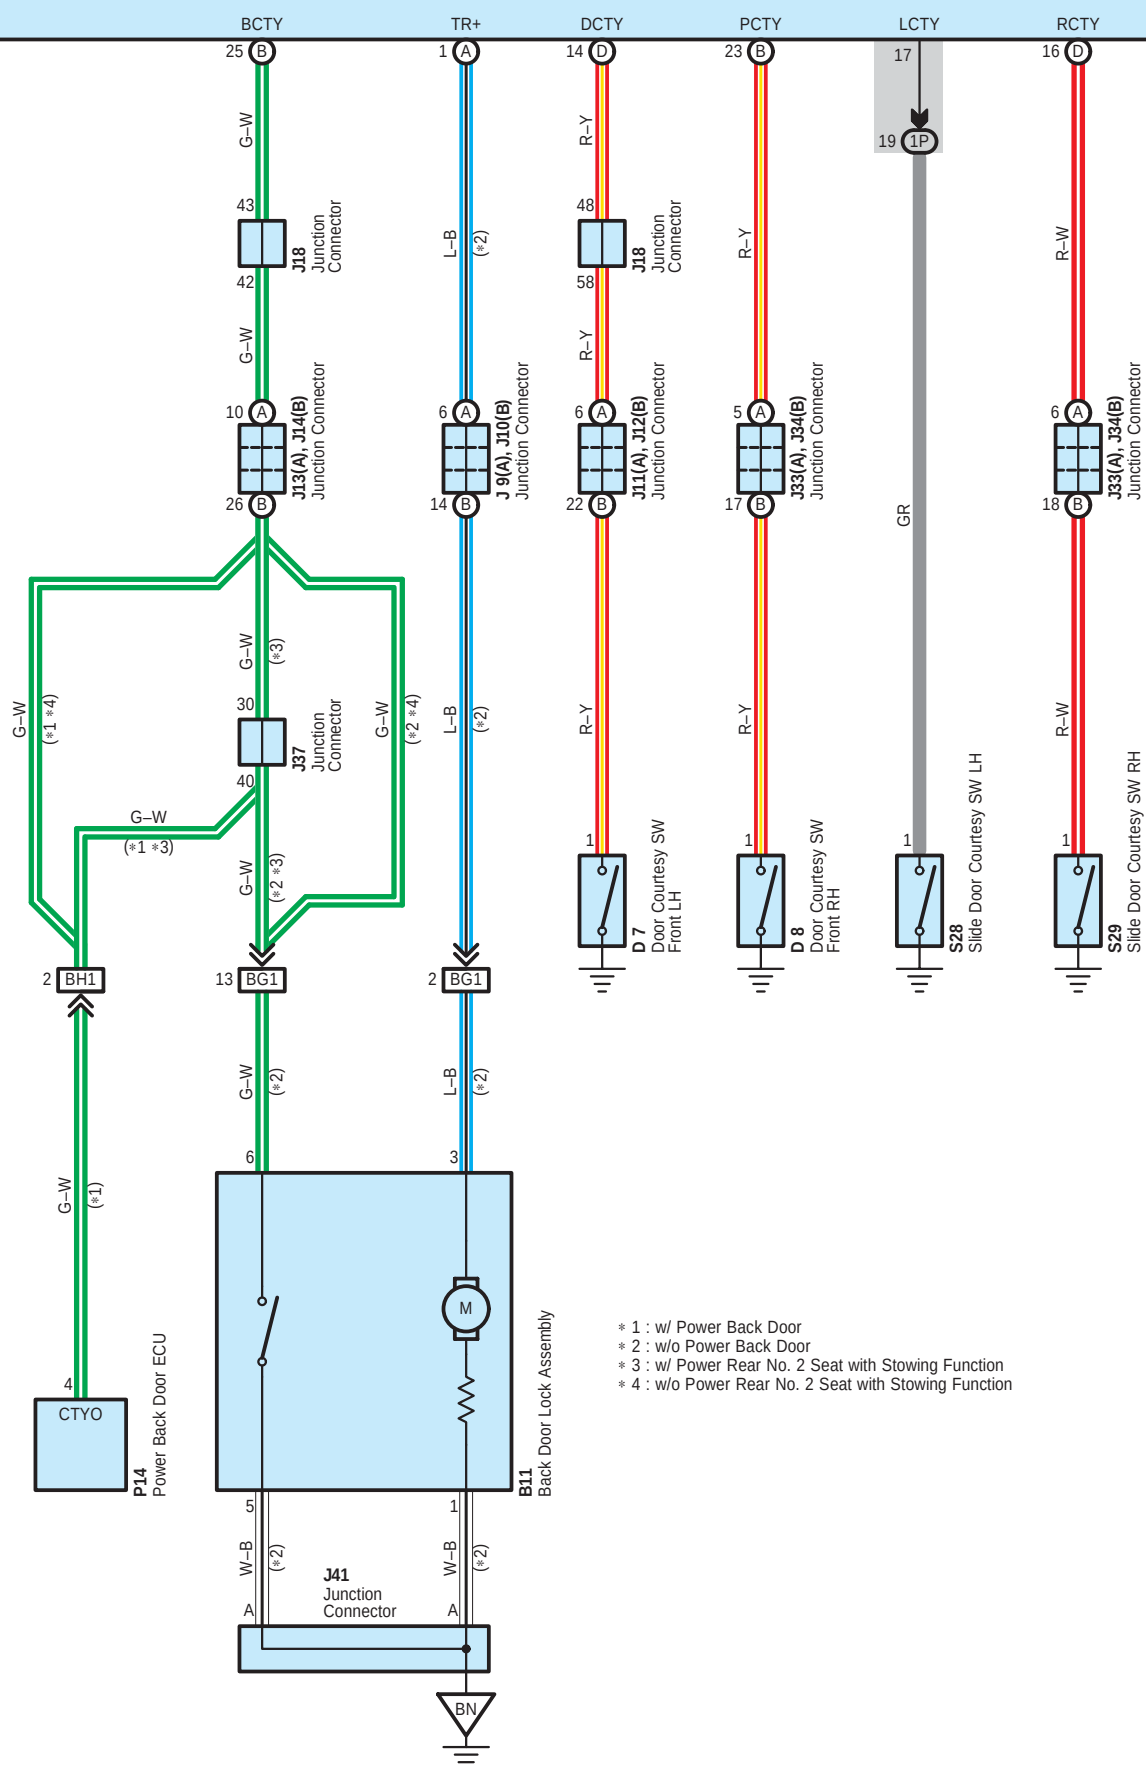


- * 1 : w/ Power Back Door
- * 2 : w/o Power Back Door
- * 3 : w/ Power Rear No. 2 Seat with Stowing Function
- * 4 : w/o Power Rear No. 2 Seat with Stowing Function

Door Lock Control


B 6(A), B 7(B), B 9(D)
Body ECU

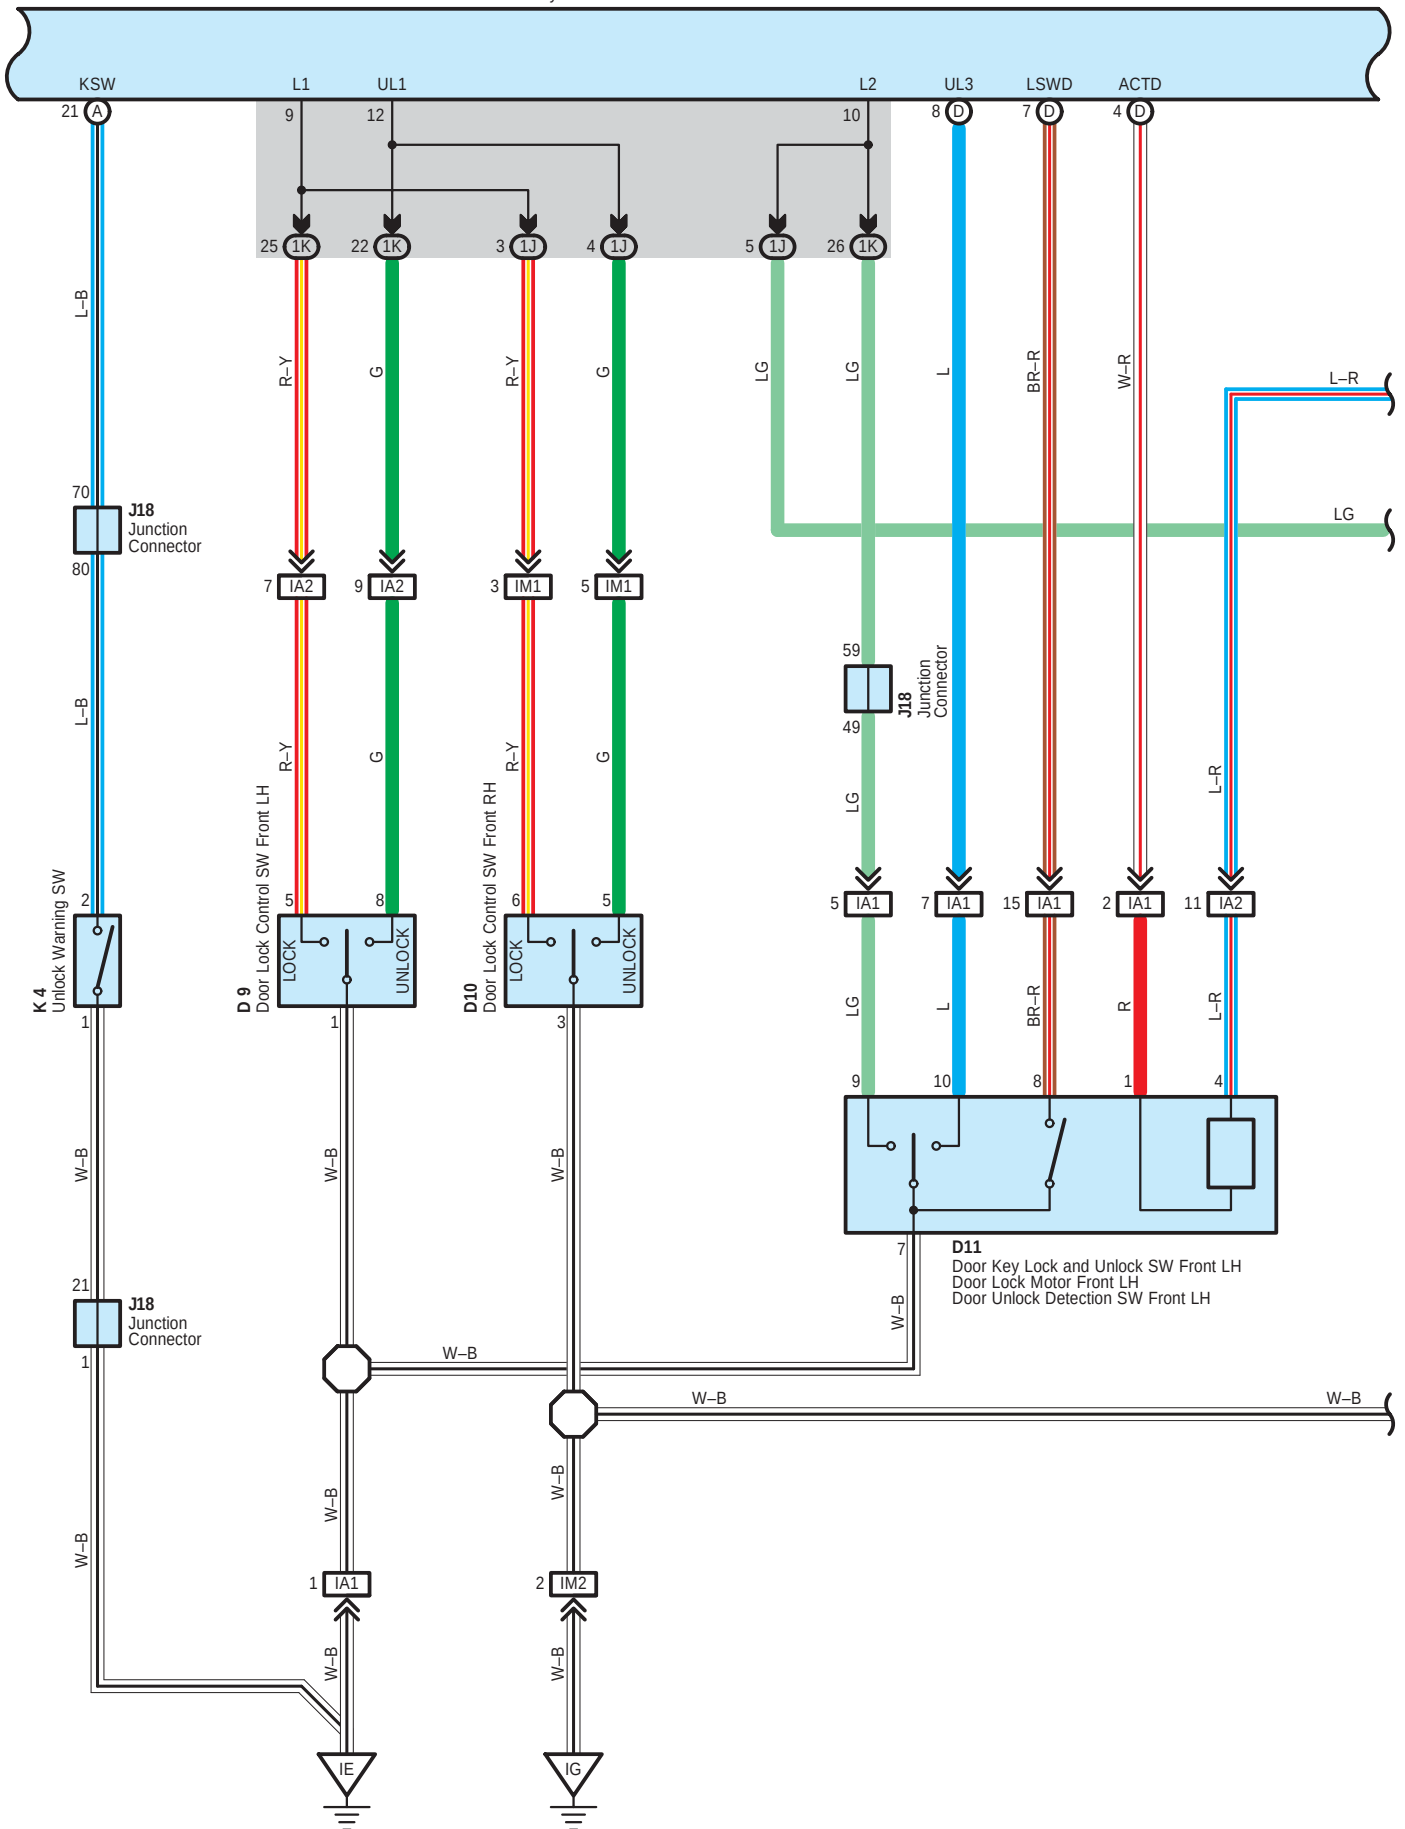

B 6(A), B 7(B), B 9(D)
Body ECU

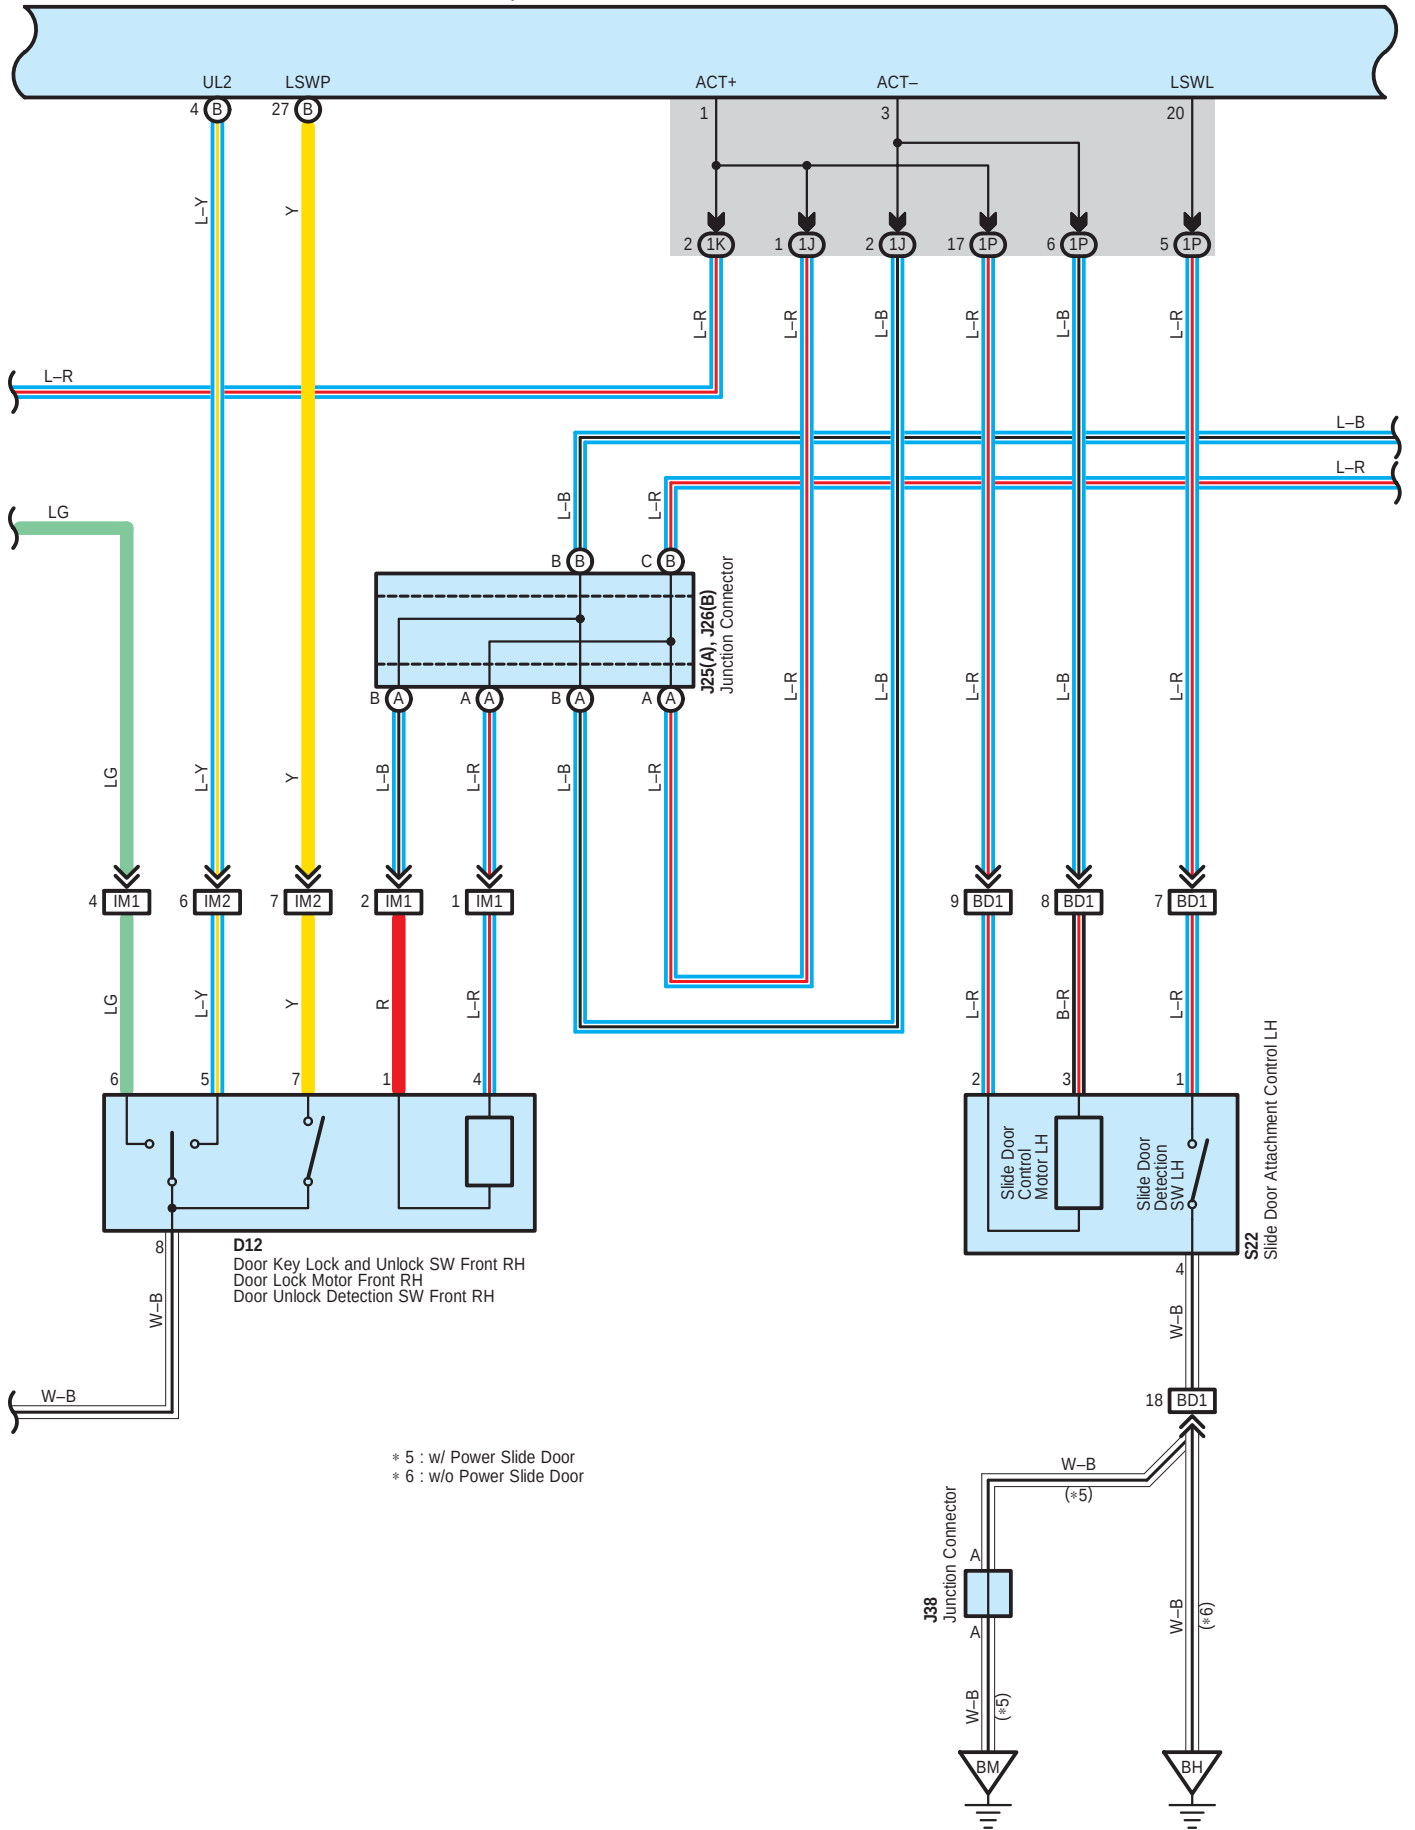

Door Lock Control

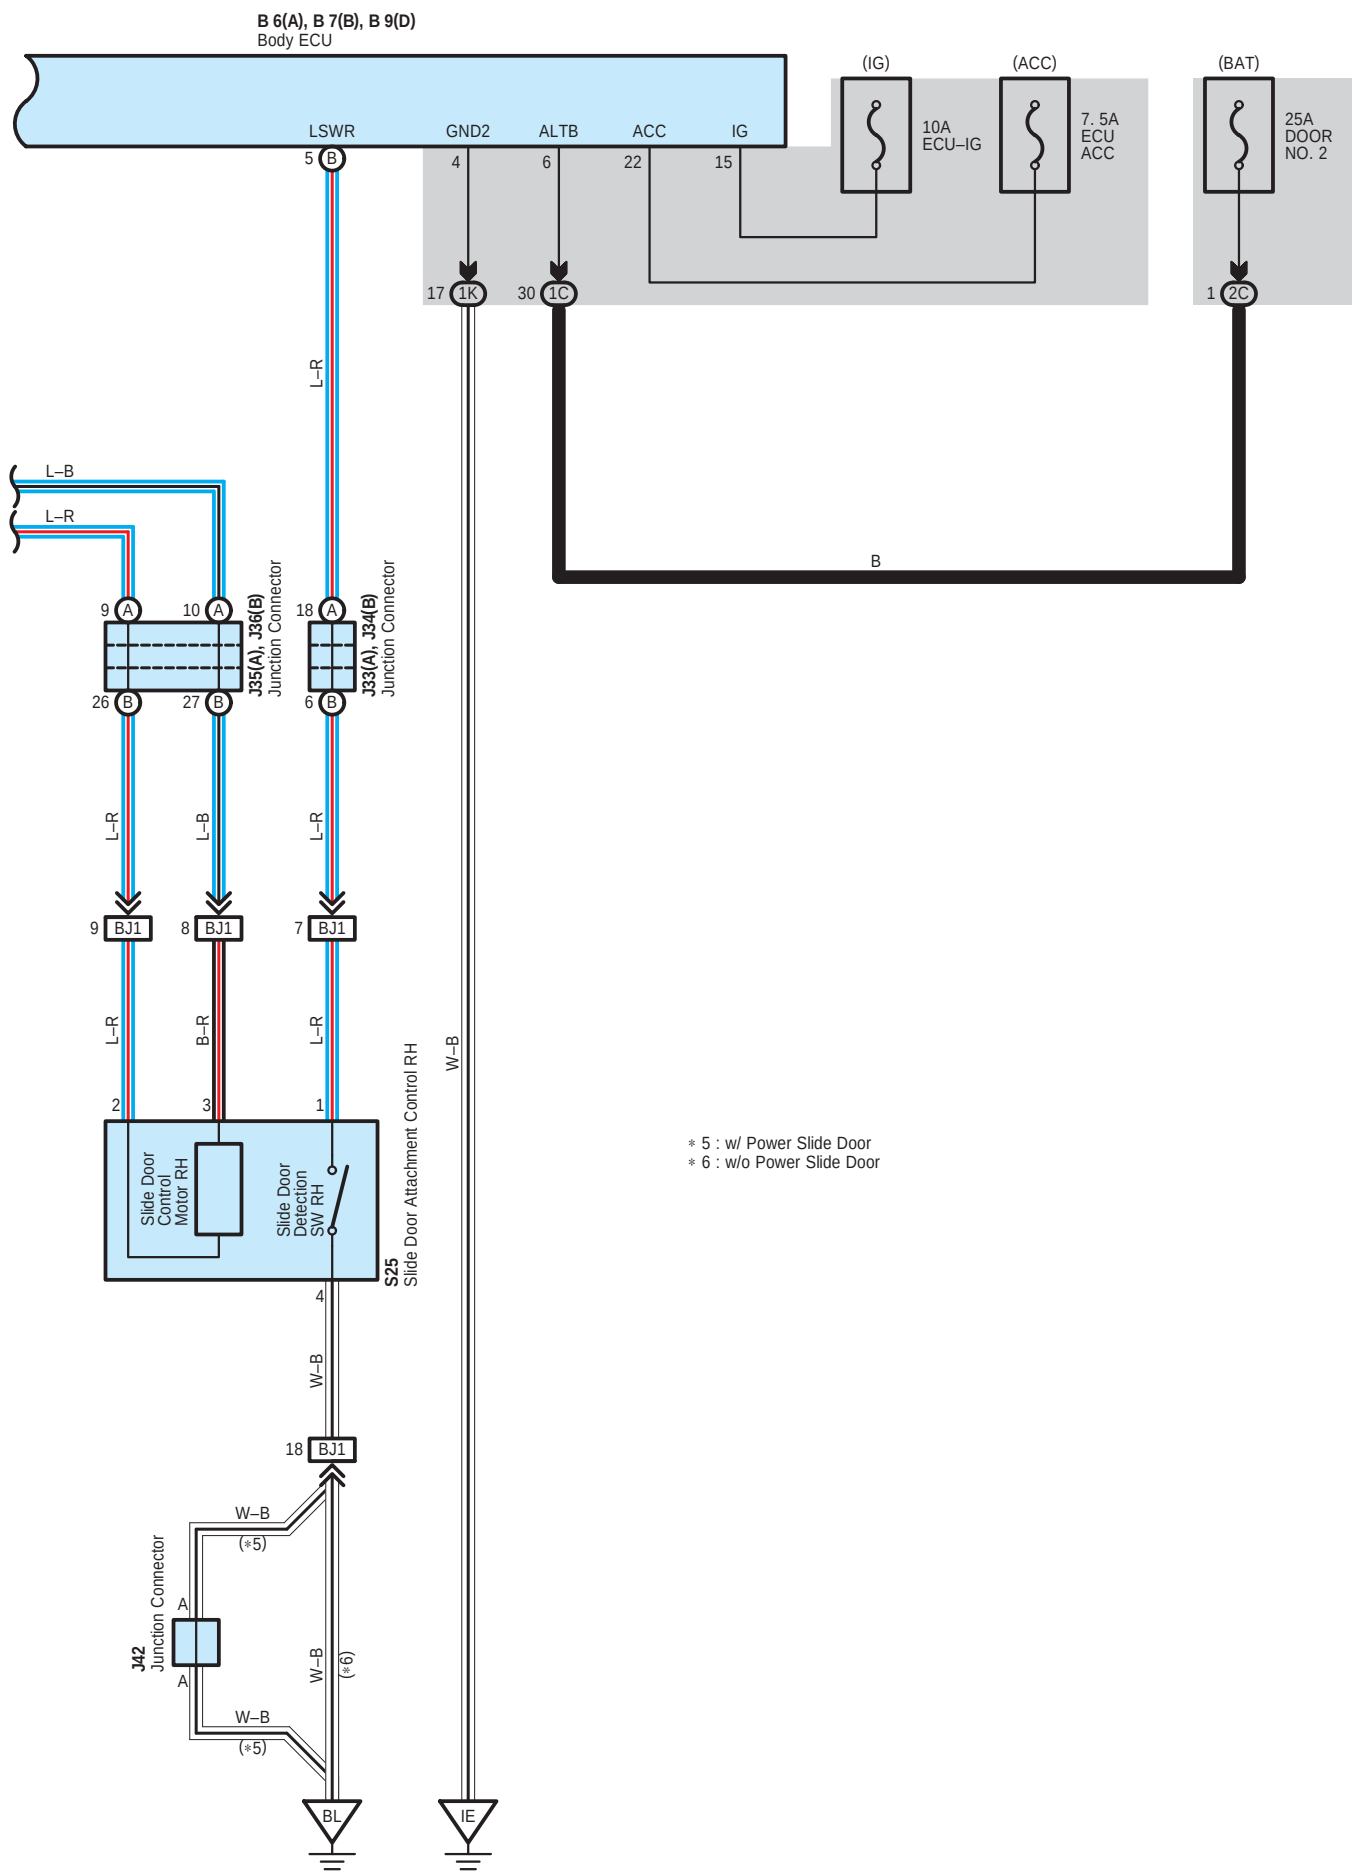

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
A9	38	D10	42	J33	A 40
A20	A 38	D11	42	J34	B 40
	D 38	D12	42	J35	A 40
A21	B 38	E5	B 39	J36	B 40
B6	A 38	E6	C 39	J37	43
B7	B 38	G2	36	J38	43
B9	D 38	J9	A 40	J41	43
B11	42	J10	B 40	J42	43
B18	A 46 (*1)	J11	A 40	K4	40
	47 (*2)	J12	B 40	P14	43
	B 46 (*1)	J13	A 40	S22	44
	47 (*2)	J14	B 40	S25	44
C10	39	J18	40	S28	44
D7	42	J19	40	S29	44
D8	42	J25	A 40		
D9	42	J26	B 40		

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1H	30	
1J	31	
1K		
1L		
1P	31	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	52	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IA2		
IM1	53	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IM2		
BD1	54	Rear Door No.2 Wire and Floor No.1 Wire (On the Left Rear Wheel House)
BG1	55	Back Door No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)
BH1	55	Floor No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)
BJ1	55	Rear Door No.1 Wire and Floor No.2 Wire (On the Right Rear Wheel House)

 : Ground Points

Code	See Page	Ground Points Location
IE	52	Left Kick Panel
IF	52	Instrument Panel Brace LH
IG	52	Right Kick Panel
BH	54	Under the Left Center Pillar
BL	54	Right Rear Quarter Panel
BM	54	Left Rear Quarter Panel
BN	54	Left Side of the Back Door

* 1 : Front Seat w/ Power Seat * 2 : Front Seat w/o Power Seat * 3 : Rear No.2 Seat