



Theft Deterrent

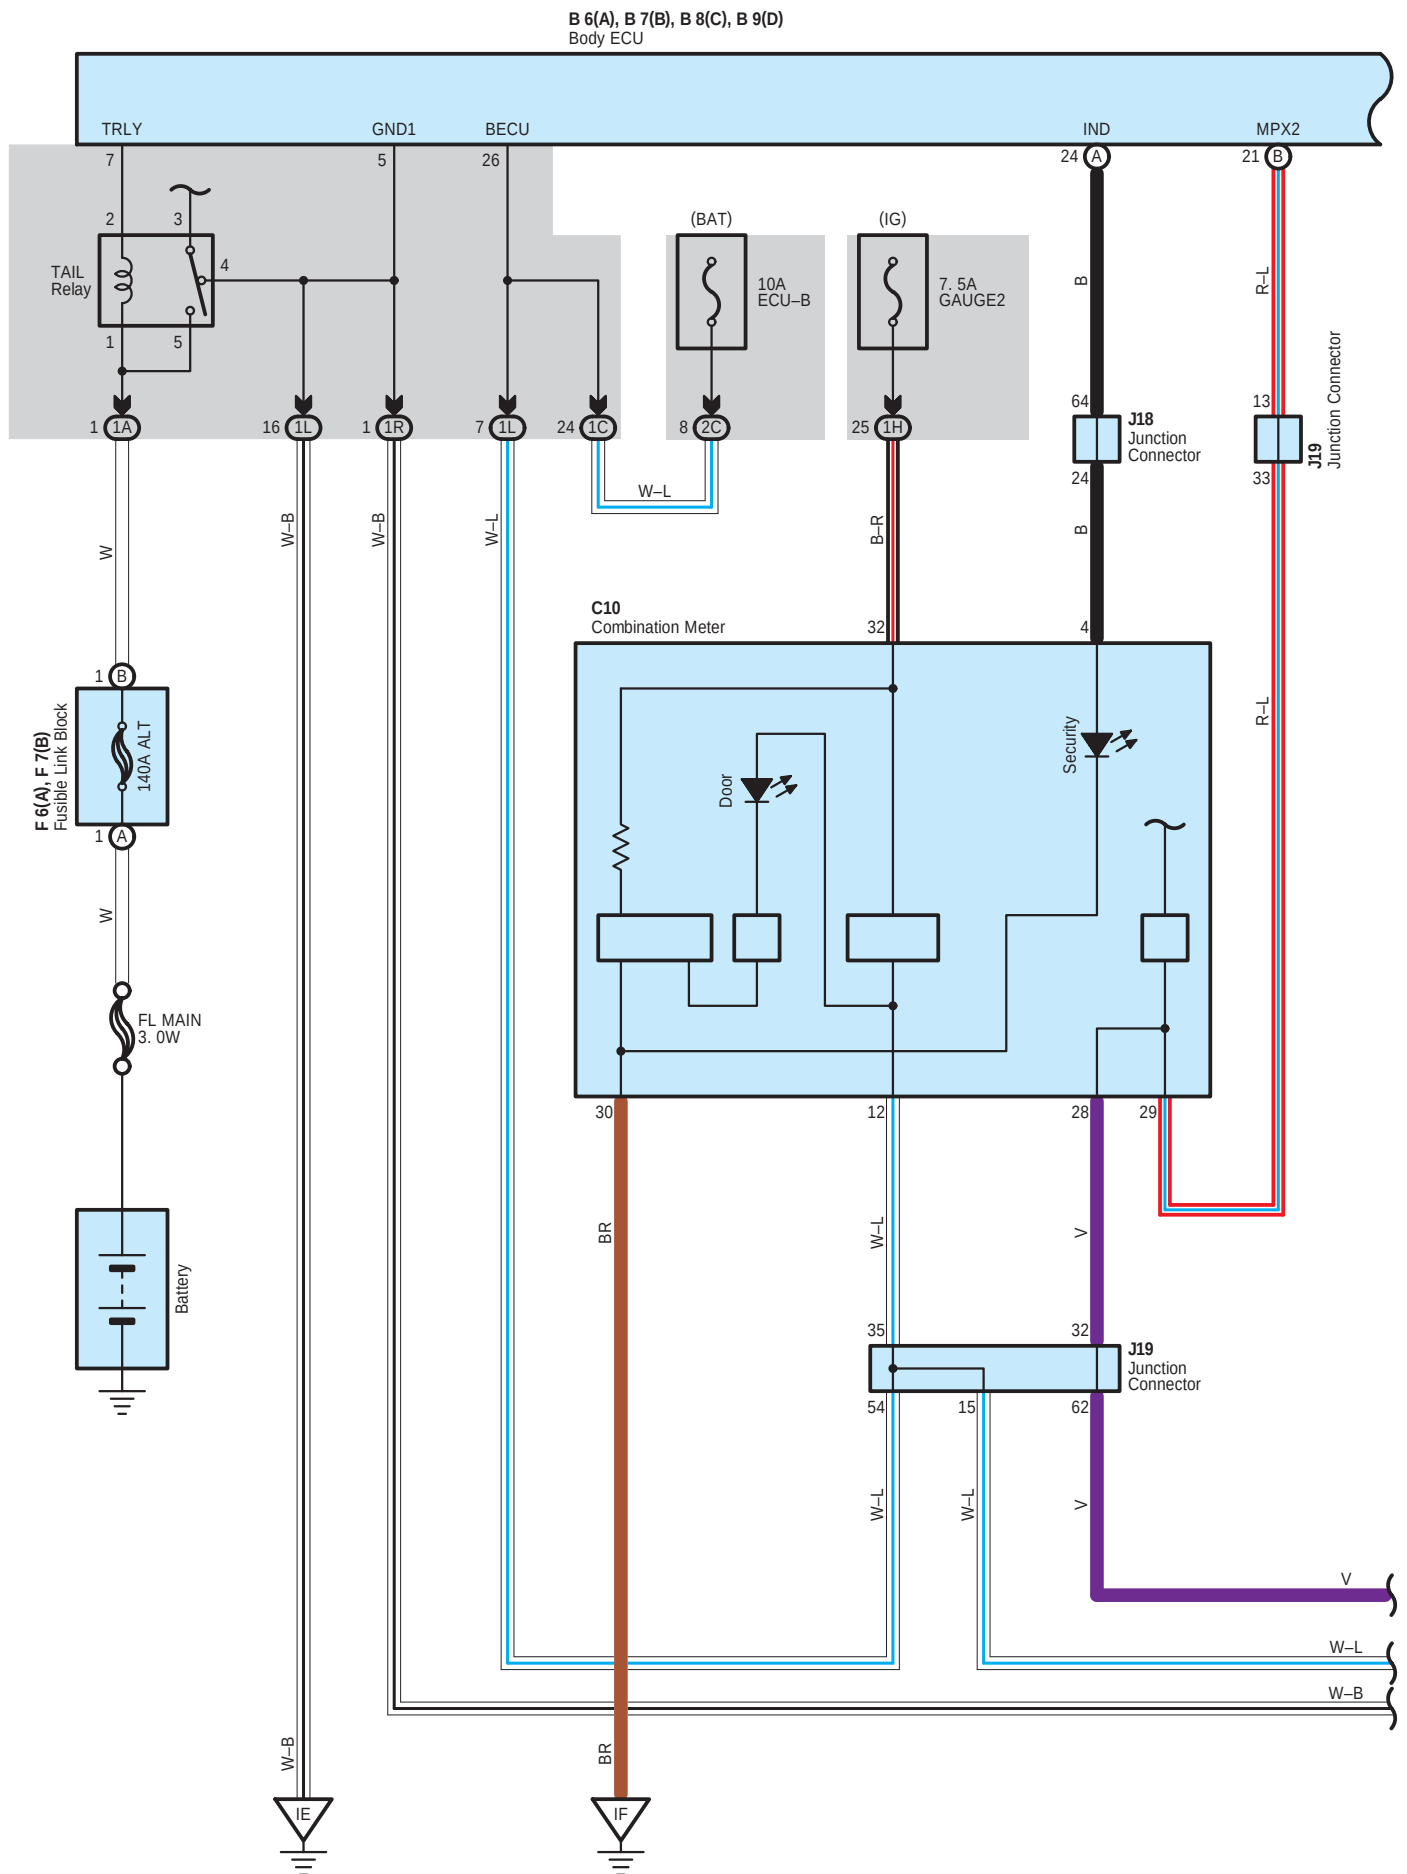



B 6(A), B 7(B), B 8(C), B 9(D)
Body ECU

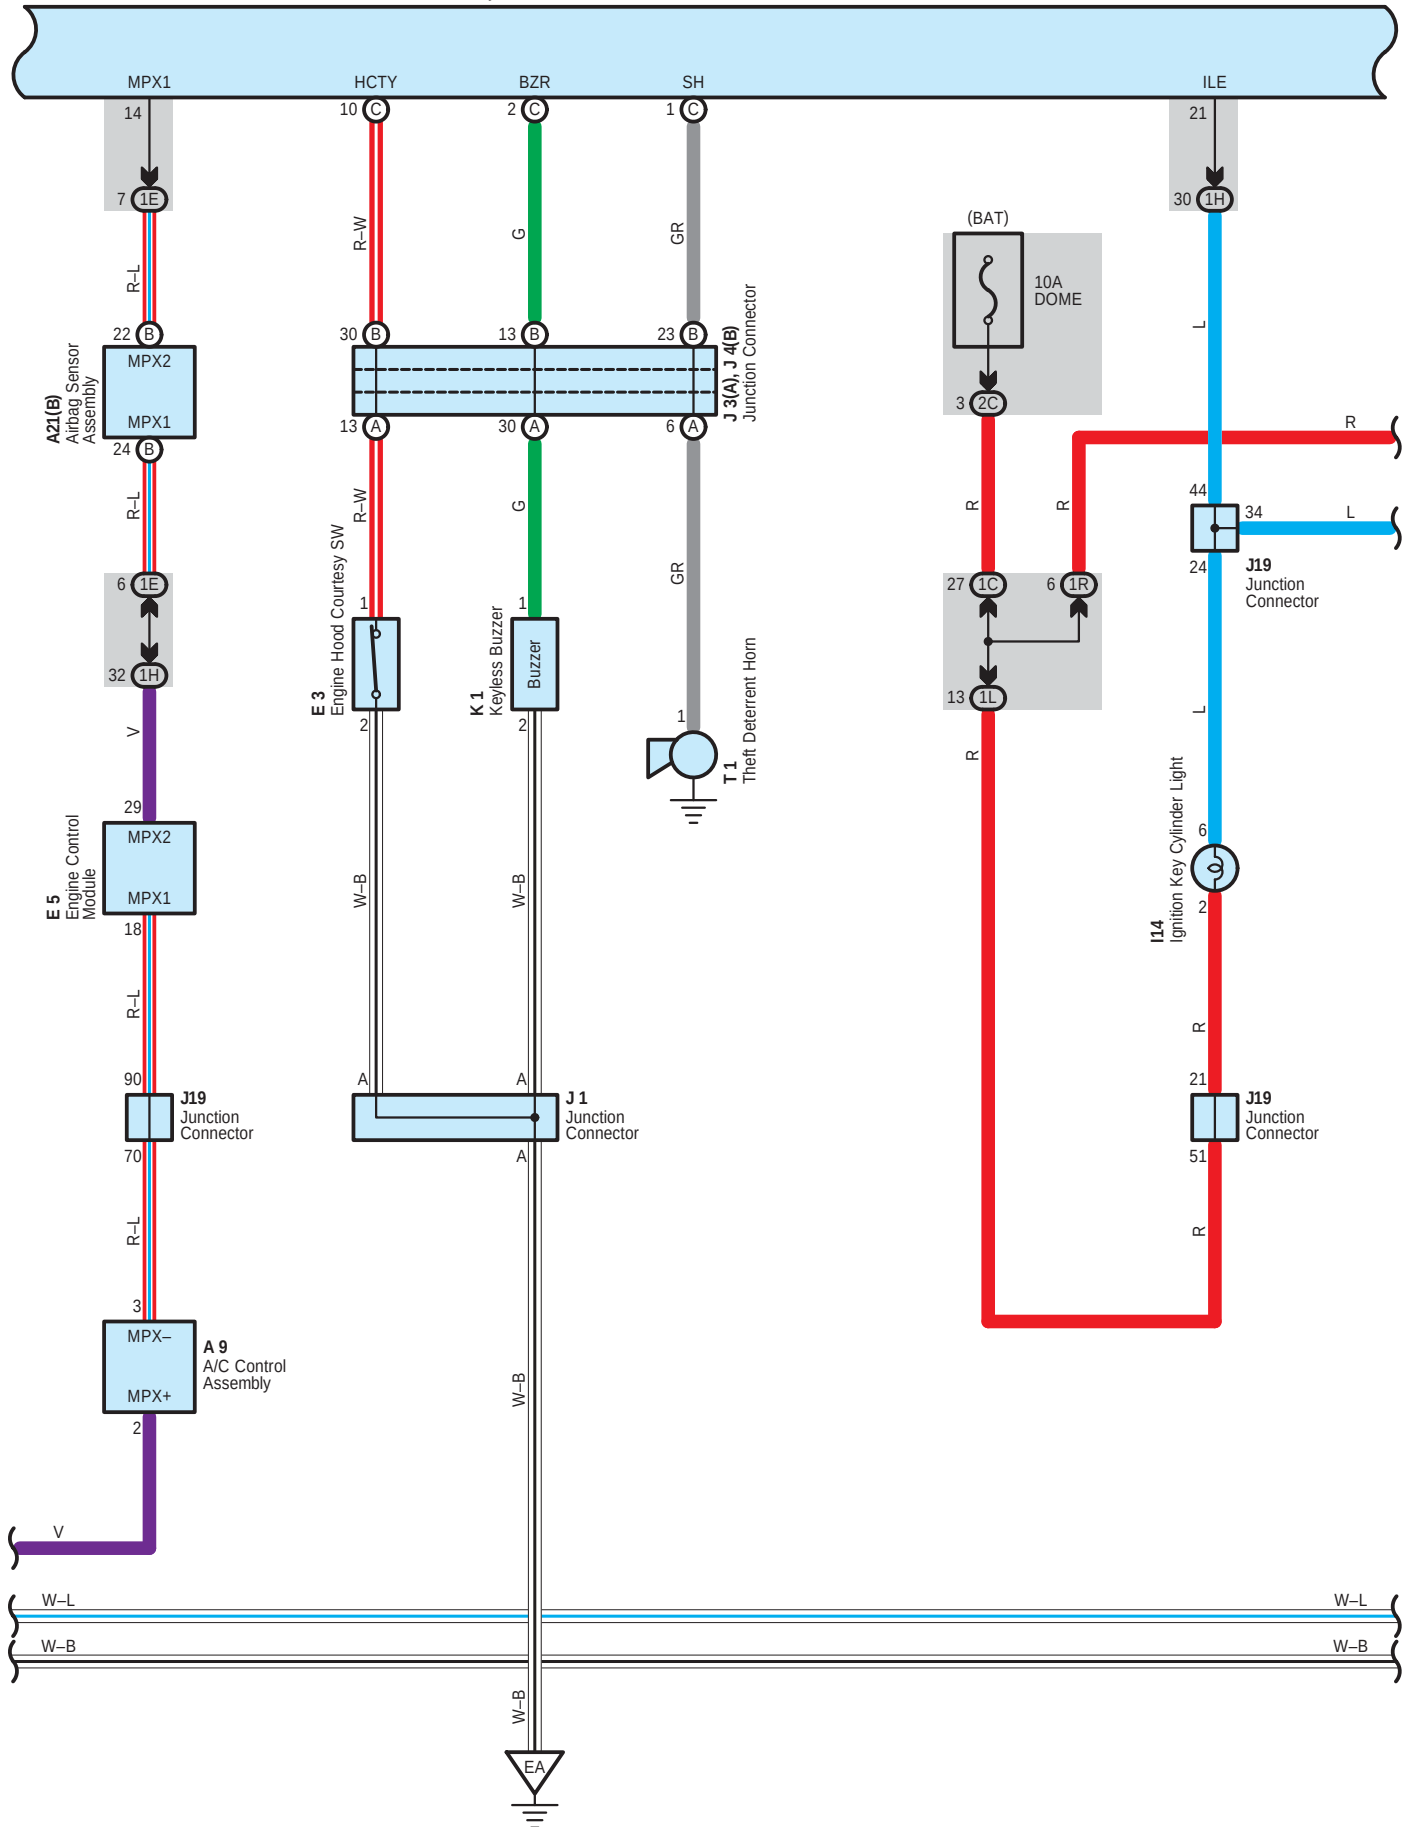


Theft Deterrent


B 6(A), B 7(B), B 8(C), B 9(D)
Body ECU

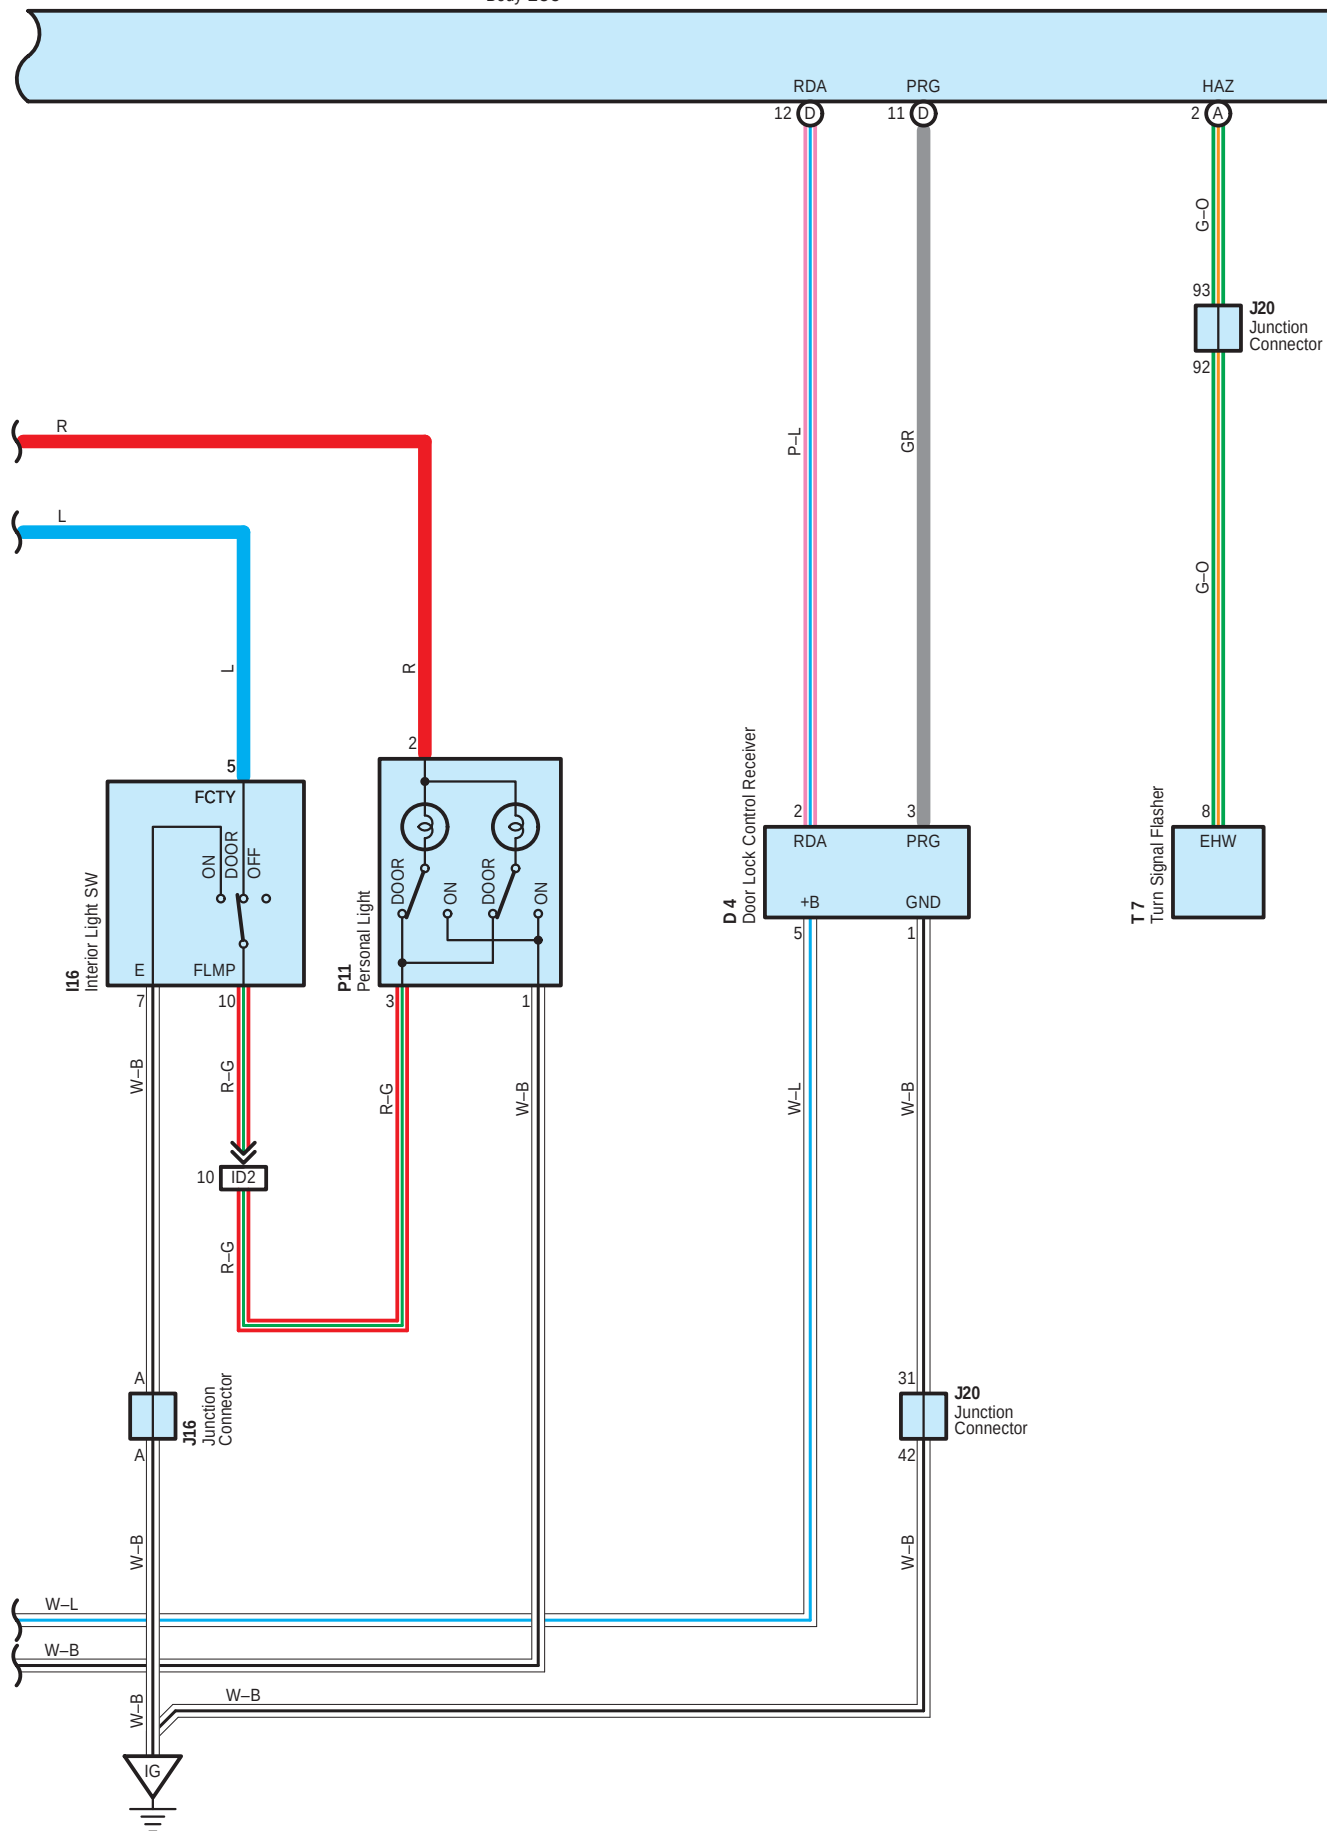

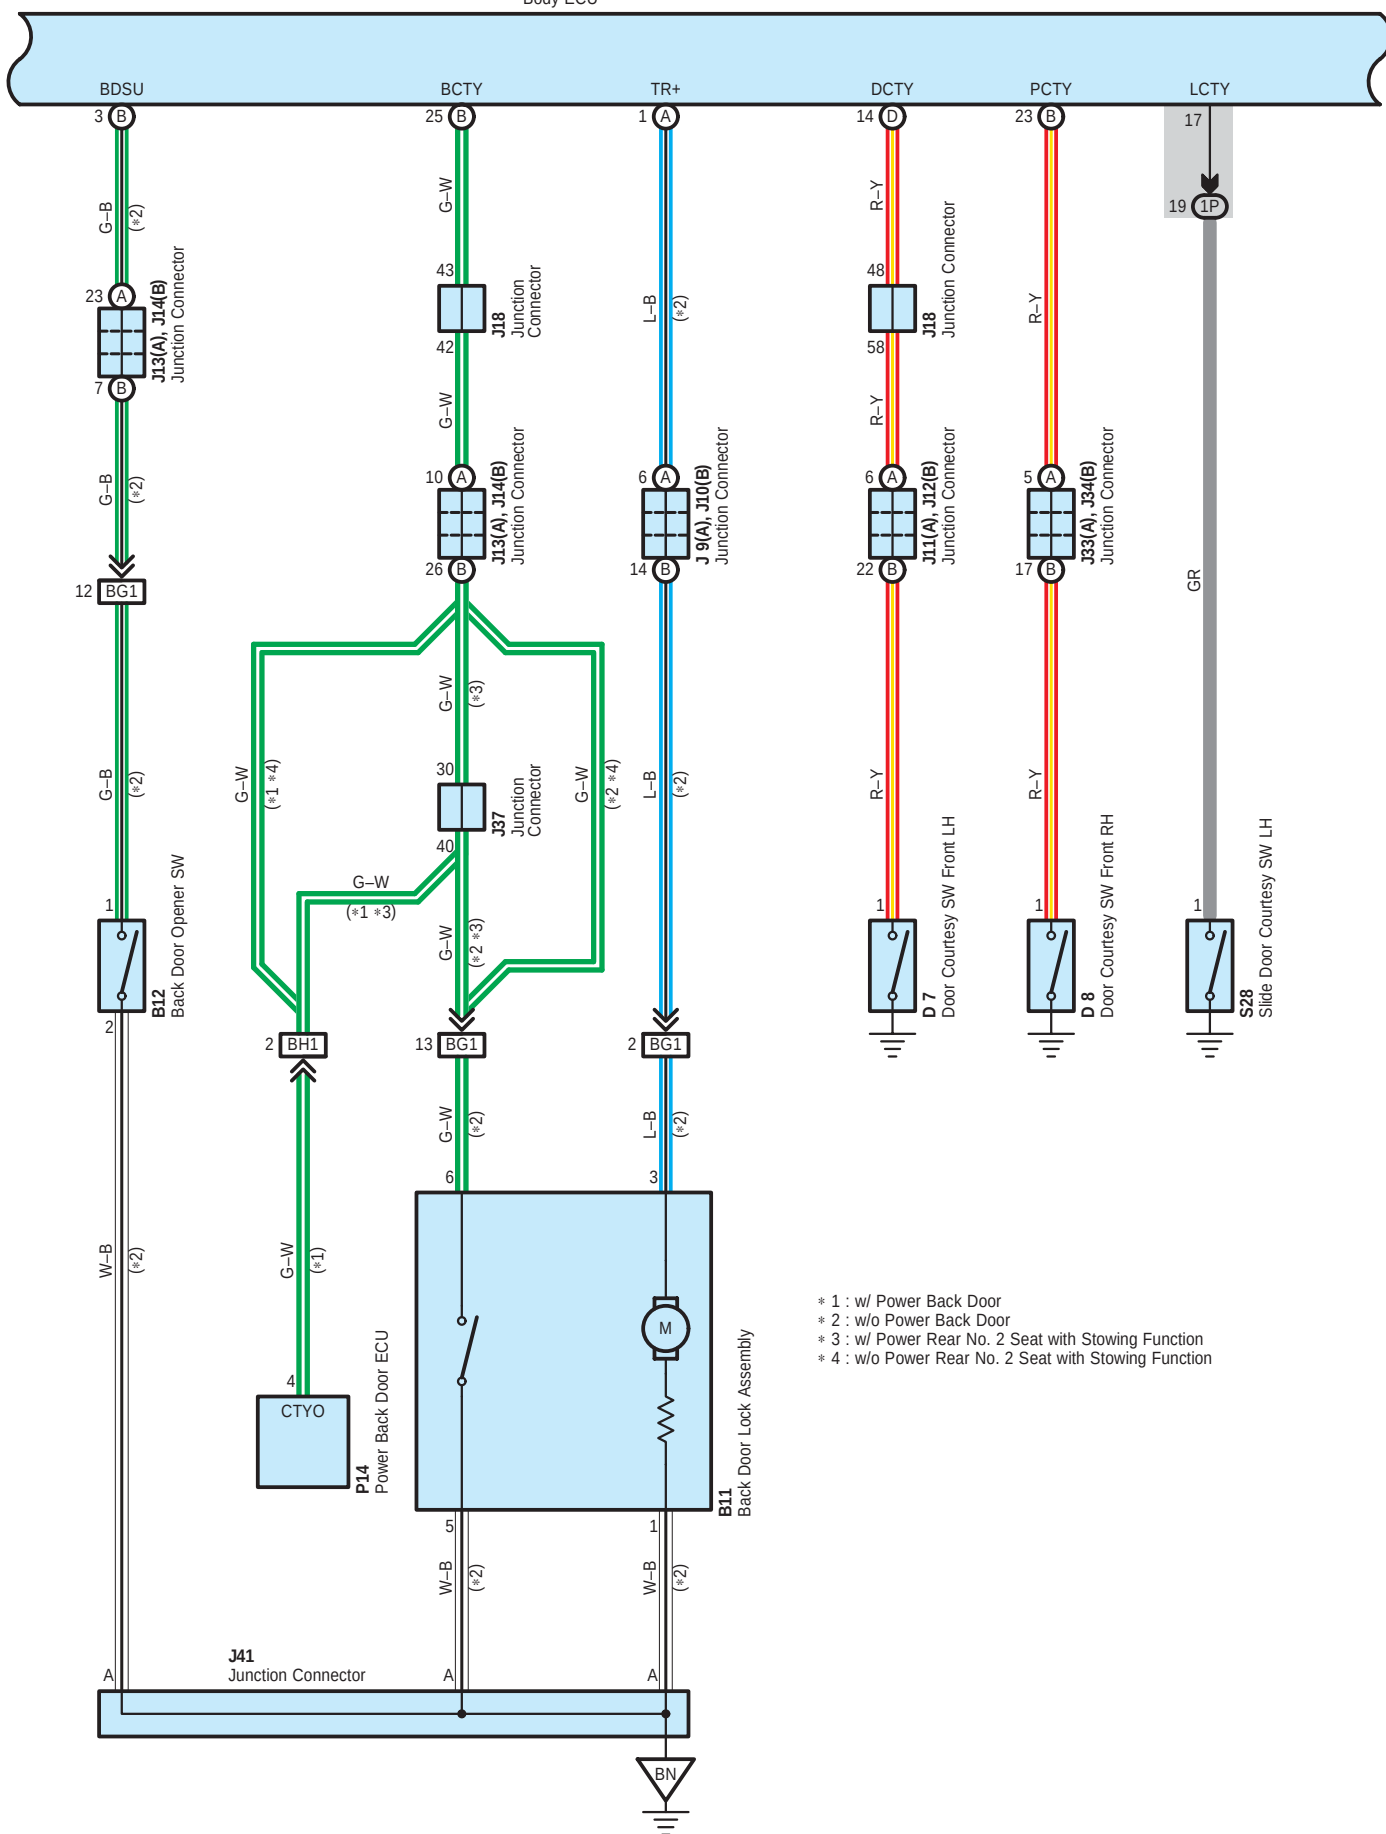


- * 1 : w/ Power Back Door
- * 2 : w/o Power Back Door
- * 3 : w/ Power Rear No. 2 Seat with Stowing Function
- * 4 : w/o Power Rear No. 2 Seat with Stowing Function

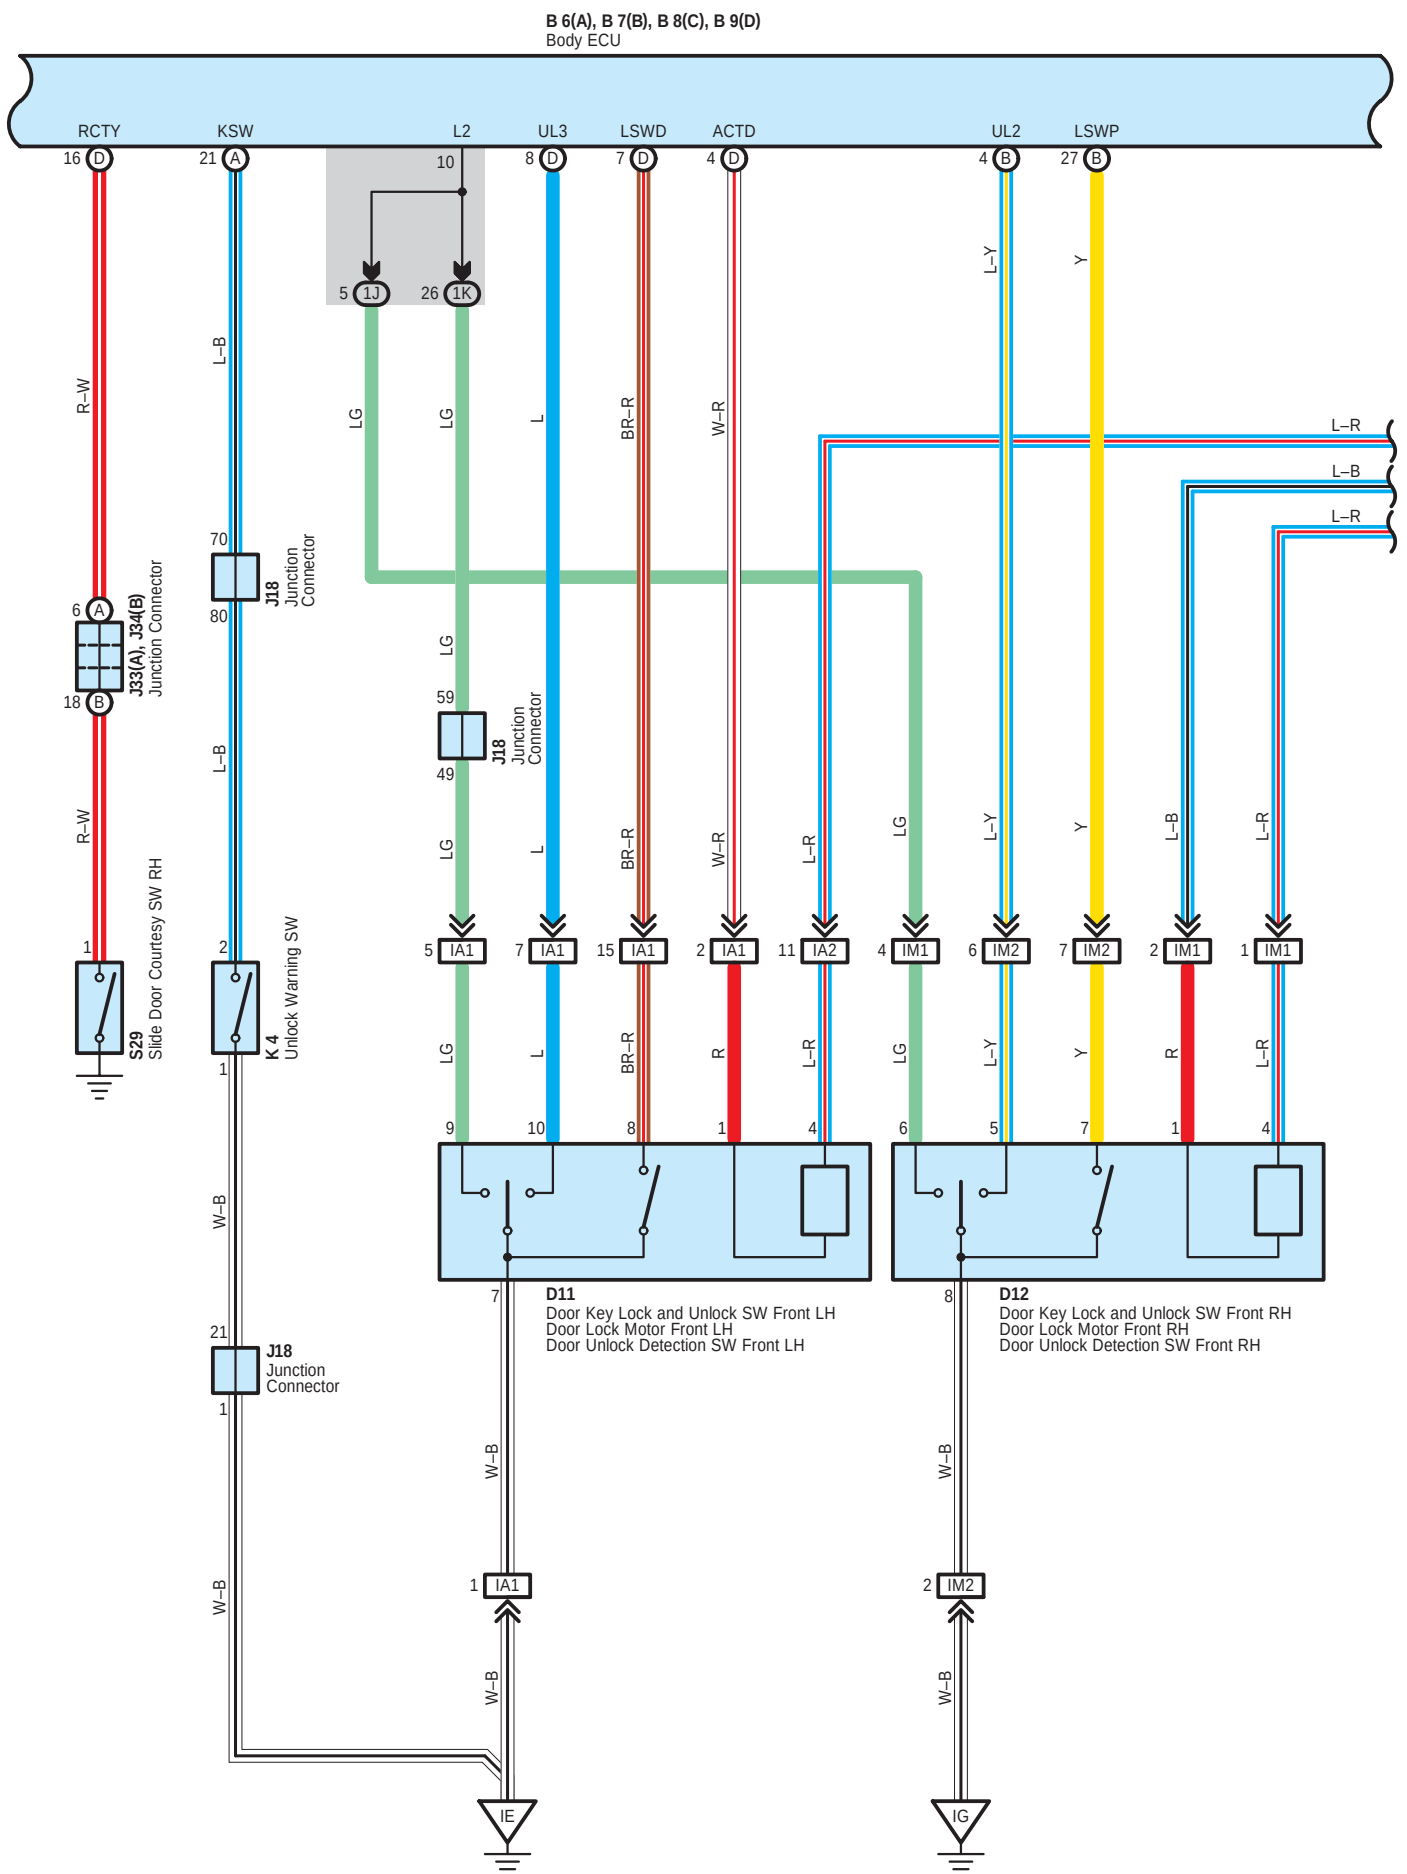

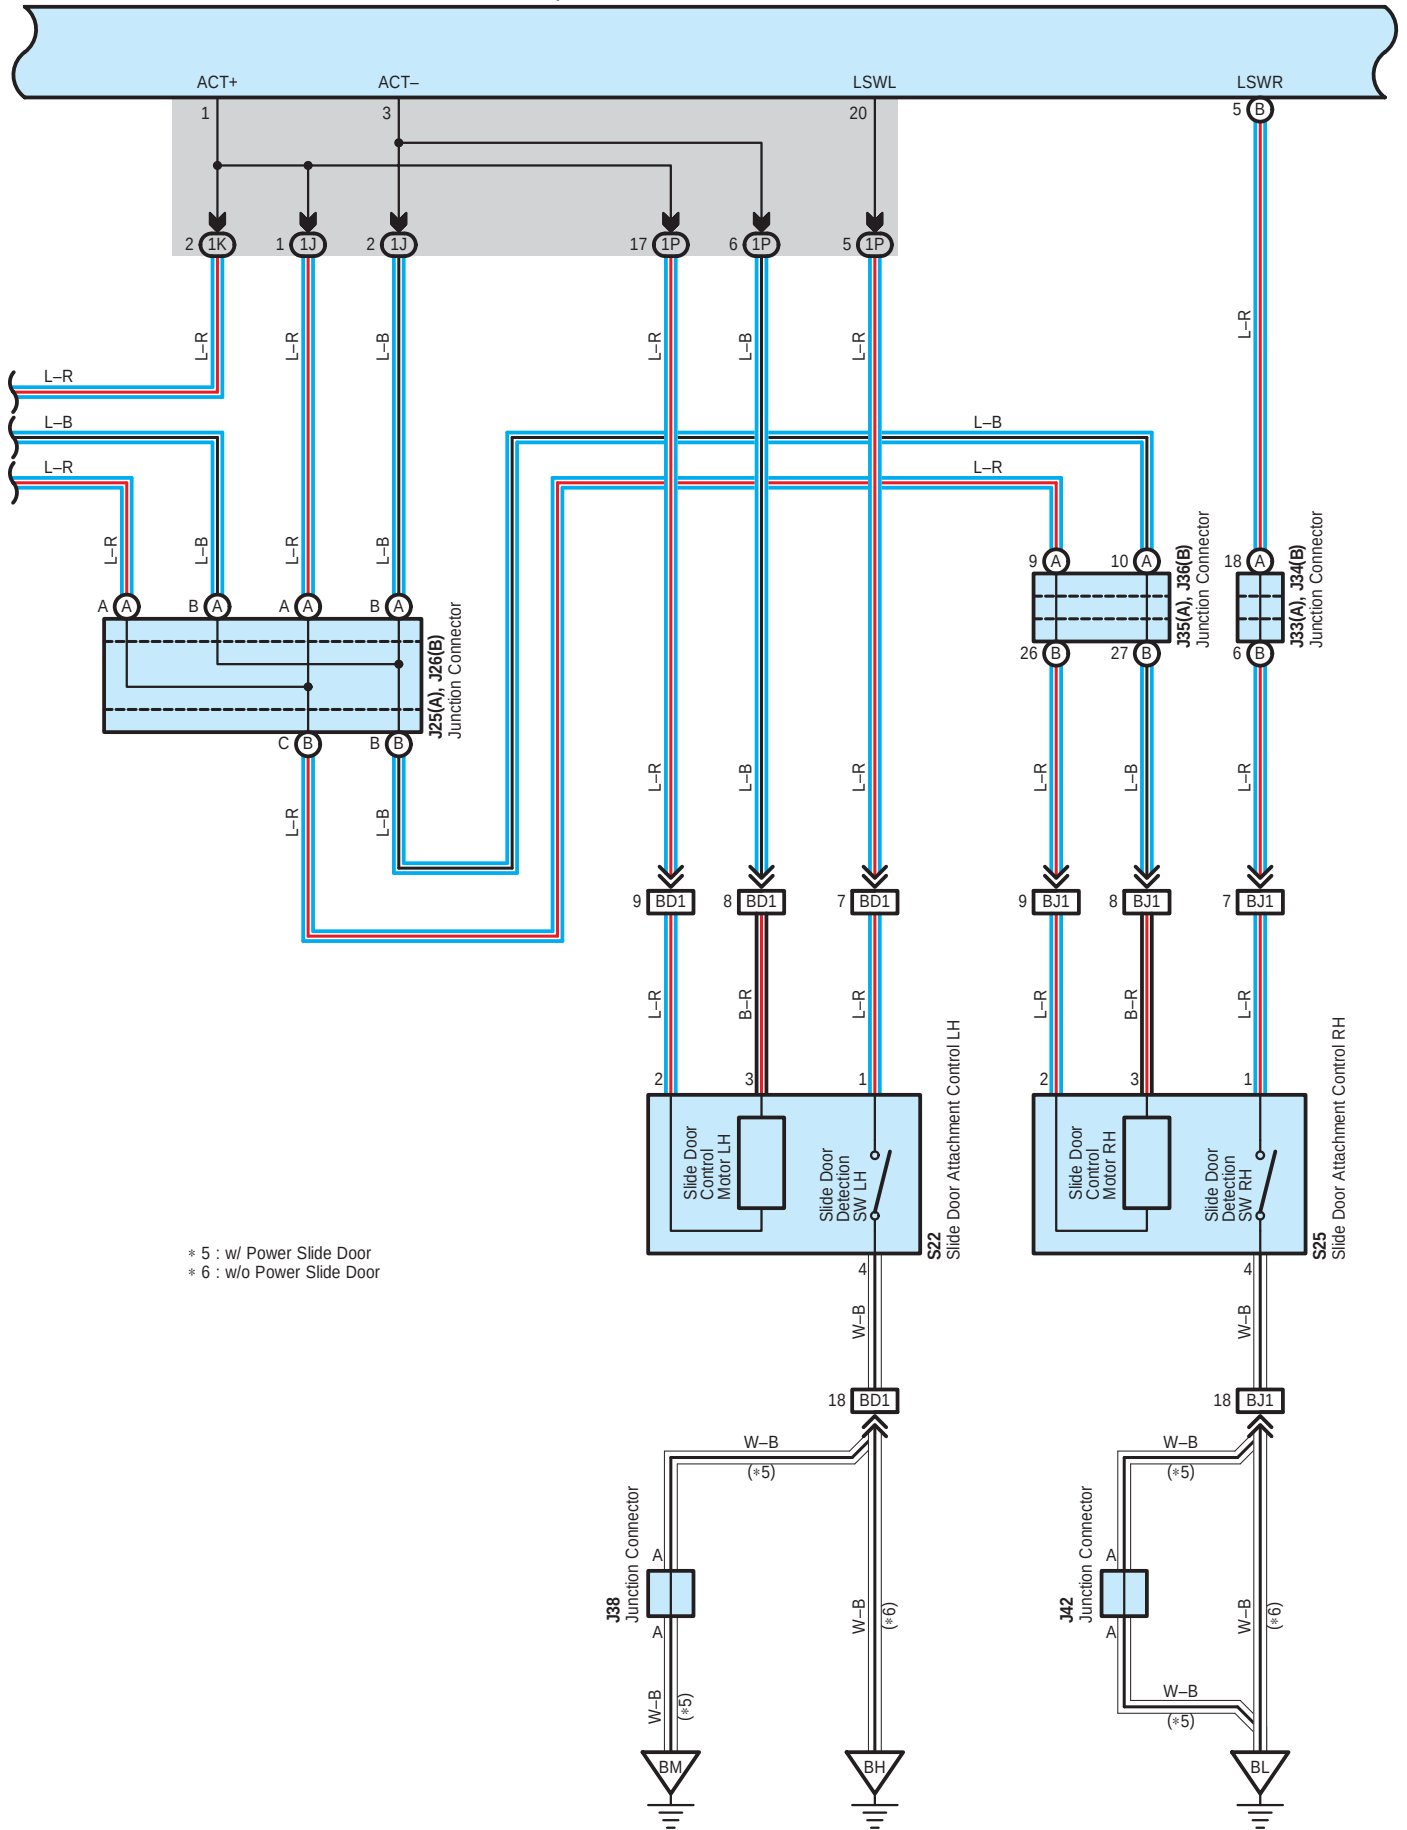

Theft Deterrent

B 6(A), B 7(B), B 8(C), B 9(D)
Body ECU

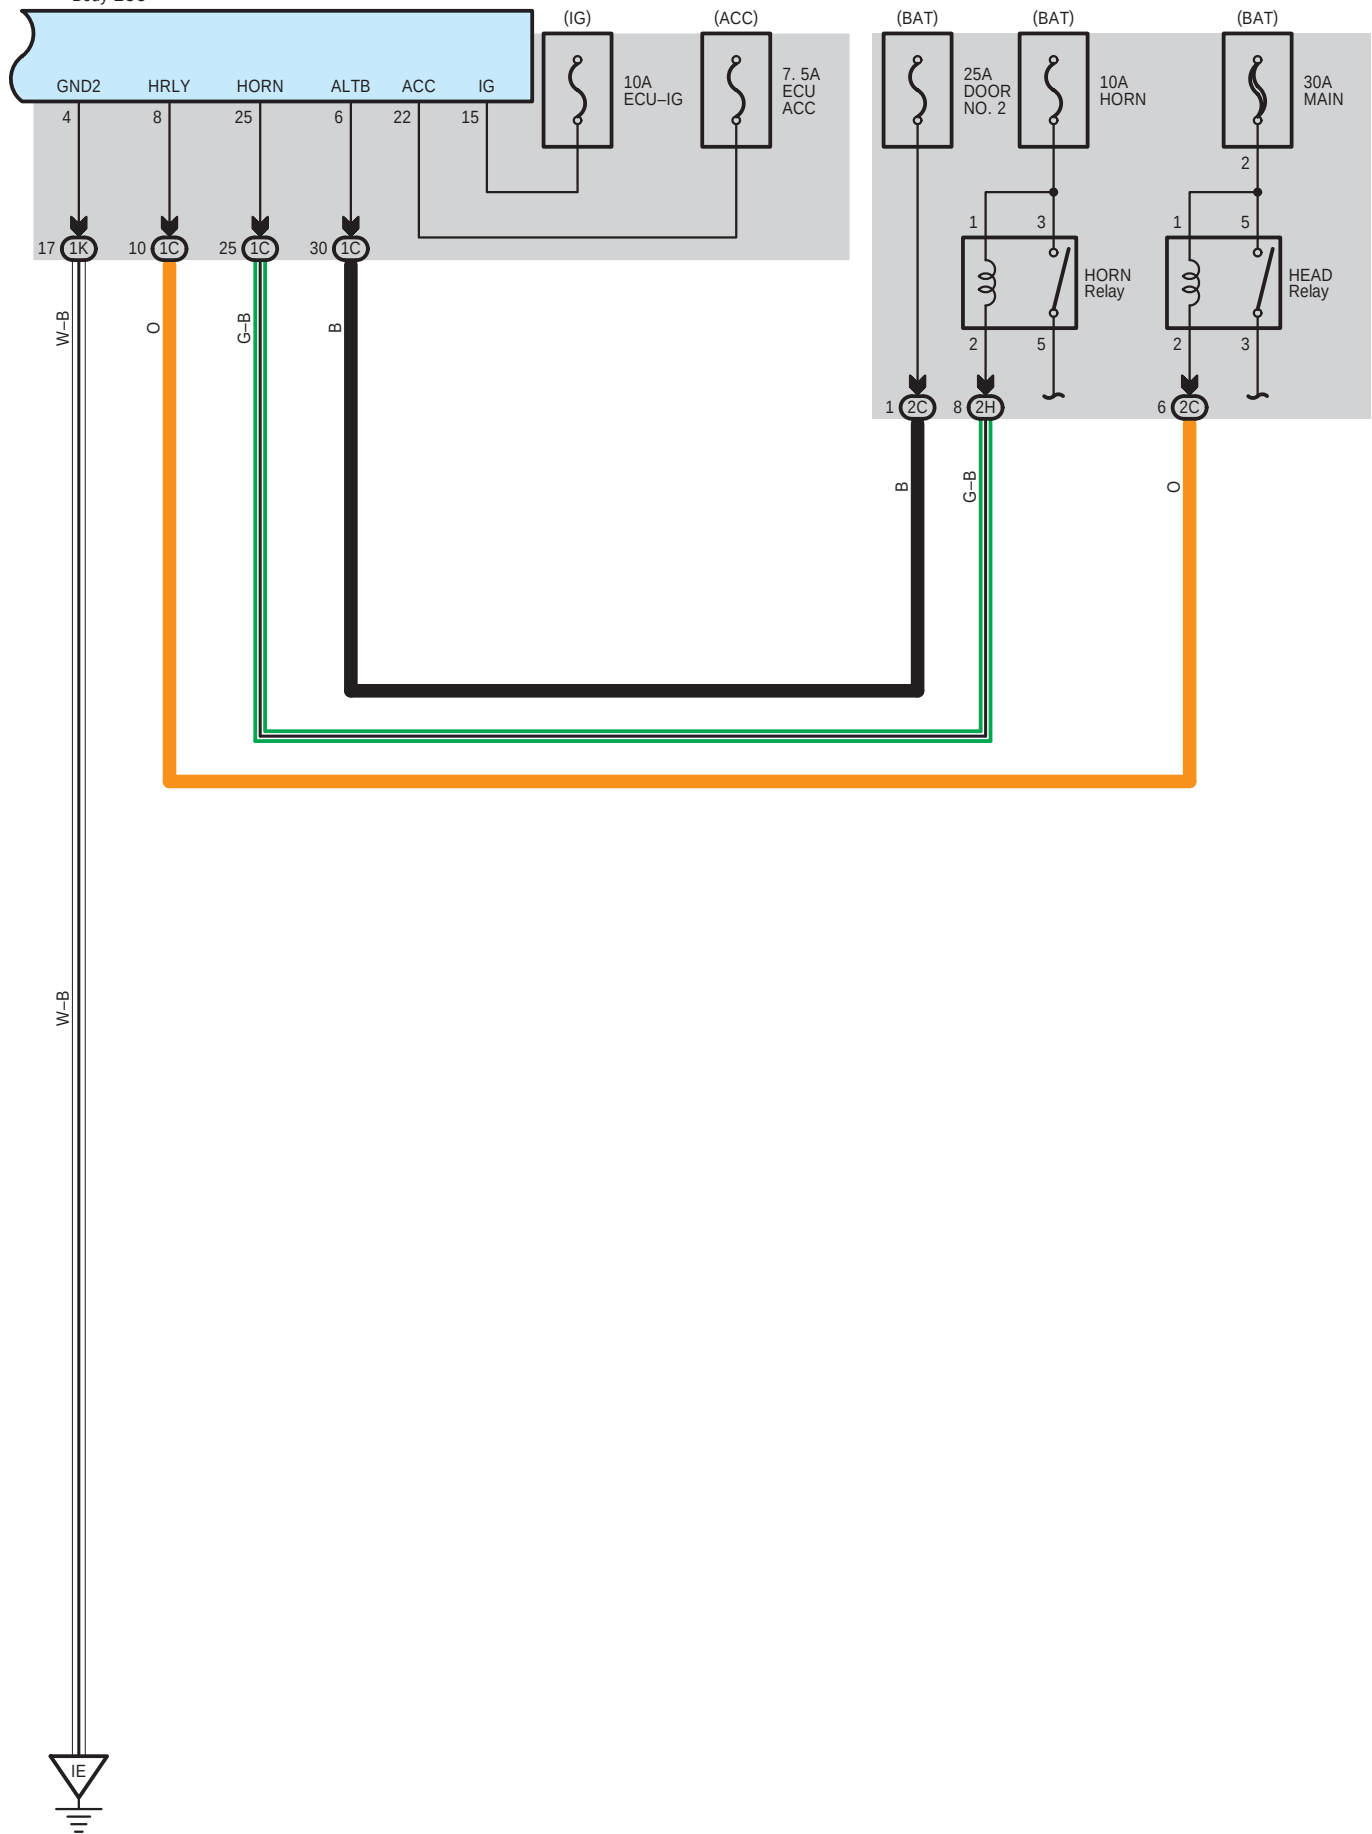

 : Parts Location

Code		See Page	Code		See Page	Code		See Page
A9		38	I14		39	J34	B	40
A21	B	38	I16		39	J35	A	40
B6	A	38	J1		37	J36	B	40
B7	B	38	J3	A	40	J37		43
B8	C	38	J4	B	40	J38		43
B9	D	38	J9	A	40	J41		43
B11		42	J10	B	40	J42		43
B12		42	J11	A	40	K1		37
C10		39	J12	B	40	K4		40
D4		39	J13	A	40	P11		43
D7		42	J14	B	40	P14		43
D8		42	J16		40	S22		44
D11		42	J18		40	S25		44
D12		42	J19		40	S28		44
E3		36	J20		40	S29		44
E5		39	J25	A	40	T1		37
F6	A	36	J26	B	40	T7		41
F7	B	36	J33	A	40			

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1C		
1E	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1H	30	
1J	31	
1K		
1L		
1P	31	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)
1R	31	Roof Wire and Driver Side J/B (Lower Finish Panel)
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2H		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	52	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IA2		
ID2	52	Roof Wire and Instrument Panel Wire (Near the Driver Side J/B)
IM1	53	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IM2		
BD1	54	Rear Door No.2 Wire and Floor No.1 Wire (On the Left Rear Wheel House)
BG1	55	Back Door No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)
BH1	55	Floor No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)
BJ1	55	Rear Door No.1 Wire and Floor No.2 Wire (On the Right Rear Wheel House)

Theft Deterrent



: Ground Points

Code	See Page	Ground Points Location
EA	50	Front Side of the Right Fender Apron
IE	52	Left Kick Panel
IF	52	Instrument Panel Brace LH
IG	52	Right Kick Panel
BH	54	Under the Left Center Pillar
BL	54	Right Rear Quarter Panel
BM	54	Left Rear Quarter Panel
BN	54	Left Side of the Back Door

