





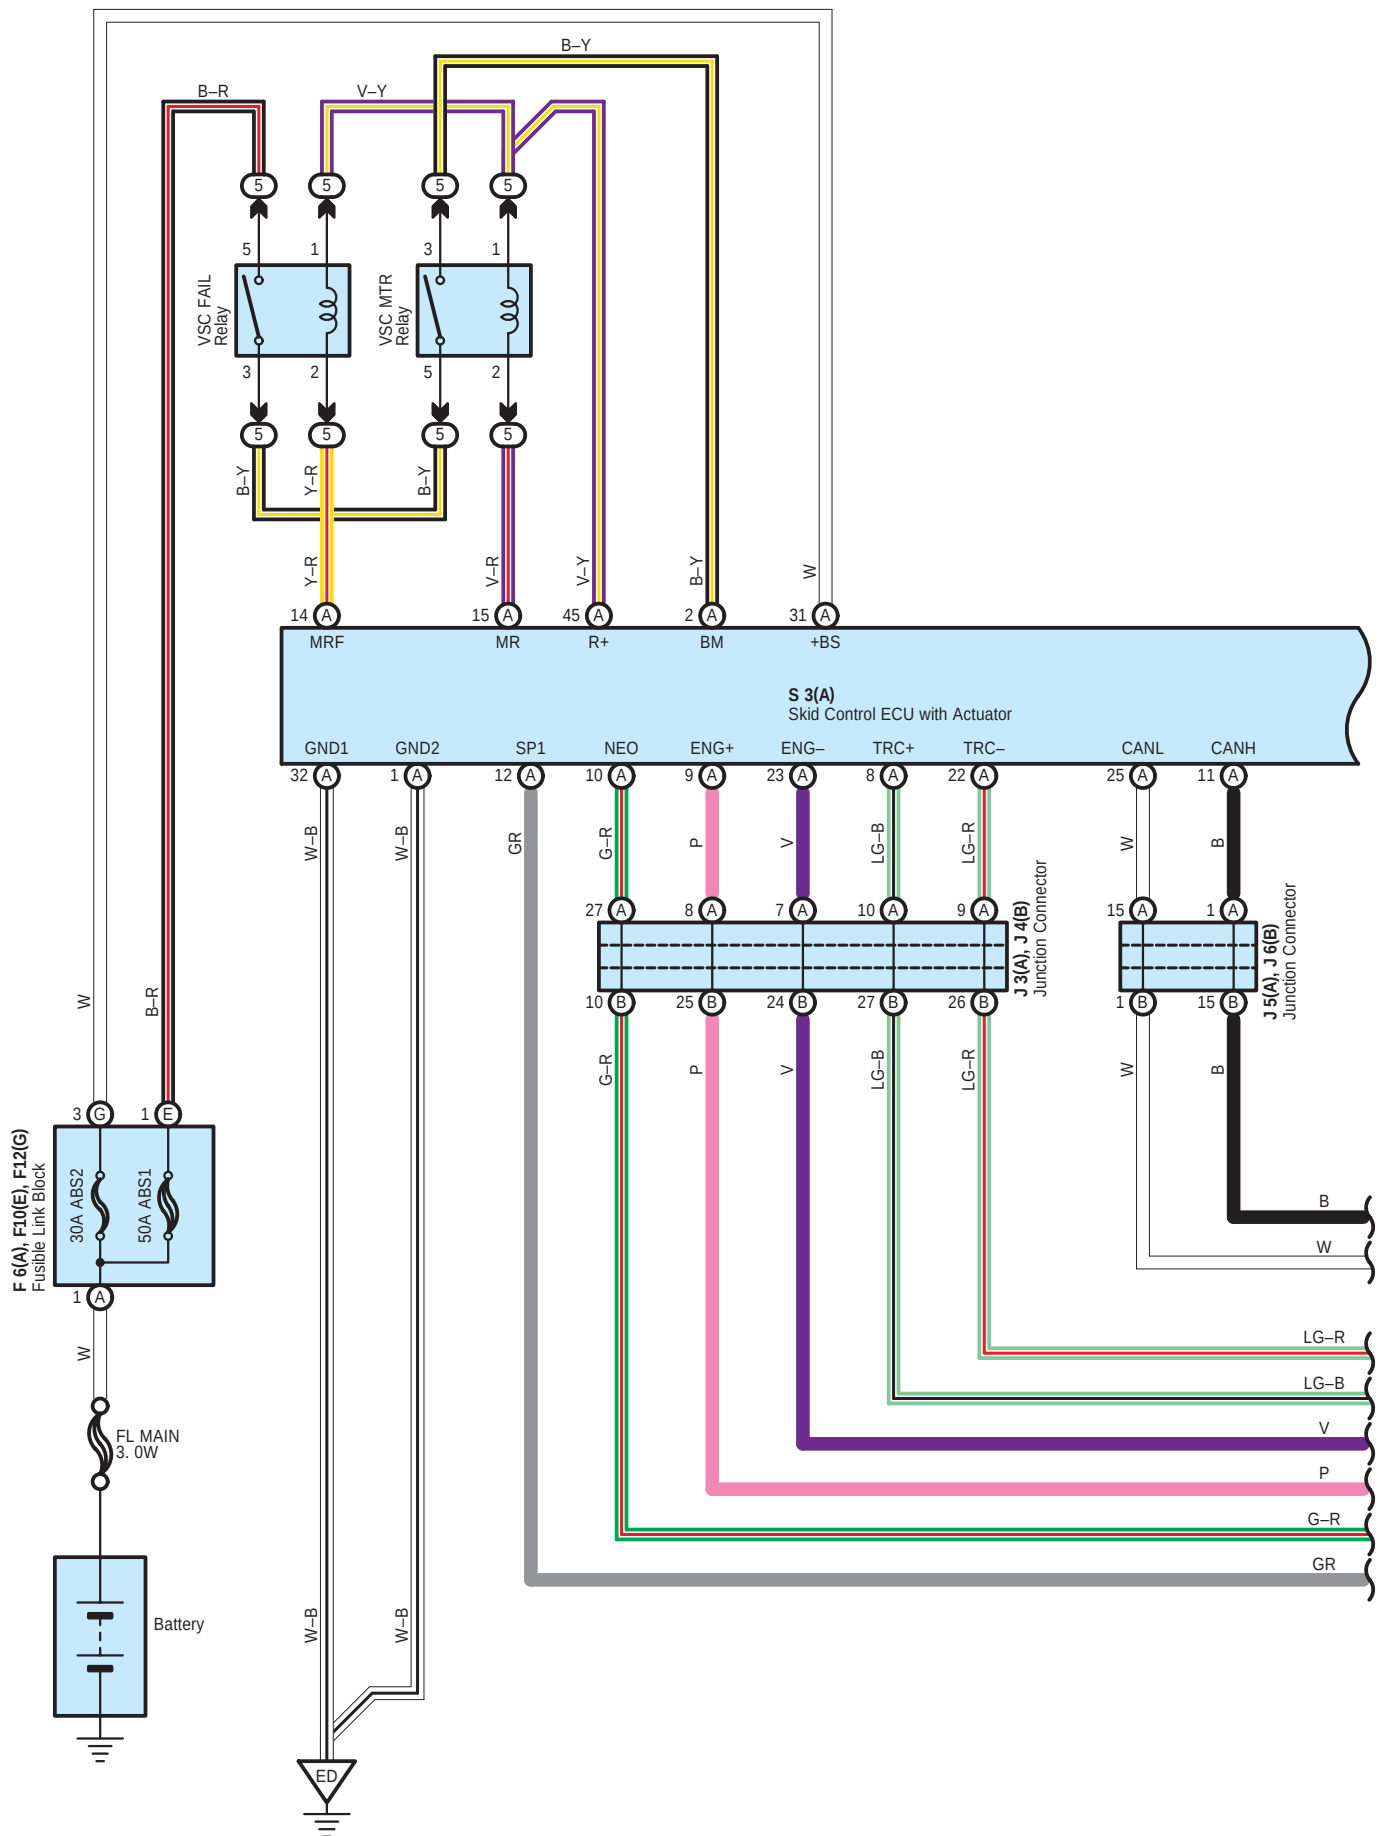

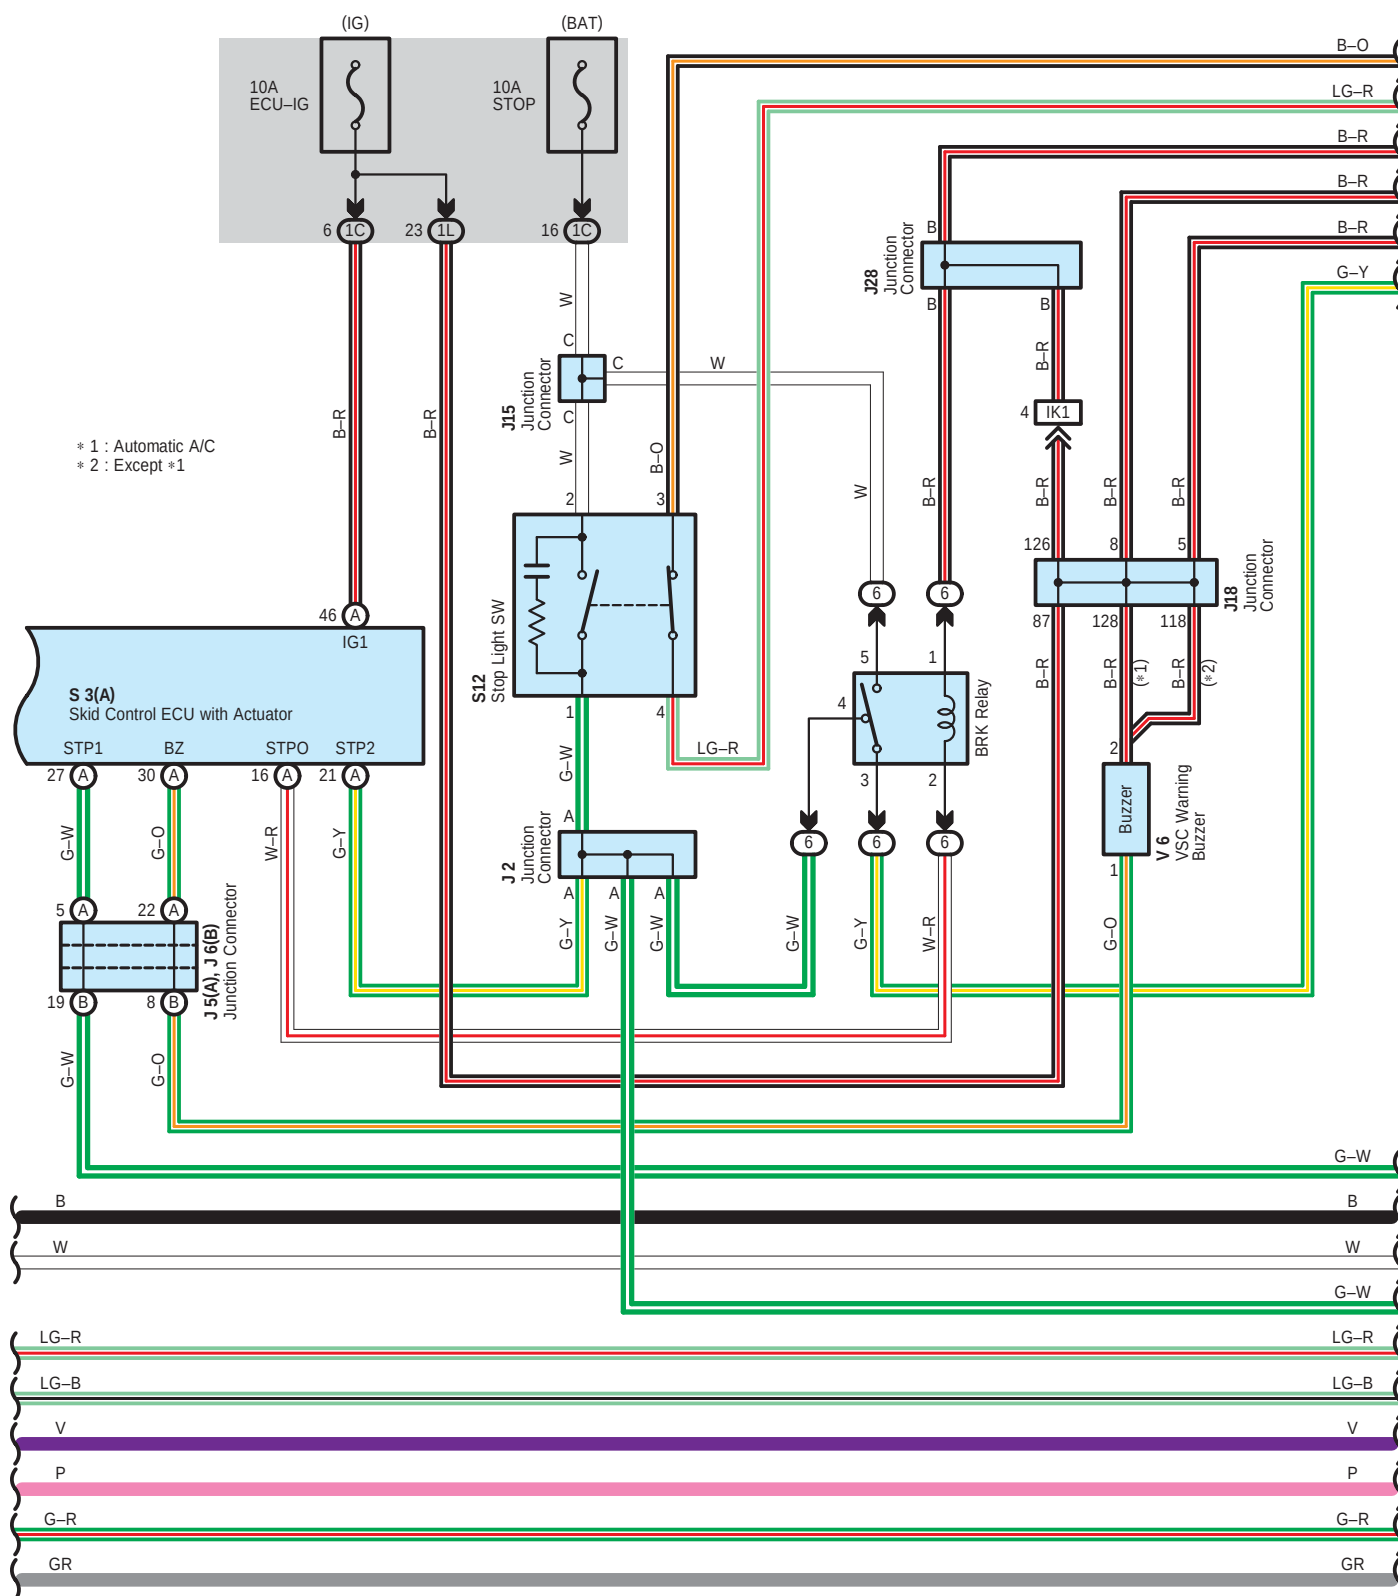


Dynamic Laser Cruise Control

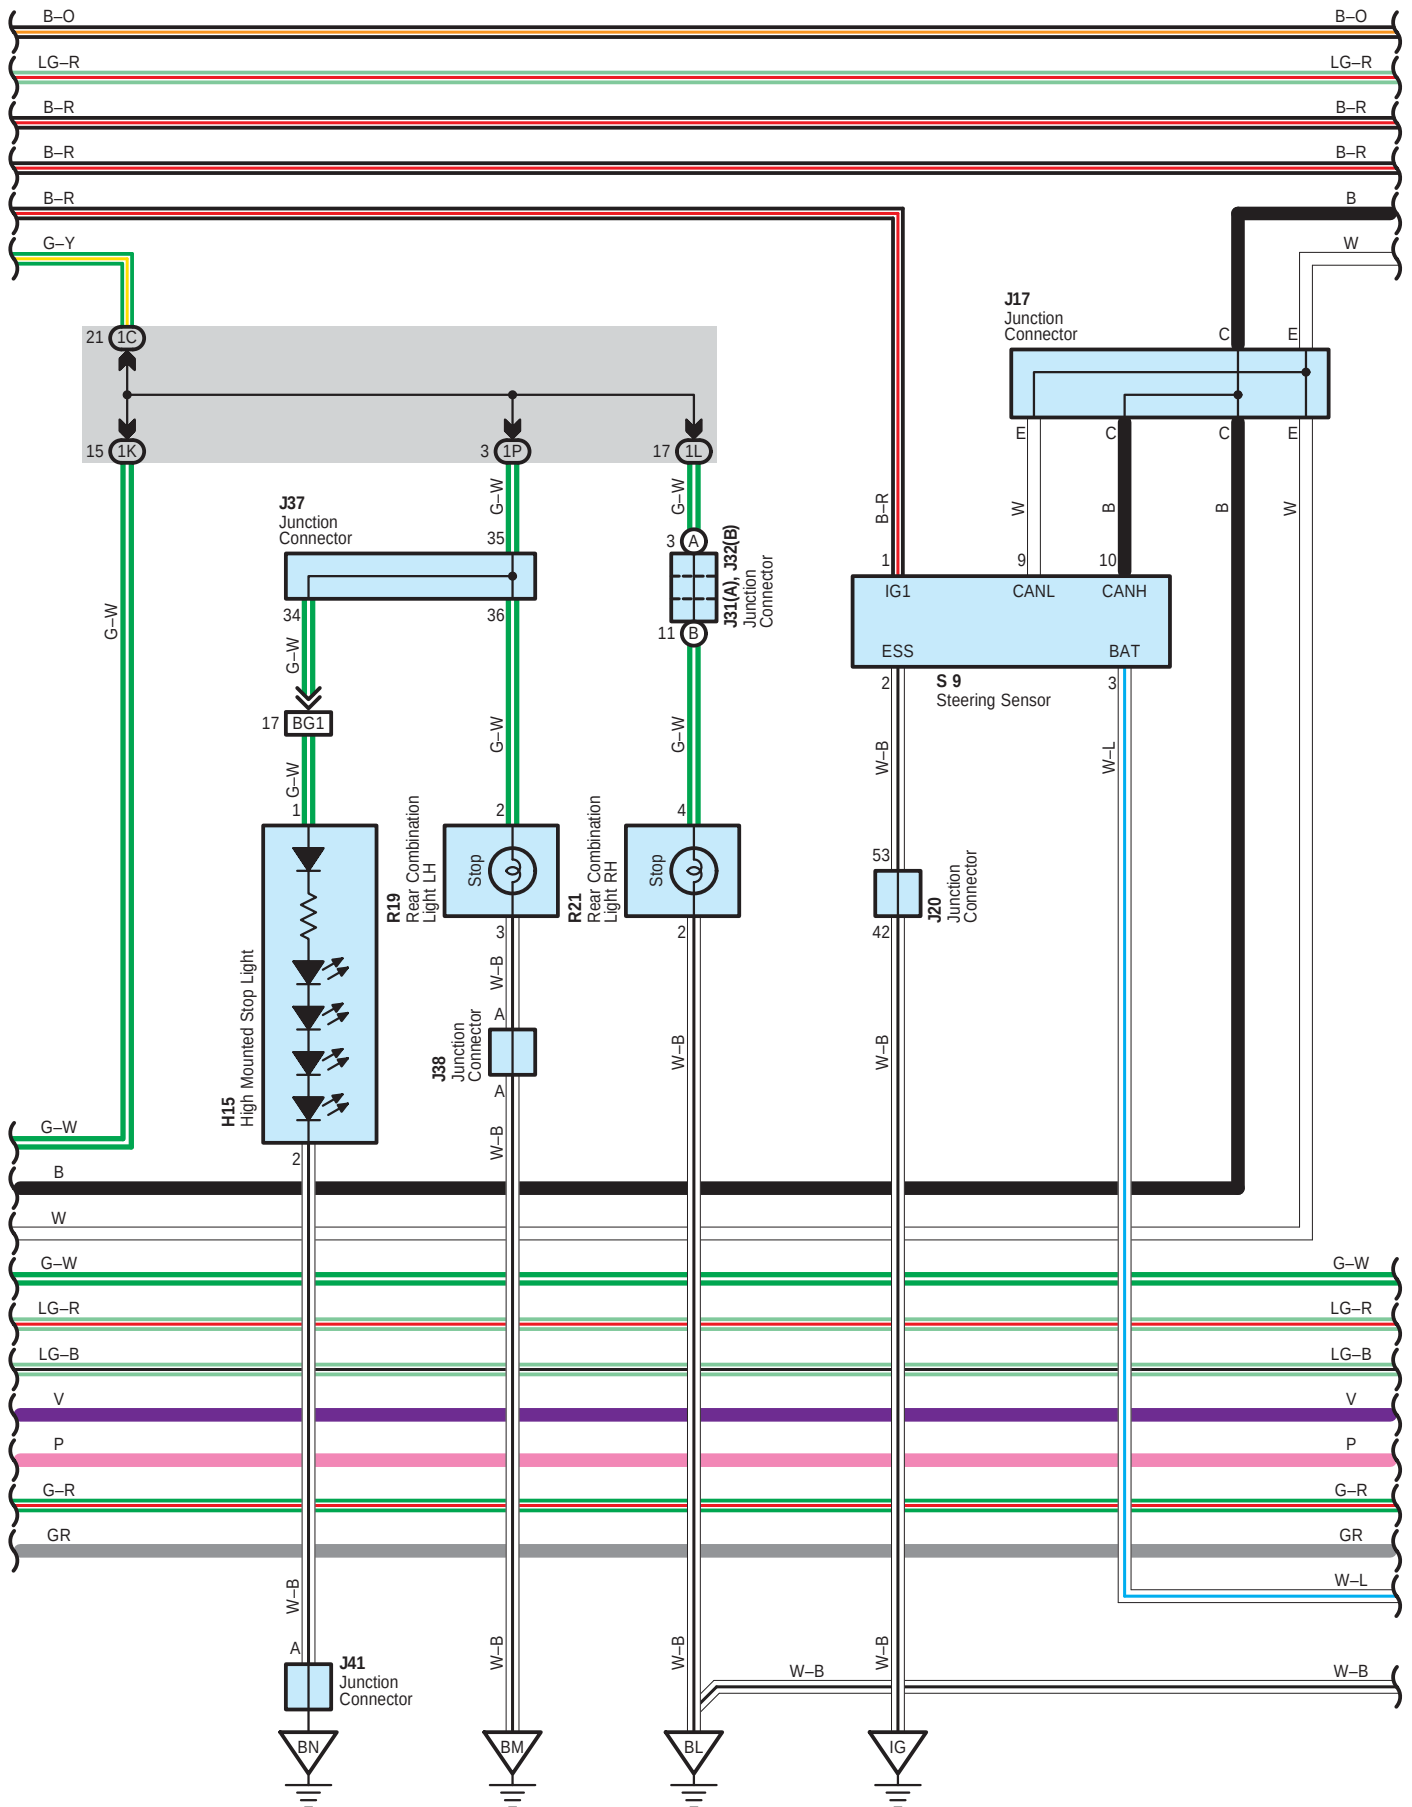


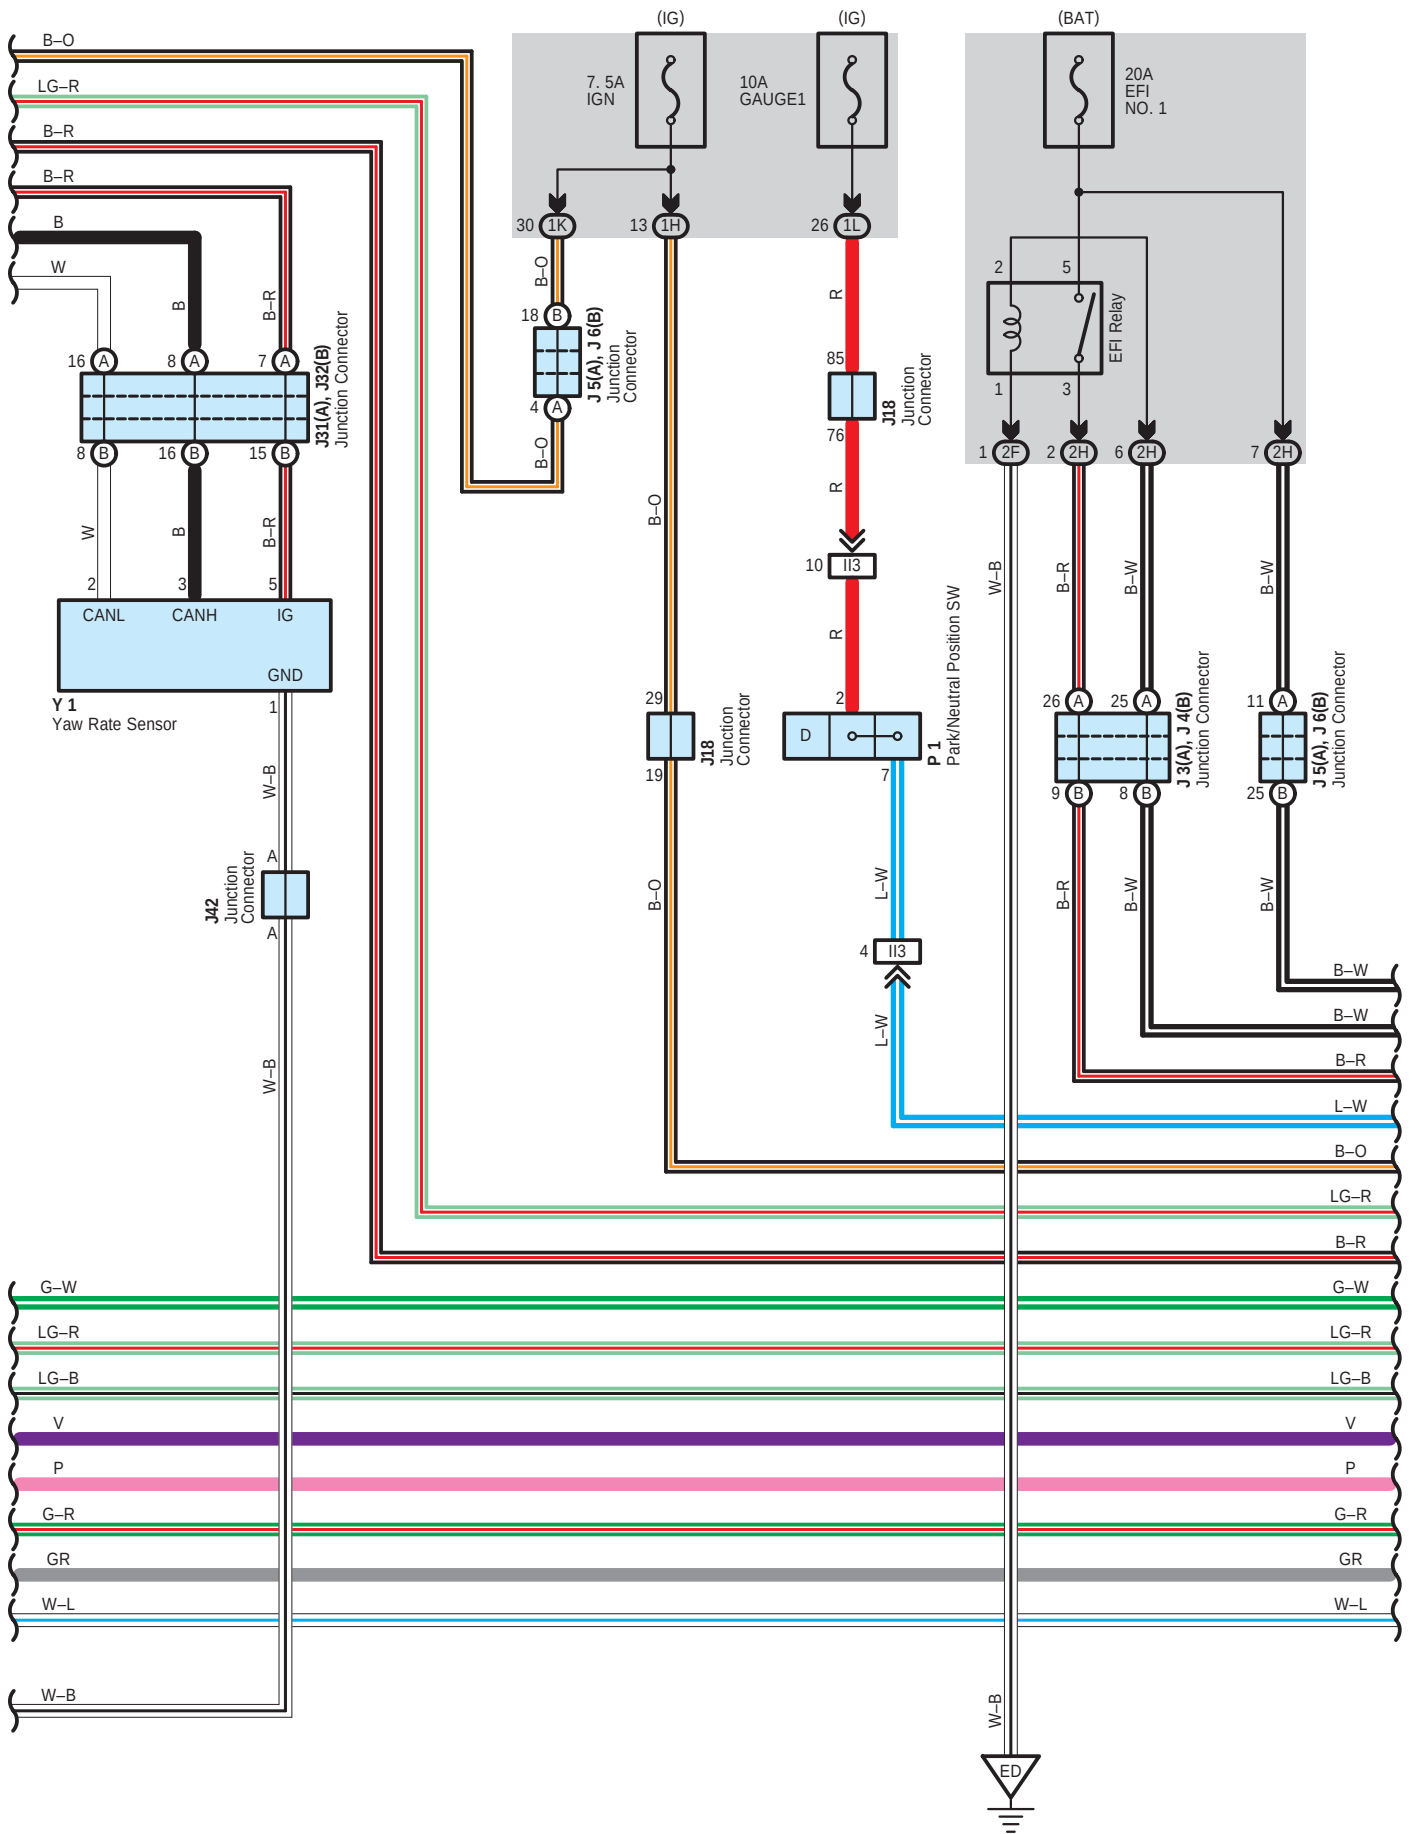


Dynamic Laser Cruise Control


E 1
Electronically Controlled Transmission Solenoid

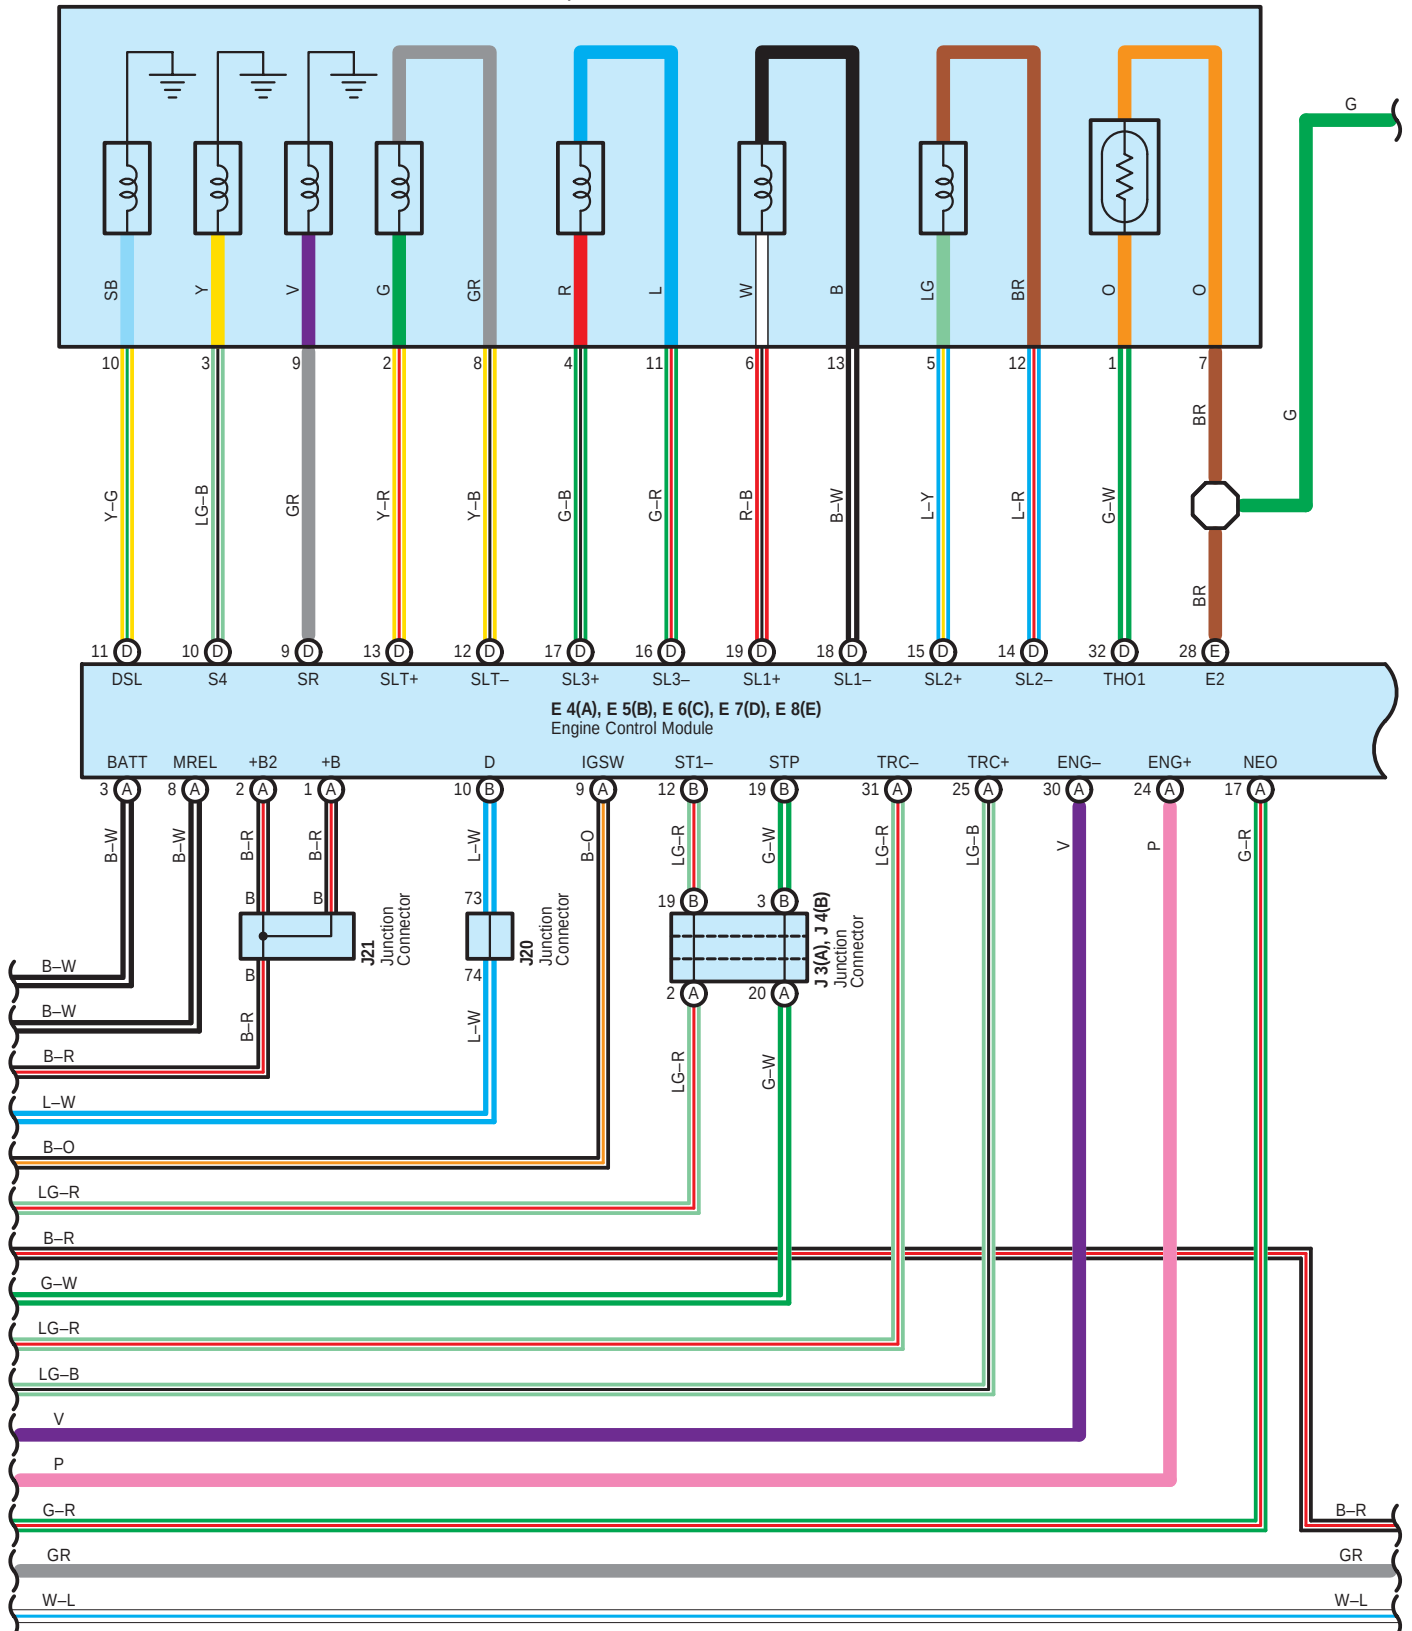

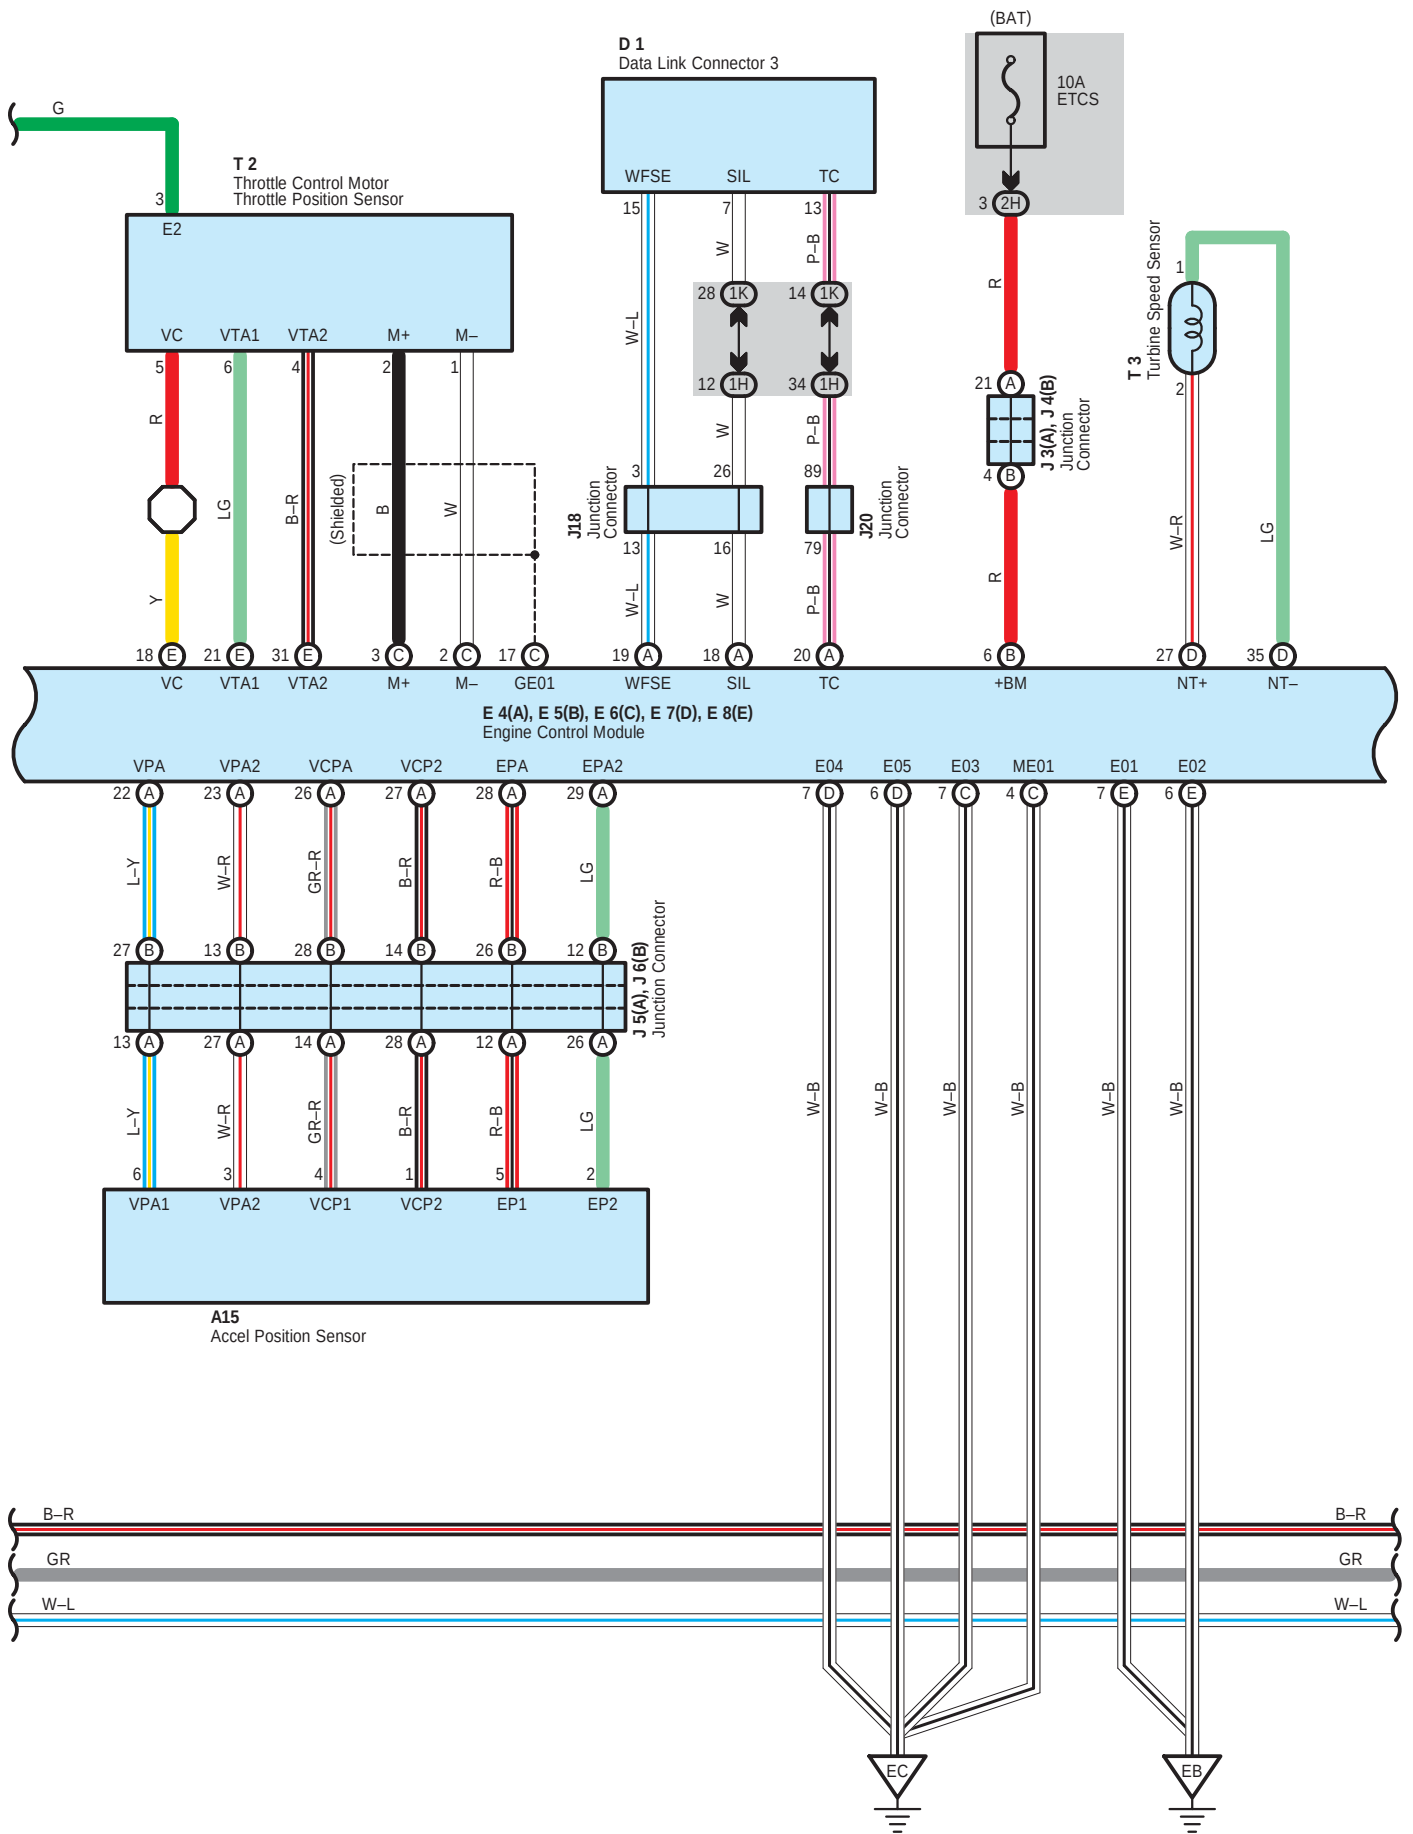

Dynamic Laser Cruise Control

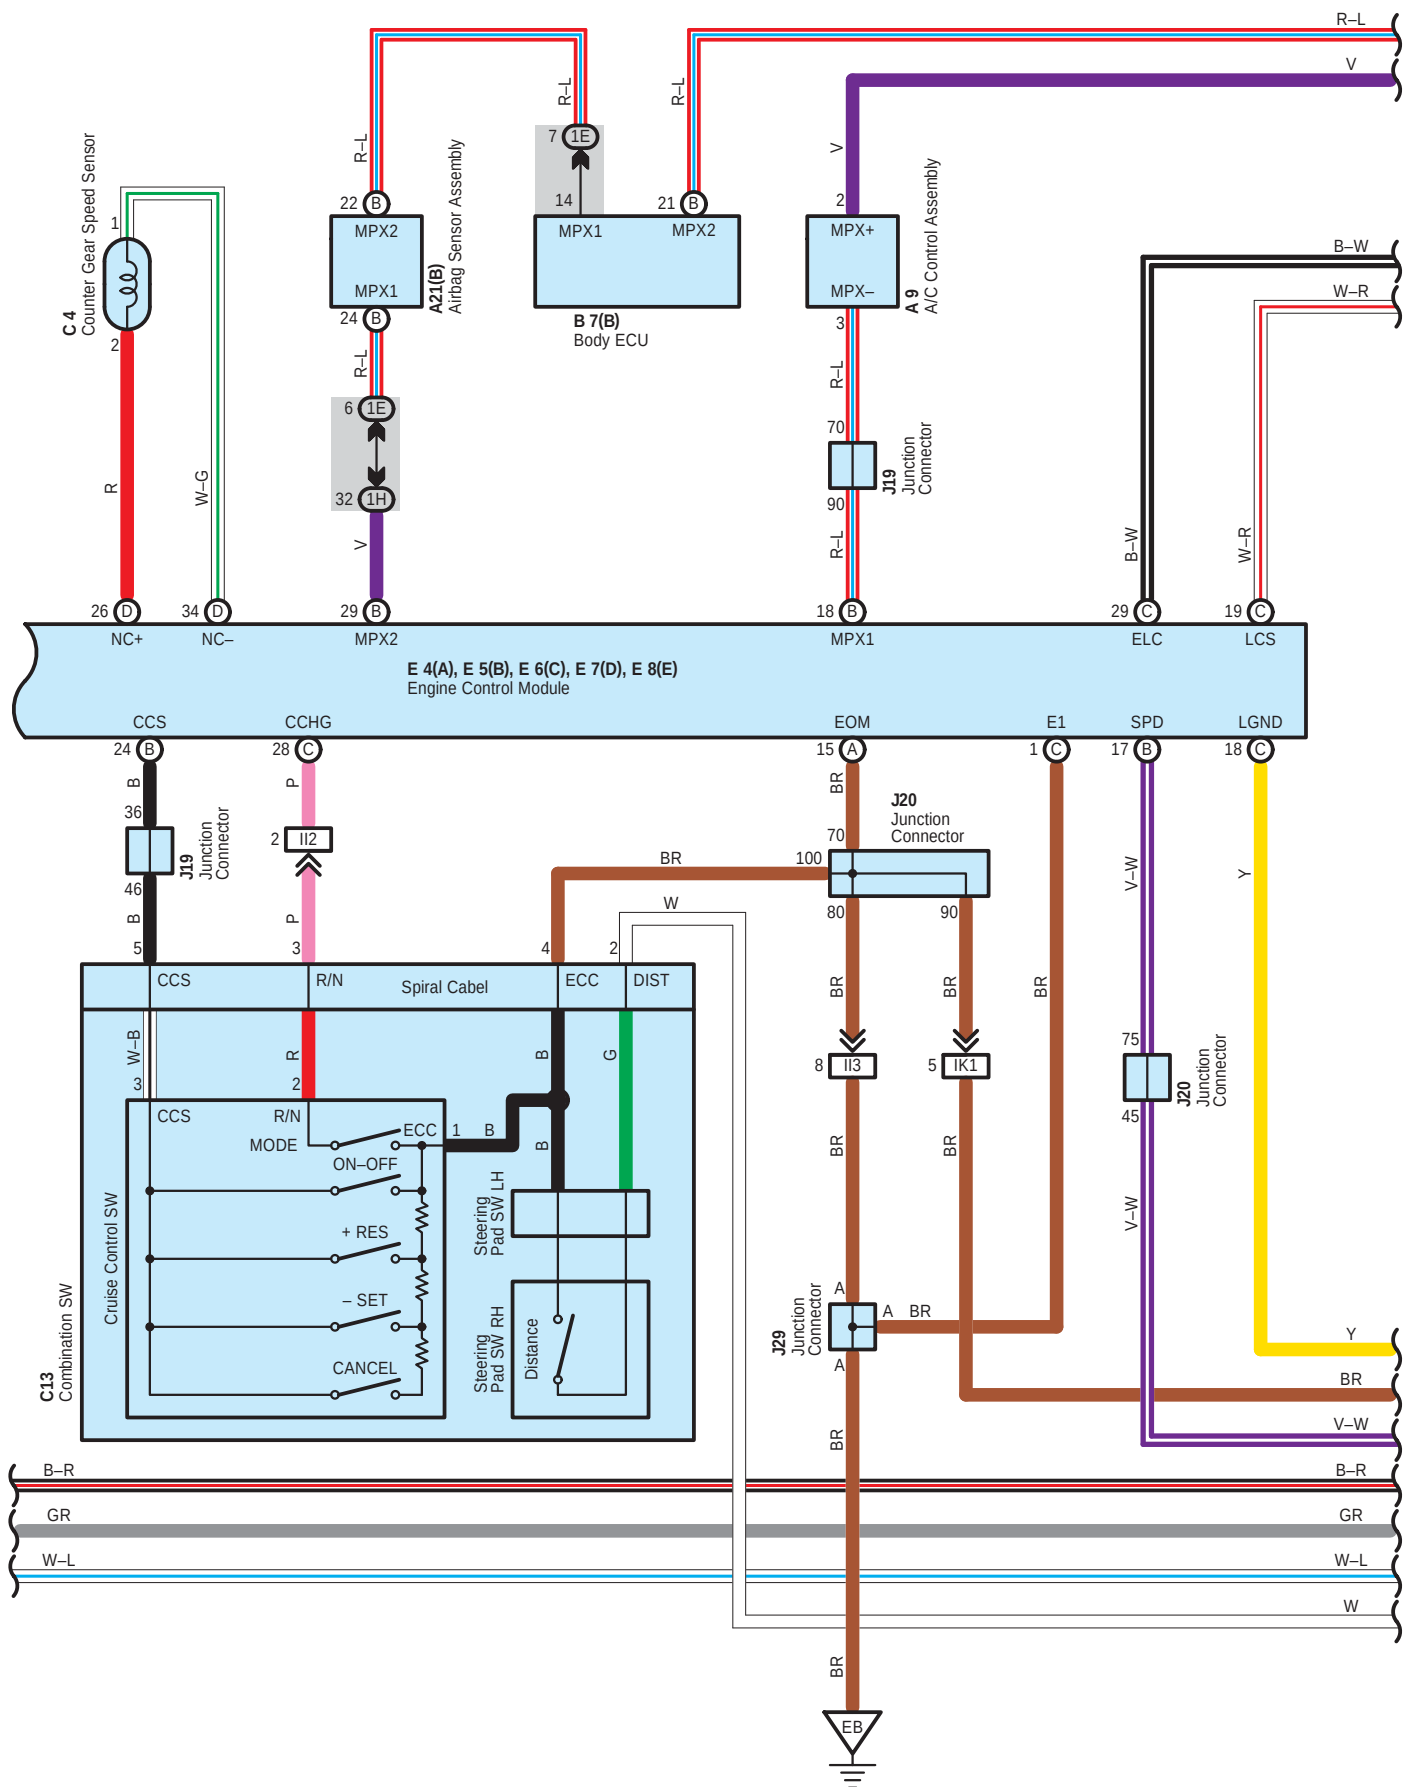

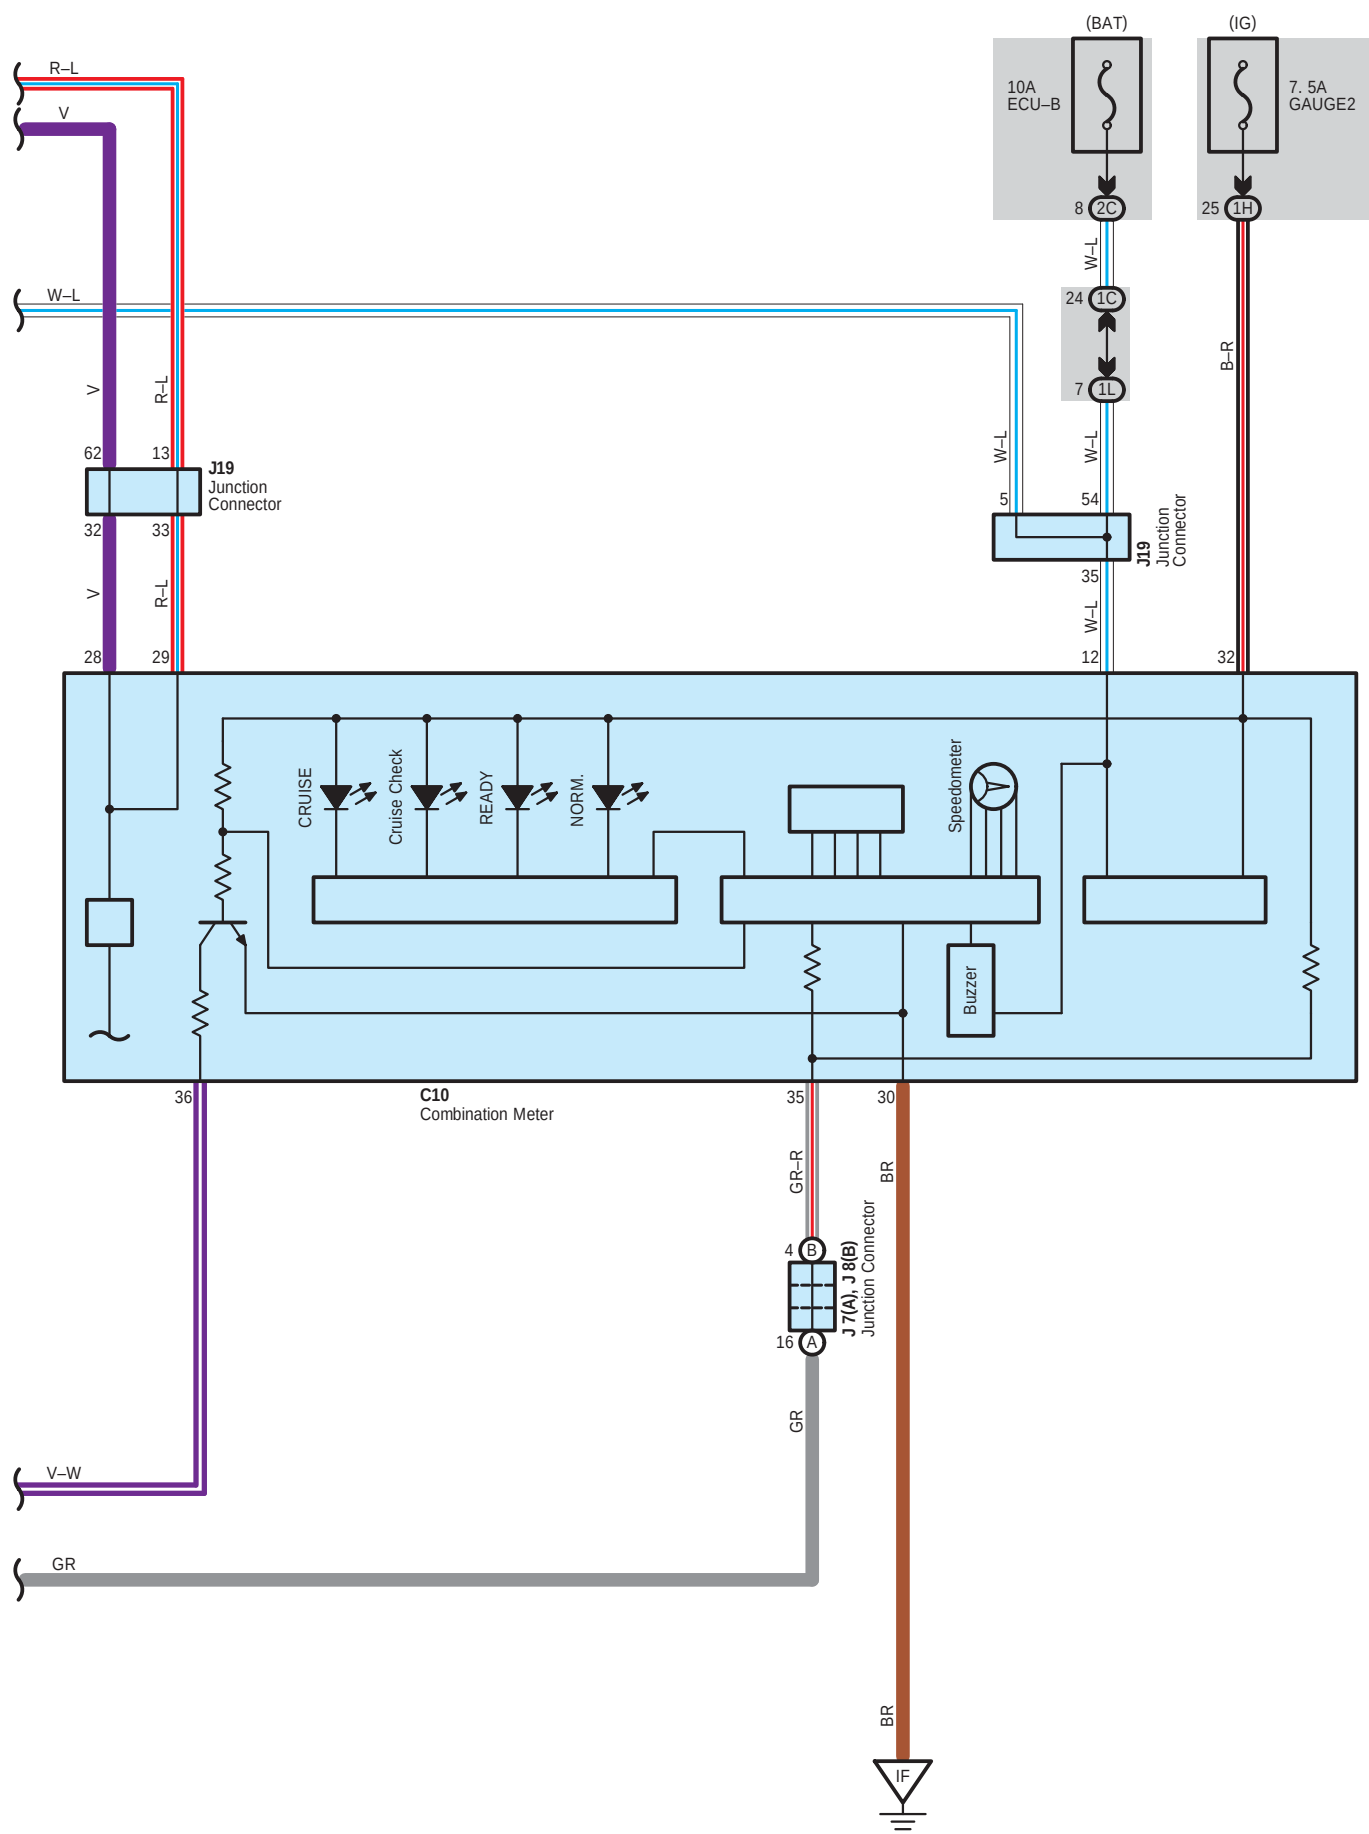

System Outline

The dynamic laser cruise control system allows the vehicle to travel at a constant speed. Also according to the signals from the laser sensor and steering sensor, the system controls the vehicle to travel maintaining a certain following distance in proportion to the speed of the vehicle ahead.

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
A9		38		F12	G	36		J32	B	40	
A15		38		H15		42		J37		43	
A21	B	38		J2		37		J38		43	
B7	B	38		J3	A	40		J41		43	
C4		36		J4	B	40		J42		43	
C10		39		J5	A	40		L1		37	
C12		39		J6	B	40		P1		37	
C13		39		J7	A	40		R19		44	
D1		39		J8	B	40		R21		44	
D2		39		J15		40		S3	A	37	
E1		36		J17		40		S9		41	
E4	A	39		J18		40		S12		41	
E5	B	39		J19		40		T2		37	
E6	C	39		J20		40		T3		37	
E7	D	39		J21		40		V6		41	
E8	E	39		J28		40		Y1		45	
F6	A	36		J29		40					
F10	E	36		J31	A	40					

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
5	27	R/B No.5 (Engine Compartment Left)
6	28	R/B No.6 (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1H	30	
1K	31	
1L	31	
1P	31	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2F		
2H		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
II2	53	Engine Wire and Instrument Panel Wire (Right Kick Panel)
II3		
IJ1	53	Engine Wire and Engine Room Main Wire (Right Kick Panel)
IK1	53	Engine Room Main Wire and Instrument Panel Wire (Right Kick Panel)
BG1	55	Back Door No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)

Dynamic Laser Cruise Control



: Ground Points

Code	See Page	Ground Points Location
EB	50	Rear Bank of Right Cylinder Head
EC	50	Rear Bank of Left Cylinder Head
ED	50	Front Side of the Left Fender Apron
IF	52	Instrument Panel Brace LH
IG	52	Right Kick Panel
BL	54	Right Rear Quarter Panel
BM	54	Left Rear Quarter Panel
BN	54	Left Side of the Back Door

