



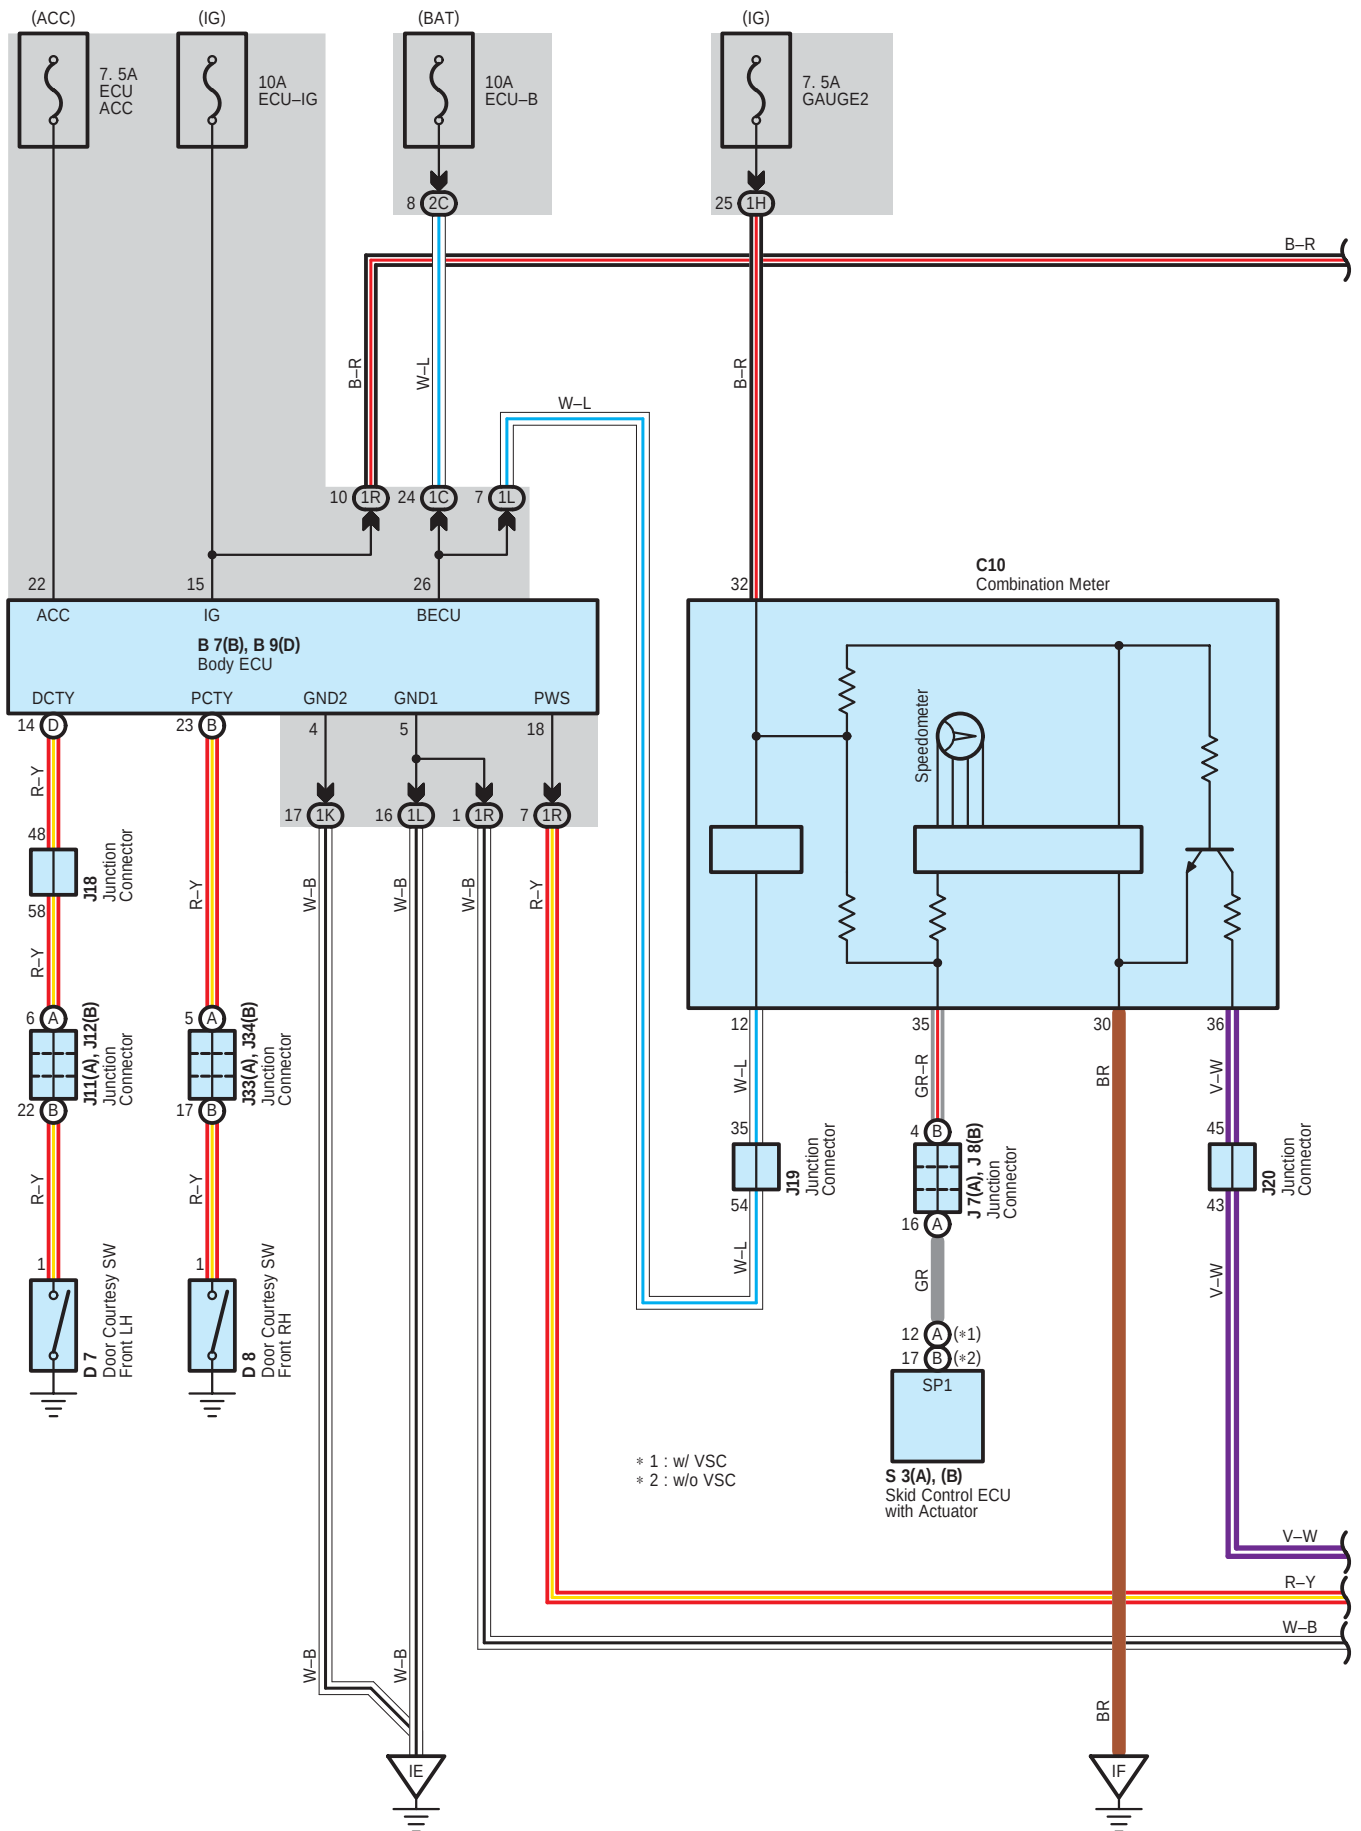

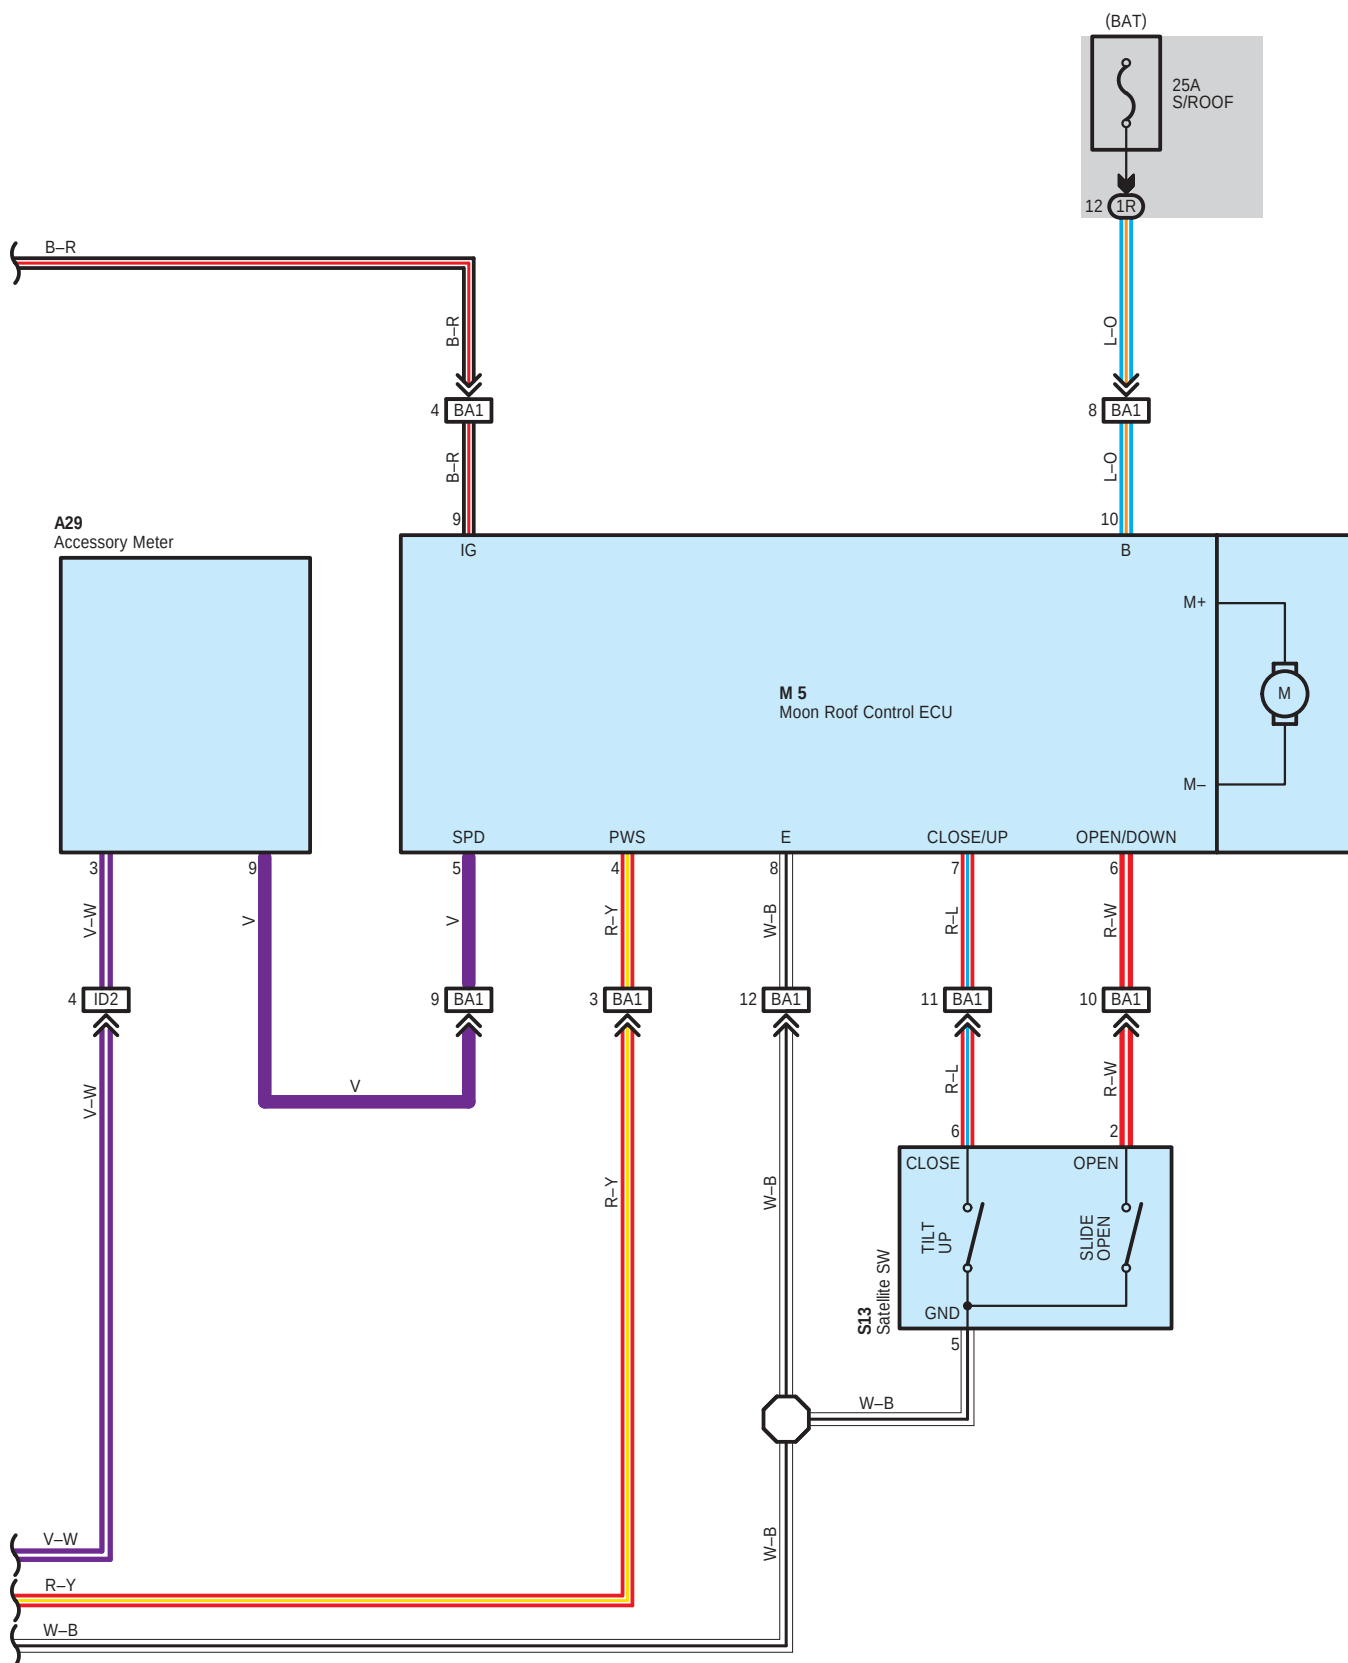

Moon Roof

: Parts Location

Code		See Page		Code		See Page		Code		See Page	
A29		42		J8	B	40		J34	B	40	
B7	B	38		J11	A	40		M5		43	
B9	D	38		J12	B	40		S3	A	37	
C10		39		J18		40			B	37	
D7		42		J19		40		S13		44	
D8		42		J20		40					
J7	A	40		J33	A	40					

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1H	30	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1K	31	
1L		
1R	31	
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID2	52	Roof Wire and Instrument Panel Wire (Near the Driver Side J/B)
BA1	54	Roof No.3 Wire and Roof Wire (Front Side of the Roof)

: Ground Points

Code	See Page	Ground Points Location
IE	52	Left Kick Panel
IF	52	Instrument Panel Brace LH

