





Remote Control Mirror with Memory

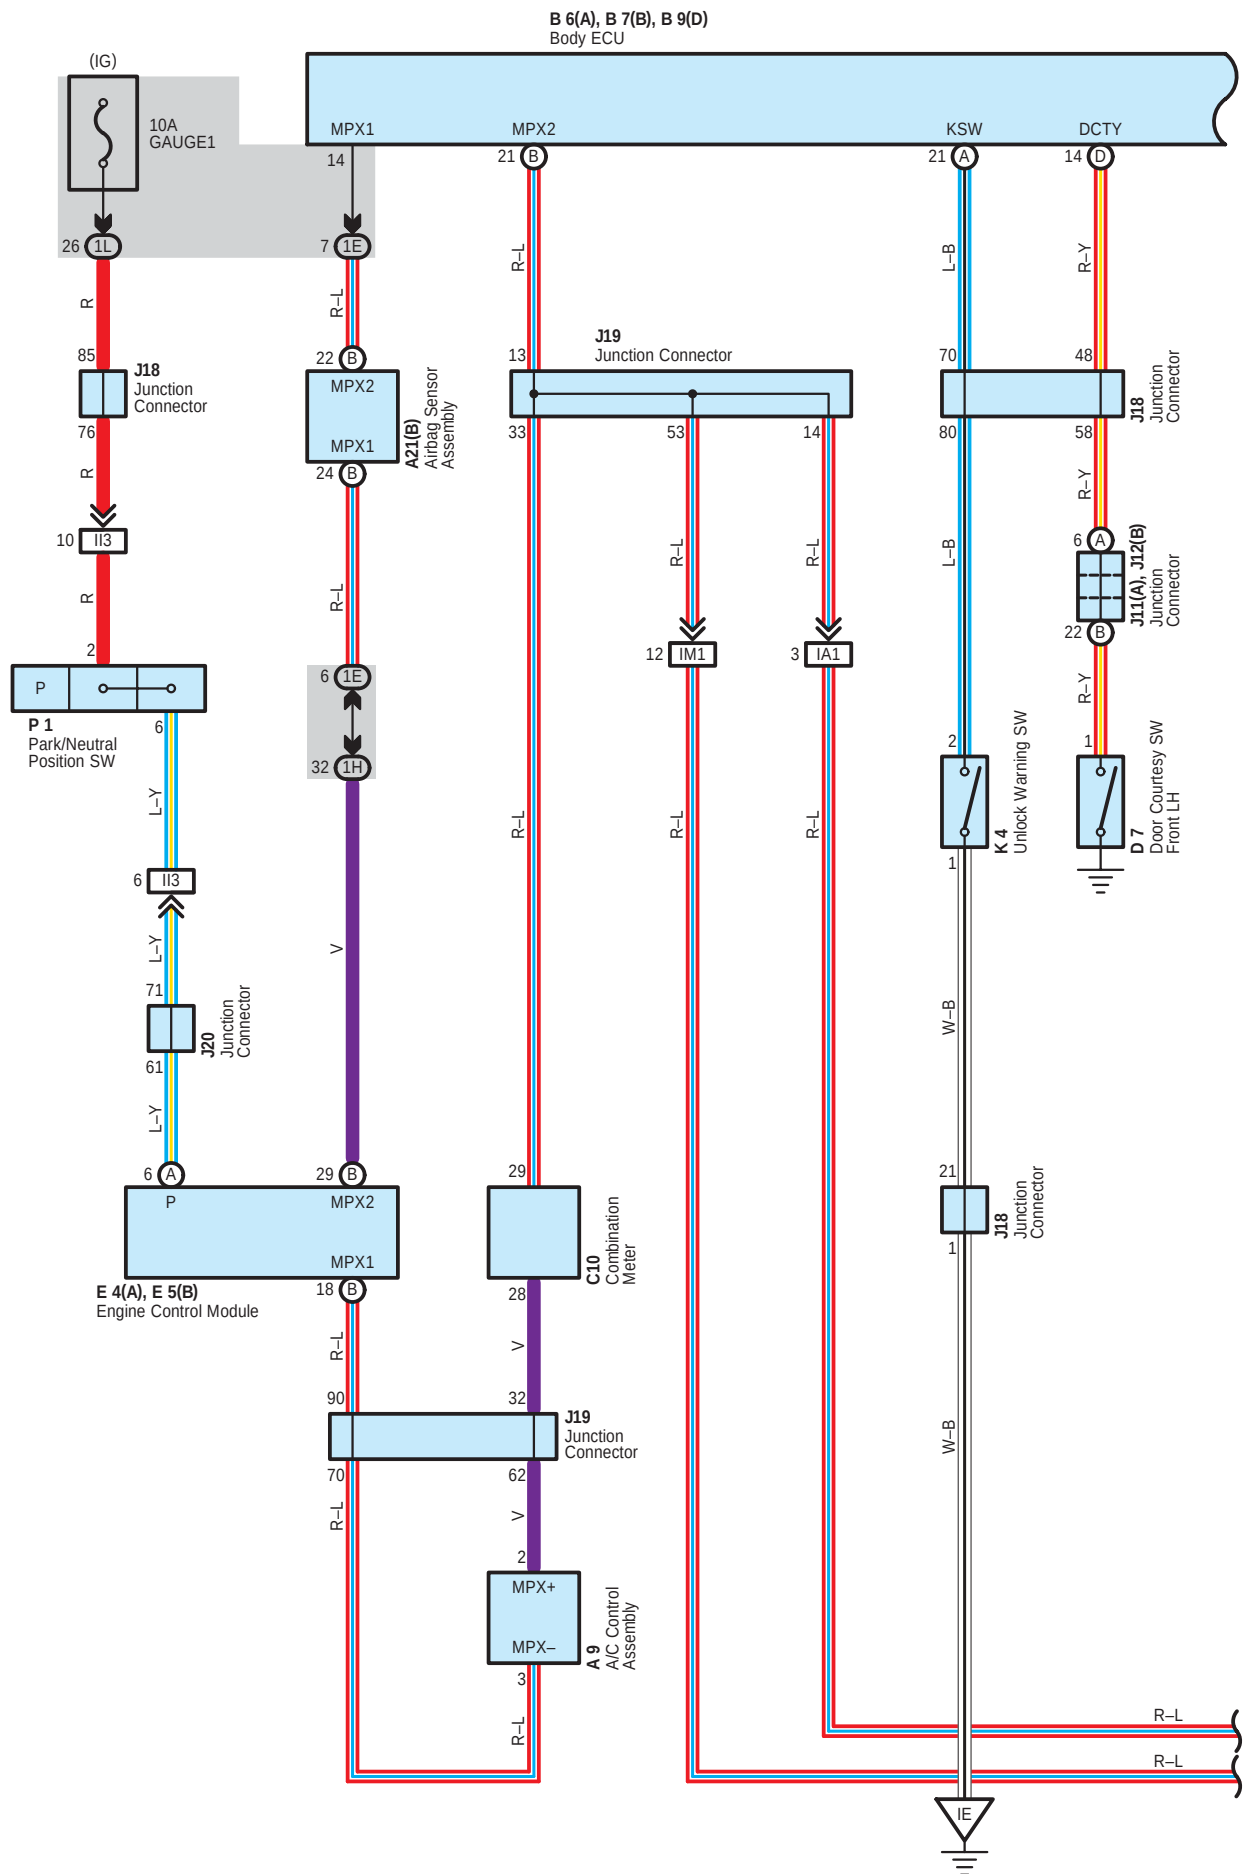

B 6(A), B 7(B), B 9(D)
Body ECU

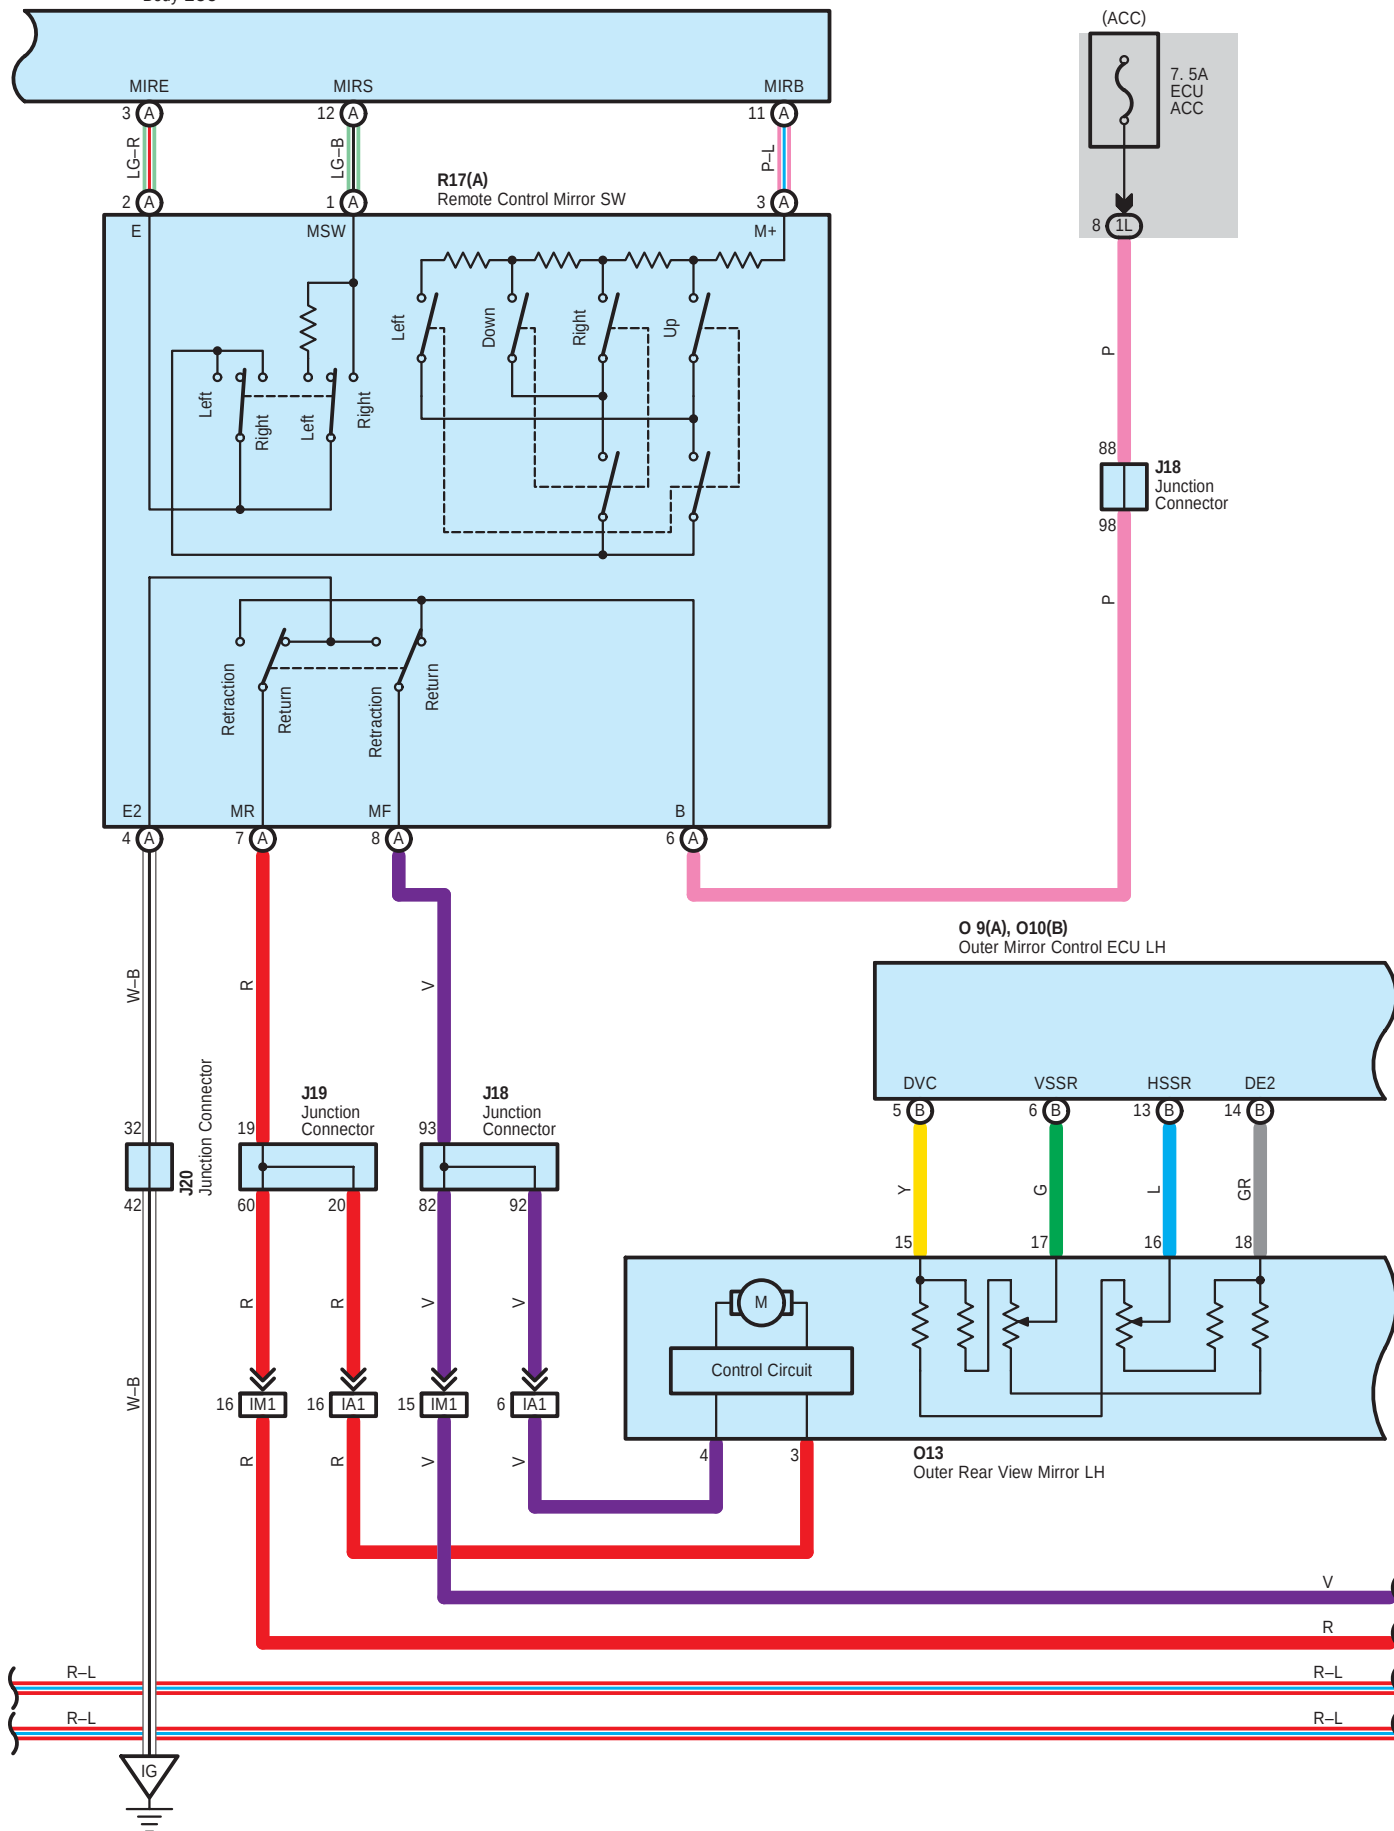

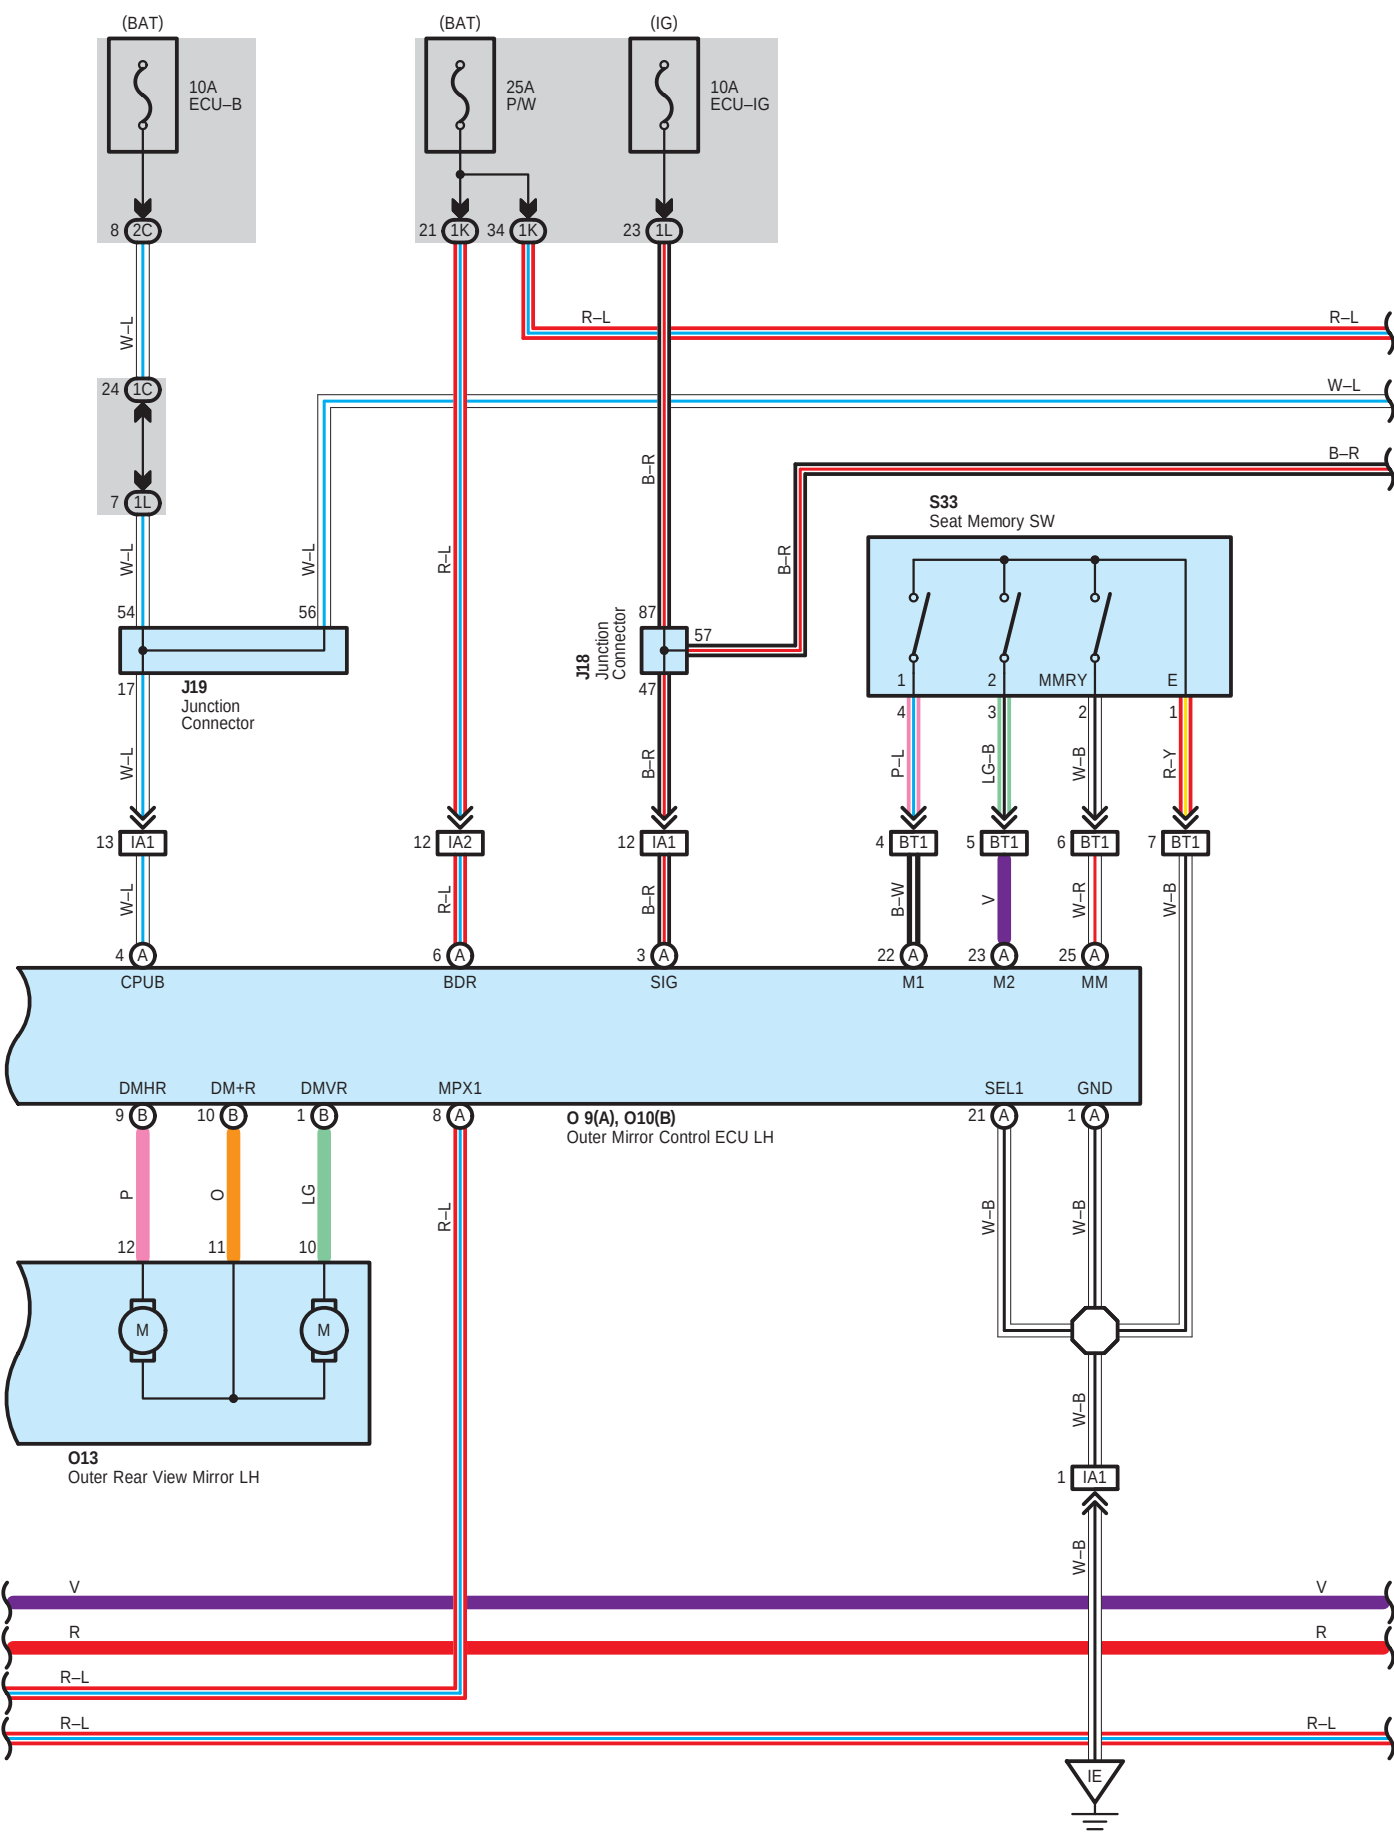

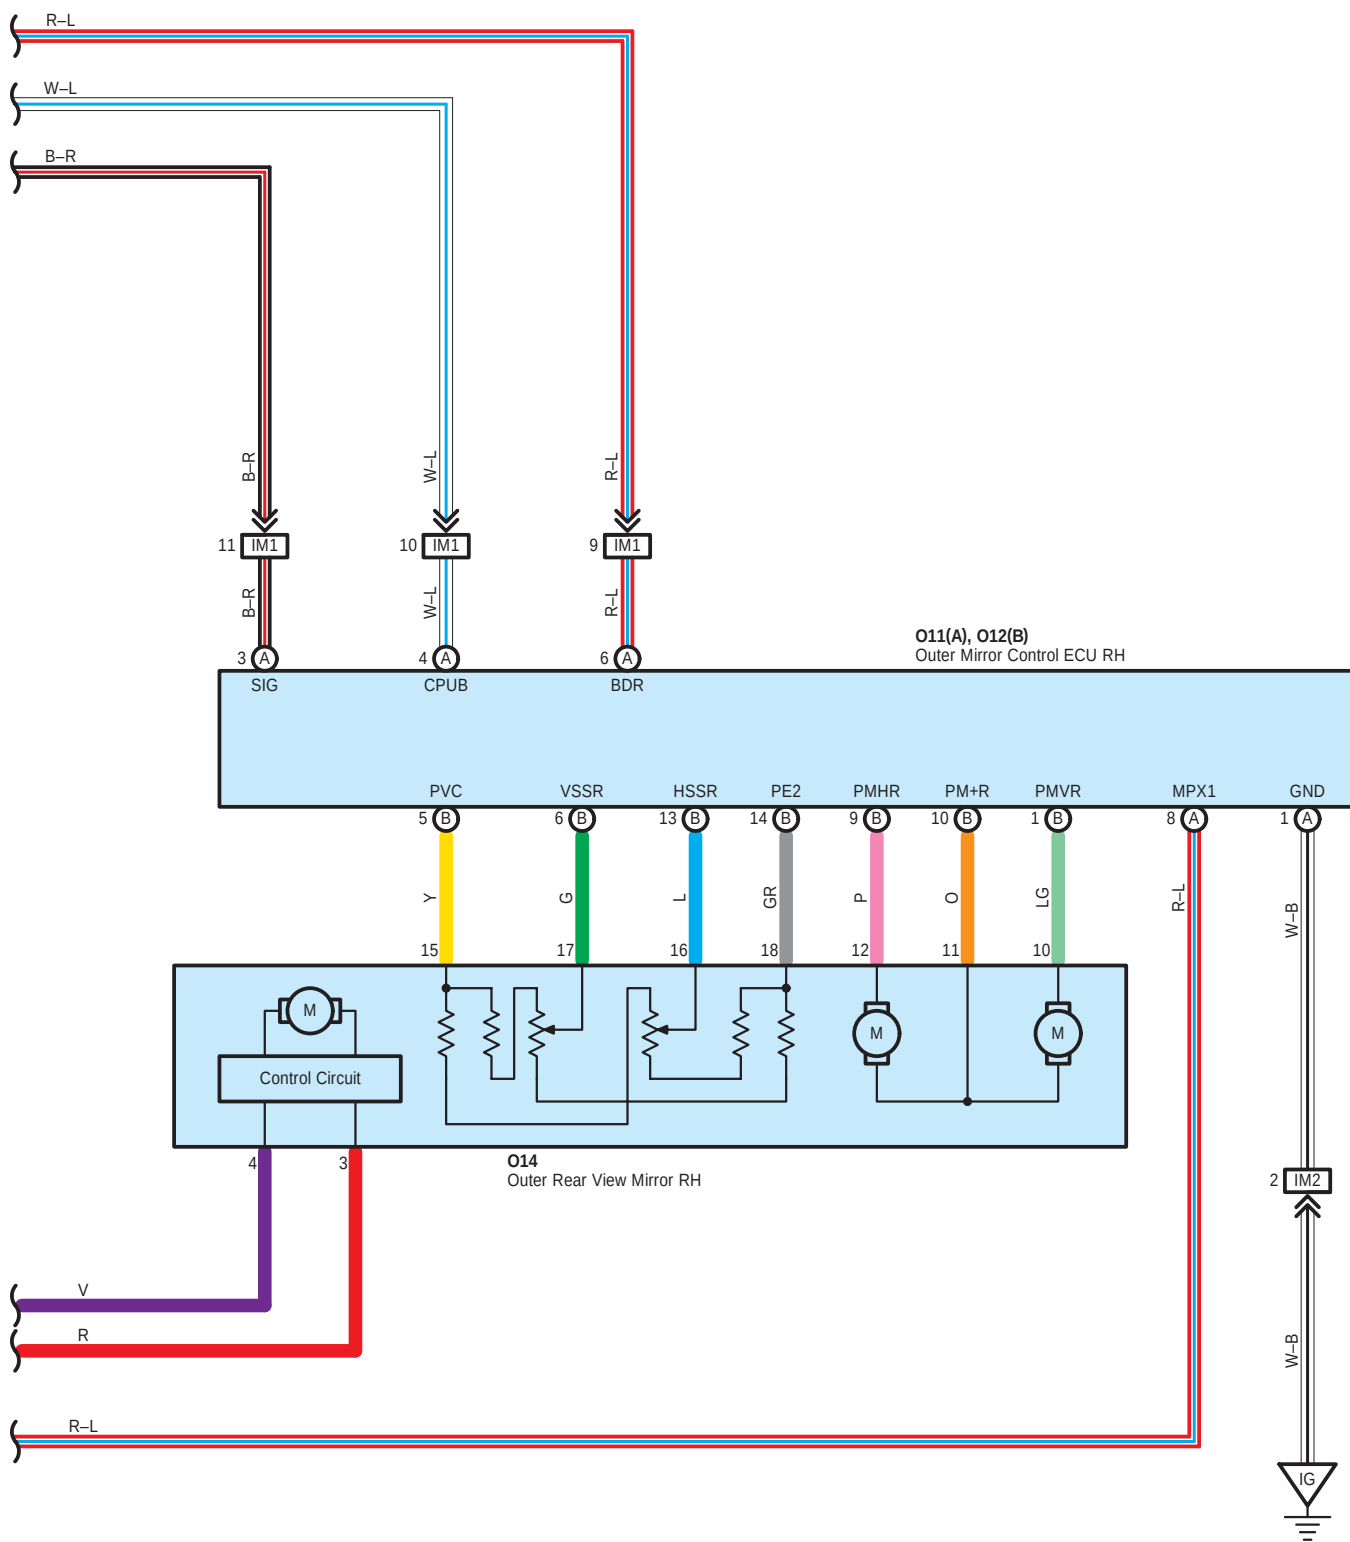

Remote Control Mirror with Memory

System Outline

When the ignition SW is turned on, the outer mirrors can be operated. When the remote control mirror SW is operated, a signal is input to the body ECU, and the outer mirror can be adjusted to the desired position.

In this system, the position sensor detects the number of rotations of each motor (Movement amount of each mirror) and inputs it to the outer mirror control ECU LH and outer mirror control ECU RH. This makes it possible to store and recall the outer mirror position using the seat memory SW. The outer mirror position is stored and recalled through communication control of the body ECU.

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
A9		38		E5	B	39		O10	B	45	
A21	B	38		J11	A	40		O11	A	45	
B6	A	38		J12	B	40		O12	B	45	
B7	B	38		J18		40		O13		45	
B9	D	38		J19		40		O14		45	
C10		39		J20		40		P1		37	
D7		42		K4		40		R17	A	41	
E4	A	39		O9	A	45		S33		44	

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1H	30	
1K	31	
1L		
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	52	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IA2		
II3	53	Engine Wire and Instrument Panel Wire (Right Kick Panel)
IM1	53	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IM2		
BT1	55	Front Door LH Wire and Courtesy Lamp Switch Wire Assembly (Inside Front Door Trim LH)

▽ : Ground Points

Code	See Page	Ground Points Location
IE	52	Left Kick Panel
IG	52	Right Kick Panel

