



Accessory Meter and Garage Door Opener

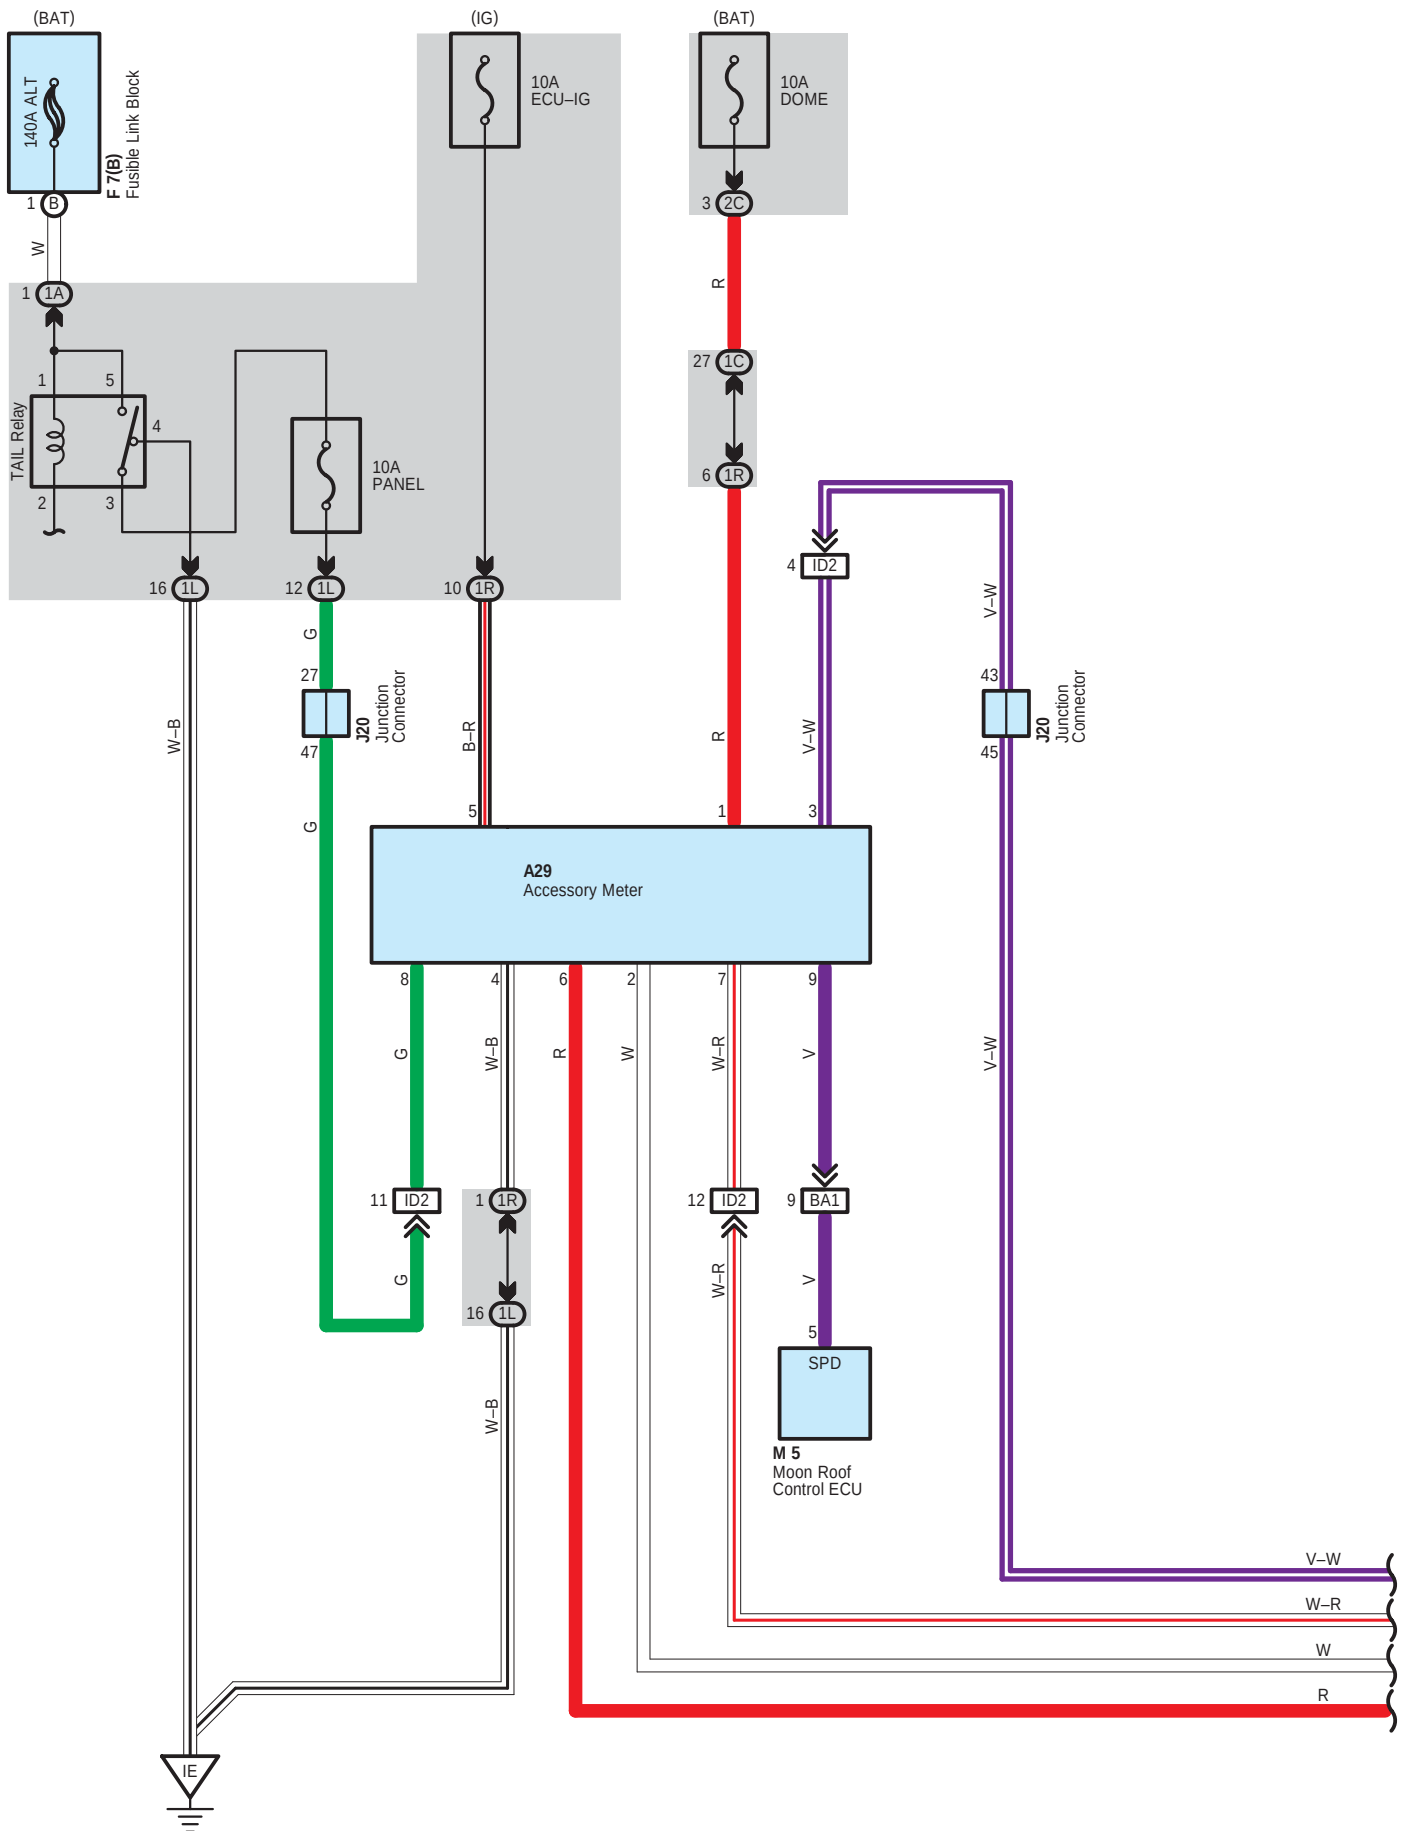

* 1 : w/ VSC
 * 2 : w/o VSC

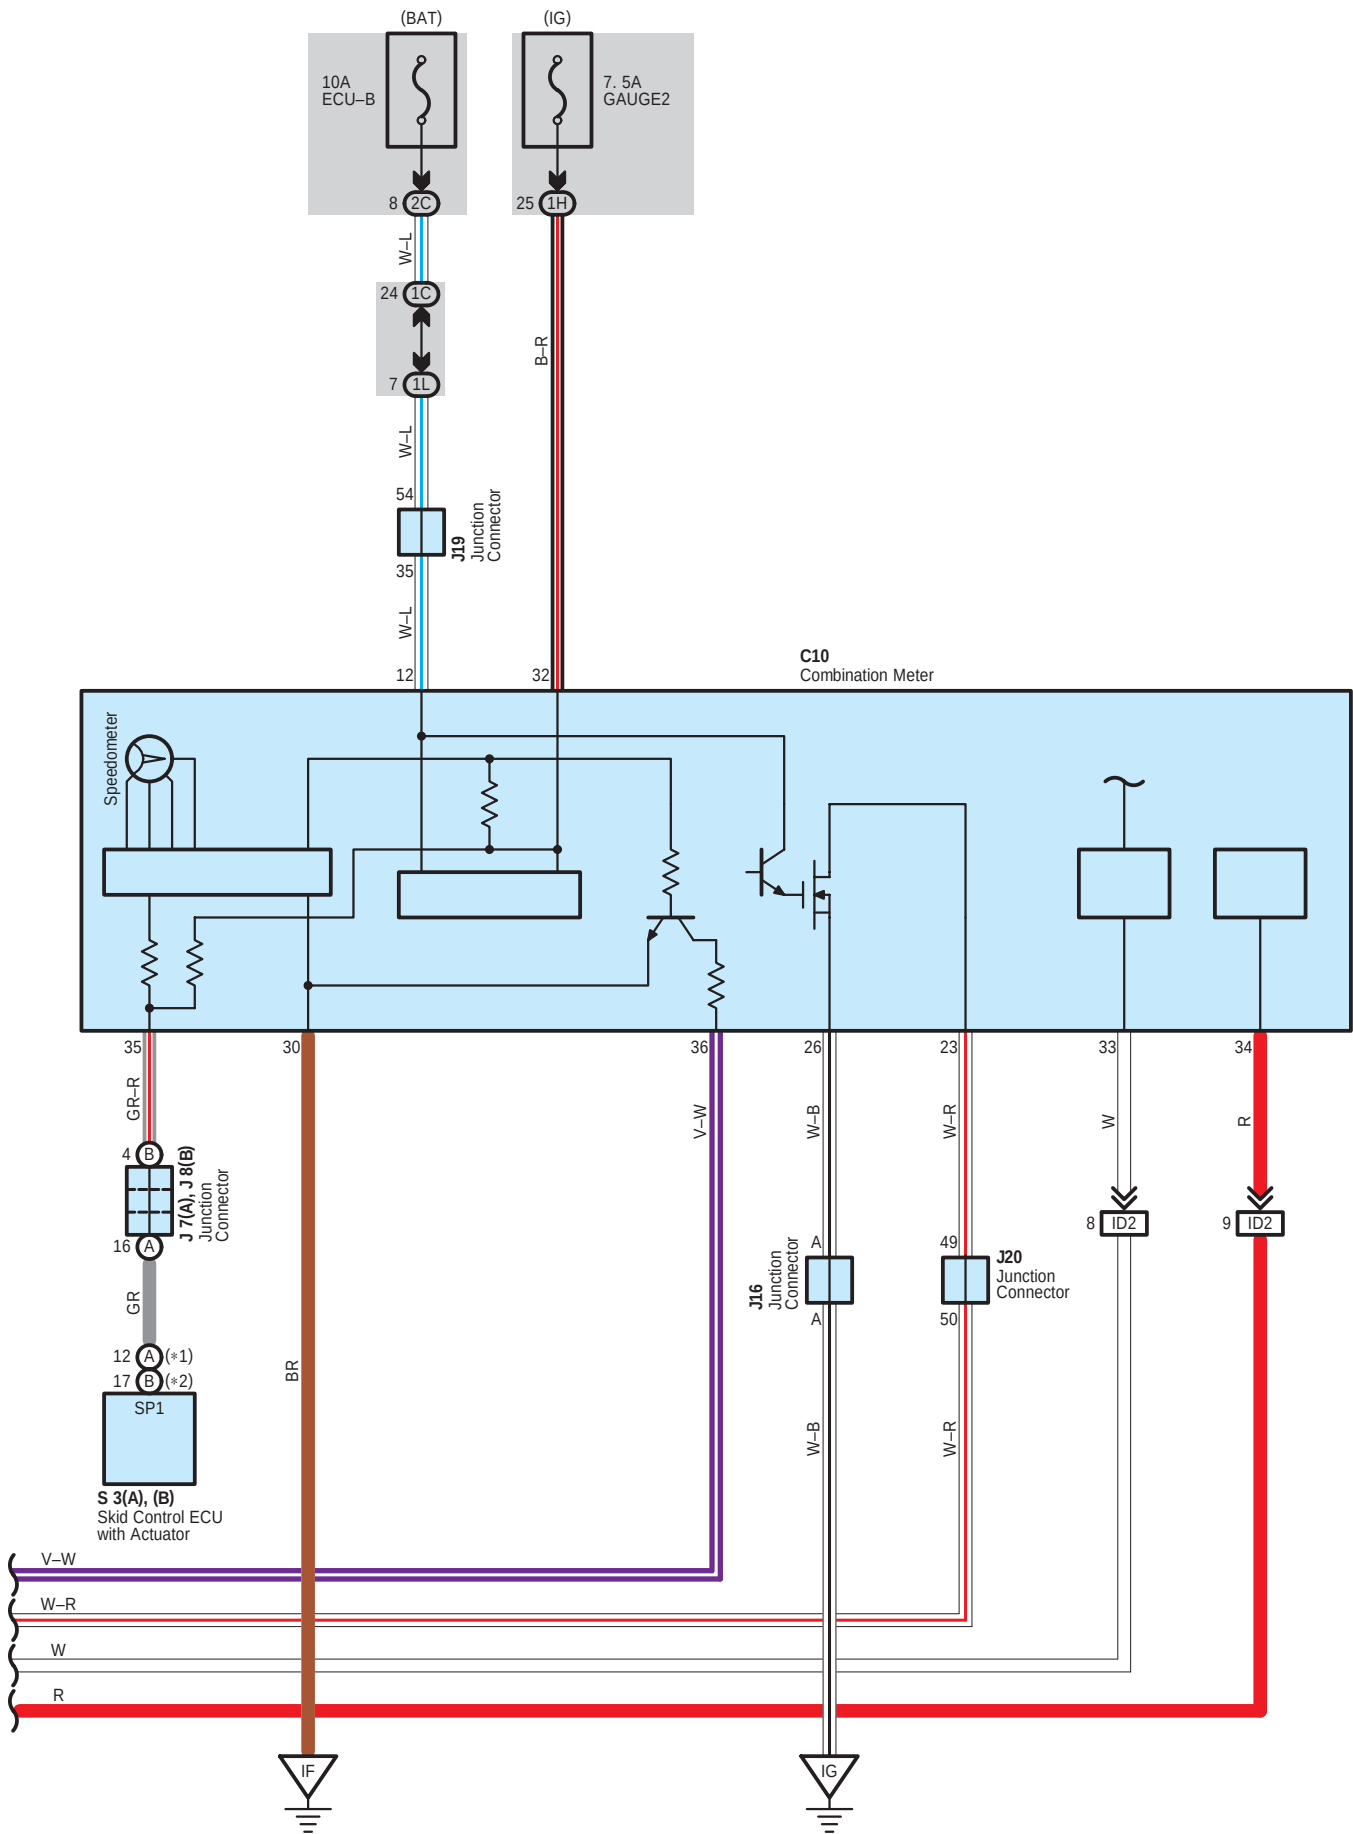

Accessory Meter and Garage Door Opener

: Parts Location

Code		See Page		Code		See Page		Code		See Page	
A29		42		J8	B	40		M5		43	
C10		39		J16		40		S3	A	37	
F7	B	36		J19		40			B	37	
J7	A	40		J20		40					

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1C		
1H	30	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L	31	
1R	31	Roof Wire and Driver Side J/B (Lower Finish Panel)
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID2	52	Roof Wire and Instrument Panel Wire (Near the Driver Side J/B)
BA1	54	Roof No.3 Wire and Roof Wire (Front Side of the Roof)

: Ground Points

Code	See Page	Ground Points Location
IE	52	Left Kick Panel
IF	52	Instrument Panel Brace LH
IG	52	Right Kick Panel

