


Power Seat for Driver's Seat without Memory

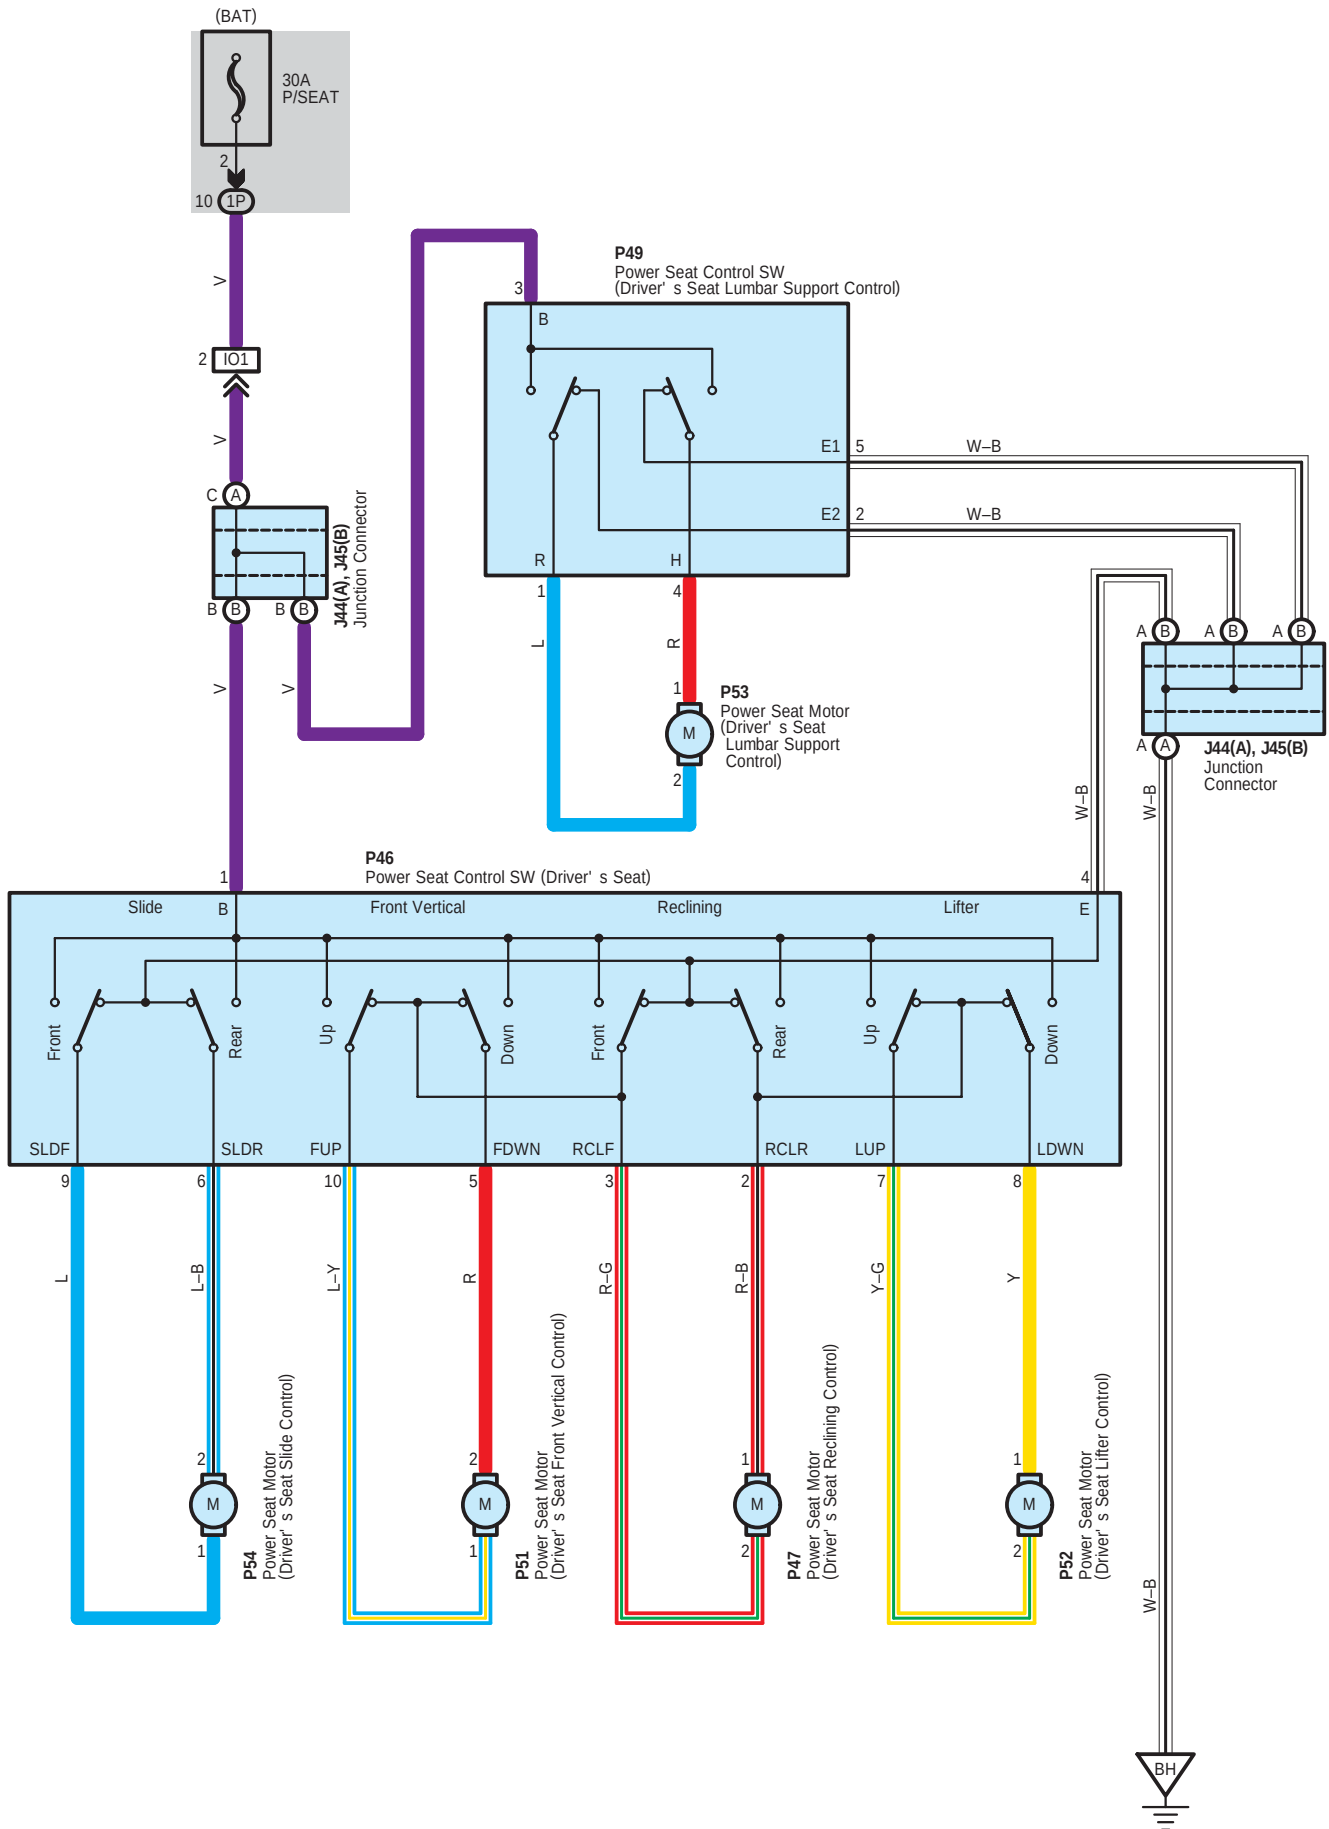

 : Parts Location

Code		See Page	Code		See Page	Code		See Page
J44	A	46 (*1)	P47	46 (*1)	P52	46 (*1)		
J45	B	46 (*1)	P49	46 (*1)	P53	46 (*1)		
P46		46 (*1)	P51	46 (*1)	P54	46 (*1)		

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1P	31	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IO1	53	Floor No.1 Wire and Floor No.1 Wire (Left Kick Panel)

 : Ground Points

Code	See Page	Ground Points Location
BH	54	Under the Left Center Pillar

* 1 : Front Seat w/ Power Seat * 2 : Front Seat w/o Power Seat * 3 : Rear No.2 Seat