


Seat Heater

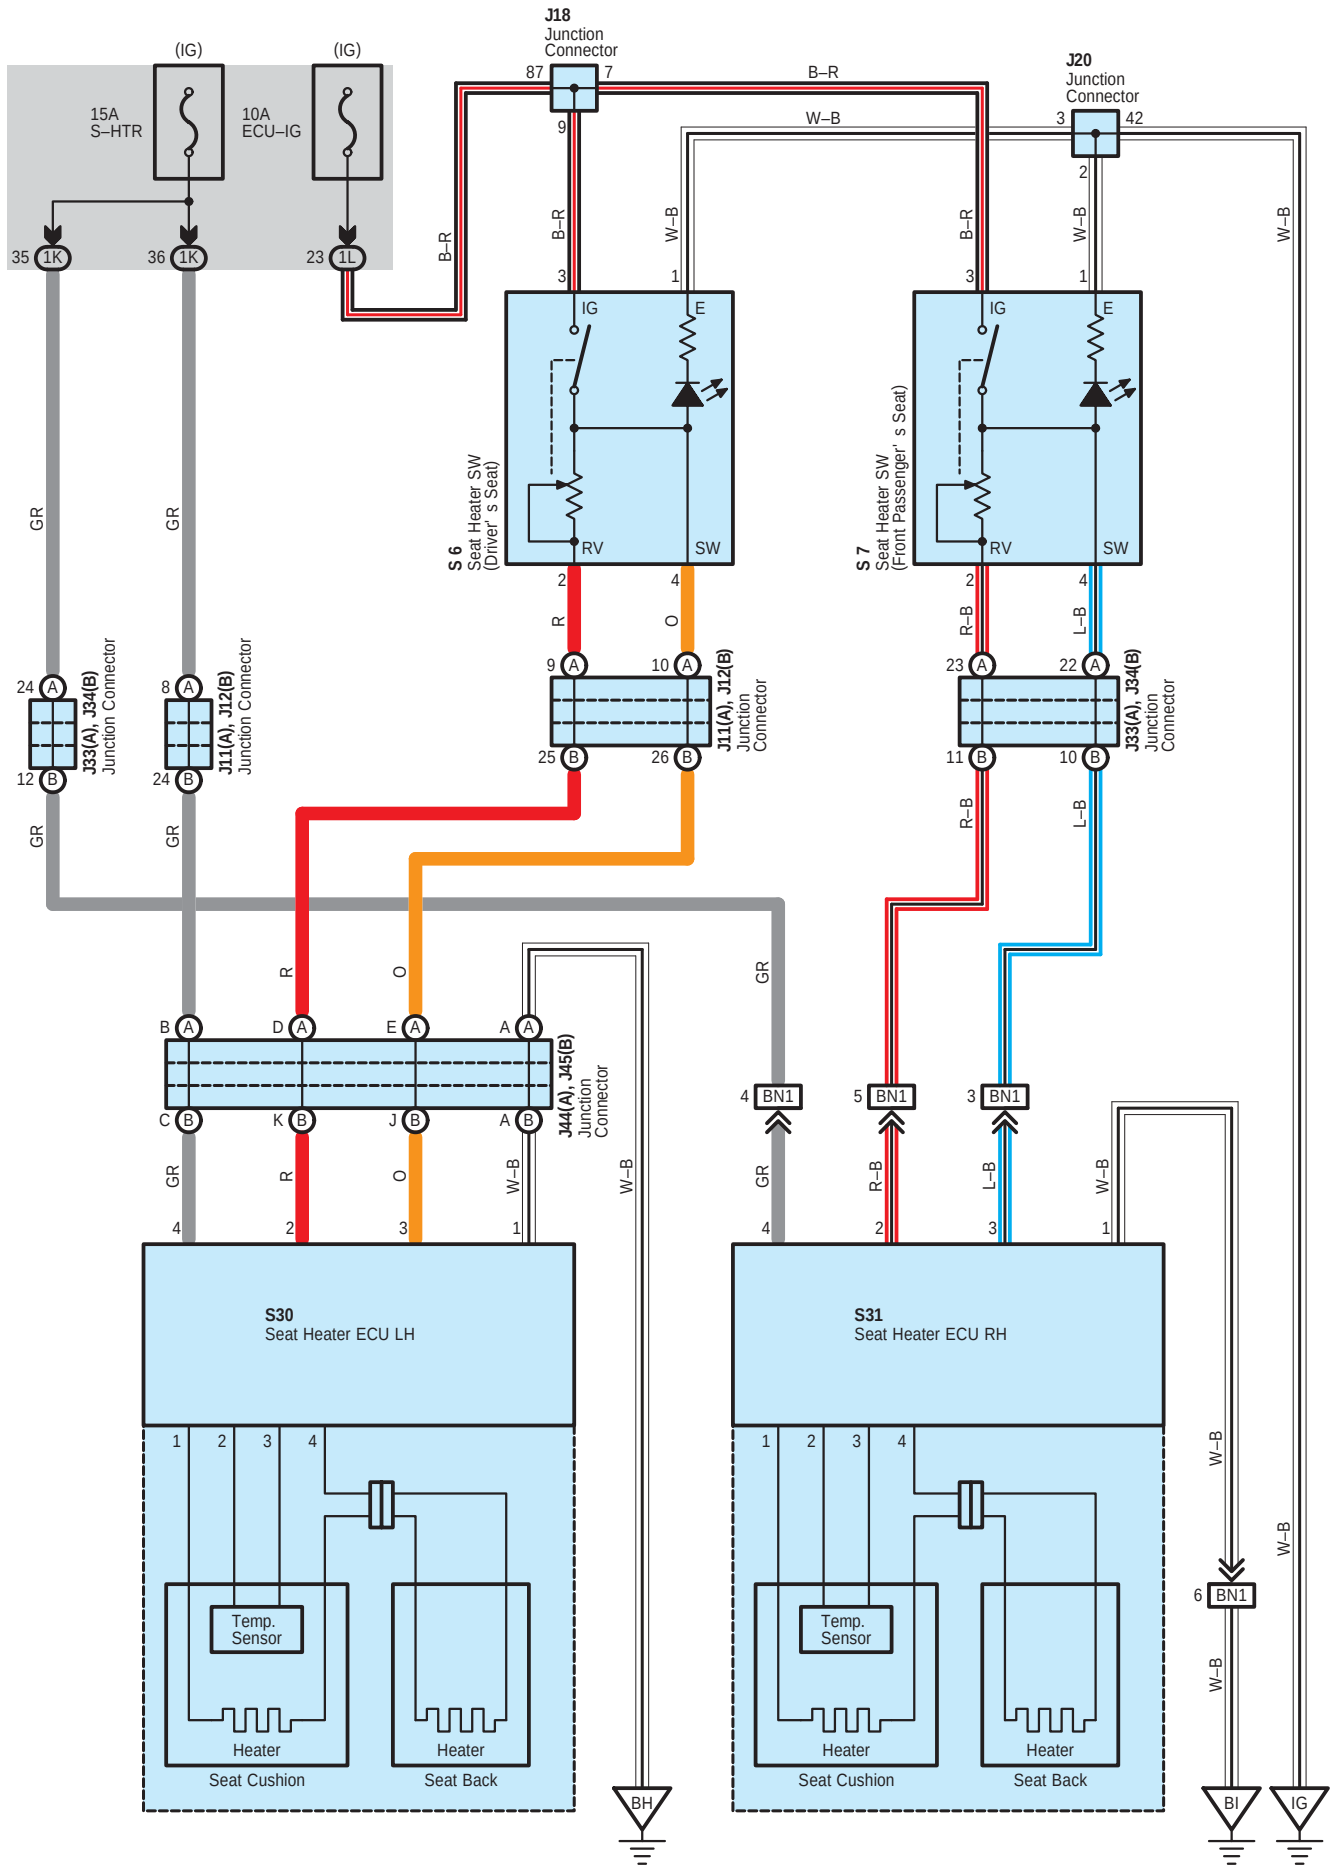

 : Parts Location

Code		See Page	Code		See Page	Code		See Page
J11	A	40	J33	A	40	S6	41	
J12	B	40	J34	B	40	S7	41	
J18		40	J44	A	46 (*1)	S30	46 (*1)	
J20		40	J45	B	46 (*1)	S31	46 (*1)	

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1K	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BN1	56 (*1)	Floor No.2 Wire and Seat No.1 Wire (Under the Front Passenger's Seat)

 : Ground Points

Code	See Page	Ground Points Location
IG	52	Right Kick Panel
BH	54	Under the Left Center Pillar
BI	54	Under the Right Center Pillar

* 1 : Front Seat w/ Power Seat * 2 : Front Seat w/o Power Seat * 3 : Rear No.2 Seat