


Front Window Deicer and Rear Window Defogger

- * 1 : Automatic A/C
- * 2 : Except *1

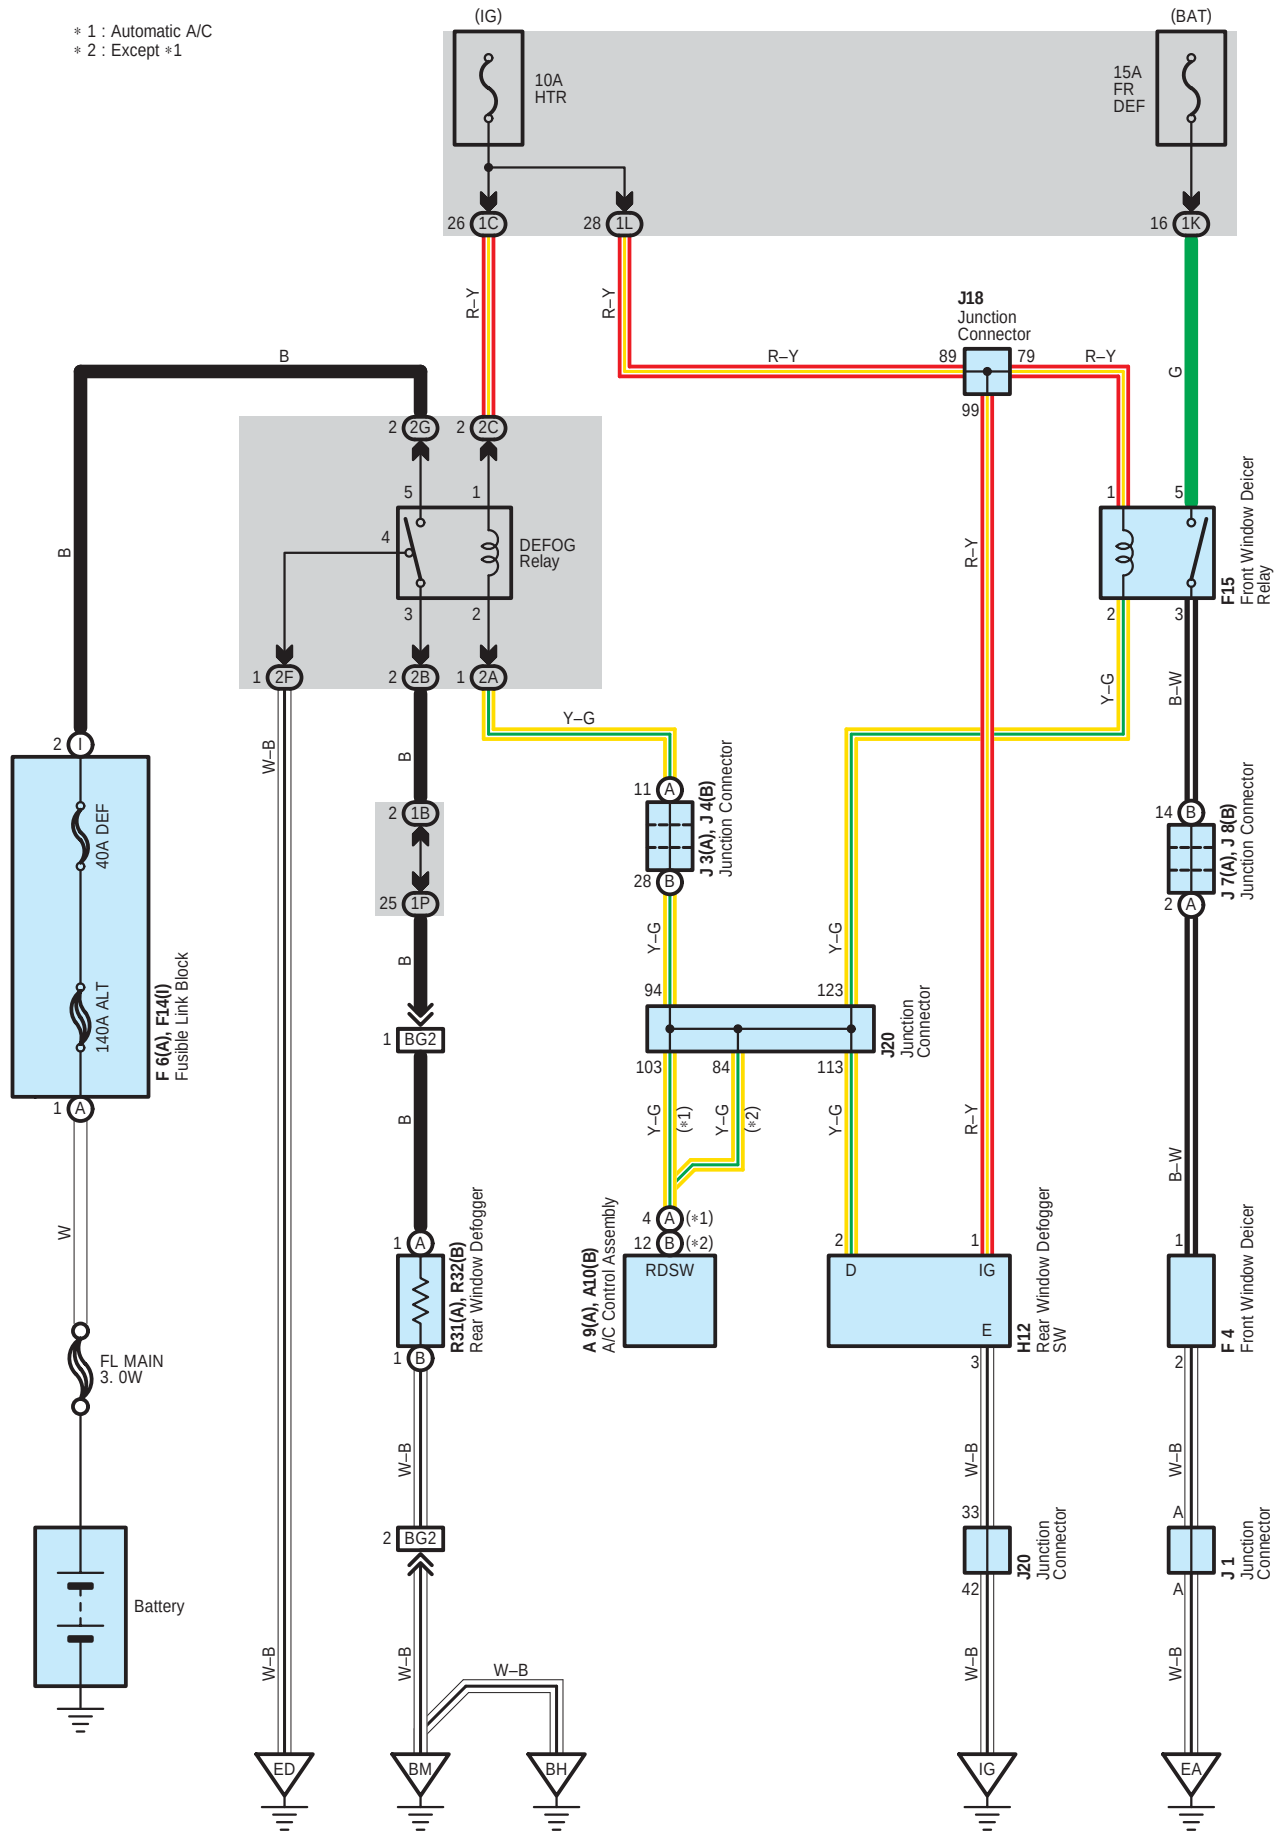

 : Parts Location

Code		See Page	Code		See Page	Code		See Page
A9	A	38	H12	39	J18	40		
A10	B	38	J1	37	J20	40		
F4		36	J3	A	40	R31	A	44
F6	A	36	J4	B	40	R32	B	44
F14	I	36	J7	A	40			
F15		39	J8	B	40			

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1C		
1K	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L		
1P	31	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)
2A	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2B		
2C		
2F		
2G		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BG2	55	Back Door No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)

 : Ground Points

Code	See Page	Ground Points Location
EA	50	Front Side of the Right Fender Apron
ED	50	Front Side of the Left Fender Apron
IG	52	Right Kick Panel
BH	54	Under the Left Center Pillar
BM	54	Left Rear Quarter Panel