


Mirror Heater

- * 1 : Automatic A/C
- * 2 : Except *1
- * 3 : w/ Driving Position Memory
- * 4 : w/o Driving Position Memory

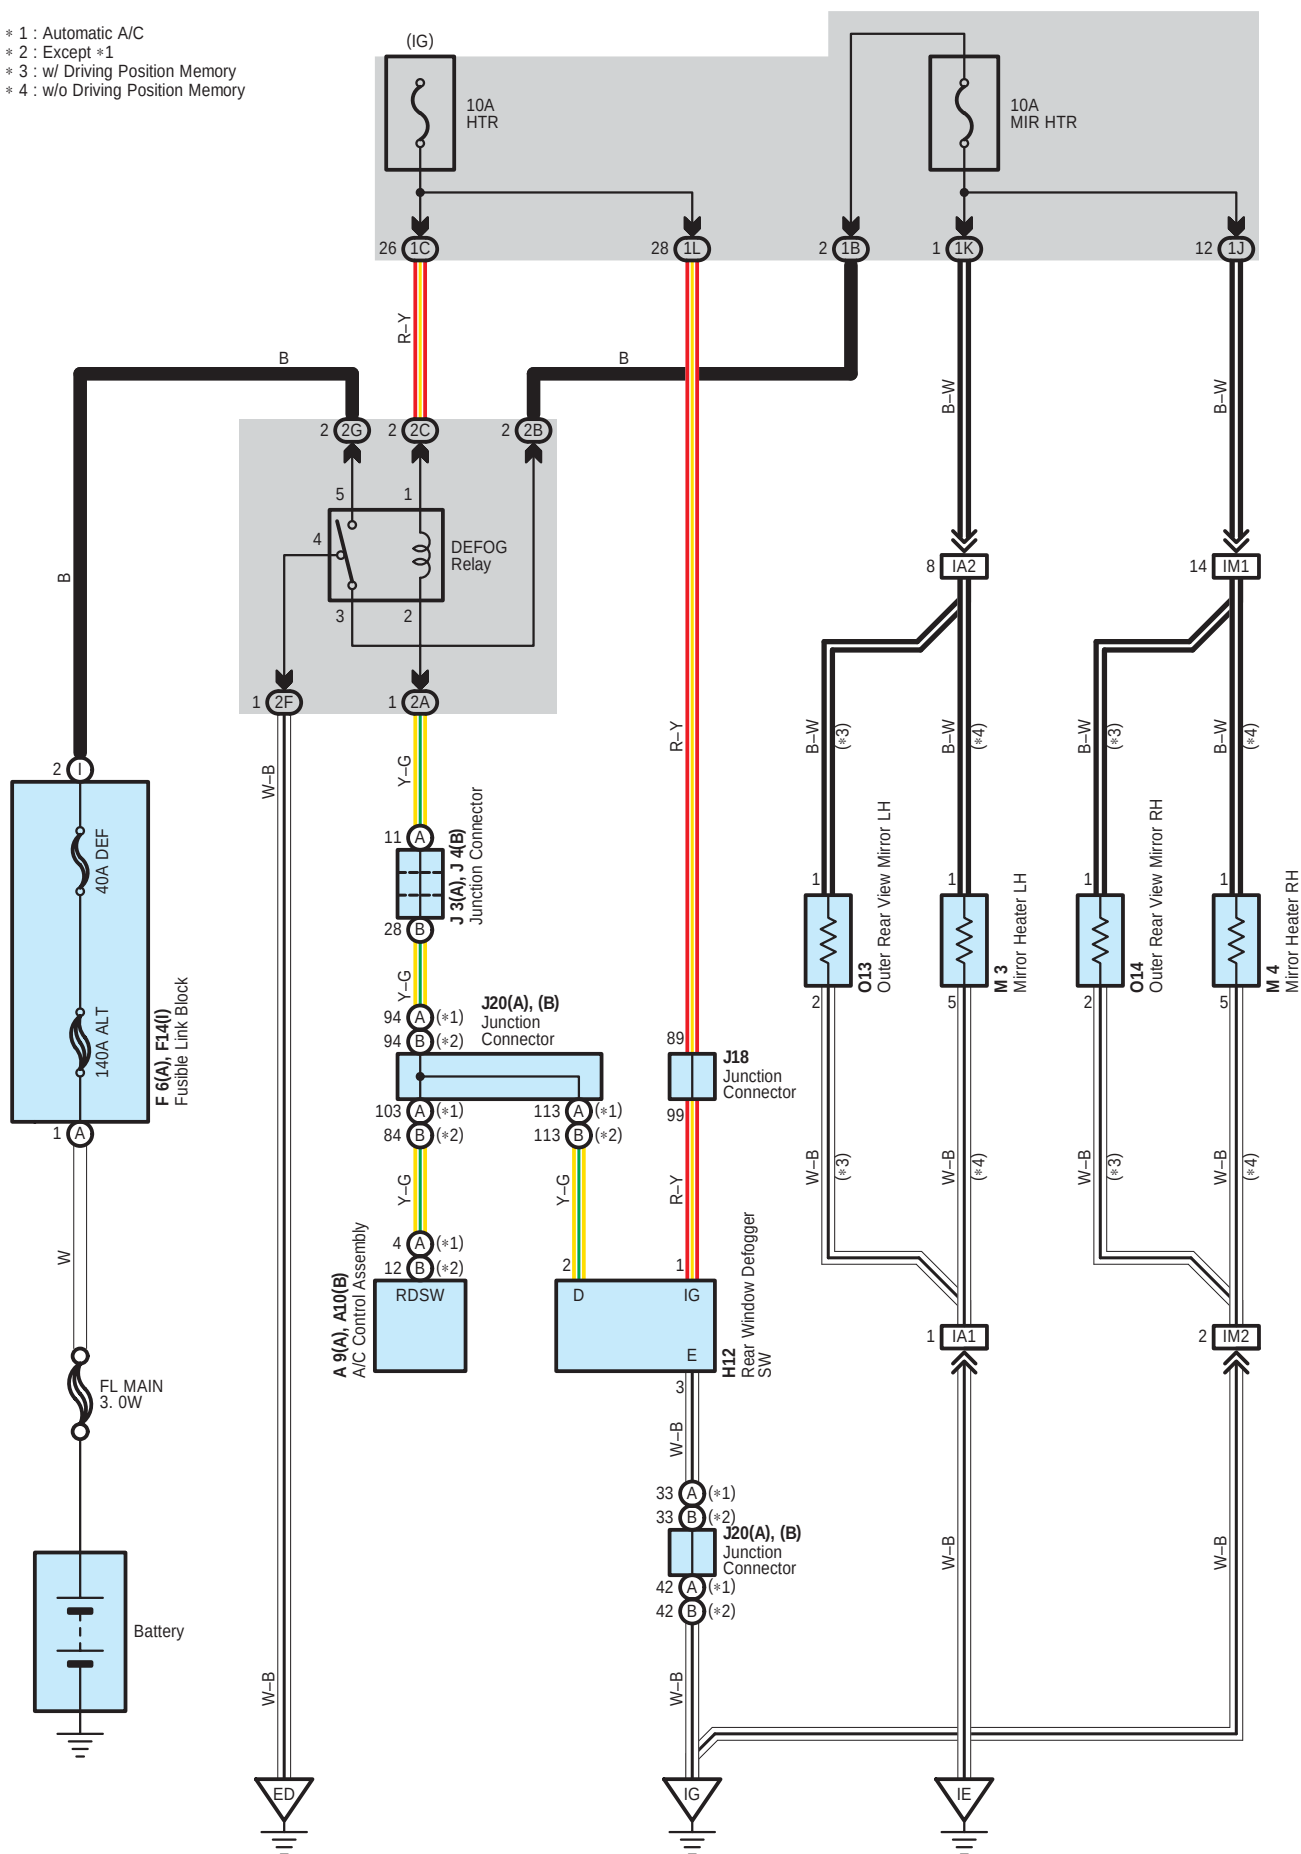

 : Parts Location

Code		See Page	Code		See Page	Code		See Page
A9	A	38	J3	A	40	M3	43	
A10	B	38	J4	B	40	M4	43	
F6	A	36	J18		40	O13	45	
F14	I	36	J20	A	40	O14	45	
H12		39		B	40			

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1C		
1J	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1K		
1L		
2A	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2B		
2C		
2F		
2G		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	52	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IA2		
IM1	53	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IM2		

 : Ground Points

Code	See Page	Ground Points Location
ED	50	Front Side of the Left Fender Apron
IE	52	Left Kick Panel
IG	52	Right Kick Panel