




Navigation, Rear View Monitor and Audio System

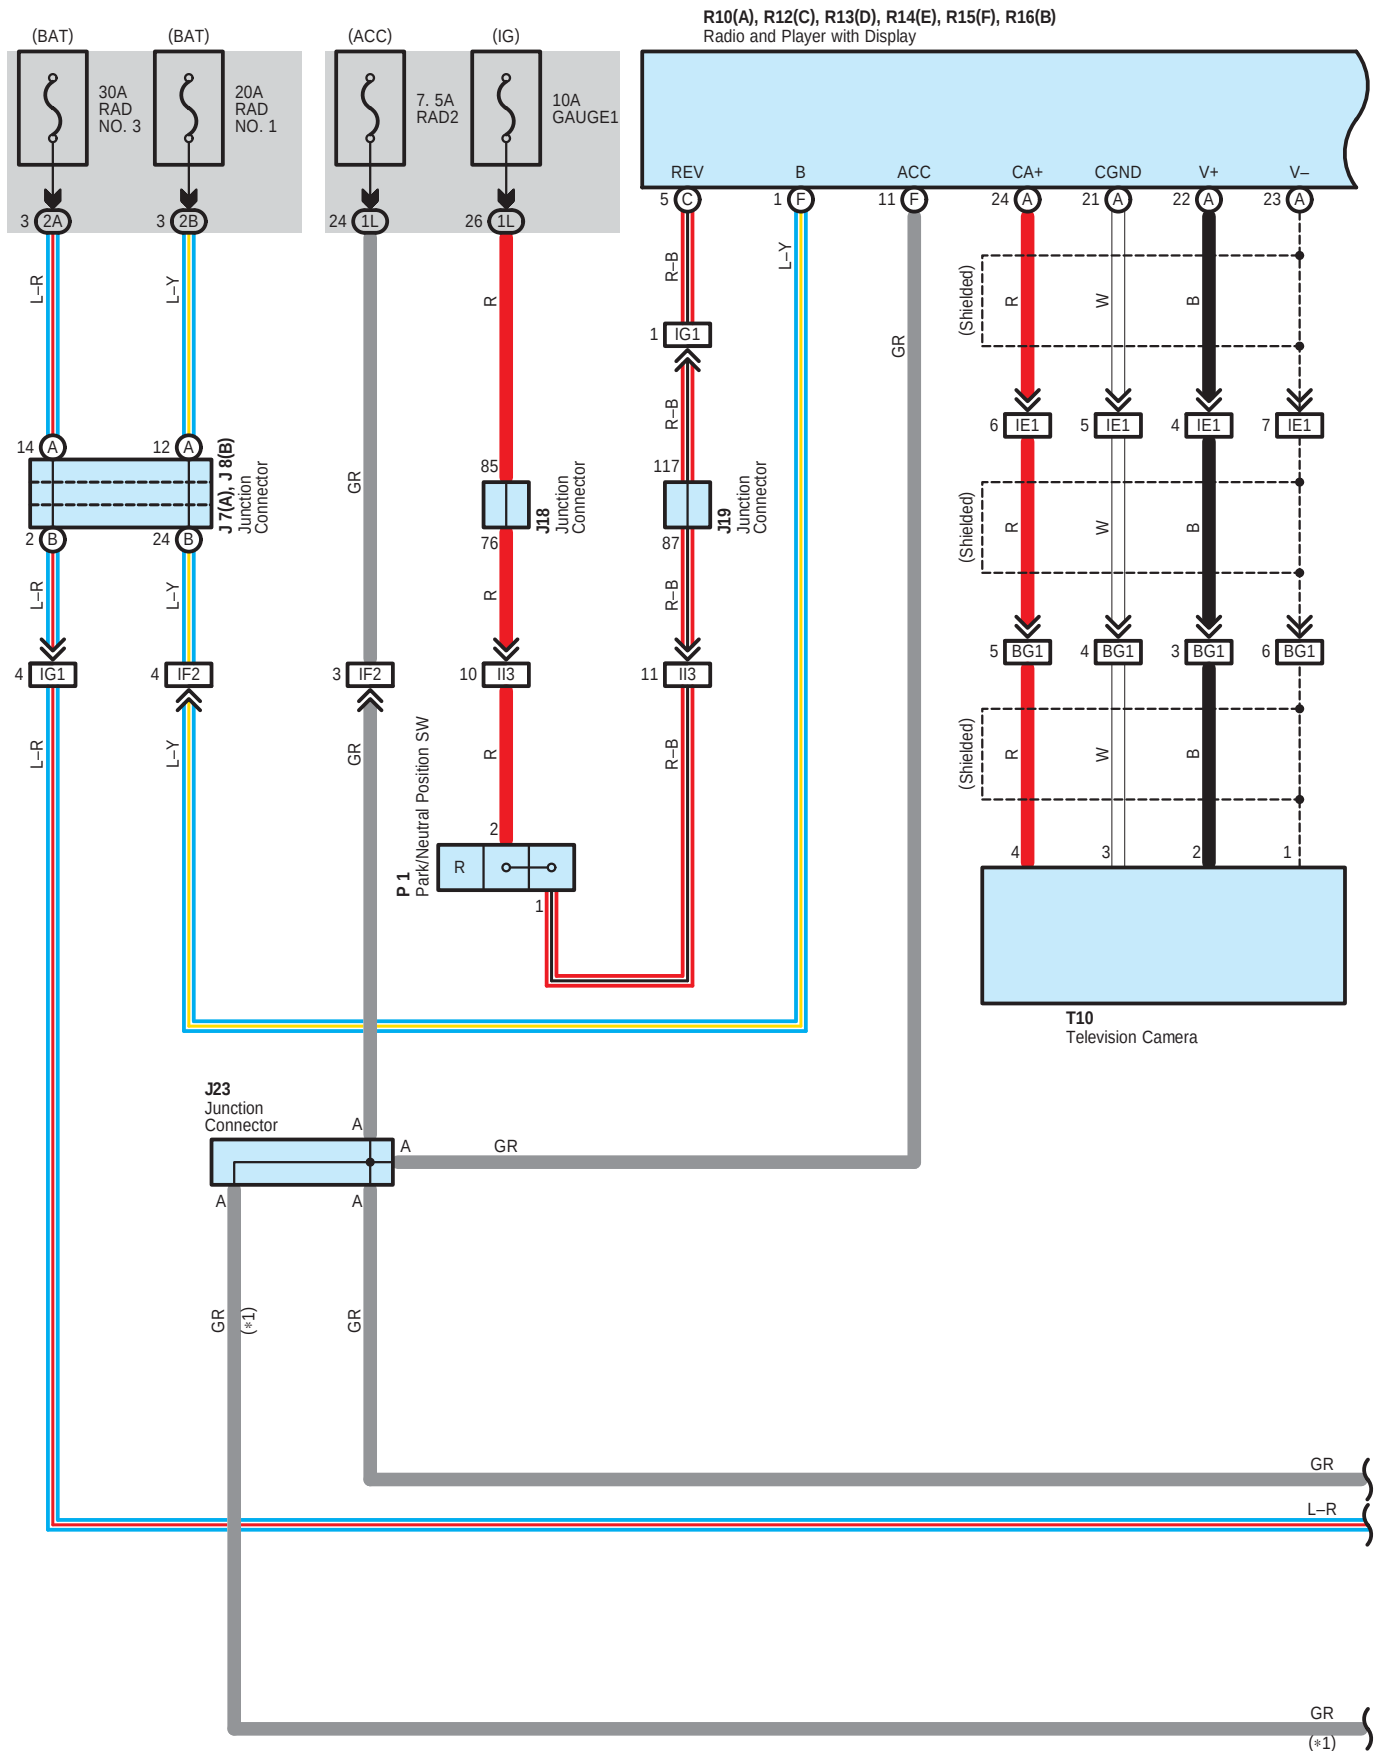


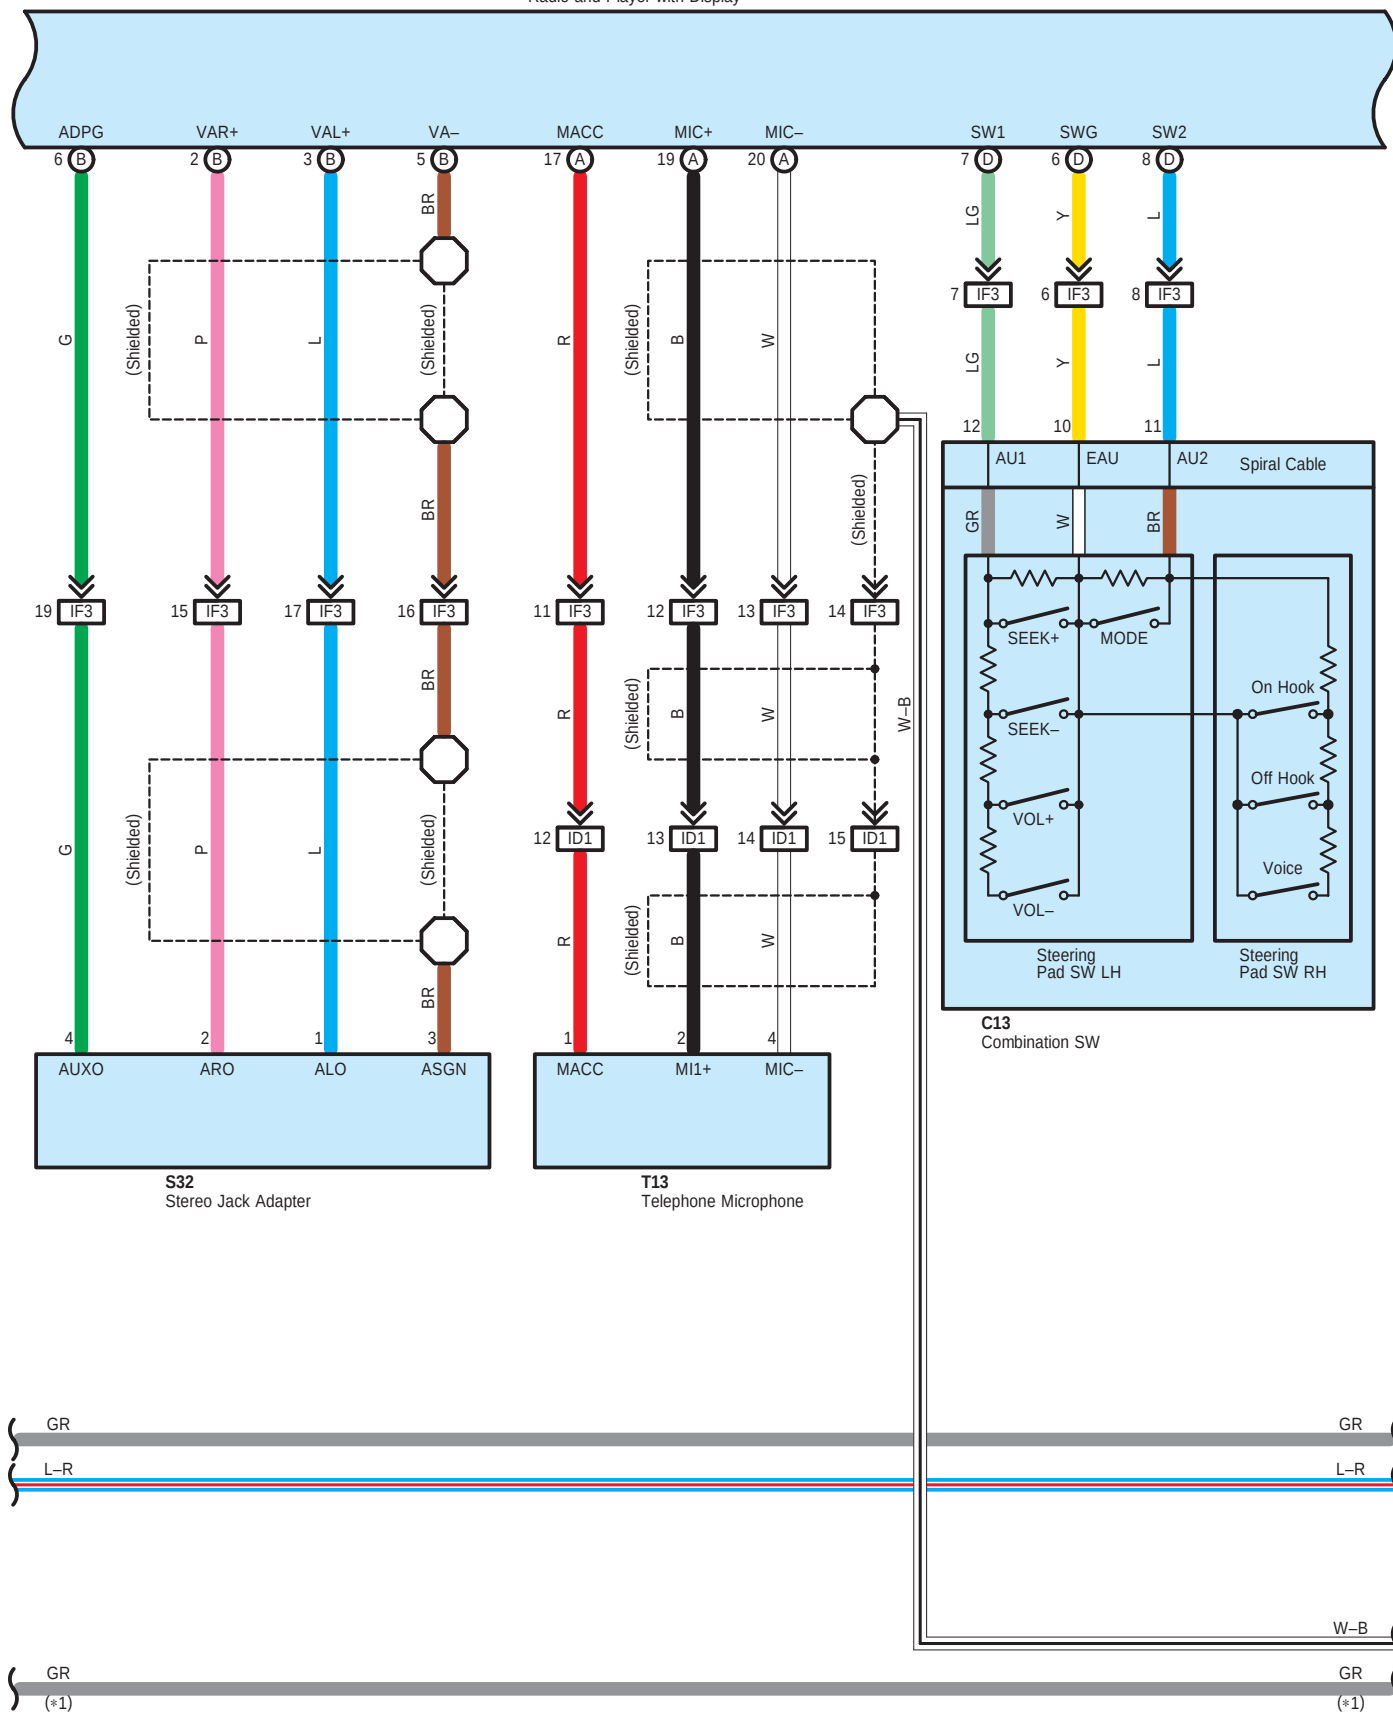


Navigation, Rear View Monitor and Audio System

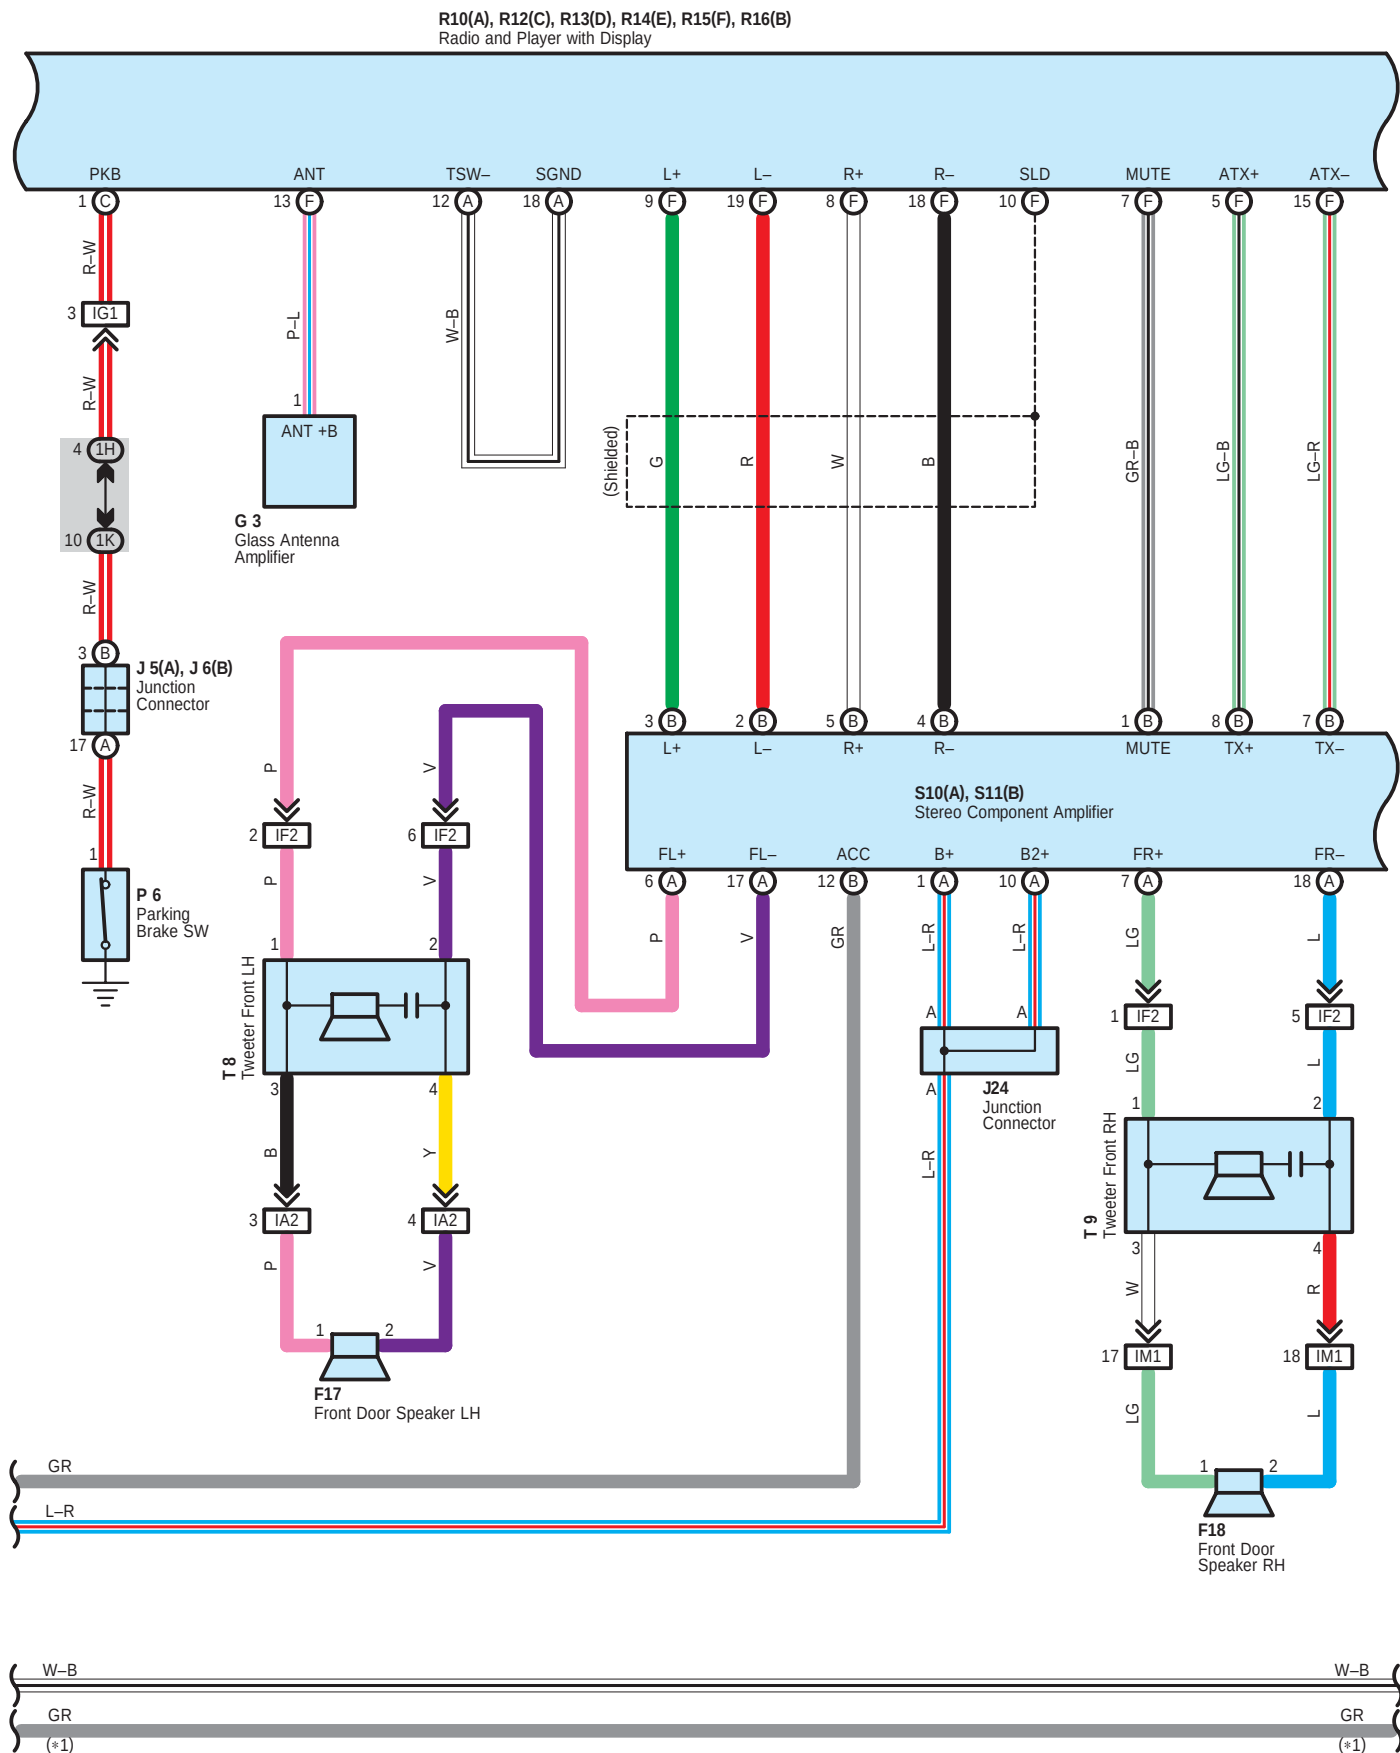


Pinout diagram for the 16-pin LQFP package. The pins are numbered 1 to 16 around the perimeter. The pin functions are: 1: IVO+, 2: IVO-, 3: SLD1, 4: SLD2, 5: SLD3, 6: SLD4, 7: SLD5, 8: SLD6, 9: SLD7, 10: SLD8, 11: SLD9, 12: SLD10, 13: SLD11, 14: SLD12, 15: SLD13, 16: GND.

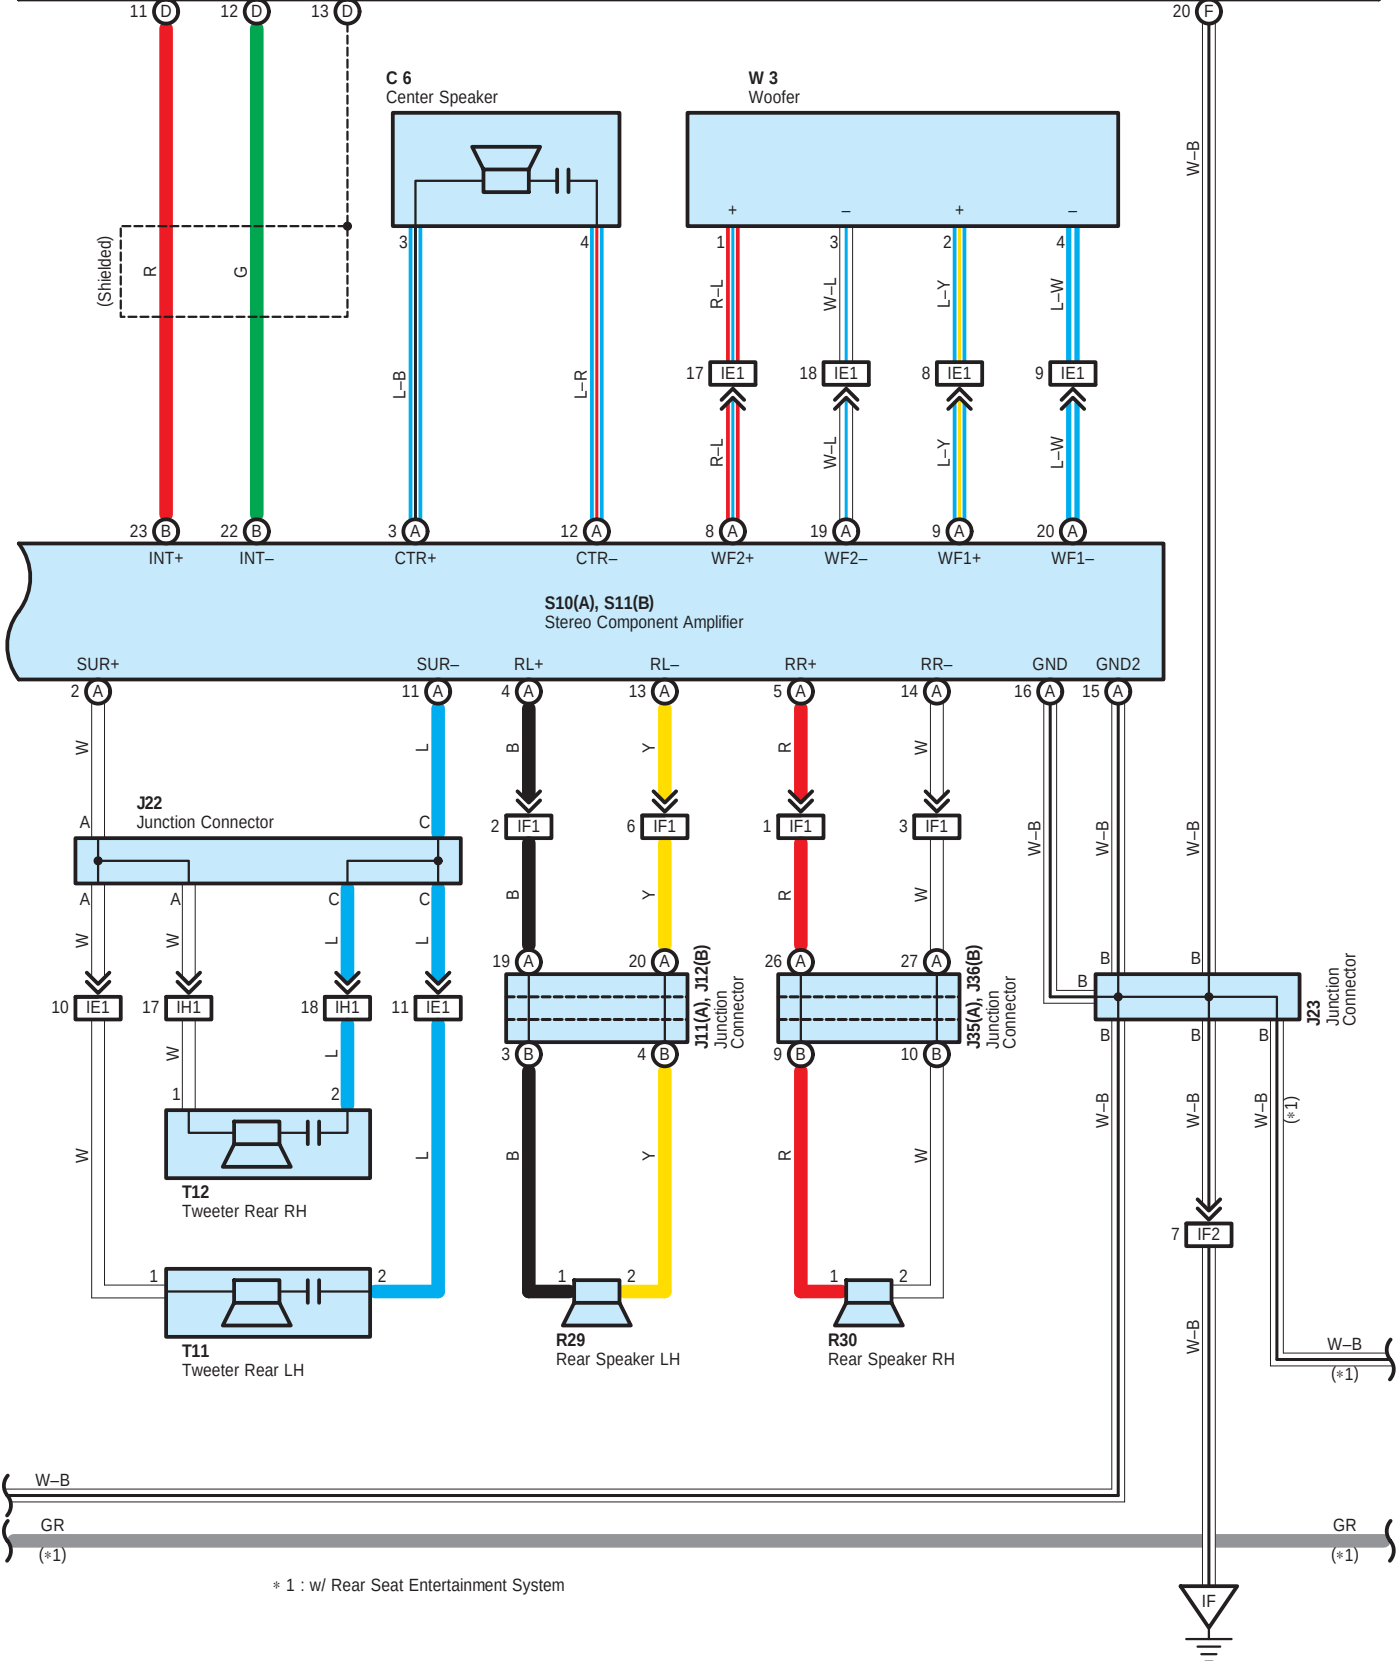


Navigation, Rear View Monitor and Audio System

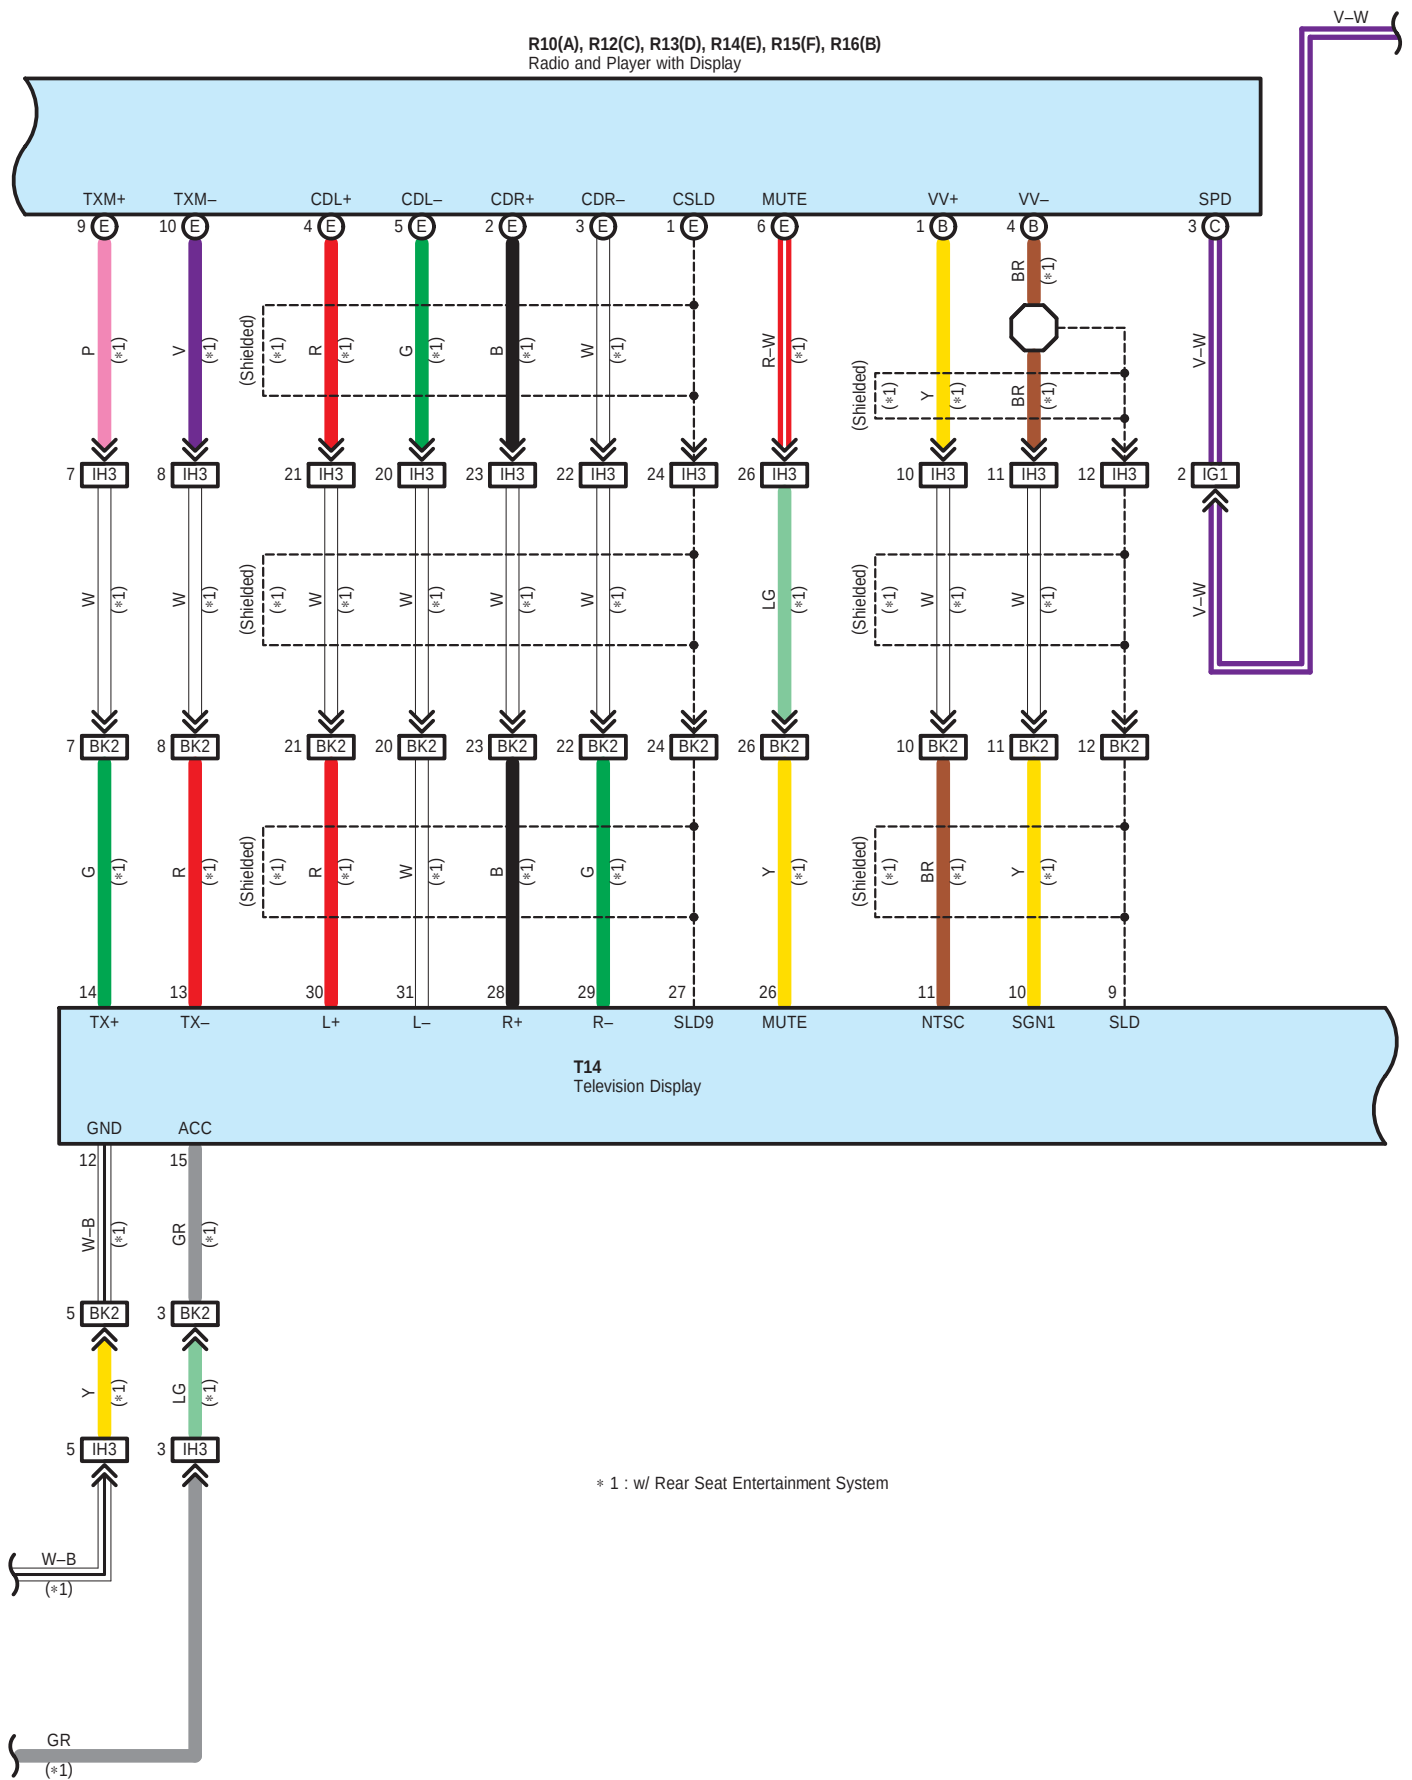

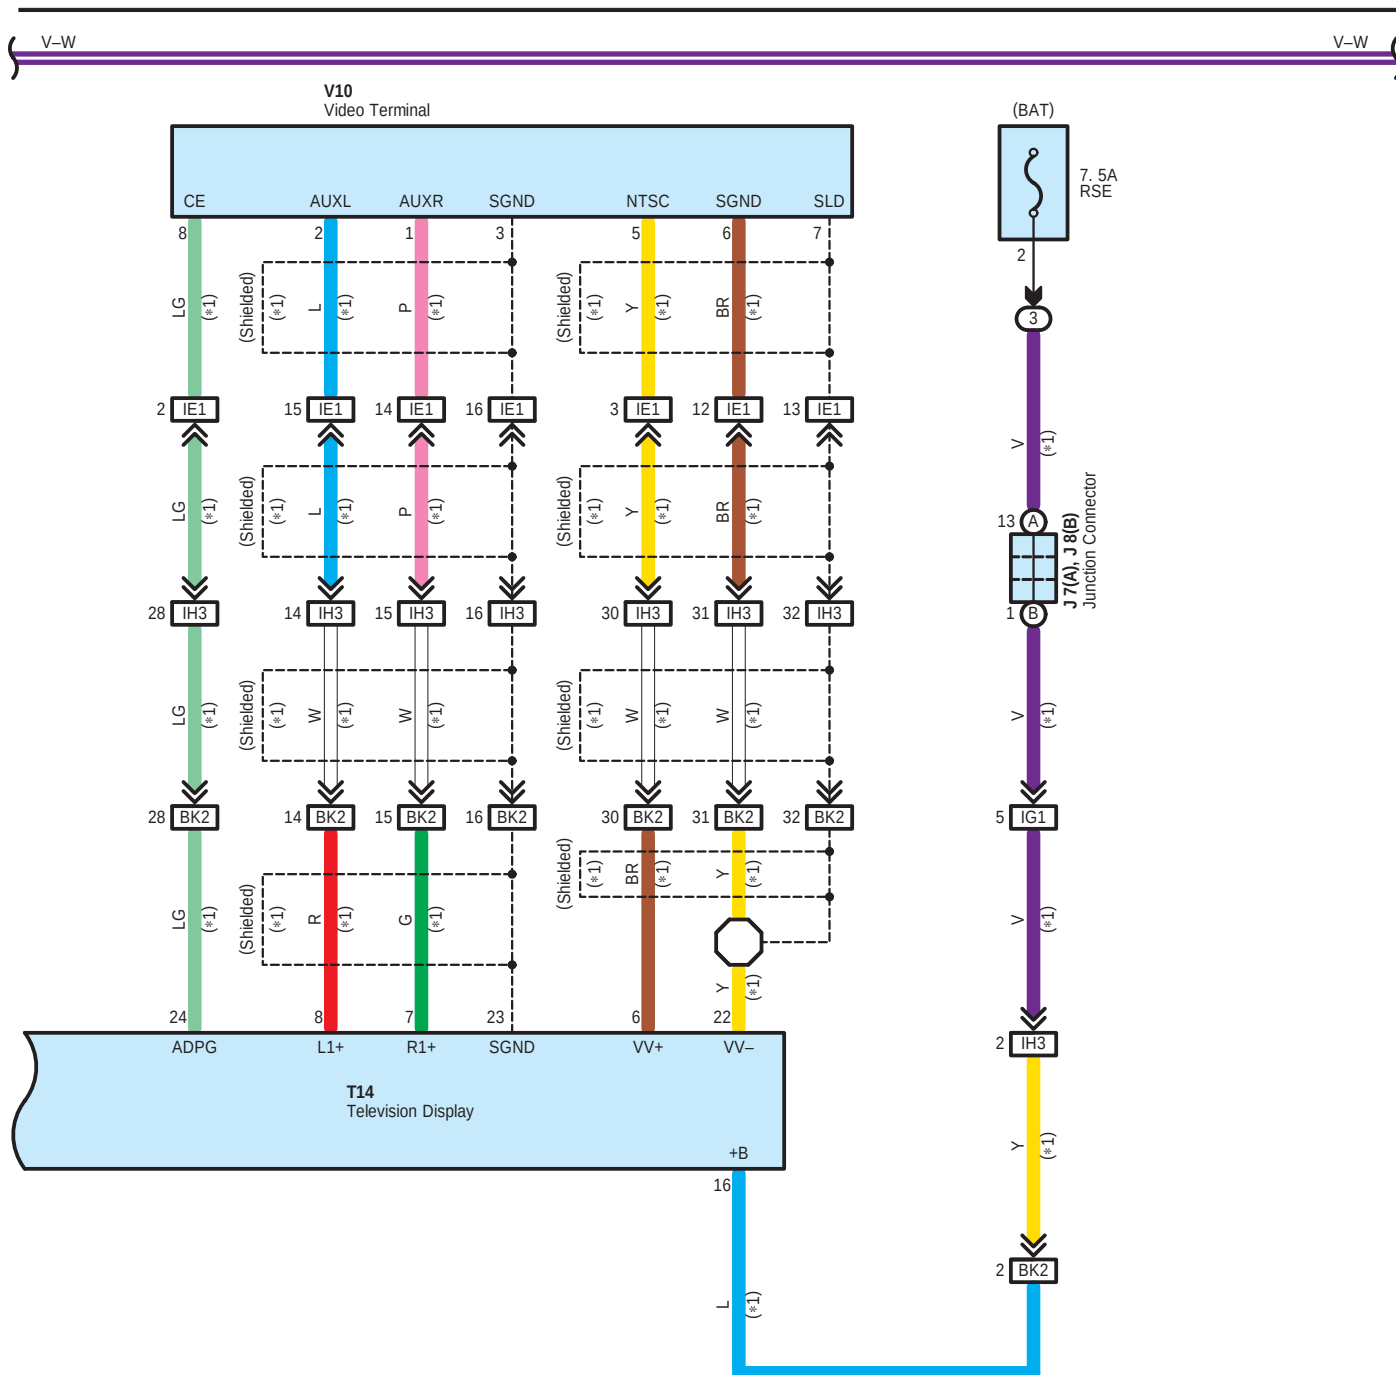

Navigation, Rear View Monitor and Audio System

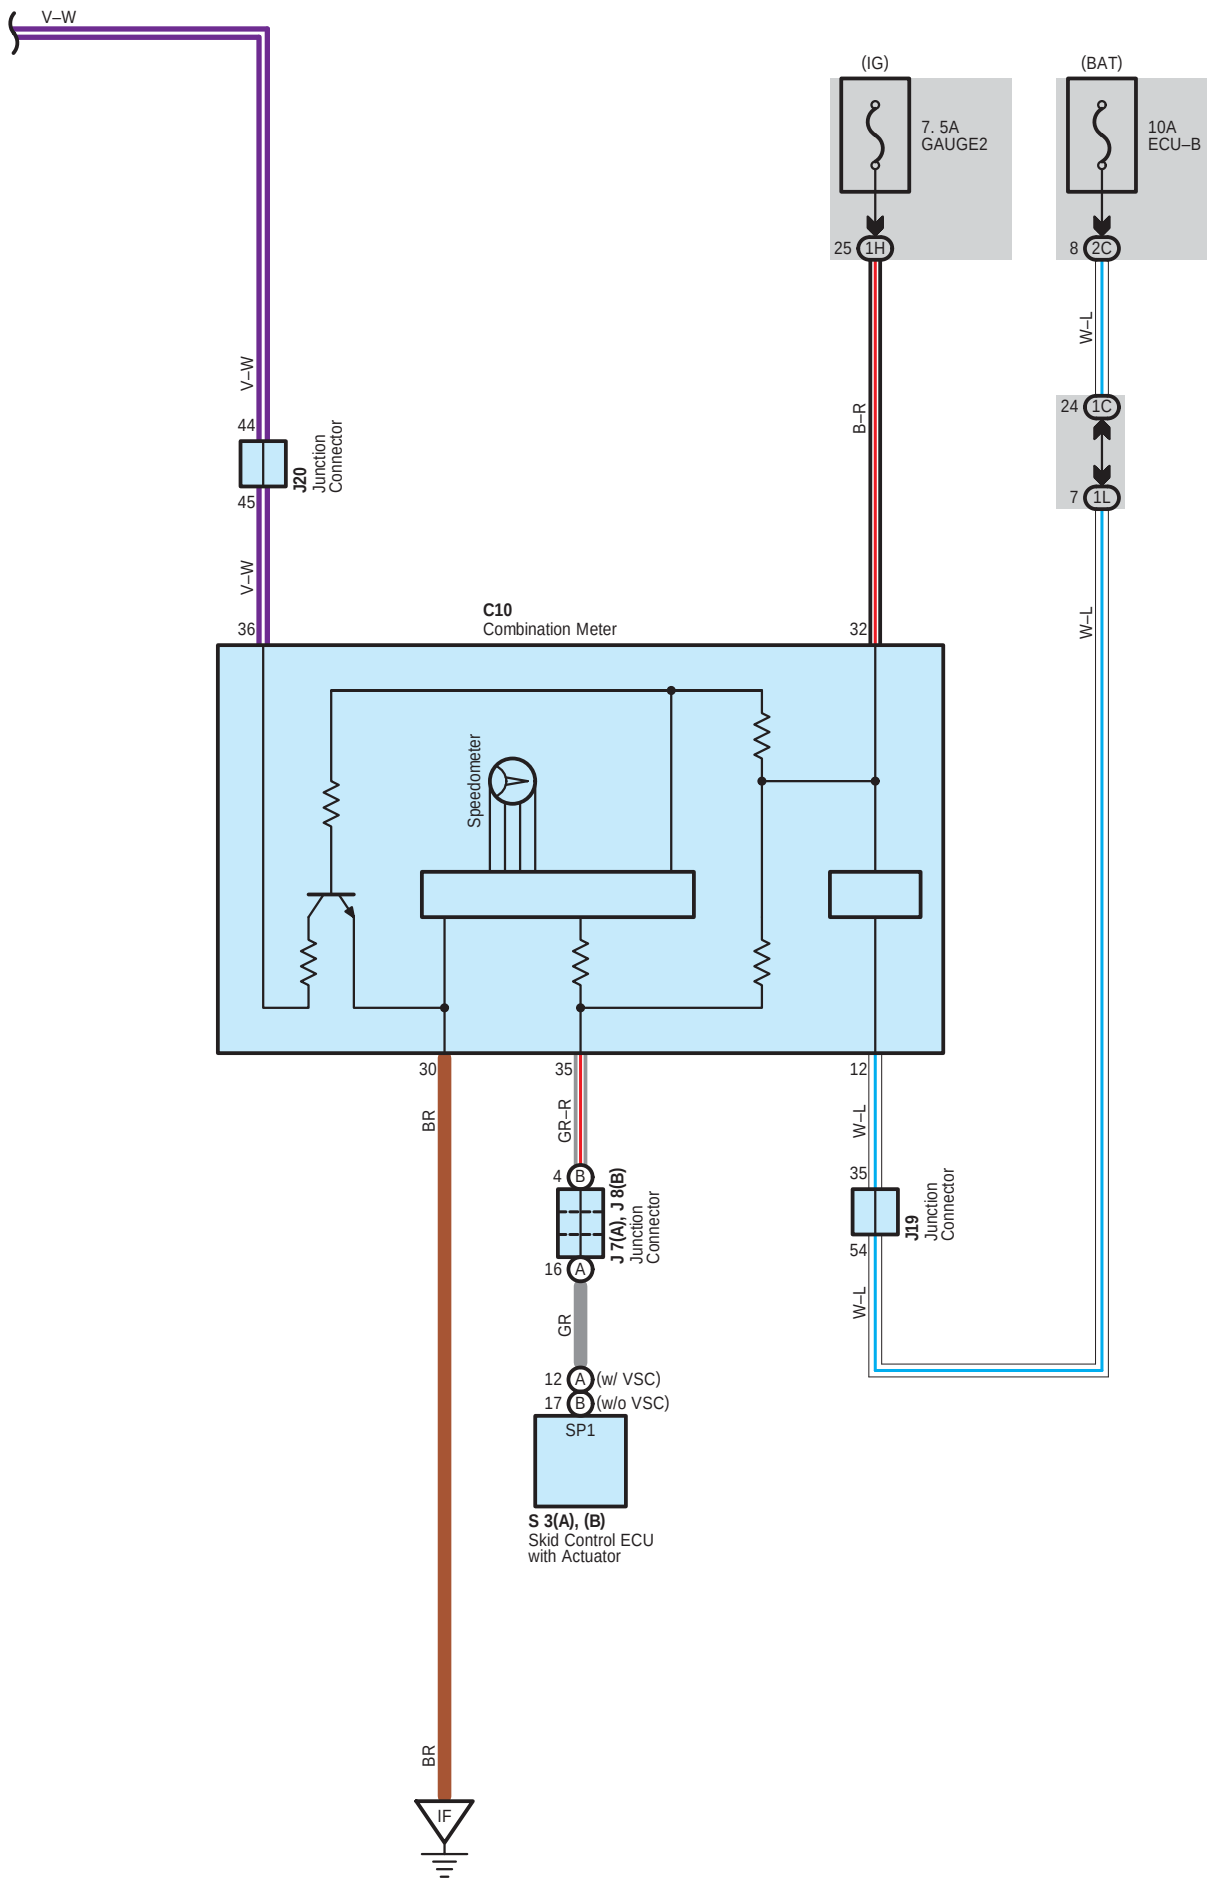

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
C6	39	J22	40	S3	A 37
C10	39	J23	40		B 37
C13	39	J24	40	S10	A 41
F17	42	J35	A 40	S11	B 41
F18	42	J36	B 40	S32	41
G3	39	P1	37	T8	41
J5	A 40	P6	41	T9	41
J6	B 40	R10	A 41	T10	45
J7	A 40	R12	C 41	T11	45
J8	B 40	R13	D 41	T12	45
J11	A 40	R14	E 41	T13	45
J12	B 40	R15	F 41	T14	45
J18	40	R16	B 41	V10	45
J19	40	R29	44	W3	45
J20	40	R30	44		

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	26	R/B No.3 (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1H	30	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1K	31	
1L		
2A		
2B	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2C		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	52	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
ID1	52	Roof Wire and Instrument Panel Wire (Near the Driver Side J/B)
IE1	52	Floor No.1 Wire and Instrument Panel No.2 Wire (Near the Driver Side J/B)
IF1	52	Instrument Panel Wire and Instrument Panel No.2 Wire (Instrument Panel Center)
IF2		
IF3		
IG1	52	Instrument Panel No.2 Wire and Instrument Panel Wire (Instrument Panel Brace RH)
IH1	52	Floor No.2 Wire and Instrument Panel No.2 Wire (Instrument Panel Brace RH)
IH3		
II3	53	Engine Wire and Instrument Panel Wire (Right Kick Panel)
IM1	53	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
BG1	55	Back Door No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)
BK2	55	Roof No.2 Wire and Floor No.2 Wire (Right Rear Quarter Panel)

 : Ground Points

Code	See Page	Ground Points Location
IF	52	Instrument Panel Brace LH