



Combination Meter

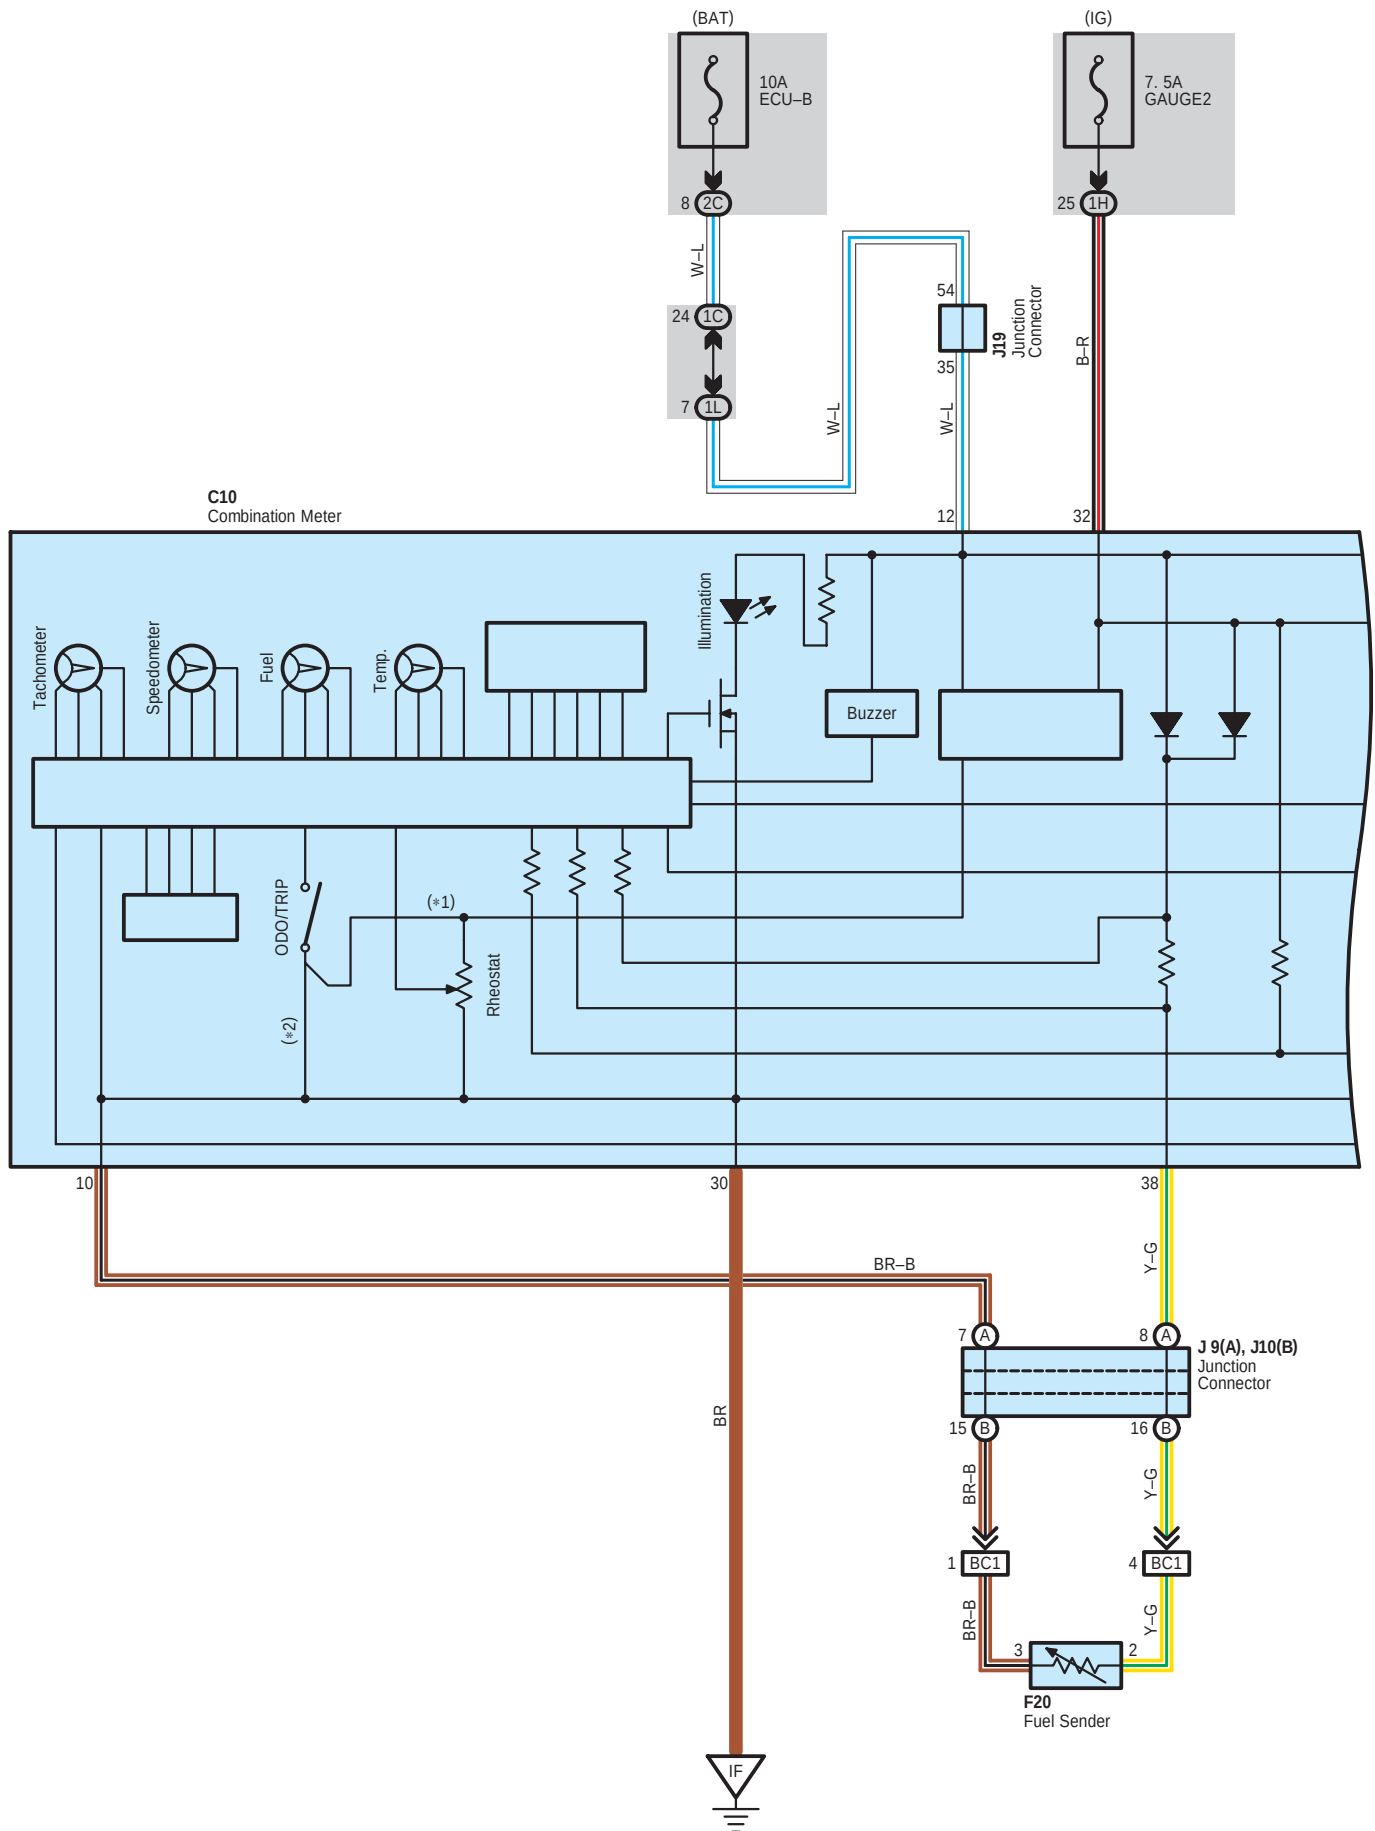

- * 1 : Optitron Meter
- * 2 : Analog Meter
- * 3 : w/ Engine Immobiliser System

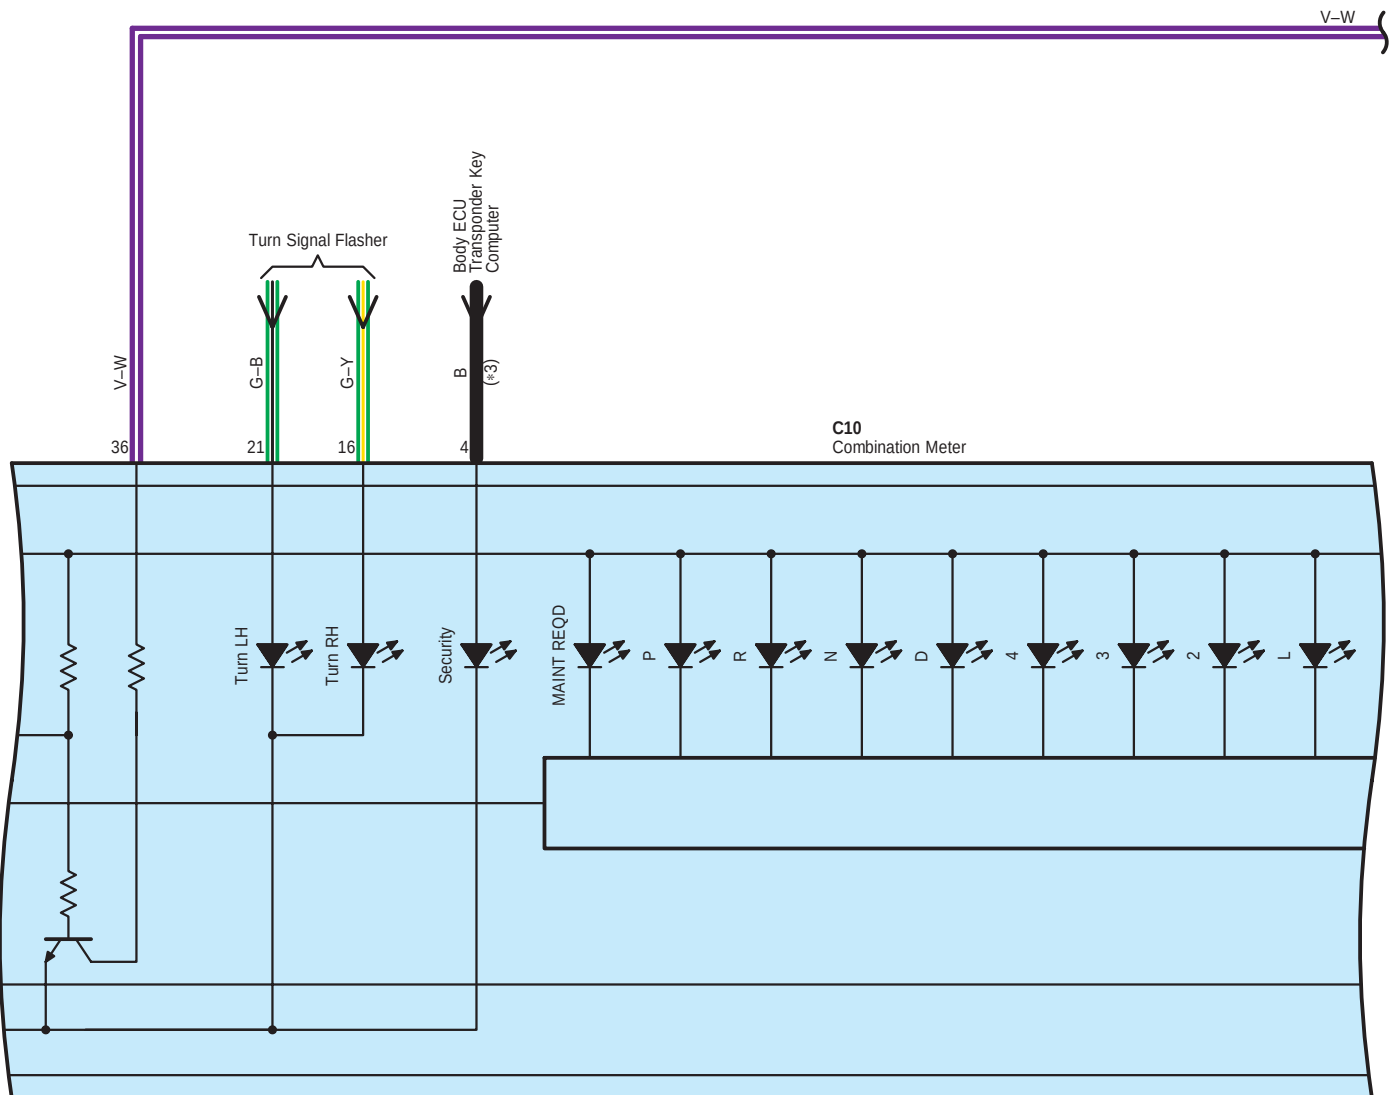


Combination Meter




C10
Combination Meter




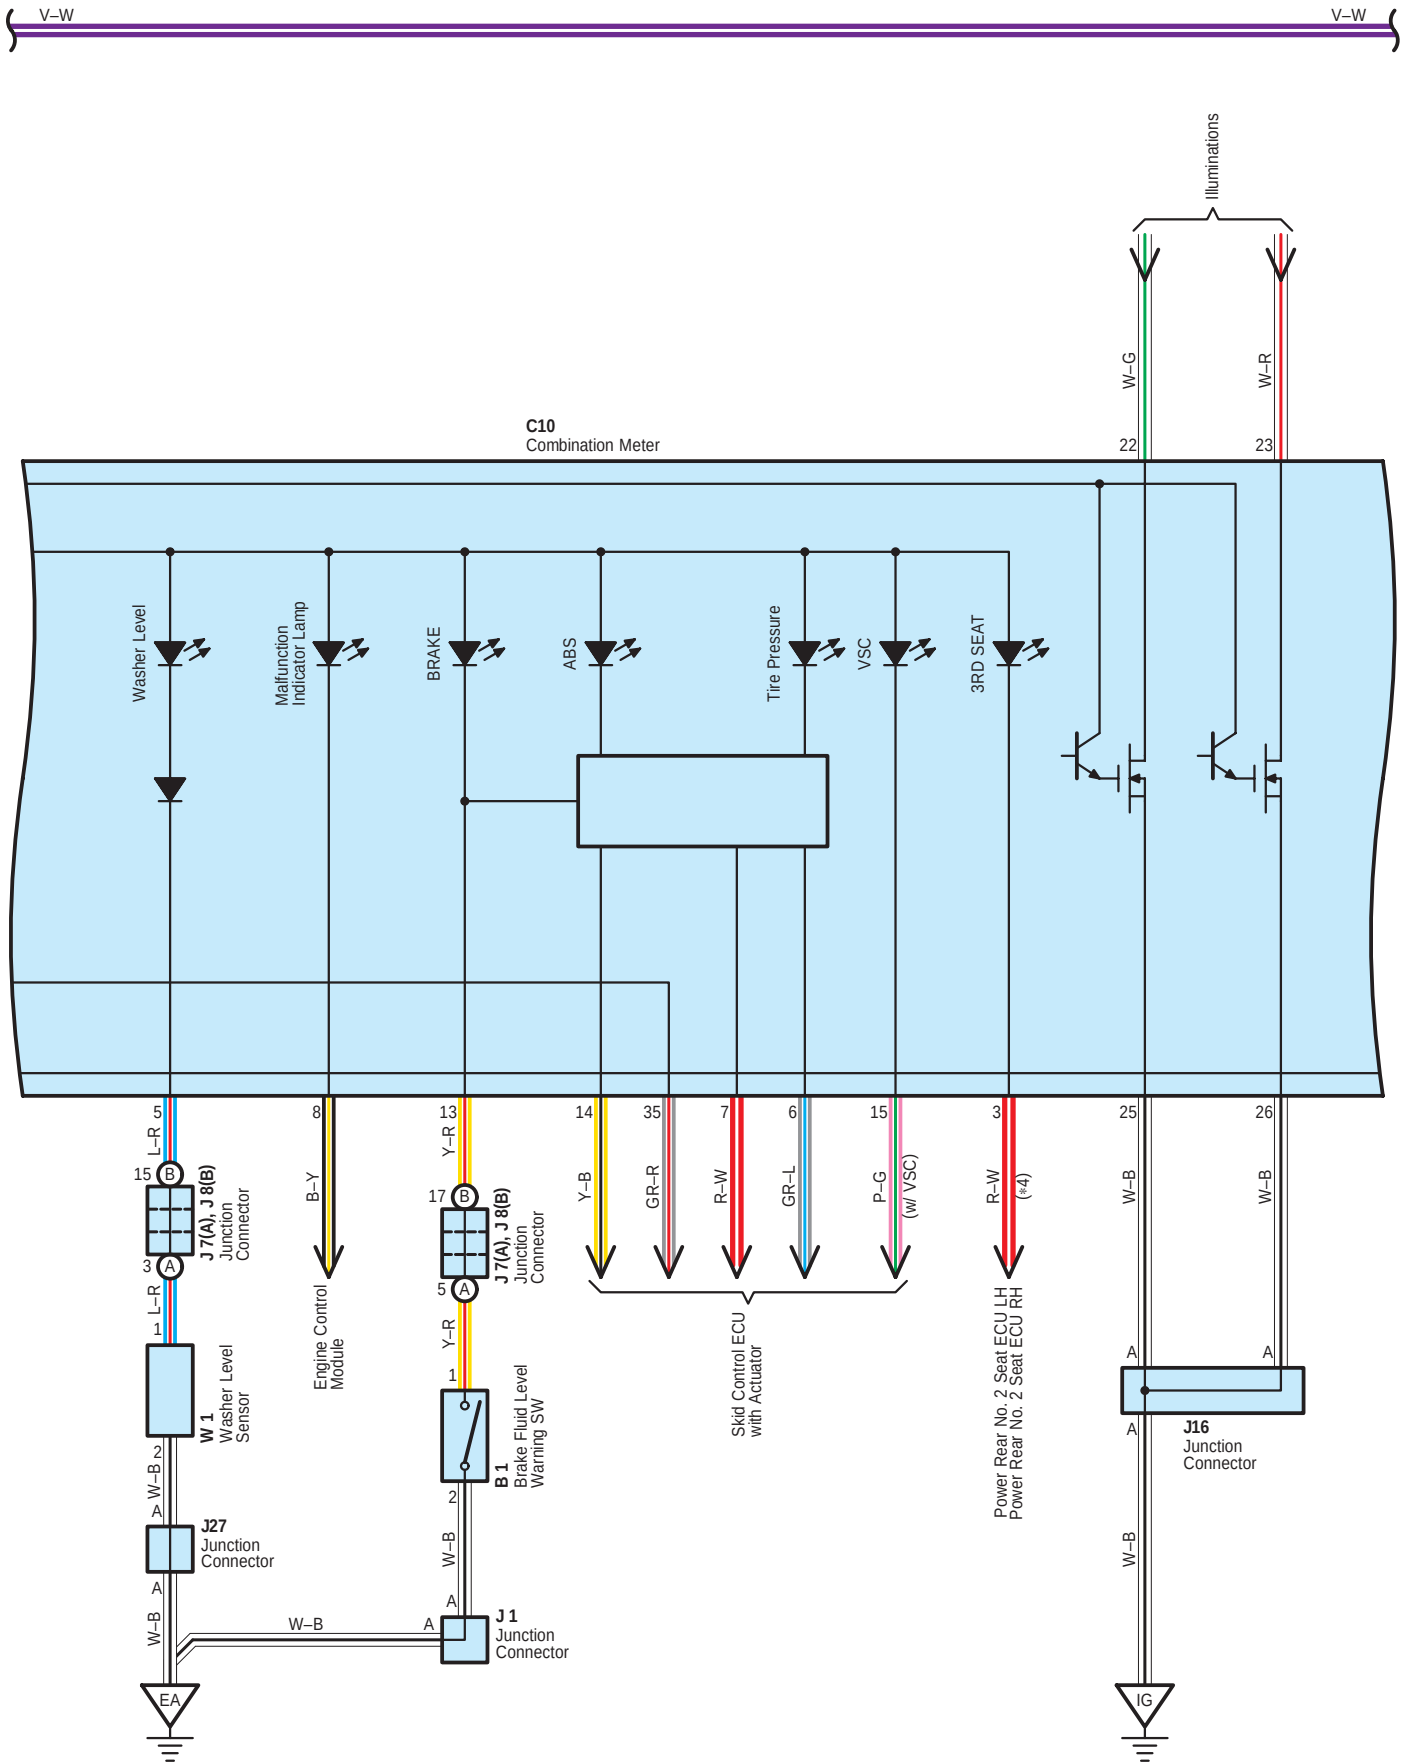

Combination Meter

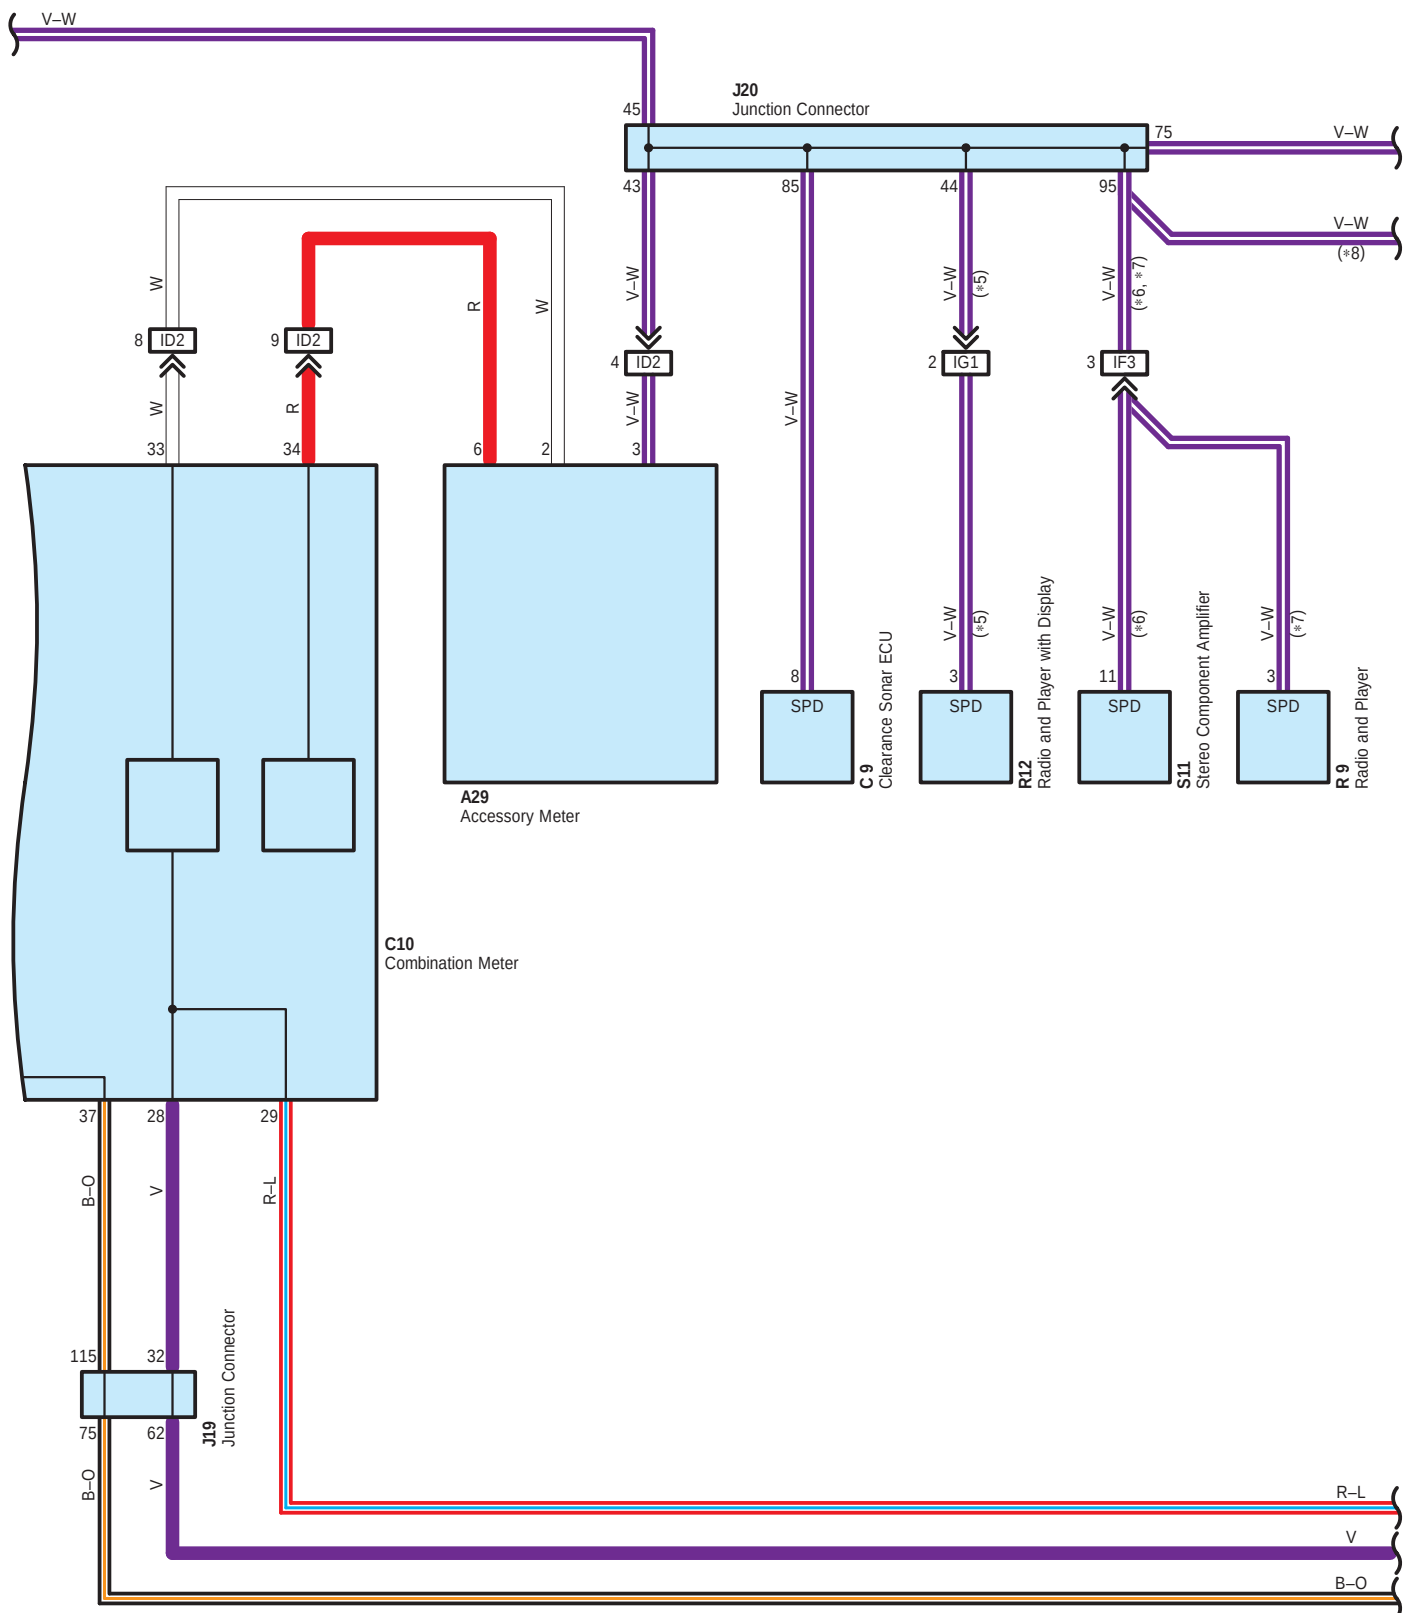

- * 5 : w/ Navigation System
- * 6 : 10 Speaker w/o Navigation System
- * 7 : 6 Speaker w/ Rear Seat Entertainment System
- * 8 : 6 Speaker w/o Rear Seat Entertainment System

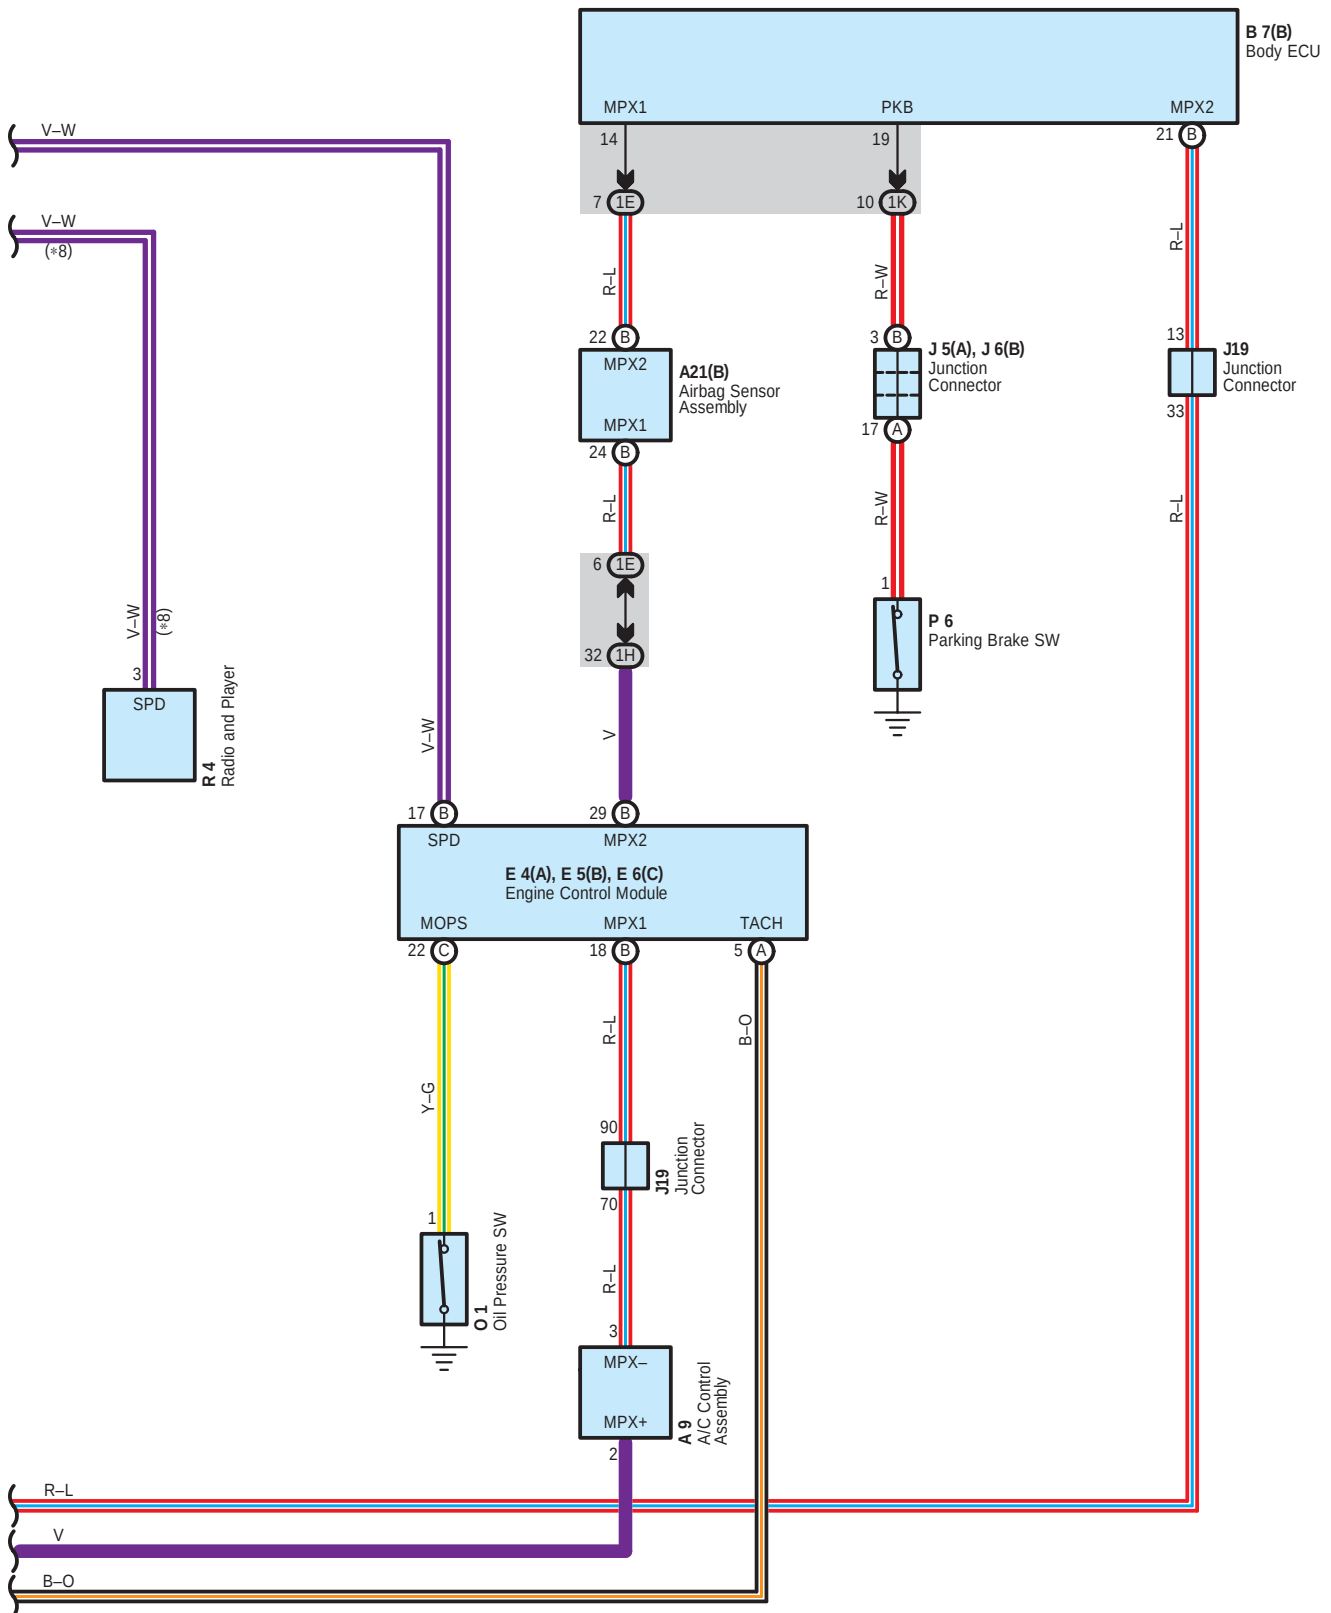

Combination Meter

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A9	38	F20	42	J20	40
A21	B 38	J1	37	J27	40
A29	42	J5	A 40	O1	37
B1	36	J6	B 40	P6	41
B7	B 38	J7	A 40	R4	41
C9	39	J8	B 40	R9	41
C10	39	J9	A 40	R12	41
E4	A 39	J10	B 40	S11	41
E5	B 39	J16	40	W1	37
E6	C 39	J19	40		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1H	30	
1K	31	
1L		
2C	24	

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID2	52	Roof Wire and Instrument Panel Wire (Near the Driver Side J/B)
IF3	52	Instrument Panel Wire and Instrument Panel No.2 Wire (Instrument Panel Center)
IG1	52	Instrument Panel No.2 Wire and Instrument Panel Wire (Instrument Panel Brace RH)
BC1	54	Fuel Gauge Wire and Floor No.1 Wire (Near the Fuel Tank)

: Ground Points

Code	See Page	Ground Points Location
EA	50	Front Side of the Right Fender Apron
IF	52	Instrument Panel Brace LH
IG	52	Right Kick Panel

