



Manual Air Conditioning (Front)

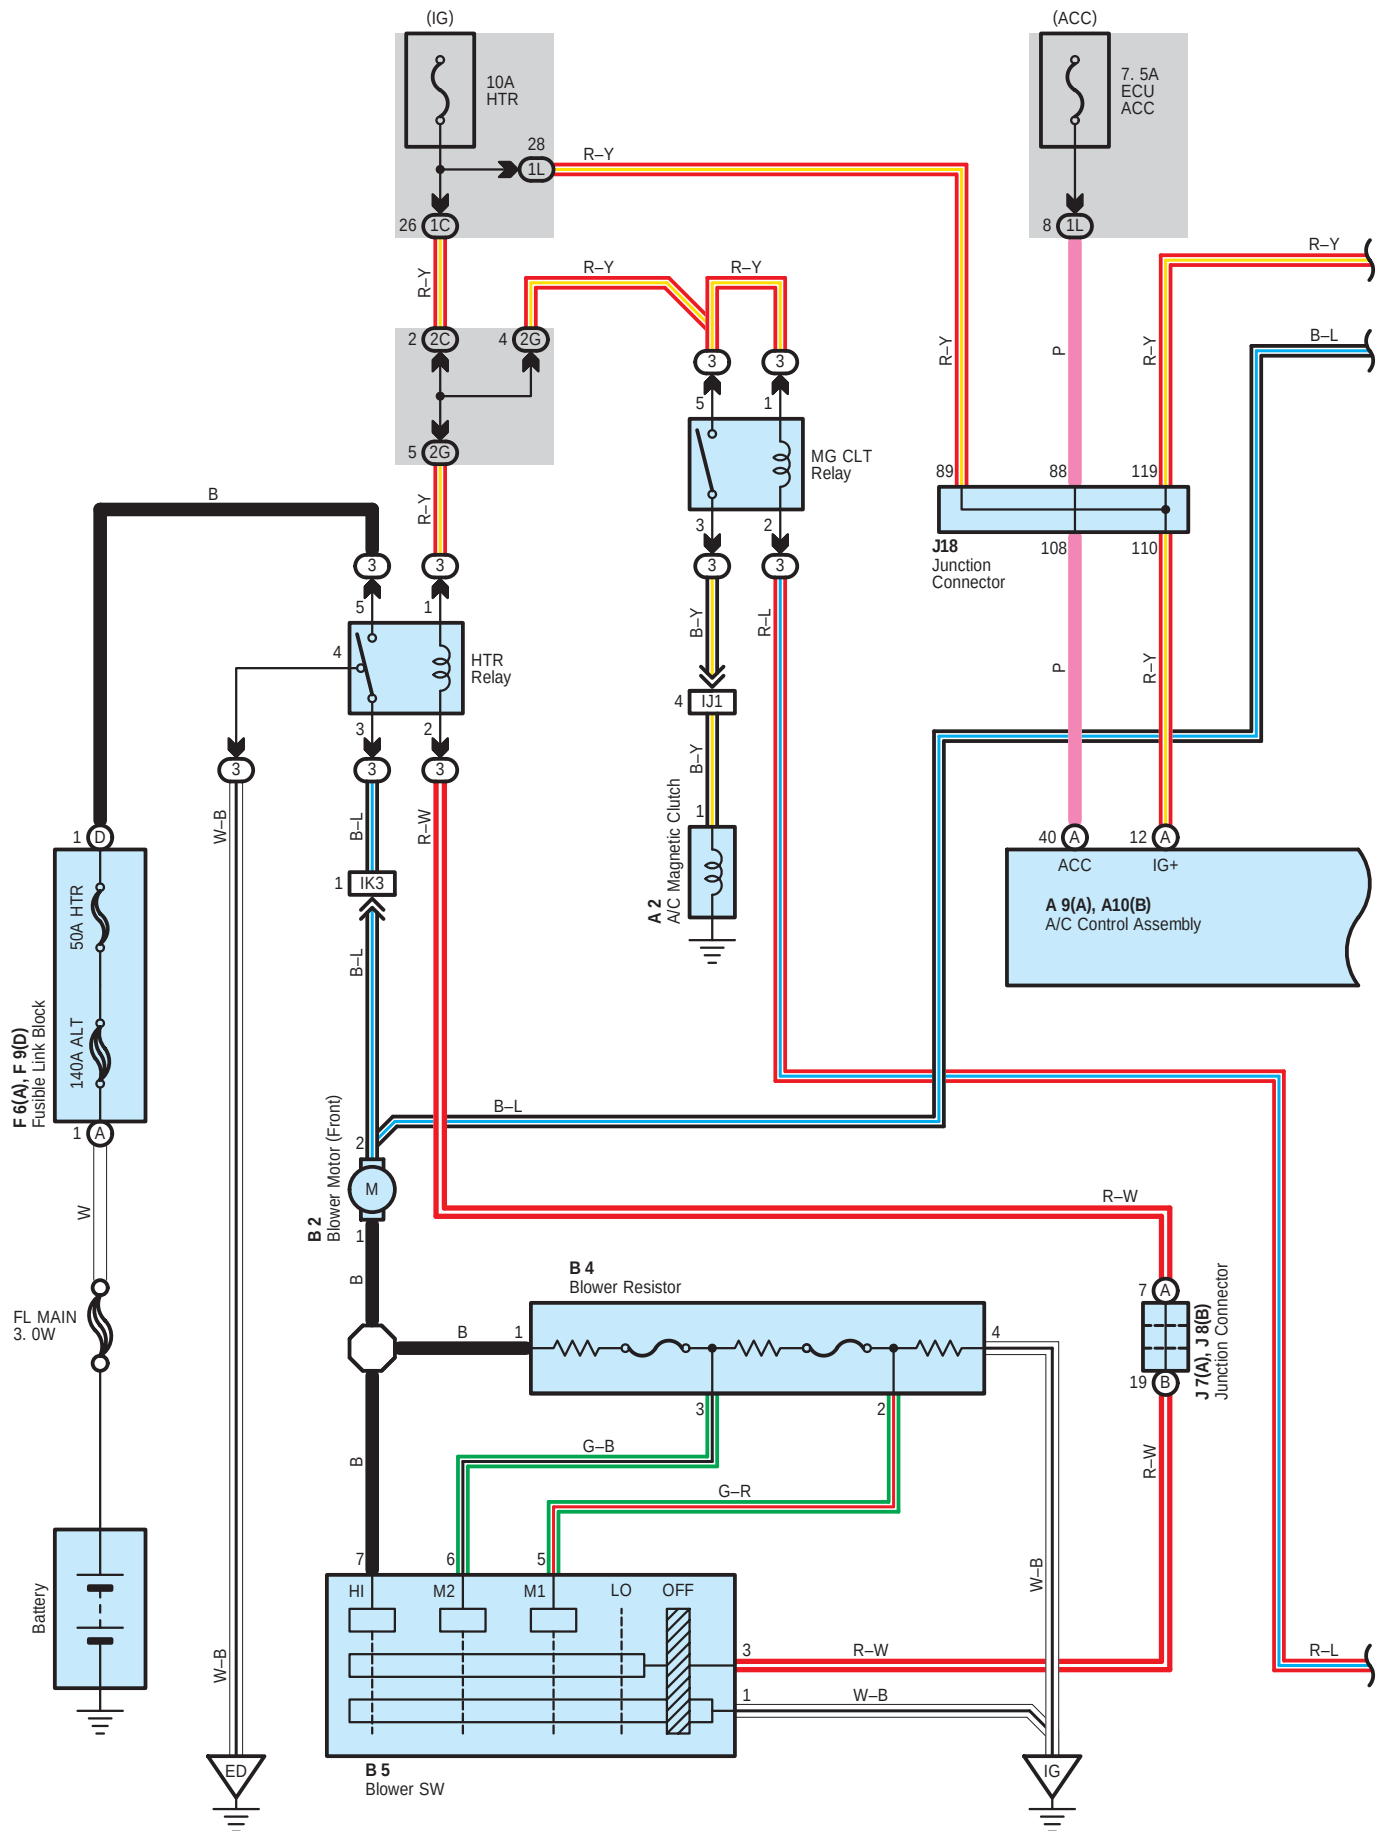

Manual Air Conditioning (Front)

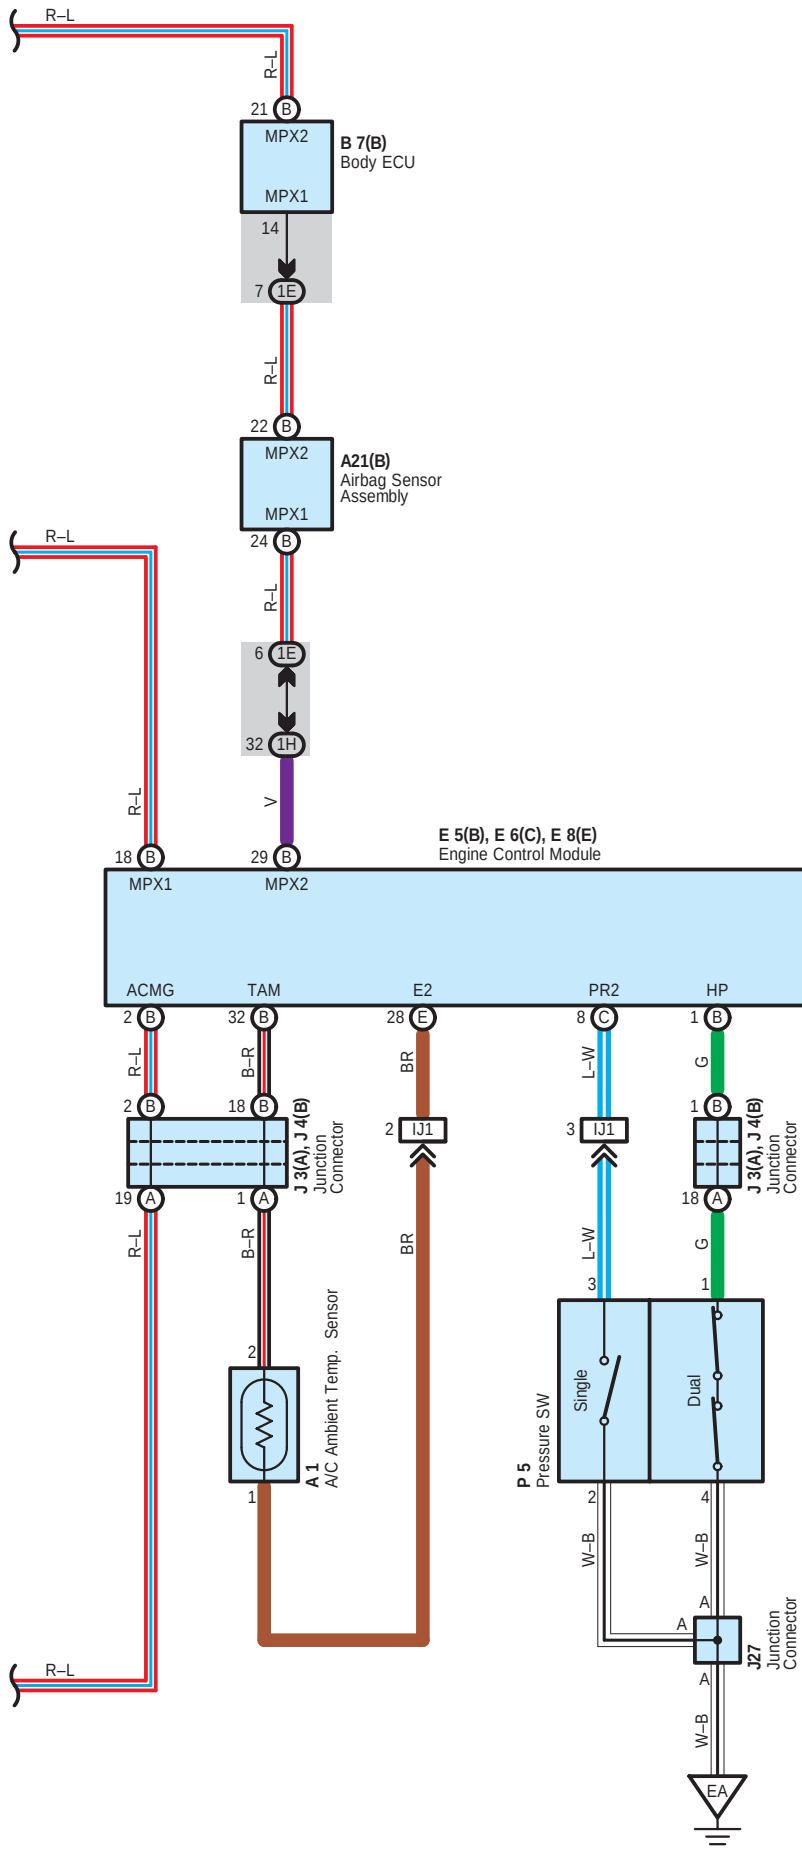

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
A1	36	B4	38	J3	A
A2	36	B5	38	J4	B
A9	A	B7	B	J7	A
A10	B	C10	39	J8	B
A12	38	E5	B	J18	40
A16	38	E6	C	J19	40
A18	38	E8	E	J27	40
A19	38	F6	A	P5	37
A21	B	F9	D		
B2	38	F16	39		

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	26	R/B No.3 (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1H	30	
1L	31	
2C	24	
2G		Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IJ1	53	Engine Wire and Engine Room Main Wire (Right Kick Panel)
IK3	53	Engine Room Main Wire and Instrument Panel Wire (Right Kick Panel)

 : Ground Points

Code	See Page	Ground Points Location
EA	50	Front Side of the Right Fender Apron
ED	50	Front Side of the Left Fender Apron
IE	52	Left Kick Panel
IG	52	Right Kick Panel