



Automatic Air Conditioning (Rear)

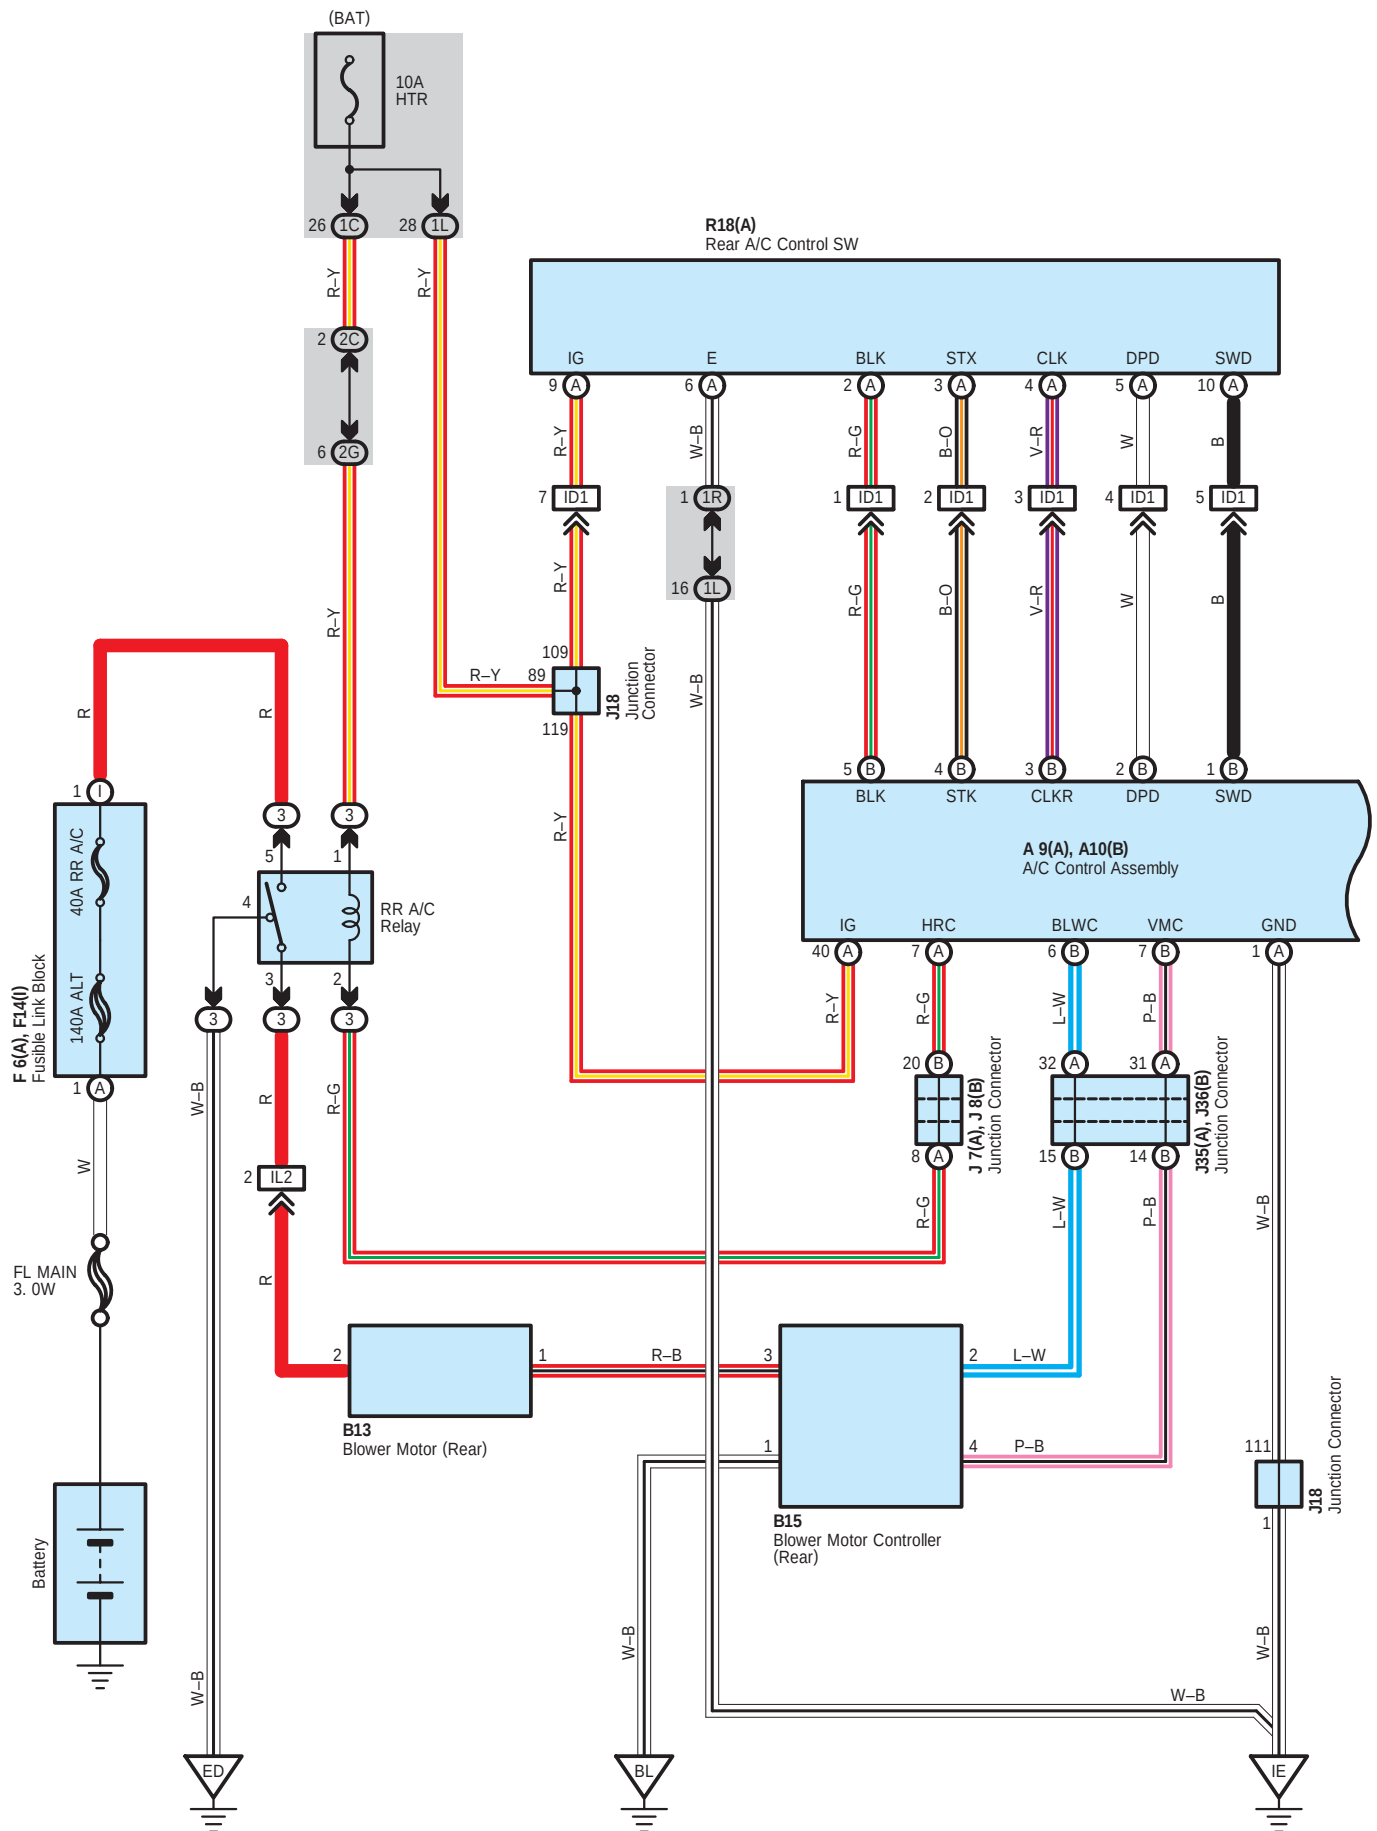

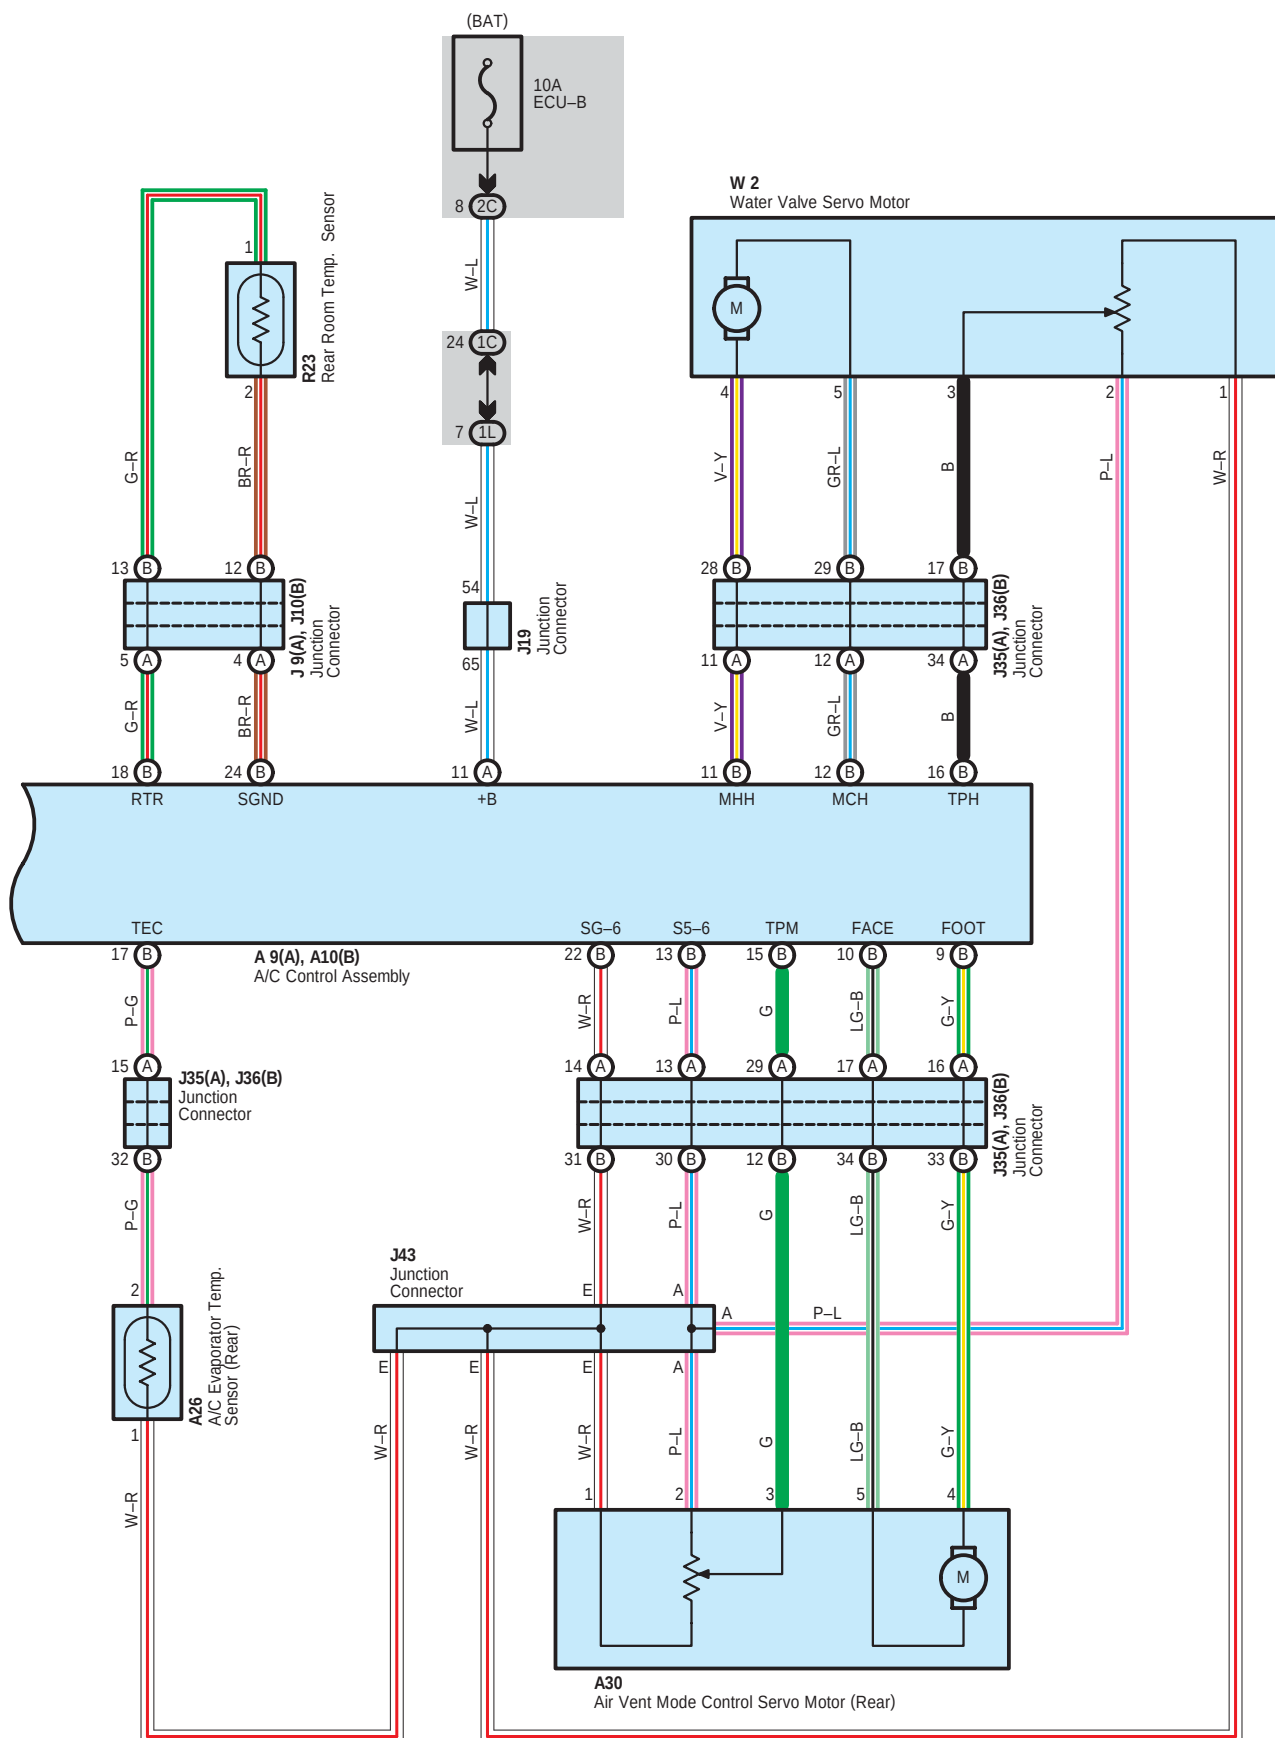

Automatic Air Conditioning (Rear)

: Parts Location

Code		See Page	Code		See Page	Code		See Page
A9	A	38	F14	I	36	J35	A	40
A10	B	38	J7	A	40	J36	B	40
A26		42	J8	B	40	J43		43
A30		42	J9	A	40	R18	A	44
B13		42	J10	B	40	R23		44
B15		42	J18		40	W2		45
F6	A	36	J19		40			

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	26	R/B No.3 (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1L	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1R	31	Roof Wire and Driver Side J/B (Lower Finish Panel)
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2G		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	52	Roof Wire and Instrument Panel Wire (Near the Driver Side J/B)
IL2	53	Engine Room Main Wire and Floor No.2 Wire (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
ED	50	Front Side of the Left Fender Apron
IE	52	Left Kick Panel
BL	54	Right Rear Quarter Panel

