


Power Source

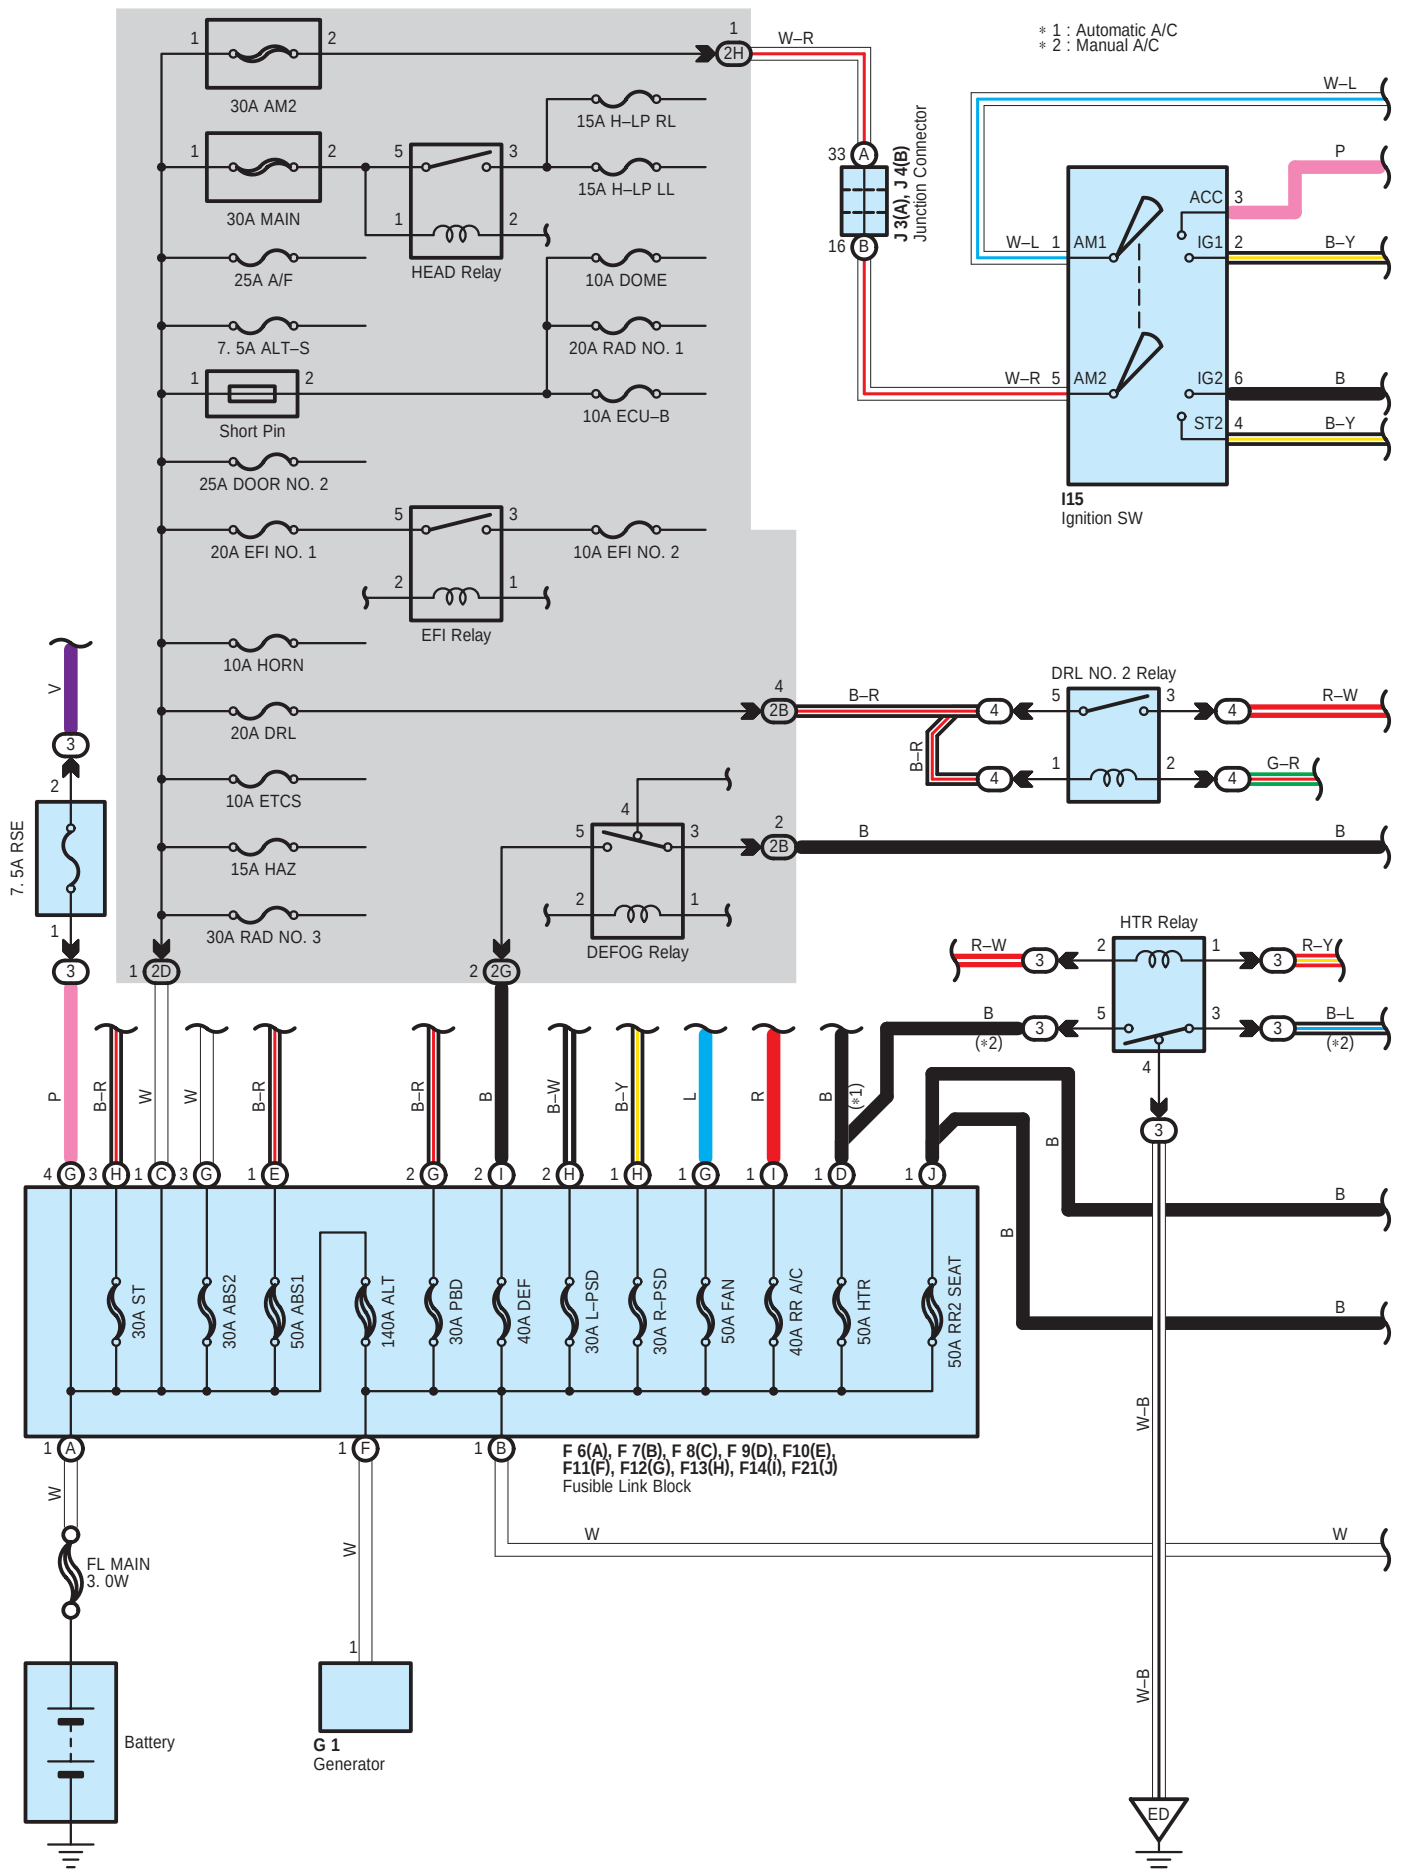



Power Source

: Parts Location

Code			See Page			Code			See Page		
F6	A	36	F11	F	36	F21	J	36			
F7	B	36	F12	G	36	G1		36			
F8	C	36	F13	H	36	I15		39			
F9	D	36	F14	I	36	J3	A	40			
F10	E	36	F16		39	J4	B	40			

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	26	R/B No.3 (Engine Compartment Left)
4	27	R/B No.4 (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1B		
1H	30	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L	31	
2B	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2D		
2G		
2H		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IK3	53	Engine Room Main Wire and Instrument Panel Wire (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
ED	50	Front Side of the Left Fender Apron
IE	52	Left Kick Panel

