



Starting and Ignition

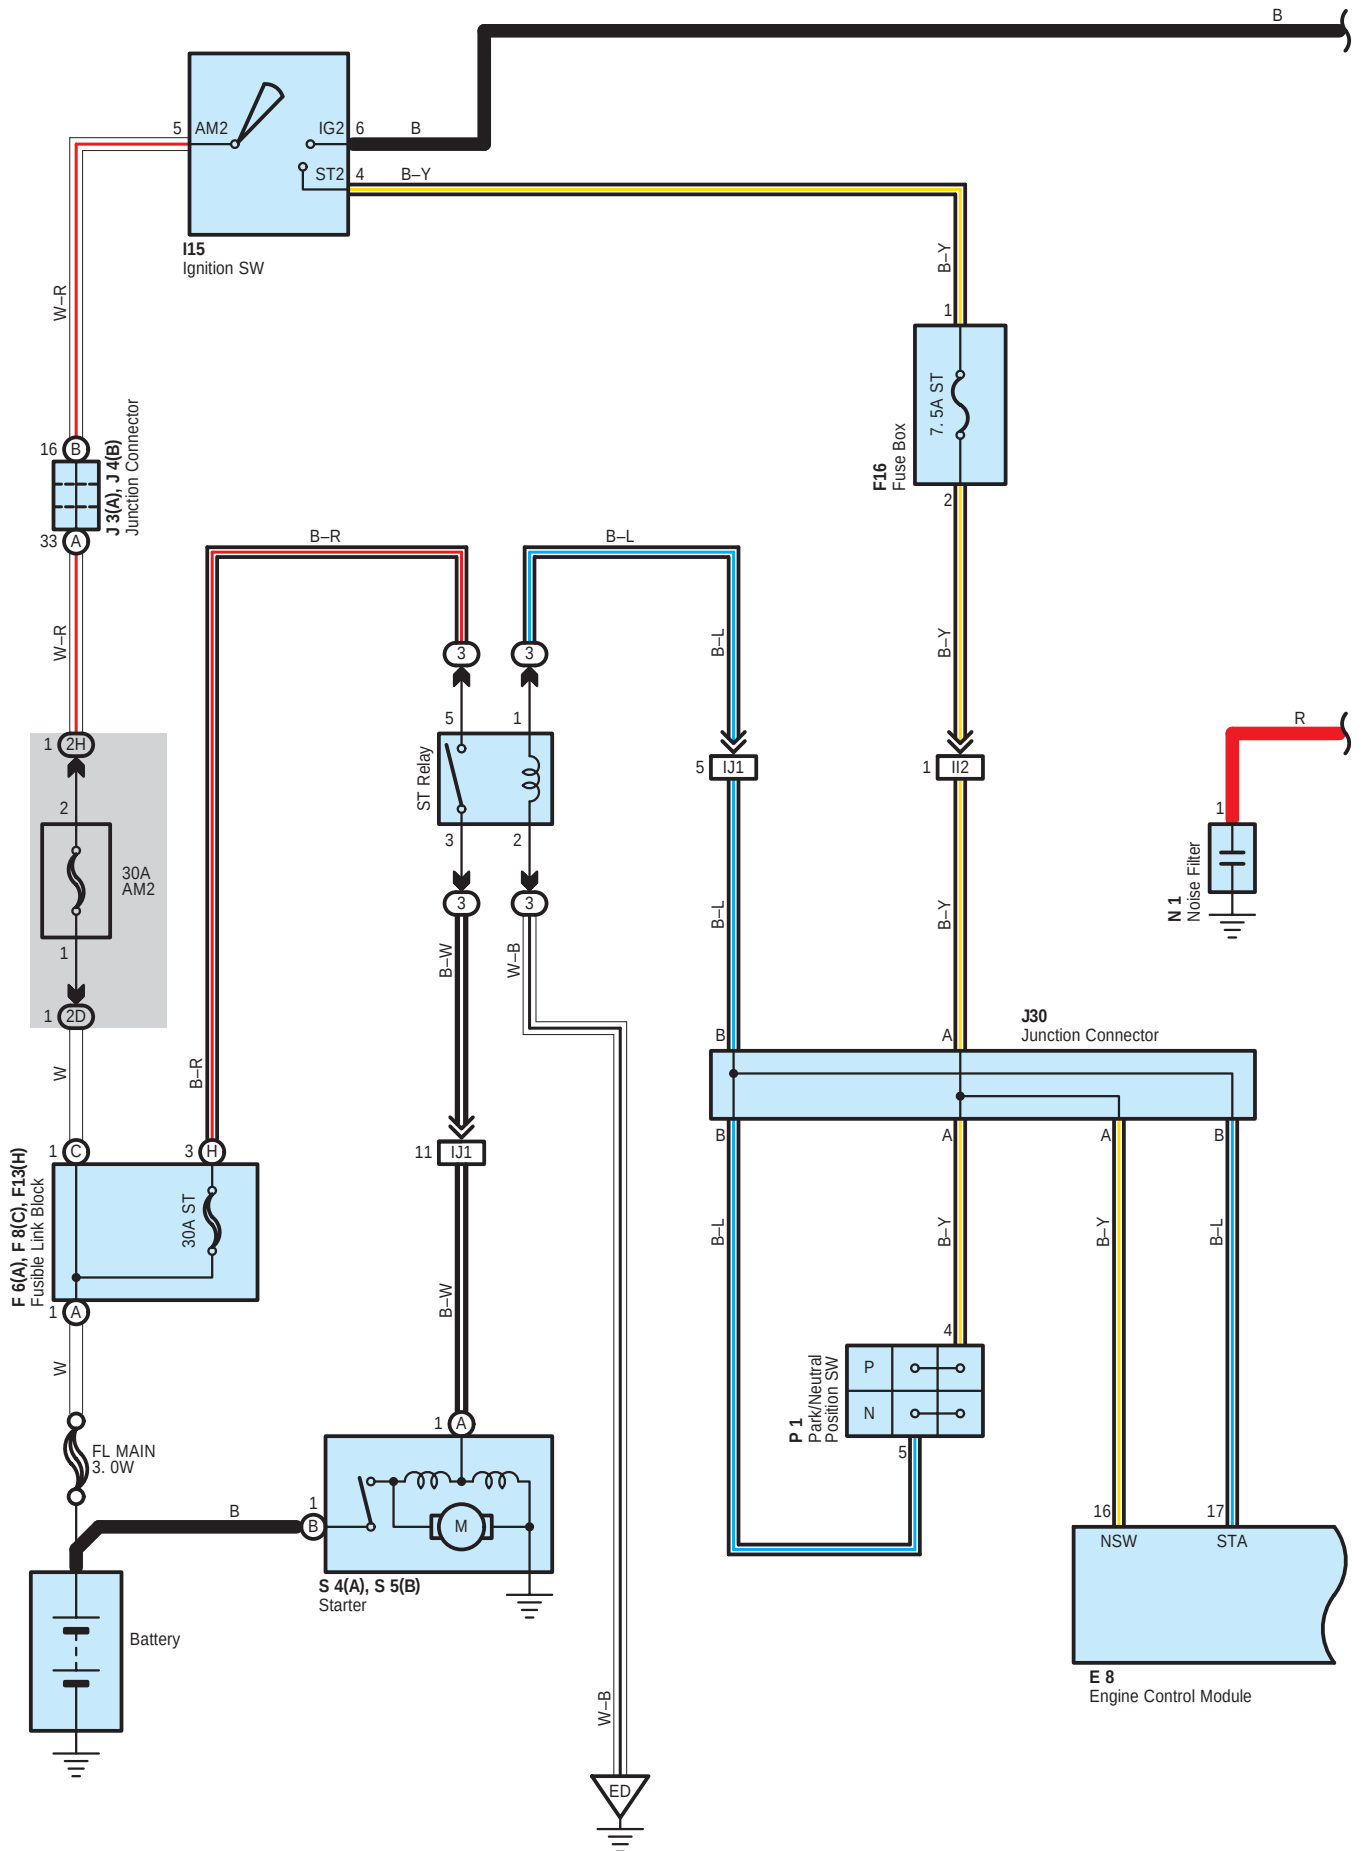

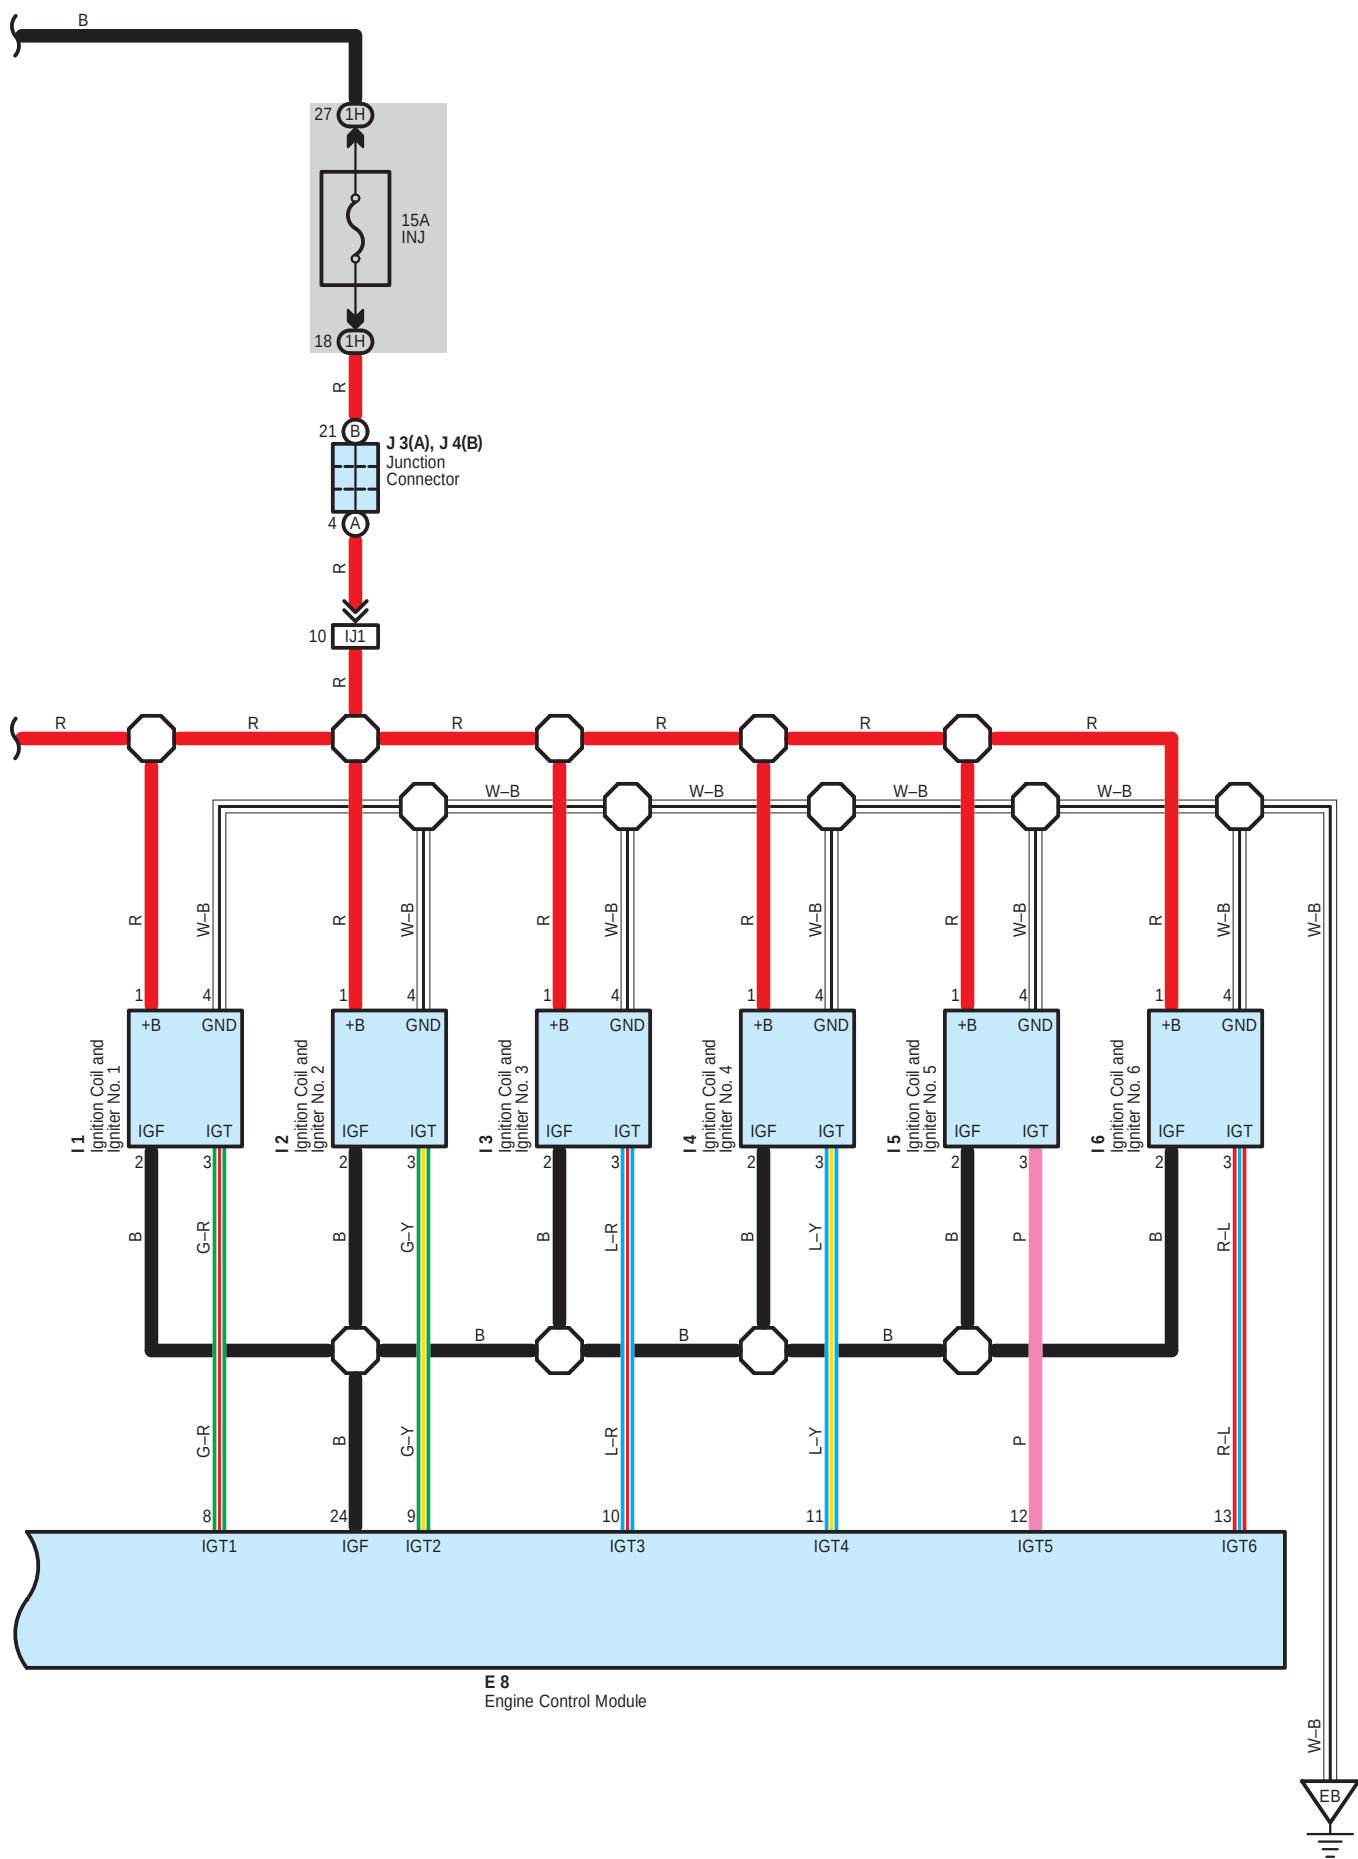

Starting and Ignition

: Parts Location

Code	See Page	Code	See Page	Code	See Page
E8	39	I3	37	J30	40
F6	A 36	I4	37	N1	37
F8	C 36	I5	37	P1	37
F13	H 36	I6	37	S4	A 37
F16	39	I15	39	S5	B 37
I1	37	J3	A 40		
I2	37	J4	B 40		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	26	R/B No.3 (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1H	30	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2D	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2H		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
I12	53	Engine Wire and Instrument Panel Wire (Right Kick Panel)
IJ1	53	Engine Wire and Engine Room Main Wire (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
EB	50	Rear Bank of Right Cylinder Head
ED	50	Front Side of the Left Fender Apron

