



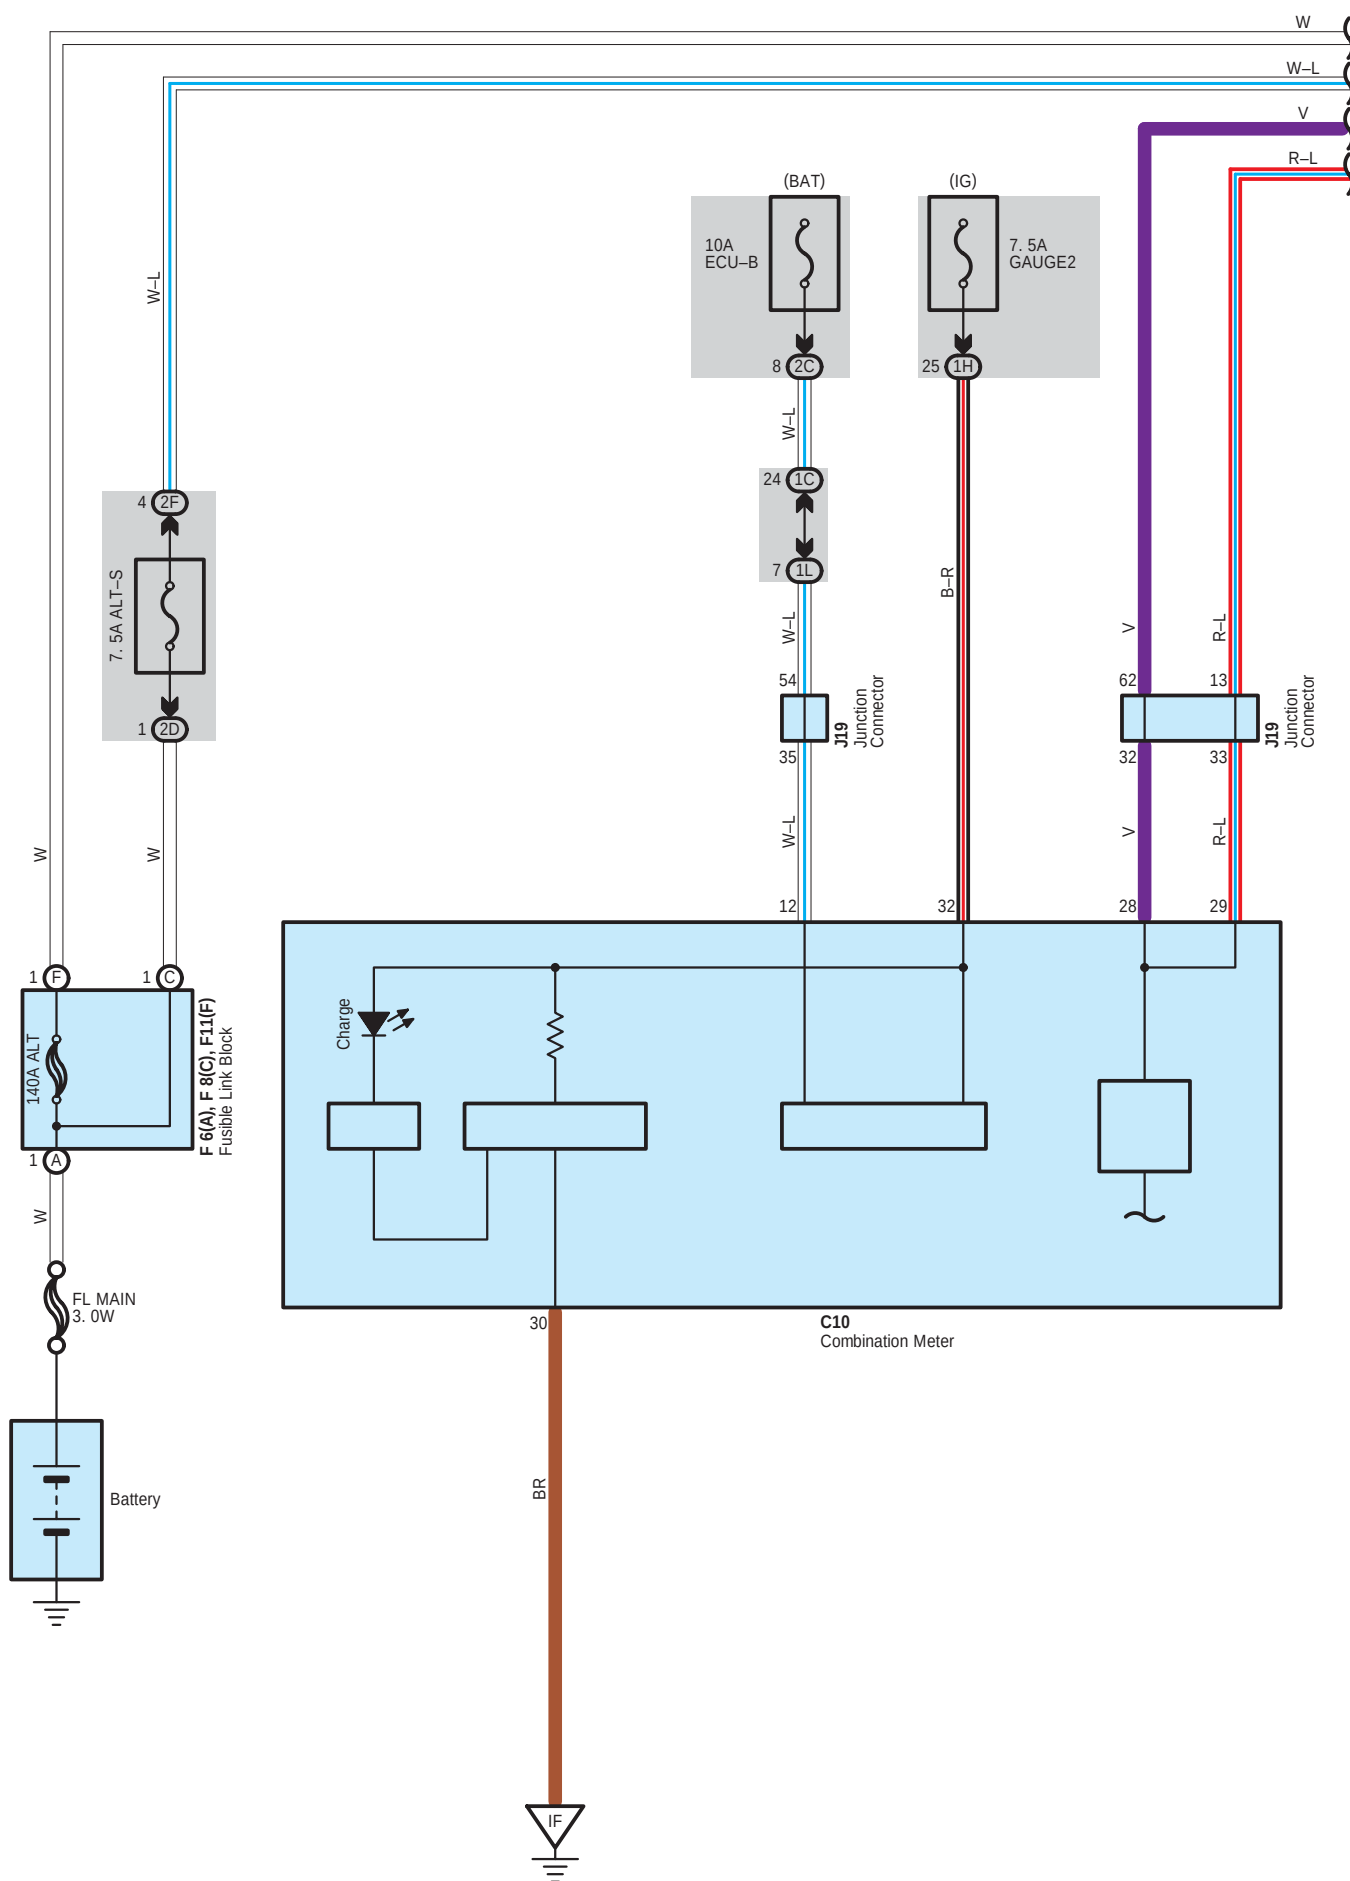

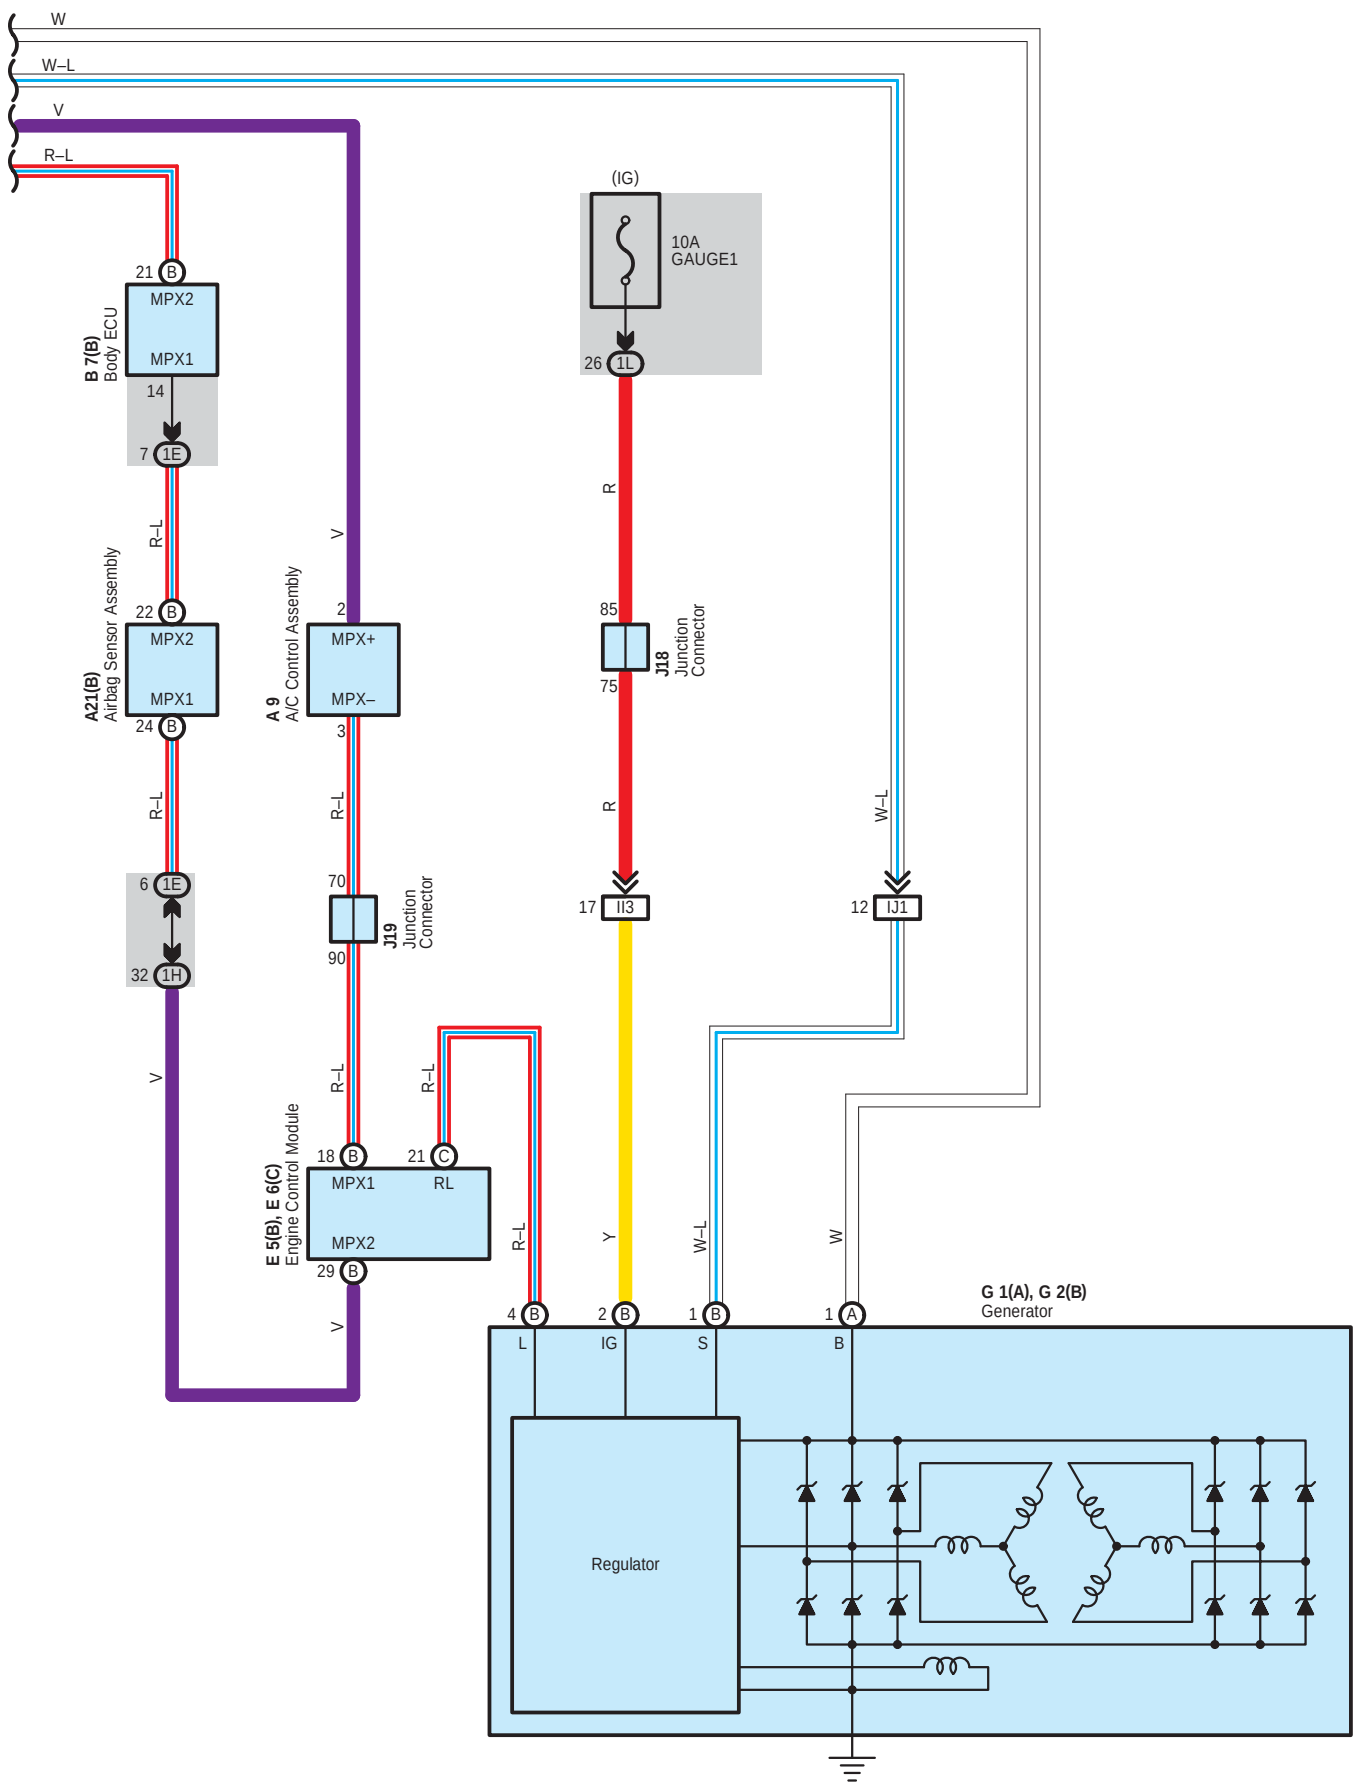

Charging

: Parts Location

Code		See Page		Code		See Page		Code		See Page	
A9		38		E6	C	39		G2	B	36	
A21	B	38		F6	A	36		J18		40	
B7	B	38		F8	C	36		J19		40	
C10		39		F11	F	36					
E5	B	39		G1	A	36					

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1H	30	
1L	31	
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2D		
2F		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
II3	53	Engine Wire and Instrument Panel Wire (Right Kick Panel)
IJ1	53	Engine Wire and Engine Room Main Wire (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
IF	52	Instrument Panel Brace LH

