



Engine Immobiliser System

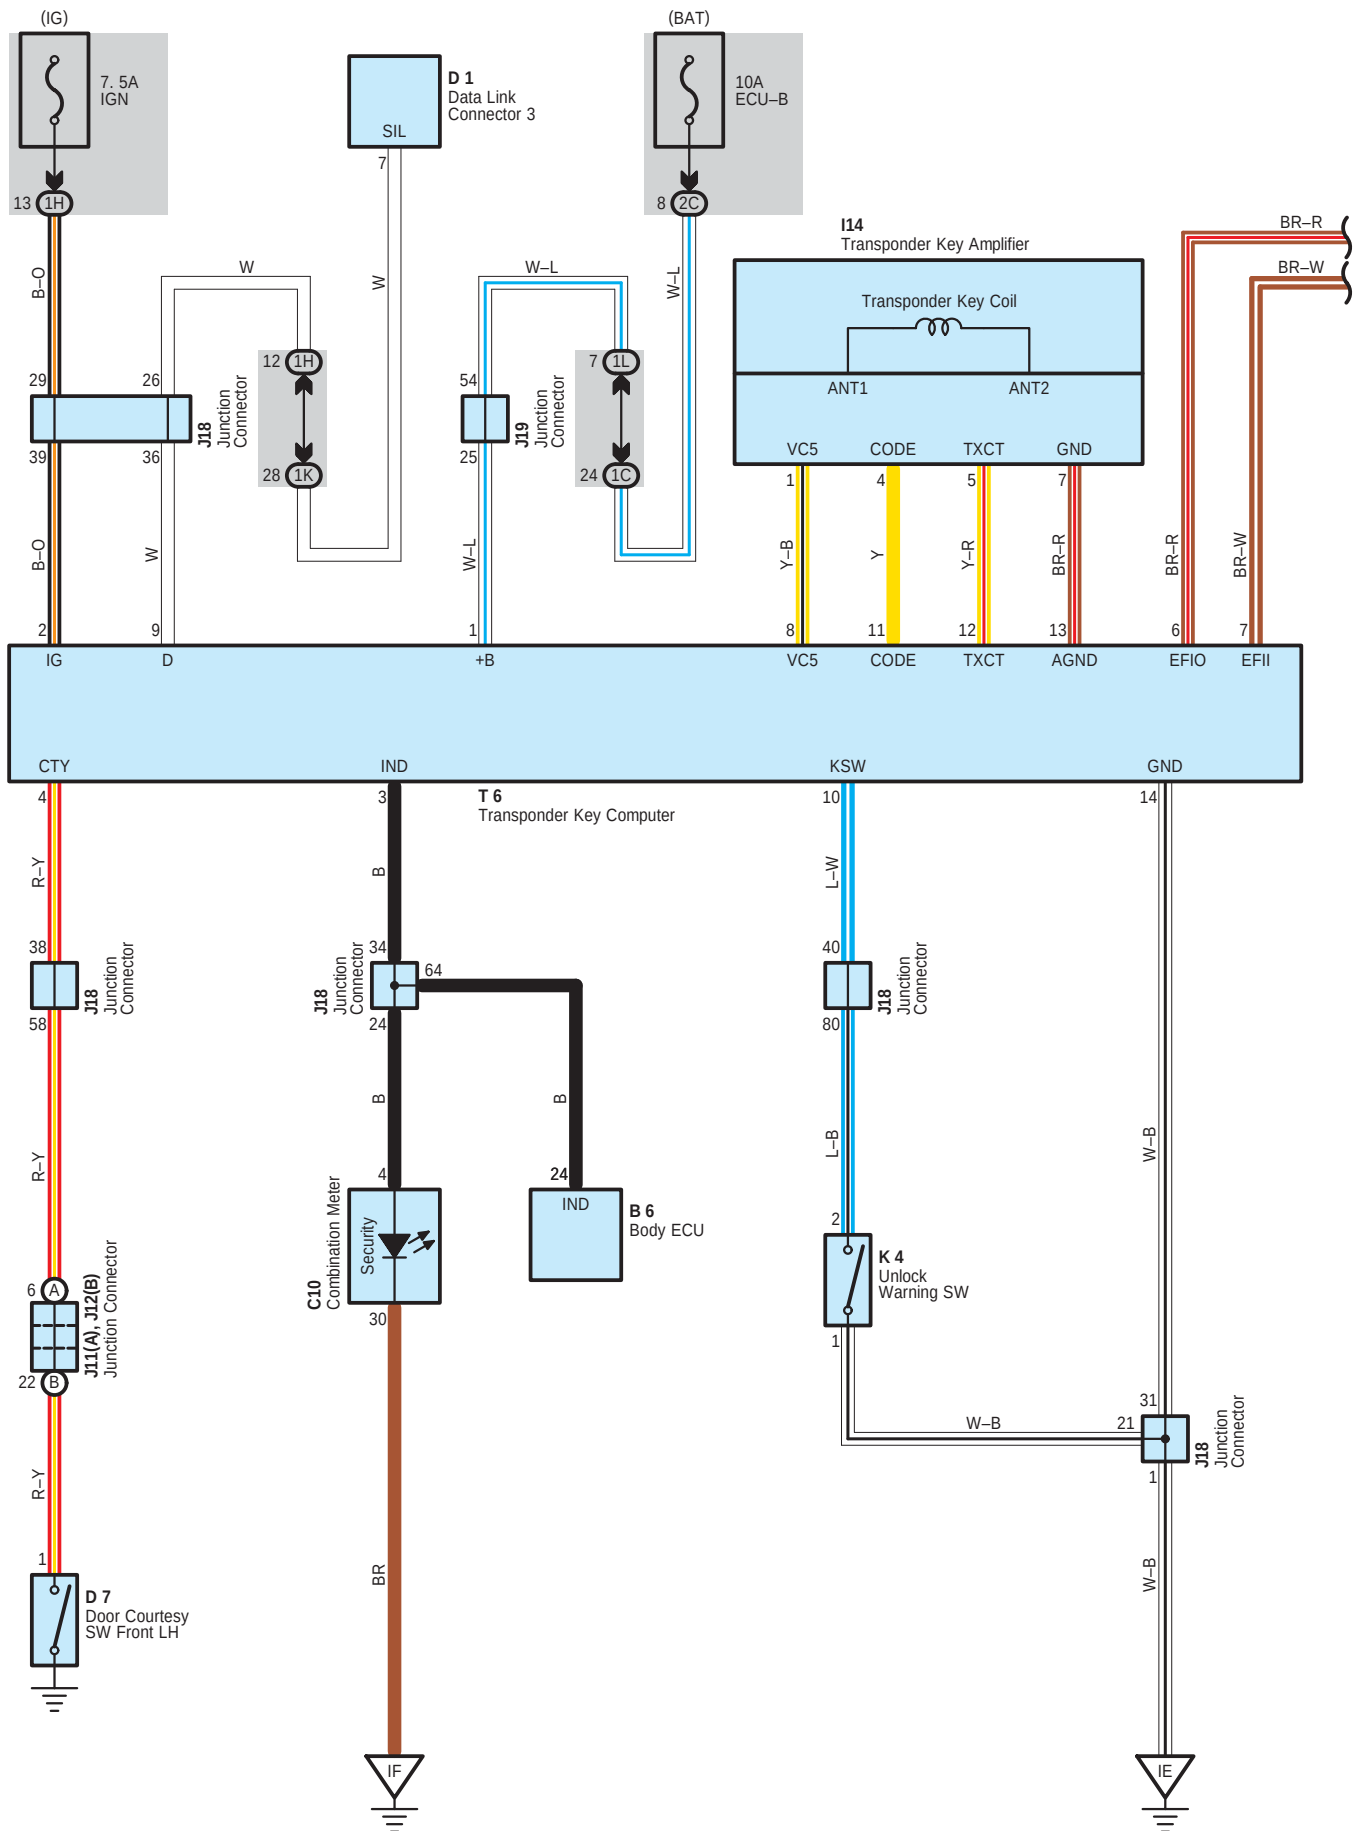

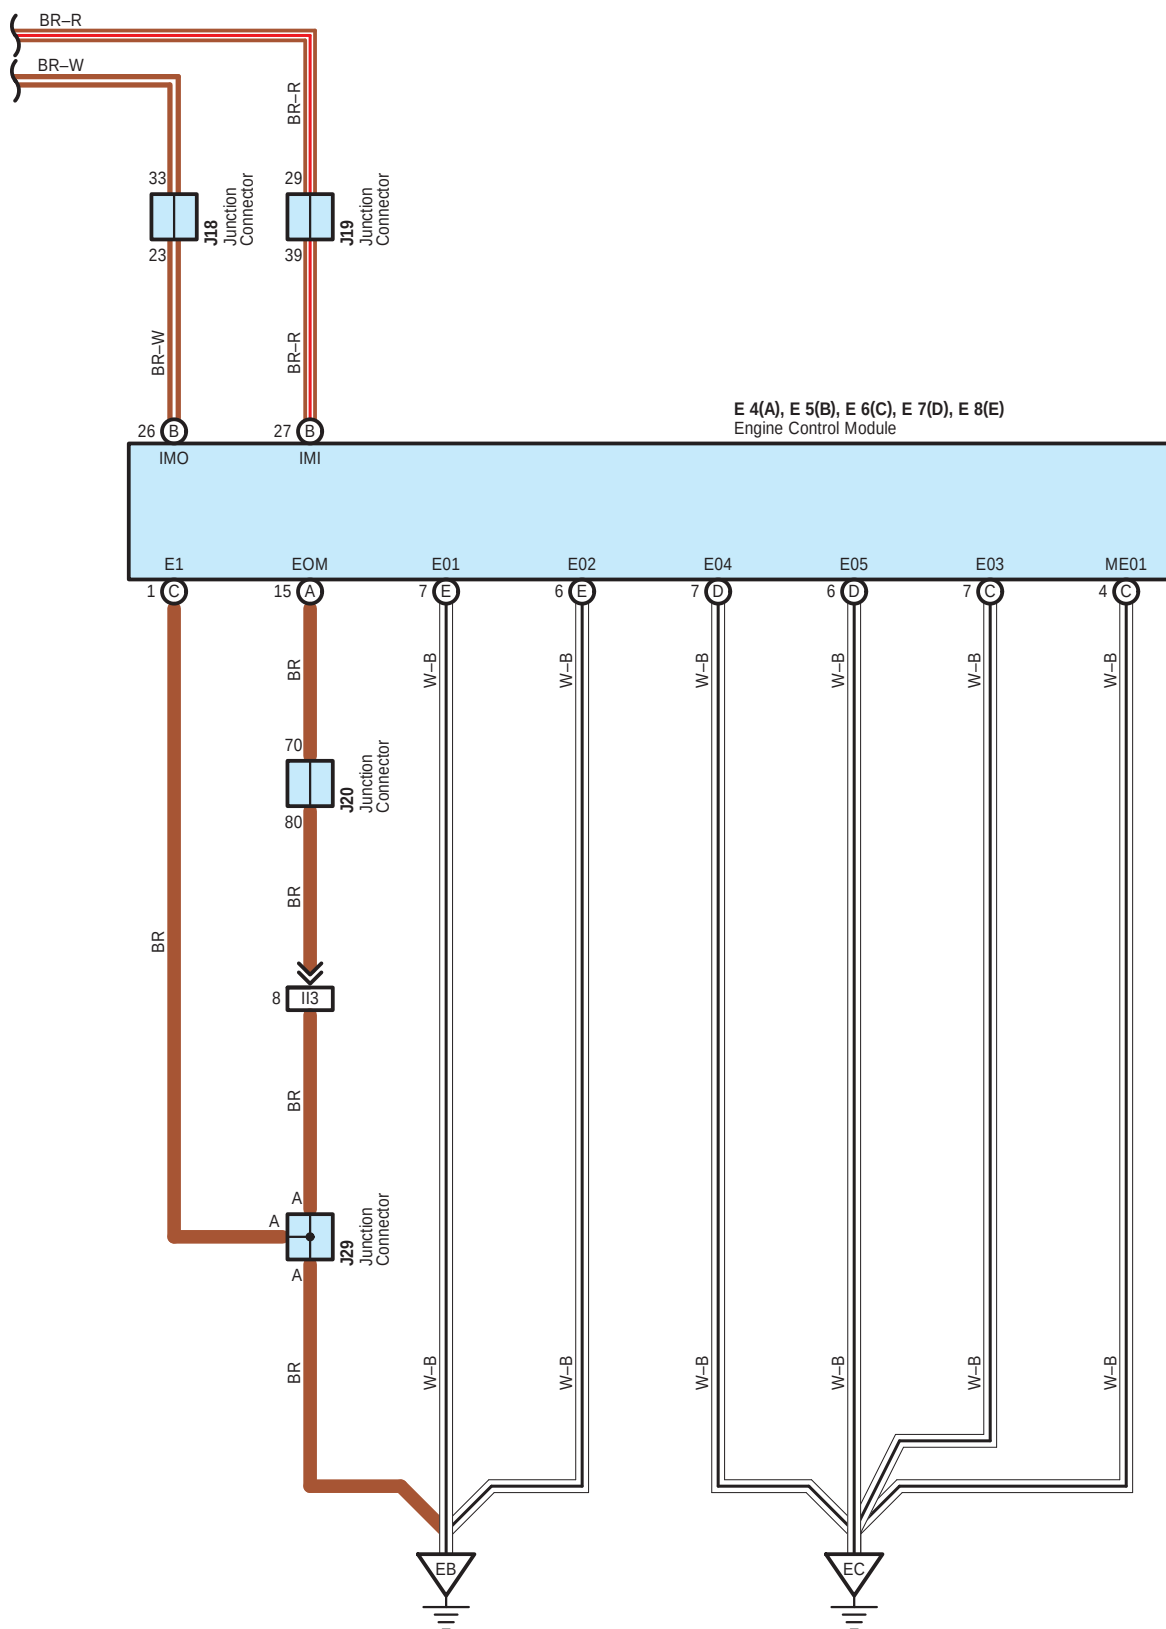

Engine Immobiliser System

: Parts Location

Code		See Page	Code		See Page	Code	See Page
B6		38	E6	C	39	J18	40
C10		39	E7	D	39	J19	40
D1		39	E8	E	39	J20	40
D7		42	I14		39	J29	40
E4	A	39	J11	A	40	K4	40
E5	B	39	J12	B	40	T6	41

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1H	30	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1K	31	
1L		
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
I13	53	Engine Wire and Instrument Panel Wire (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
EB	50	Rear Bank of Right Cylinder Head
EC	50	Rear Bank of Left Cylinder Head
IE	52	Left Kick Panel
IF	52	Instrument Panel Brace LH

