


Position of Parts in Engine Compartment <LHD 1ND-TV>

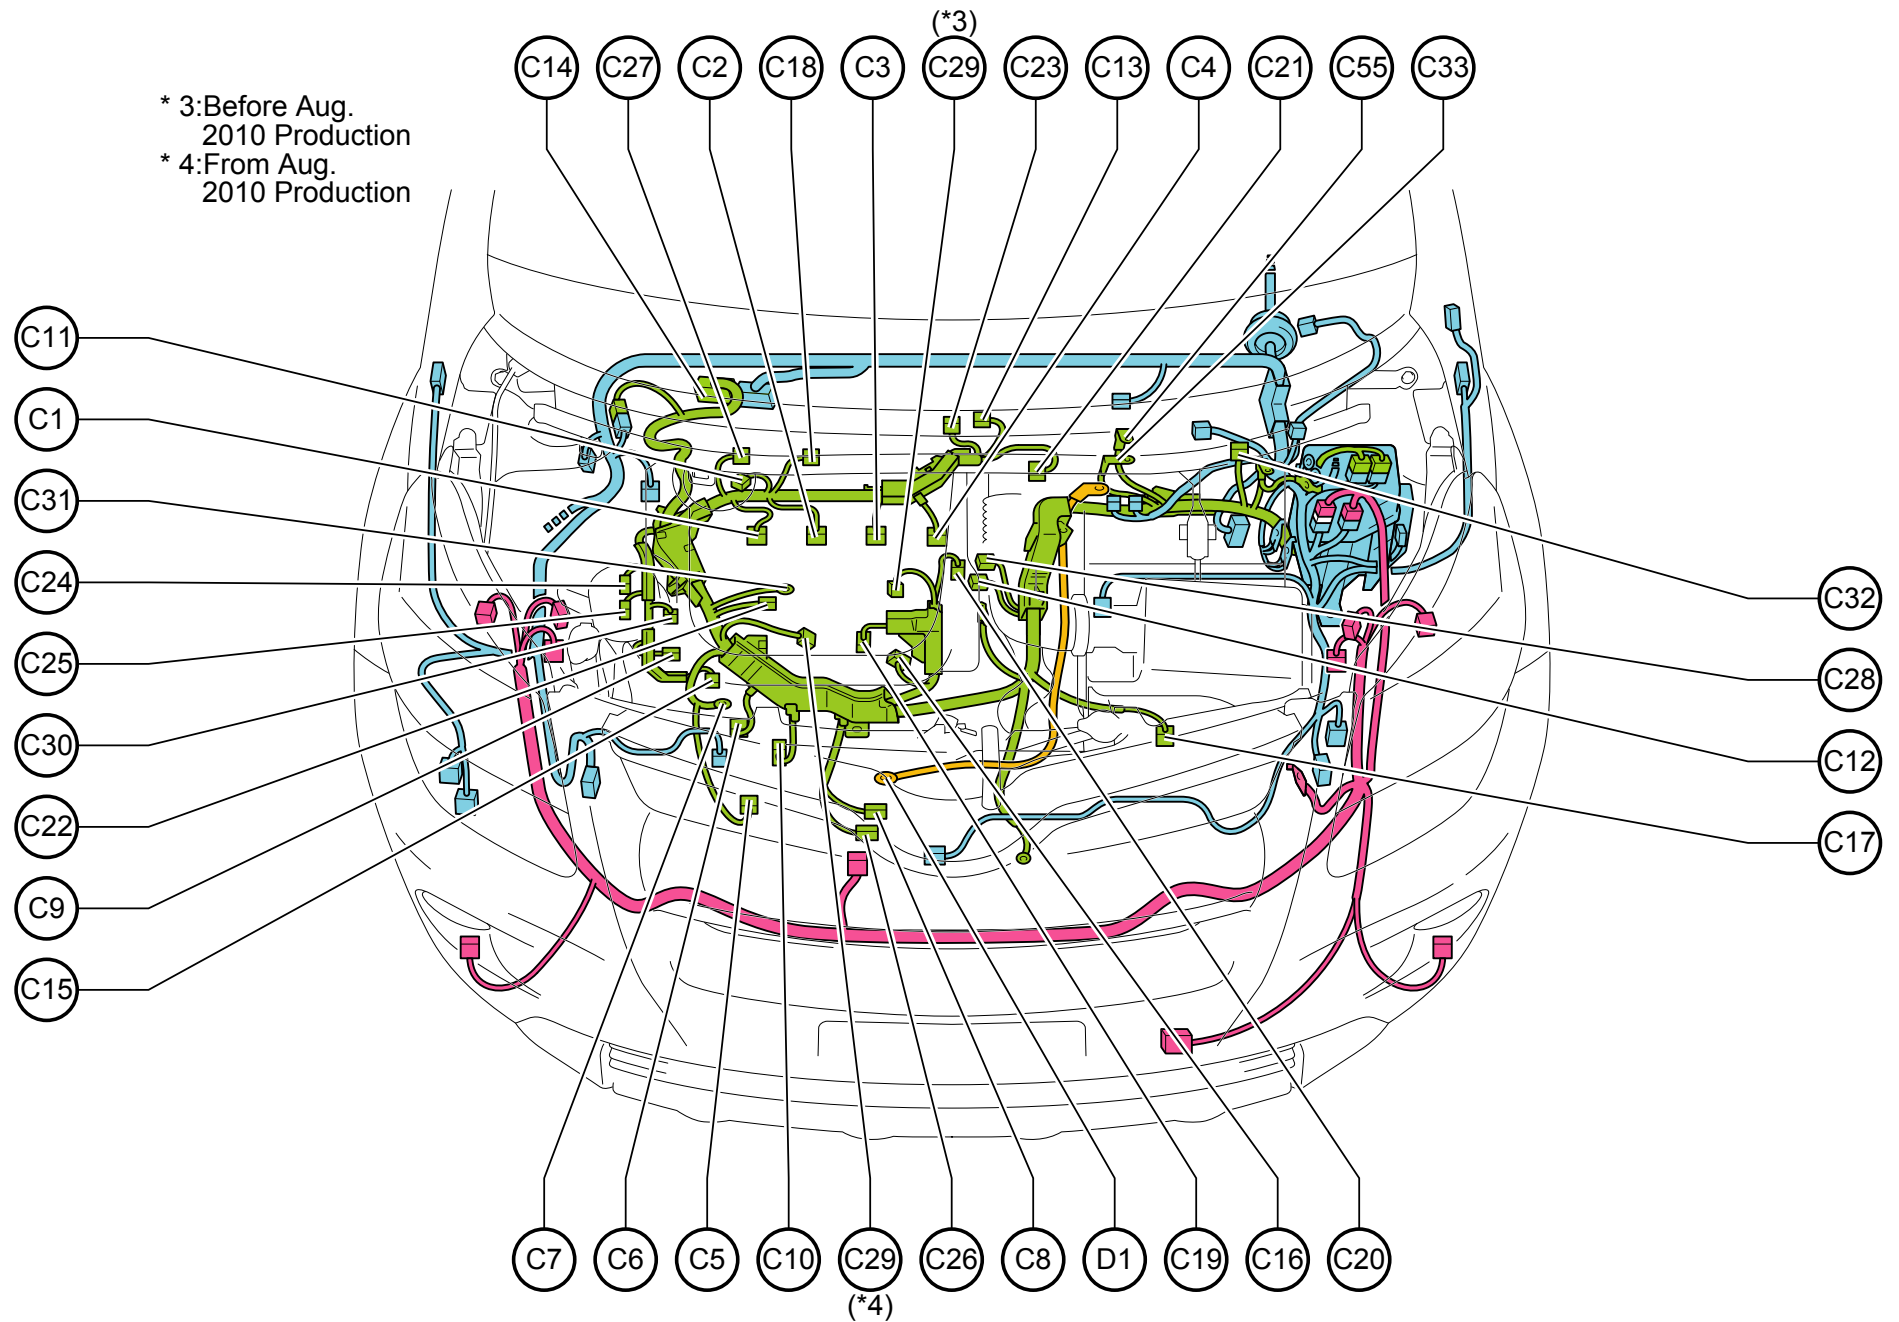

- C 1 Fuel Injector Assembly No. 1
- C 2 Fuel Injector Assembly No. 2
- C 3 Fuel Injector Assembly No. 3
- C 4 Fuel Injector Assembly No. 4
- C 5 With Pulley Cooler Compressor Assembly
- C 6 Generator Regulator Assembly
- C 7 Generator Regulator Assembly
- C 8 Starter Motor Assembly
- C 9 Engine Oil Pressure Switch
- C 10 Throttle Body Assembly
- C 11 Crankshaft Position Sensor
- C 12 E.F.I. Engine Coolant Temperature Sensor
- C 13 Turbocharger Sub-Assembly
- C 14 ECM
- C 15 Engine Oil Level Sensor
- C 16 Turbo Pressure Sensor
- C 17 Back-Up Light Switch Assembly
- C 18 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 19 EGR Valve Control Motor
- C 20 VSV (Pressure Release Valve)
- C 21 Magnetic Proportional Valve
- C 22 Fuel Pressure Sensor
- C 23 Turbocharger Sub-Assembly
- C 24 Exhaust Gas Temperature Sensor
- C 25 No. 2 Exhaust Gas Temperature Sensor
- C 26 Diesel Turbo Inlet Air Temperature Sensor
- C 27 Differential Pressure Sensor
- C 28 Fuel Temperature Sensor
- C 29 Purge VSV
- C 30 Crankshaft Position Sensor
- C 31 Glow Plug Assembly
- C 32 Glow Plug Relay Assembly
- C 33 Fusible Link Block Assembly
- C 55 Fusible Link Block Assembly

- D 1 Starter Motor Assembly

