


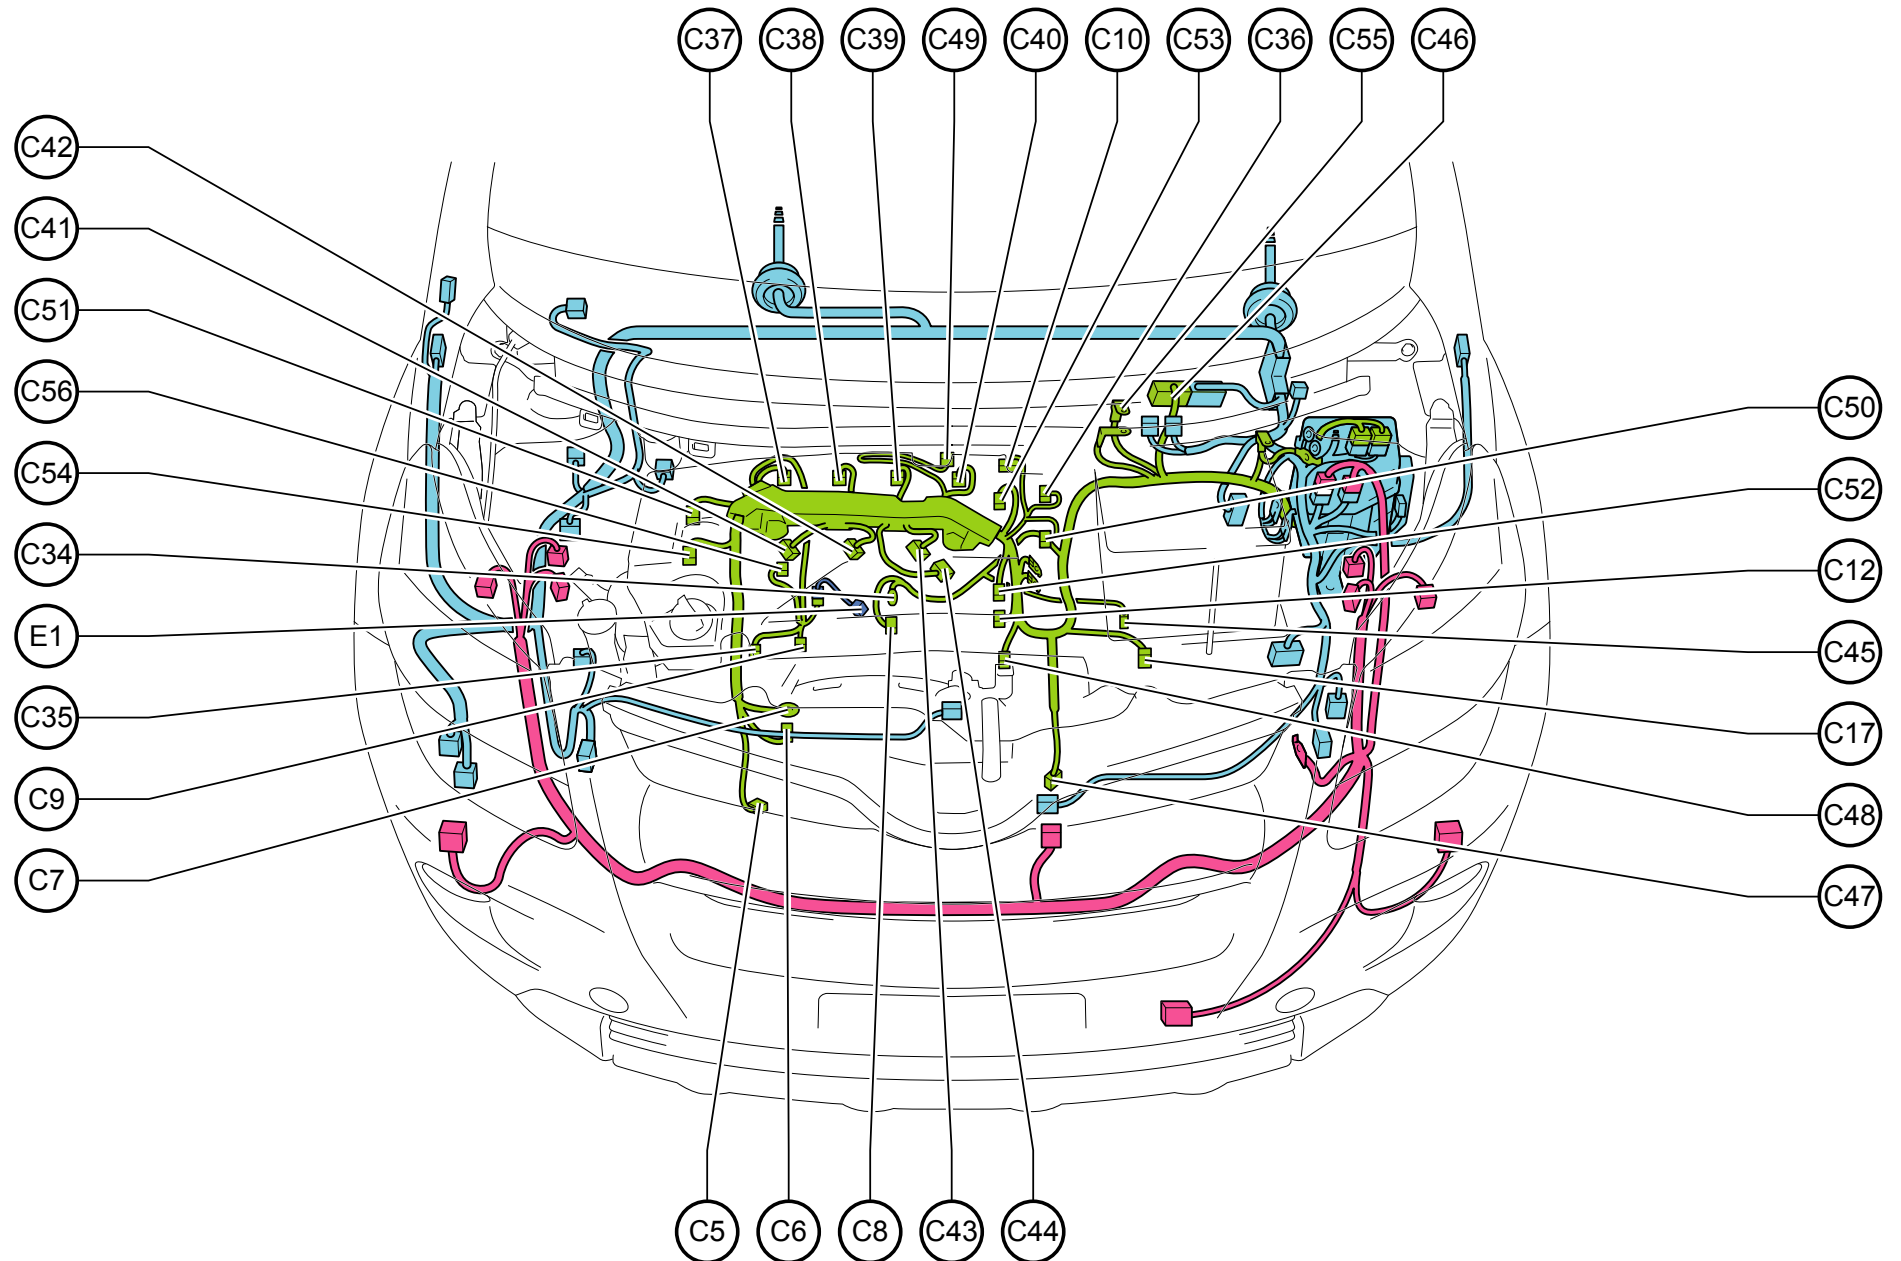

- C 5 With Pulley Cooler Compressor Assembly
- C 6 Generator Regulator Assembly
- C 7 Generator Regulator Assembly
- C 8 Starter Motor Assembly
- C 9 Engine Oil Pressure Switch
- C 10 Throttle Body Assembly
- C 12 E.F.I. Engine Coolant Temperature Sensor
- C 17 Back-Up Light Switch Assembly
- C 34 Starter Motor Assembly
- C 35 Crankshaft Position Sensor
- C 36 Purge VSV
- C 37 Fuel Injector Assembly No. 1
- C 38 Fuel Injector Assembly No. 2
- C 39 Fuel Injector Assembly No. 3
- C 40 Fuel Injector Assembly No. 4
- C 41 Ignition Coil Assembly No. 1
- C 42 Ignition Coil Assembly No. 2
- C 43 Ignition Coil Assembly No. 3
- C 44 Ignition Coil Assembly No. 4
- C 45 Neutral Position Switch
- C 46 ECM
- C 47 Oxygen Sensor (Bank 1 Sensor 2)
- C 48 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 49 Mass Air Flow Meter
- C 50 EGR Valve Control Motor
- C 51 Camshaft Timing Oil Control Valve (Intake Side)
- C 52 VVT Sensor (Exhaust Side)
- C 53 VVT Sensor (Intake Side)
- C 54 Camshaft Timing Oil Control Valve (Exhaust Side)
- C 55 Fusible Link Block Assembly
- C 56 Intake Vacuum Sensor

- E 1 Knock Control Sensor (Bank 1)



Position of Parts in Engine Compartment <RHD 1NR-FE>

C 48
Dark Gray

